

GARMIN[®]

CIRRUS PERSPECTIVE+ Pilot's Guide



CIRRUS SR2x

SYSTEM OVERVIEW

FLIGHT INSTRUMENTS

ENGINE INDICATION SYSTEM

AUDIO PANEL AND CNS

FLIGHT MANAGEMENT

HAZARD AVOIDANCE

AUTOMATIC FLIGHT CONTROL SYSTEM

ADDITIONAL FEATURES

APPENDICES

INDEX

Copyright © 2017 Garmin Ltd. or its subsidiaries. All rights reserved.

This manual reflects the operation of System Software version 2647.M0 or later for the Cirrus Perspective+ by Garmin Integrated Avionics System. Where used, references to ‘SR2x’ are inclusive of the SR20, SR22, and SR22T. Some differences in operation may be observed when comparing the information in this manual to earlier or later software versions. Always refer to the FAA approved Airplane Flight Manual for a description of systems, limitations and procedures.

Garmin International, Inc. 1200 East 151st Street Olathe, Kansas 66062, U.S.A.	Garmin (Europe) Ltd. Liberty House, Hounslow Business Park Southampton, Hampshire SO40 9LR U.K.
Garmin AT, Inc. 2345 Turner Road SE Salem, OR 97302, U.S.A.	Garmin Corporation No. 68, Zhangshu 2nd Road Xizhi District, New Taipei City, Taiwan

Contact Garmin Product Support at www.flygarmin.com.

For warranty information refer to www.flygarmin.com.

Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express written permission of Garmin. Garmin hereby grants permission to download a single copy of this manual and of any revision to this manual onto a hard drive or other electronic storage medium to be viewed for personal use, provided that such electronic or printed copy of this manual or revision must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Garmin[®], G1000[®] NXi, WATCH[®], FliteCharts[®], and SafeTaxi[®] are registered trademarks of Garmin International, Inc. or its subsidiaries. Garmin ESP[™], Garmin SVT[™], SurfaceWatch[™], and Connex[™] are trademarks of Garmin International, Inc. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

Perspective+ is a registered trademark of Cirrus Design Corporation; Stormscope[®] is a registered trademark of L-3 Communications;. AC-U-KWIK[®] is a registered trademark of Penton Business Media Inc. NavData[®] is a registered trademark of Jeppesen, Inc. Wi-Fi[®] is a registered trademark of the Wi-Fi Alliance. SiriusXM Weather and SiriusXM Satellite Radio are provided by SiriusXM Satellite Radio, Inc. The Bluetooth[®] word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Garmin is under license.


AOPA Membership Publications, Inc. and its related organizations (hereinafter collectively “AOPA”) expressly disclaim all warranties, with respect to the AOPA information included in this data, express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. The information is provided “as is” and AOPA does not warrant or make any representations regarding its accuracy, reliability, or otherwise. Under no circumstances including negligence, shall AOPA be liable for any incidental, special or consequential damages that result from the use or inability to use the software or related documentation, even if AOPA or an AOPA authorized representative has been advised of the possibility of such damages. User agrees not to sue AOPA and, to the maximum extent allowed by law, to release and hold harmless AOPA from any causes of action,


claims or losses related to any actual or alleged inaccuracies in the information. Some jurisdictions do not allow the limitation or exclusion of implied warranties or liability for incidental or consequential damages so the above limitations or exclusions may not apply to you.


AC-U-KWIK and its related organizations (hereafter collectively “AC-U-KWIK Organizations”) expressly disclaim all warranties with respect to the AC-U-KWIK information included in this data, express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. The information is provided “as is” and AC-U-KWIK Organizations do not warrant or make any representations regarding its accuracy, reliability, or otherwise. Licensee agrees not to sue AC-U-KWIK Organizations and, to the maximum extent allowed by law, to release and hold harmless AC-U-KWIK Organizations from any cause of action, claims or losses related to any actual or alleged inaccuracies in the information arising out of Garmin’s use of the information in the datasets. Some jurisdictions do not allow the limitation or exclusion of implied warranties or liability for incidental or consequential damages so the above limitations or exclusions may not apply to licensee.


Printed in the U.S.A.


-
-  **WARNING:** Do not use terrain avoidance displays as the sole source of information for maintaining separation from terrain and obstacles. Garmin obtains terrain and obstacle data from third party sources and cannot independently verify the accuracy of the information.
-
-  **WARNING:** Always refer to current aeronautical charts and NOTAMs for verification of displayed aeronautical information. Displayed aeronautical data may not incorporate the latest NOTAM information.
-
-  **WARNING:** Do not use geometric altitude for compliance with air traffic control altitude requirements. The primary barometric altimeter must be used for compliance with all air traffic control altitude regulations, requirements, instructions, and clearances.
-
-  **WARNING:** Do not use basemap information (land and water data) as the sole means of navigation. Basemap data is intended only to supplement other approved navigation data sources and should be considered only an aid to enhance situational awareness.
-
-  **WARNING:** Do not rely solely upon the display of traffic information to accurately depict all of the traffic within range of the aircraft. Due to lack of equipment, poor signal reception, and/or inaccurate information from aircraft or ground stations, traffic may be present that is not represented on the display.
-
-  **WARNING:** Do not use data link weather information for maneuvering in, near, or around areas of hazardous weather. Information contained within data link weather products may not accurately depict current weather conditions.
-
-  **WARNING:** Do not use the indicated data link weather product age to determine the age of the weather information shown by the data link weather product. Due to time delays inherent in gathering and processing weather data for data link transmission, the weather information shown by the data link weather product may be older than the indicated weather product age.
-
-  **WARNING:** The displayed minimum safe altitude (MSAs) are only advisory in nature and should not be relied upon as the sole source of obstacle and terrain avoidance information. Always refer to current aeronautical charts for appropriate minimum clearance altitudes.
-
-  **WARNING:** Always obtain qualified instruction prior to operational use of this equipment.
-
-  **WARNING:** Do not use GPS to navigate to any active waypoint identified as a 'NON WGS84 WPT' by a system message. 'NON WGS84 WPT' waypoints are derived from an unknown map reference datum that may be incompatible with the map reference datum used by GPS (known as WGS84) and may be positioned in error as displayed.
-


 **WARNING:** When using the autopilot to fly an approach with vertical guidance, the autopilot will not level the aircraft at the MDA/DH even if the MDA/DH is set in the altitude preselect.


 **WARNING:** Do not rely solely upon the display of traffic information for collision avoidance maneuvering. The traffic display does not provide collision avoidance resolution advisories and does not under any circumstances or conditions relieve the pilot's responsibility to see and avoid other aircraft.


 **WARNING:** Because of variation in the earth's magnetic field, do not rely on the accuracy of attitude and heading indications in the following geographic areas: North of 72° North latitude at all longitudes; South of 70° South latitude at all longitudes; North of 65° North latitude between longitude 75° W and 120° W. (Northern Canada); North of 70° North latitude between longitude 70° W and 128° W. (Northern Canada); North of 70° North latitude between longitude 85° E and 114° E. (Northern Russia); South of 55° South latitude between longitude 120° E and 165° E. (Region south of Australia and New Zealand).


 **WARNING:** Do not rely on information from a lightning detection system display as the sole basis for hazardous weather avoidance. Range limitations and interference may cause the system to display inaccurate or incomplete information. Refer to documentation from the lightning detection system manufacturer for detailed information about the system.


 **WARNING:** Use appropriate primary systems for navigation, and for terrain, obstacle, and traffic avoidance. Garmin SVT is intended as an aid to situational awareness only and may not provide either the accuracy or reliability upon which to solely base decisions and/or plan maneuvers to avoid terrain, obstacles, or traffic.


 **WARNING:** Intruder aircraft at or below 500 ft. AGL may not appear on the Garmin SVT display or may appear as a partial symbol.


 **WARNING:** Do not use the Garmin SVT runway depiction as the sole means for determining the proximity of the aircraft to the runway or for maintaining the proper approach path angle during landing.


 **WARNING:** Do not operate the weather radar in a transmitting mode when personnel or objects are within the MPEL boundary.


 **WARNING:** Always position the weather radar gain setting to Calibrated for viewing the actual intensity of precipitation. Changing the gain in weather mode causes precipitation intensity to be displayed as a color not representative of the true intensity.


 **WARNING:** Do not use TAWS information for primary terrain or obstacle avoidance. TAWS is intended only to enhance situational awareness.


 **WARNING:** Do not use SurfaceWatch™ information as the primary method of flight guidance during airborne or ground operations. SurfaceWatch does not have NOTAM or ATIS information regarding the current active runway, condition, or information about the position of hold lines.


 **WARNING:** Do not use a QFE altimeter setting with this system. System functions will not operate properly with a QFE altimeter setting. Use only a QNH altimeter setting for height above mean sea level, or the standard pressure setting, as applicable.


 **CAUTION:** Do not clean display surfaces with abrasive cloths or cleaners containing ammonia. They will harm the anti-reflective coating.


 **CAUTION:** Repairs should only be made by an authorized Garmin service center. Unauthorized repairs or modifications could void both the warranty and affect the airworthiness of the aircraft.


 **NOTE:** Do not rely solely upon data link services to provide Temporary Flight Restriction (TFR) information. Always confirm TFR information through official sources such as Flight Service Stations or Air Traffic Control.


 **NOTE:** All visual depictions contained within this document, including screen images of the system panel and displays, are subject to change and may not reflect the most current system and aviation databases. Depictions of equipment may differ slightly from the actual equipment.


 **NOTE:** The United States government operates the Global Positioning System and is solely responsible for its accuracy and maintenance. The GPS system is subject to changes which could affect the accuracy and performance of all GPS equipment. Portions of the system utilize GPS as a precision electronic NAVigation AID (NAVAID). Therefore, as with all NAVAIDs, information presented by the system can be misused or misinterpreted and, therefore, become unsafe.


 **NOTE:** This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


 **NOTE:** Interference from GPS repeaters operating inside nearby hangars can cause an intermittent loss of attitude and heading displays while the aircraft is on the ground. Moving the aircraft more than 100 yards away from the source of the interference should alleviate the condition.

 **NOTE:** Use of polarized eyewear may cause the flight displays to appear dim or blank.


 **NOTE:** This product, its packaging, and its components contain chemicals known to the State of California to cause cancer, birth defects, or reproductive harm. This notice is being provided in accordance with California's Proposition 65. If you have any questions or would like additional information, please refer to our web site at www.garmin.com/prop65.


 **NOTE:** Operating the system in the vicinity of metal buildings, metal structures, or electromagnetic fields can cause sensor differences that may result in nuisance miscompare annunciations during start up, shut down, or while taxiing. If one or more of the sensed values are unavailable, the annunciation indicates no comparison is possible.


 **NOTE:** The system responds to a terminal procedure based on data coded within that procedure in the Navigation Database. Differences in system operation may be observed among similar types of procedures due to differences in the Navigation Database coding specific to each procedure.


 **NOTE:** The FAA has asked Garmin to remind pilots who fly with Garmin database-dependent avionics of the following:


- It is the pilot's responsibility to remain familiar with all FAA regulatory and advisory guidance and information related to the use of databases in the National Airspace System.
 - Garmin equipment will only recognize and use databases that are obtained from Garmin or Jeppesen. Databases obtained from Garmin or Jeppesen that have a Type 2 Letter of Authorization (LOA) from the FAA are assured compliance with all data quality requirements (DQRs). A copy of the Type 2 LOA is available for each applicable database and can be viewed at <http://fly.garmin.com> by selecting 'Aviation Database Declarations.'
 - Use of a current Garmin or Jeppesen database in your Garmin equipment is required for compliance with established FAA regulatory guidance, but does not constitute authorization to fly any and all terminal procedures that may be presented by the system. It is the pilot's responsibility to operate in accordance with established AFM(S) and regulatory guidance or limitations as applicable to the pilot, the aircraft, and installed equipment.
-

 **NOTE:** The pilot/operator must review and be familiar with Garmin's database exclusion list as discussed in SAIB CE-14-04 to determine what data may be incomplete. The database exclusion list can be viewed at www.flygarmin.com by selecting 'Database Exclusions List.'


-
- 
NOTE: *The pilot/operator must have access to Garmin and Jeppesen database alerts and consider their impact on the intended aircraft operation. The database alerts can be viewed at www.flygarmin.com by selecting 'Aviation Database Alerts.'*


 - 
NOTE: *If the pilot/operator wants or needs to adjust the database, contact Garmin Product Support.*


 - 
NOTE: *Garmin requests the flight crew report any observed discrepancies related to database information. These discrepancies could come in the form of an incorrect procedure; incorrectly identified terrain, obstacles and fixes; or any other displayed item used for navigation or communication in the air or on the ground. Go to FlyGarmin.com and select 'Aviation Data Error Report'.*

 - 
NOTE: *The system supports approval of AC 120-76C Hardware Class 3, Software Type B Electronic Flight Bag (EFB) electronic aeronautical chart applications. Possible additional requirements may make a secondary source (traditional paper or additional electronic display) necessary onboard the aircraft. If the secondary source is a Portable Electronic Device (PED), its use must be consistent with guidance in AC 120-76C.*

 - 
NOTE: *Terrain and obstacle alerting is not available north of 89° North latitude and south of 89° South latitude. This is due to limitations present within the Terrain database and the system's ability to process the data representing the affected areas.*

 - 
NOTE: *When using Stormscope, there are several atmospheric phenomena in addition to nearby thunderstorms that can cause isolated discharge points in the strike display mode. However, clusters of two or more discharge points in the strike display mode do indicate thunderstorm activity if these points reappear after the screen has been cleared.*

 - 
NOTE: *Operate G1000NXi system power through at least one cycle in a period of four days of continuous operation to avoid an autonomous system reboot.*

 - 
NOTE: *The purpose of this Cockpit Reference Guide is to provide the pilot a resource with which to find operating instructions on the major features of the system more easily. It is not intended to be a comprehensive operating guide. Complete operating procedures for the system are found in the Pilot's Guide for this aircraft.*

 - 
NOTE: *The navigation databases used in Garmin navigation systems contain Special Procedures. Prior to flying these procedures, pilots must have specific FAA authorization, training, and possession of the corresponding current, and legitimately-sourced chart (approach plate, etc.). Inclusion of the Special Procedure in the navigation database DOES NOT imply specific FAA authorization to fly the procedure.*

BLANK PAGE

SOFTWARE LICENSE AGREEMENT

BY USING THE DEVICE, COMPONENT OR SYSTEM MANUFACTURED OR SOLD BY GARMIN (“THE GARMIN PRODUCT”), YOU AGREE TO BE BOUND BY THE TERMS AND CONDITIONS OF THE FOLLOWING SOFTWARE LICENSE AGREEMENT. PLEASE READ THIS AGREEMENT CAREFULLY. Garmin Ltd. and its subsidiaries (“Garmin”) grants you a limited license to use the software embedded in the Garmin Product (the “Software”) in binary executable form in the normal operation of the Garmin Product. Title, ownership rights, and intellectual property rights in and to the Software remain with Garmin and/or its third-party providers. You acknowledge that the Software is the property of Garmin and/or its third-party providers and is protected under the United States of America copyright laws and international copyright treaties. You further acknowledge that the structure, organization, and code of the Software are valuable trade secrets of Garmin and/or its third-party providers and that the Software in source code form remains a valuable trade secret of Garmin and/or its third-party providers. You agree not to reproduce, decompile, disassemble, modify, reverse assemble, reverse engineer, or reduce to human readable form the Software or any part thereof or create any derivative works based on the Software. You agree not to export or re-export the Software to any country in violation of the export control laws of the United States of America.

BLANK PAGE

Record of Revisions				
Part Number	Revision	Date	Page Range	Description
190-02183-01	A	12/12/17	All	Production Release Added Bluetooth Added WireAware Added other GDU 20.70 parameters

BLANK PAGE

SECTION 1 SYSTEM OVERVIEW			
1.1 System Description	1		
Line Replaceable Units (LRU)	1		
1.2 System Controls	4		
PFD/MFD Controls	4		
Display Controller	5		
Secure Digital Cards	8		
1.3 System Operation	10		
System Power-up	10		
Normal Operation	11		
Reversionary Mode	11		
System Annunciations	12		
System Status	14		
ADAHRS Operation	15		
GPS Receiver Operation	17		
1.4 Accessing System Functionality	24		
Softkey Function	24		
Menus	33		
MFD Page Groups	33		
Split Screen Functionality	37		
System Settings	39		
System Utilities	49		
1.5 Display Backlighting	54		
SECTION 2 FLIGHT INSTRUMENTS			
2.1 Overview	57		
2.2 Flight Instruments	60		
Attitude Indicator	60		
Airspeed Indicator	61		
Altimeter	63		
Vertical Speed Indicator (VSI)	66		
Vertical Deviation	66		
Vertical Navigation (VNV) Indications	69		
Angle of Attack (AOA) Indicator	70		
Horizontal Situation Indicator (HSI)	71		
Course Deviation Indicator (CDI)	75		
Turn Rate Indicator	76		
GPS CDI Scaling	78		
DME Information Window	84		
2.3 Supplemental Flight Data	85		
Generic Timer	85		
Temperature Displays	85		
Wind Data	86		
2.4 PFD Annunciations and Alerting Functions	87		
Altitude Alerting	87		
Low Altitude Annunciation	87		
Marker Beacon Annunciations	88		
Minimum Descent Altitude/Decision Height Alerting	88		
2.5 Garmin SVT	90		
Garmin SVT (Synthetic Vision Technology)	90		
SVT Operation	91		
SVT Features	93		
2.6 Abnormal Operations	104		
Abnormal GPS Conditions	104		
Comparator Annunciations	105		
Reversionary Sensor Annunciations	106		
SVT Troubleshooting	106		
SVT in Reversionary Mode	107		
Unusual Attitudes	107		
SVT Unusual Attitudes	108		
SECTION 3 ENGINE INDICATION SYSTEM			
3.1 Engine Indication System (EIS) Display	110		
3.2 Engine Page	114		
Fuel Calculations	118		
TKS Flight into Known Icing (FIKI) Anti-Ice System	119		
3.3 Leaning Assist Mode	124		
3.4 Reversionary Mode	125		
SECTION 4 AUDIO PANEL AND CNS			
4.1 Overview	129		
Control Unit	135		
4.2 COM Operation	137		
COM Tuning Boxes	137		
COM Transceiver Manual Tuning	138		
Auto-Tuning the COM Frequency	138		
Auto-tuning from the MFD	139		
Frequency Spacing	142		
4.3 NAV Operation	144		
NAV Tuning Boxes	144		
NAV Radio Selection and Activation	145		

NAV Receiver Manual Tuning.....	145	Intersections.....	203
Auto-Tuning a NAV Frequency from the MFD.....	146	NDB.....	205
Auto-Tuning NAV Frequencies on Approach Activation.....	148	VOR.....	207
Marker Beacon Receiver.....	149	VRP.....	210
DME Tuning.....	150	User Waypoints.....	211
4.4 Mode S Transponder	152	5.4 Airspaces	218
Transponder Controls.....	152	5.5 Direct-To Navigation	223
Transponder Mode Selection.....	153	5.6 Flight Planning	229
Entering a Transponder Code.....	155	Flight Plan Creation.....	230
Ident Function.....	156	Flight Plan Progress.....	232
4.5 Additional Audio Panel Operations	158	Flight Plan Import/Export.....	235
Power-Up.....	158	Adding Airways to a Flight Plan.....	246
Mono/Stereo Headsets.....	158	Adding Procedures to a Stored Flight Plan.....	248
Speaker.....	158	Active Flight Plan.....	258
Clearance Recorder and Player.....	158	Along Track Offsets.....	261
Intercom.....	159	Parallel Track.....	262
Split-COM Operation.....	162	Flight Plan Views.....	265
Entertainment Inputs.....	162	Closest Point of FPL.....	268
3D Audio.....	163	User-Defined Holding Patterns.....	268
Bluetooth® (GMA 350c Only).....	165	5.7 Vertical Navigation	274
4.6 Audio Panel Preflight Procedure	167	Altitude Constraints.....	276
4.7 Abnormal Operation	168	Vertical Situation Display (VSD).....	280
Stuck Microphone.....	168	5.8 Procedures	285
COM Tuning Failure.....	168	Departures.....	287
Audio Panel Fail-Safe Operation.....	168	Arrivals.....	289
		Approaches.....	291
		5.9 Weight Planning	304
		Weight Warning Conditions.....	306
		5.10 Trip Planning	308
		Trip Planning.....	308
		5.11 Abnormal Operation	313
		SECTION 6 HAZARD AVOIDANCE	
		6.1 Overview	315
		6.2 Data Link Weather	316
		Activating Data Link Weather Services.....	317
		Weather Product Age.....	321
		Displaying Data Link Weather Products.....	324
		Weather Data Link (XM) Page Softkeys	326
		CONNEXT Data Requests.....	336
		Weather Product Overview.....	340
		Reflectivity.....	349
		Precipitation Limitations.....	349

FIS-B Weather Status.....	373	AFCS Status Box.....	429
Abnormal Operations for Garmin Connex Weather.....	374	Flight Director Modes.....	430
6.3 Stormscope	377	Command Bars.....	430
Using The Stormscope Page.....	377	7.3 AFCS Modes	431
Additional Stormscope Displays.....	379	Vertical Modes.....	431
Stormscope Abnormal Operations.....	380	Pitch Hold Mode (PIT).....	431
6.4 Terrain Displays	381	Selected Altitude Capture Mode (ALTS)....	432
Relative Terrain Symbolology.....	382	Altitude Hold Mode.....	433
Terrain Page.....	385	Vertical Speed Mode.....	434
Additional Terrain Displays.....	387	Flight Level Change Mode.....	435
Vertical Situation Display (VSD) Terrain.....	388	LATERAL MODES.....	436
Terrain-SVT and TAWS-B Alerting Displays.	390	Roll Hold Mode (ROL).....	437
Forward Looking Terrain Avoidance.....	394	Heading Select Mode (HDG).....	437
Inhibiting FLTA Alerting.....	394	Navigation Modes (FMS, VOR, LOC).....	438
Additional TAWS-B Alerting.....	395	Combination Modes (VNV, APR, NAV, BC, GA).....	439
System Status.....	397	Vertical Navigation Modes (VPTH, ALTV) ...	440
6.5 TAS Traffic	399	Automatic Reversion to Pitch Hold Mode .	443
Theory of Operation.....	399	Non-Path Descents.....	443
TAS Surveillance Volume and Symbology..	399	VNV Target Altitude Capture Mode (ALTV)	443
TA Alerting Conditions.....	401	Approach Modes (GPS, VAPP, LOC).....	444
Traffic Alerts.....	402	Glidepath Mode (GP).....	445
Traffic Map Page.....	403	Glideslope Mode (GS).....	446
System Test.....	404	Backcourse Mode (BC).....	447
Operation.....	405	Takeoff (TO) and Go Around (GA) Modes..	448
System Status.....	409	Level Mode (LVL).....	448
6.6 ADS-B Traffic	411	7.4 Autopilot and Yaw Damper	
ADS-B System Overview.....	411	Operation	449
ADS-B with TAS.....	413	FLIGHT CONTROL.....	449
Conflict Situational Awareness and		Pitch Axis and Trim.....	449
Alerting.....	413	Roll Axis.....	450
Airborne and Surface Applications.....	415	Yaw Axis.....	450
Traffic Description.....	416	ENGAGEMENT.....	450
Operation.....	417	DISENGAGEMENT.....	450
ADS-B System Status.....	422	7.5 AFCS Annunciations and Alerts	452
SECTION 7 AUTOMATIC FLIGHT CONTROL SYSTEM		Underspeed Protection.....	452
7.1 AFCS Overview	427	Altitude-Critical Modes (ALT, GS, GP, TO, GA, FLC).....	452
AFCS CONTROLS.....	427	Non-Altitude Critical Modes (VS, VNAV) ...	453
Additional AFCS Controls.....	428	Overspeed Protection.....	453
7.2 Flight Director Operation	429	Level Mode (LVL).....	454
Flight Director Operation.....	429	7.6 Abnormal Operation	455
		ABNORMAL OPERATION.....	455

Reversionary Mode.....	455
SECTION 8 ADDITIONAL FEATURES	
8.1 Overview.....	457
Overview.....	457
8.2 SafeTaxi.....	459
8.3 Charts.....	461
CHARTS.....	461
FliteCharts.....	462
ChartView.....	463
Airport Directory.....	472
IFR/VFR CHARTS.....	472
8.4 Database Cycle Number and Revisions.....	476
8.5 WiFi Connections.....	478
WIFI CONNECTIONS.....	478
8.6 SiriusXM Radio Entertainment.....	481
Using SiriusXM Radio.....	482
Active Channel and Channel List.....	482
Category.....	483
Presets.....	483
Volume.....	484
8.7 Flight Data Logging.....	485
FLIGHT DATA LOGGING.....	485
8.8 Connxt Setup.....	488
8.9 Surface Watch.....	490
SurfaceWatch™.....	490
Information Box.....	490
Alerts.....	491
Takeoff Alerts.....	492
Landing Alerts.....	493
SurfaceWatch Setup.....	494
8.10 Satellite Telephone and SMS Messaging.....	498
Telephone Communication.....	498
Contacts.....	499
Incoming Calls.....	501
Outgoing Calls.....	501
Placing The Cockpit Phone on Hold.....	504
TEXT MESSAGING (SMS).....	504
Viewing a Text Message When Received... ..	505
Reply to a Text Message.....	507
Sending a Text Message.....	507

Predefined Text Messages.....	509
Text Message Boxes.....	511
Managing Text Messages.....	513
8.11 Electronic Stability and Protection (ESP).....	516
Electronic Stability & Protection (ESP™).....	516
Roll Engagement.....	517
Pitch Engagement.....	518
Low Speed Protection.....	519
High Airspeed Protection.....	519
8.12 Hypoxia Recognition and Automatic Descent Mode.....	520
Hypoxia Recognition with Automatic Descent Mode	520
Determining Pilot Alertness.....	520
Automatic Descent Mode.....	521
8.13 Electronic Checklists.....	523
ELECTRONIC CHECKLISTS.....	523
8.14 Auxiliary Video.....	525
Enhanced Vision System (EVS) & Auxiliary Video.....	525
EVS Image Quality and Interpretation	525
ZOOM/RANGE.....	526
8.15 Position Reporting.....	528
POSITION REPORTING.....	528
8.16 Abnormal Operation.....	530
If Failure Still Exists.....	530

APPENDICES

Annunciations and Alerts.....	533
CAS Message Prioritization.....	534
Voice Alerts	541
System Message Annunciations.....	542
System Messages.....	543
Database Management.....	565
Loading Updated Databases.....	565
Magnetic Field Variation Database Update	573
Aviation Terms and Acronyms.....	575
Frequently Asked Questions.....	595
Map Symbols.....	599

INDEX

Index.....	I-1
-------------------	------------

SECTION 1 SYSTEM OVERVIEW

1.1 SYSTEM DESCRIPTION

The Cirrus Perspective+ Integrated Avionics by Garmin presents flight instrumentation, position, navigation, communication, and identification information to the pilot through large-format displays. The Garmin Automatic Flight Control System (AFCS) provides the flight director (FD), autopilot (AP), yaw damper (YD - optional), and manual electric trim (MET) functions. Refer to the AFCS section for more information.

LINE REPLACEABLE UNITS (LRU)

The system consists of the following Line Replaceable Units (LRUs):

- **GDU 1250A (2) or GDU 1050A (2) (Optional)** – The system features two 12 (optional 10 inch), high resolution LED backlit display units. The left display is configured as a Primary Flight Display (PFD). The right display is configured as an Multi Function Display (MFD). The displays communicate with each other through a High-speed Data Bus (HSDB) Ethernet connection. Each display is also paired with an Ethernet connection to the Garmin Integrated Avionics unit (GIA).
- **GIA 63W / GIA 64W (2)** – The Integrated Avionics Units (IAU) function as the main communication hub, linking all LRUs with the PFD. Each GIA contains a GPS Satellite-Based Augmentation System (SBAS) receiver, VHF COM/NAV/GS receivers, a flight director and system integration microprocessors. Each GIA is paired with the on-side display via an HSDB connection.
- **GTP 59 (1) (2 Optional)** – Provides Outside Air Temperature (OAT) data to the on-side GSU.
- **GSU 75 (1) (2 Optional)** – Processes data from the pitot/static system as well as the OAT probe to provide pressure altitude, airspeed, vertical speed and OAT information to the Air Data Attitude Heading Reference System (ADAHRS). This unit also provides aircraft attitude and heading information via ARINC 429 to the PFD, MFD, and GIA. The GSU contains advanced sensors (including accelerometers and rate sensors) and interfaces with the GMU to obtain magnetic field information, and with the GIA to obtain GPS information. ADAHRS modes of operation are discussed later in this document.
- **GEA 71 / GEA 71B (1)** – Receives and processes signals from the engine and airframe sensors. This unit communicates with both GIAs using an RS-485 digital interface.
- **GMU 44 (1) (2 Optional)** – The Magnetometer measures local magnetic field and sends the data to the GSU for processing to determine aircraft magnetic heading. This unit receives power directly from the GSU and communicates with the it, using an RS-485 digital interface.
- **GMA 350 / 350c (1)** – Integrates NAV/COM audio, intercom, telephone, and marker beacon controls. The GMA 350c features an all-digital audio panel with Bluetooth® capability, and communicates with both GIAs, using an RS-232 digital interface.
- **GCU 479 (1)** – Provides the Flight Management System (FMS), navigation radio (NAV), communication radio (COM), transponder (XPDR), and course (CRS) controls for the system through an RS-232 digital interface.
- **GMC 707 (1)** – Provides the controls for the Garmin AFCS through an RS-232 digital interface allowing communication with the PFD and MFD.

- **GTX 335R / 345R** (1) – Solid-state transponders that provide Modes A, C, S and ADS-B capability. The GTX 345R also provides ADS-B In/Out. The transponder can be controlled from the PFD. The transponder communicates with the both GIAs through an RS-232 digital interface.
- **GSA 80** (1) (Optional), **GSA 81** (2) (Optional), and **GSM 86** (3) (Optional) – The GSA 80 servo is used for the automatic control of yaw, while the GSA 81 servos are used for the automatic control of pitch and roll. These units interface with each GIA. The GSM 86 servo gearbox is responsible for transferring the output torque of the GSA 80/81 servo actuator to the mechanical flight-control surface linkage.
- **GTA 82** (1) - The Pitch Trim Adapter takes input from the trim switches, GIA and GSA to control the DC motor to drive the aircraft trim system.
- **GSR 56** (1) (Optional) – The Iridium Transceiver provides telephone voice communication by means of pilot and copilot headsets. The unit can also send and receive data over the Iridium satellite network. The GSR 56 is connected to the GIA with an RS-232 digital interface, with analog connections to the audio panel.
- **Flight Stream 510** (1) (Optional) – Provides wireless Bluetooth connectivity between a compatible tablet/mobile device and the avionics system. It is inserted into an MFD Secure Digital (SD) card slot.
- **GDL 69A SXM** (1) (Optional) – The Data Link Satellite Radio Receiver provides weather information to the MFD (and, indirectly, to the inset map of the PFD) as well as digital audio entertainment. The unit communicates with the MFD via an HSDB connection. A subscription to the SiriusXM Satellite Radio and/or SiriusXM Weather service is required to enable the GDL 69A SXM capabilities.
- **GTS 800** (1) (Optional) – The GTS 800 provides real-time traffic information to the MFD (and, indirectly, to the inset map of the PFD). The GTS 800 communicates with the MFD with an HSDB connection. The GTS 800 also has an analog audio connection to the Audio Panel.

Figure 1-1 shows interactions between the LRUs and optional equipment. The system is also capable of interfacing with the following optional, non-Garmin equipment:

- **KN 63** DME
- **KR 87** ADF
- **CO Guardian** Carbon monoxide detector
- **WX-500** Lightning Detection



NOTE: For information on non-Garmin equipment, consult the applicable optional interface user's guide. This document assumes that the reader is already familiar with the operation of this additional equipment.

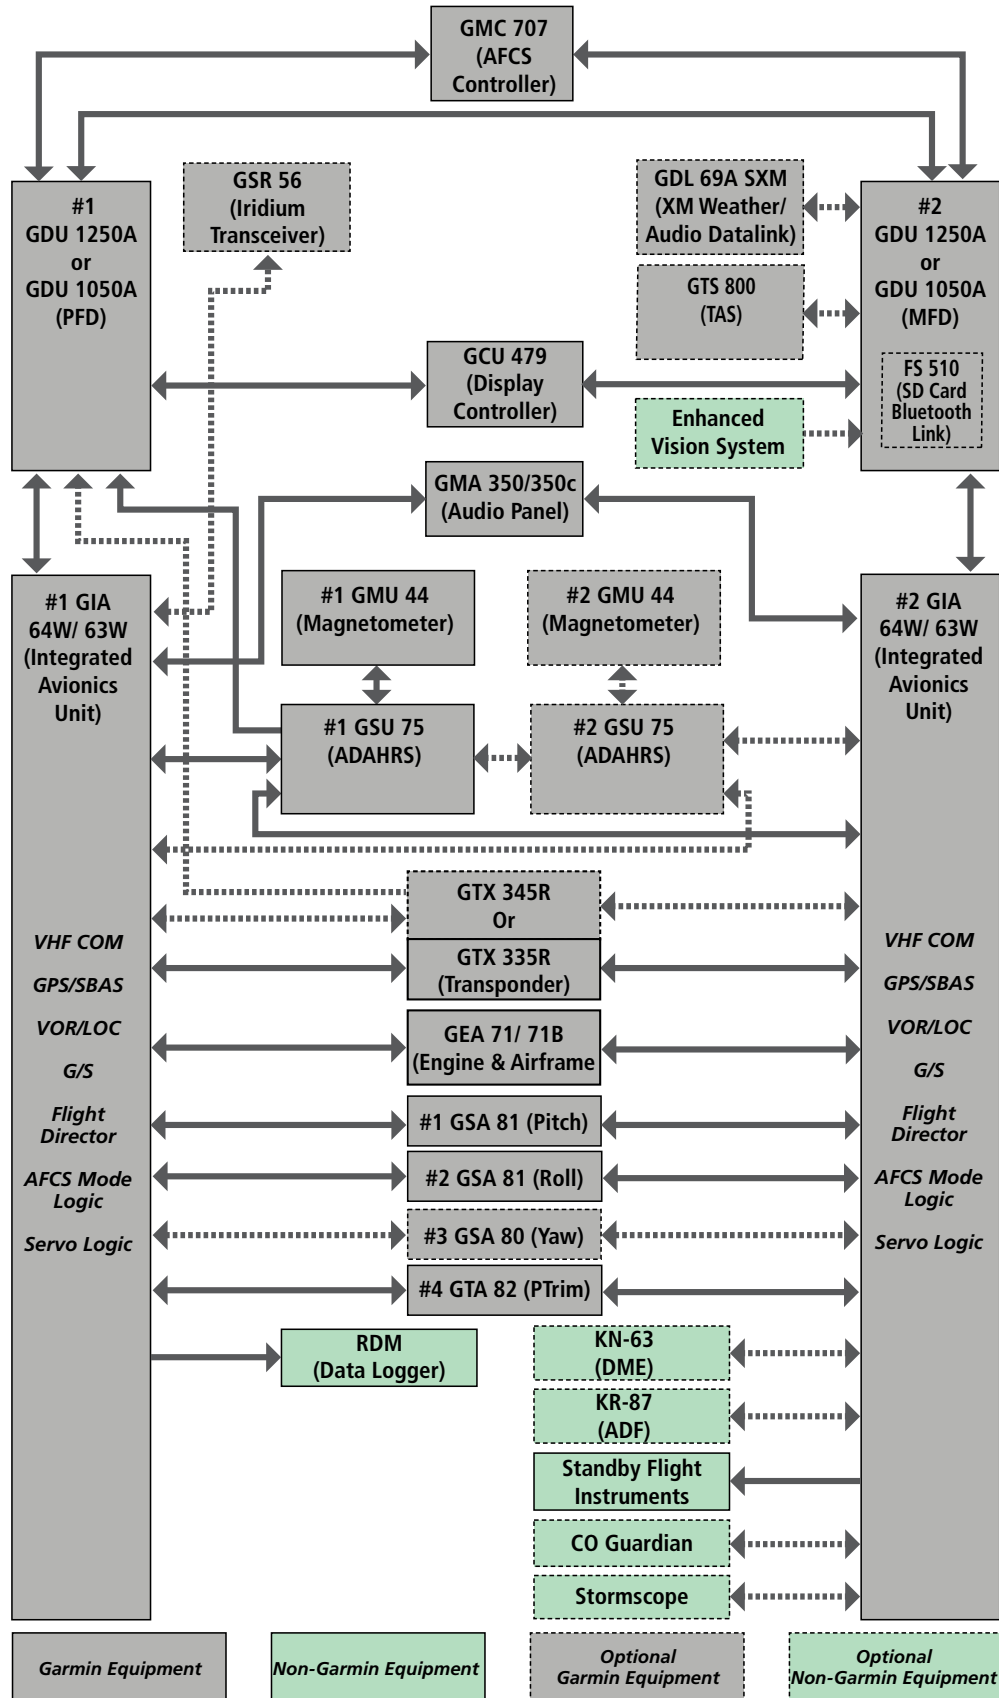


Figure 1-1 System (LRU Configuration)

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CAS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

1.2 SYSTEM CONTROLS

NOTE: The Audio Panel and AFCS controls are described in the Audio & CNS and AFCS sections respectively.

The system controls are located on the PFD and MFD bezels and audio panel. The controls for the PFD and MFD are discussed within the following pages of this section.

PFD/MFD CONTROLS

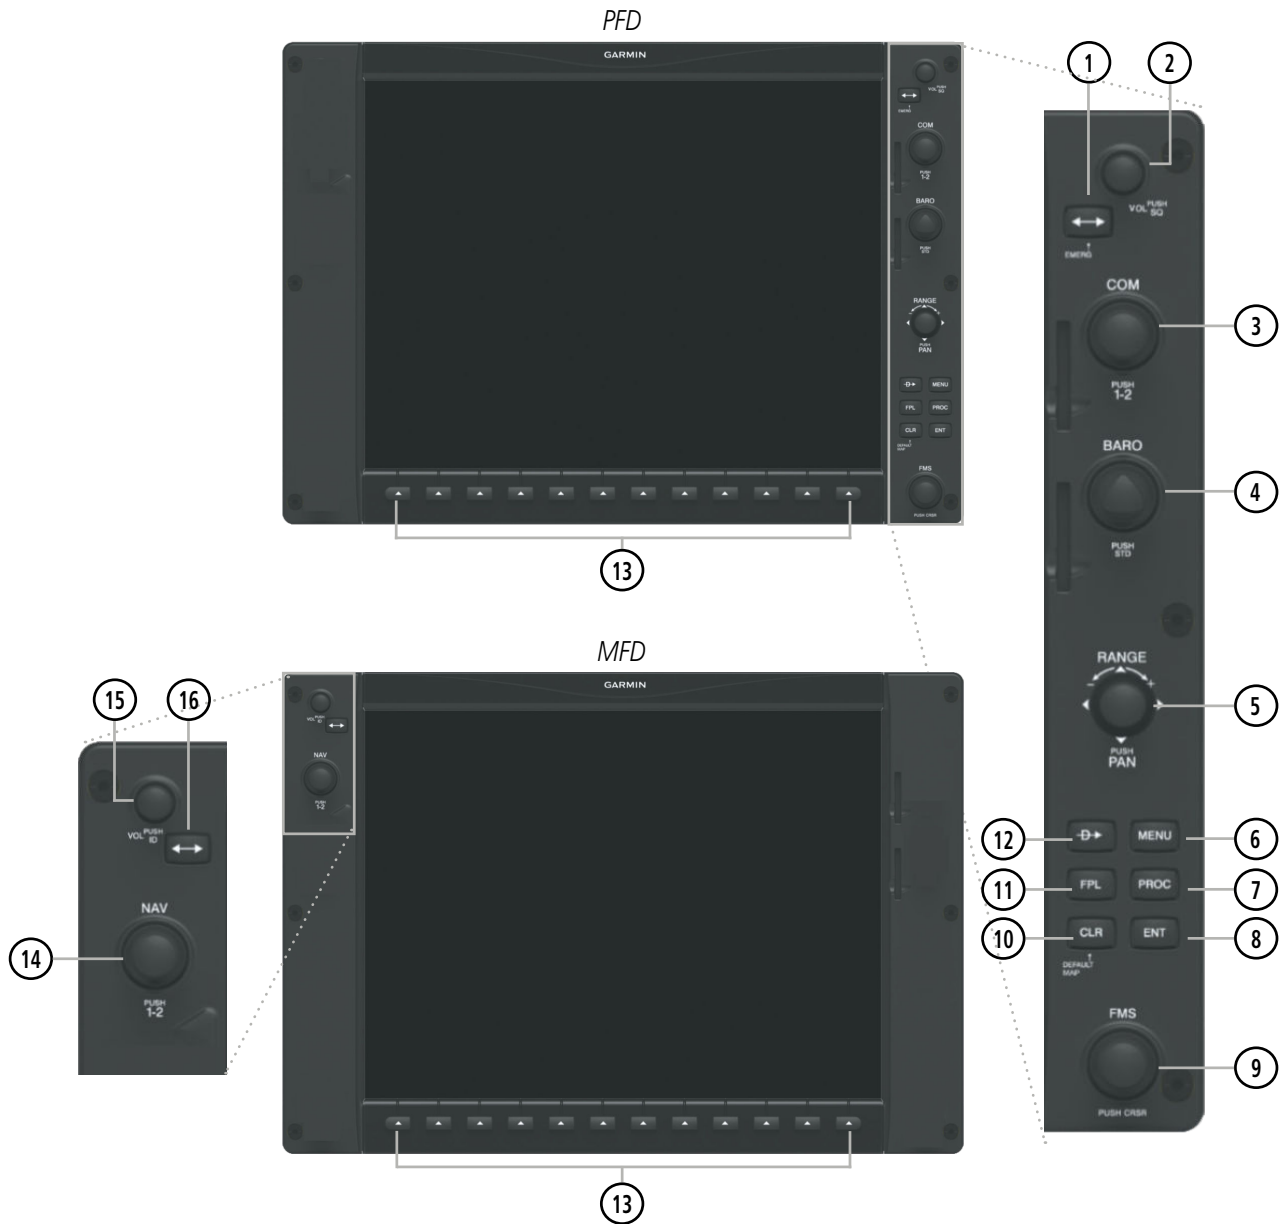


Figure 1-2 PFD & MFD Controls

1	COM Frequency Transfer Key Toggles the standby and active COM frequencies. Press and hold this key for two seconds to tune the emergency frequency (121.5 MHz) automatically into the active frequency field.
2	COM VOL/SQ Knob Controls COM audio volume level. Volume level is shown in the COM frequency field as a percentage. Press to turn the COM automatic squelch On/Off in COM mode.
3	Dual COM Knob Tunes the standby frequencies for the COM transceiver (large knob for MHz; small knob for kHz). Press to switch the cyan tuning arrow between COM1 and COM2.
4	BARO Knob Sets the altimeter barometric pressure. Press to enter standard pressure (29.92).
5	Joystick Changes the map range when rotated. Activates the map pointer when pressed. Moves the Quick Select Box or cursor on the Active Flight Plan Page on the MFD when joystick is moved left, right, up, or down.
6	MENU Key Displays a context-sensitive list of options. This list allows the user to access additional features or make setting changes that relate to particular pages.
7	PROC Key Gives access to IFR departure procedures (DPs), arrival procedures (STARs) and approach procedures (IAPs) for a flight plan. If a flight plan is used, available procedures for the departure and/or arrival airport are automatically suggested. These procedures can then be loaded into the active flight plan. If a flight plan is not used, both the desired airport and the desired procedure may be selected.
8	ENT Key Validates or confirms a menu selection or data entry.
9	Dual FMS Knob Flight Management System Knob. Press the FMS Knob to turn the selection cursor ON and OFF. When the cursor is ON, data may be entered in the applicable window by turning the small and large knobs. The large knob moves the cursor on the page, while the small knob selects individual characters for the highlighted cursor location.
10	CLR Key Erases information, cancels entries, or removes page menus.
11	FPL Key Displays the active Flight Plan Page for creating and editing the active flight plan.
12	Direct-to Key Allows the user to enter a destination waypoint and establish a direct course to the selected destination (the destination is either specified by the identifier, chosen from the active route, or taken from the map pointer position).
13	Bezel Keys Used to select the appropriate softkey to access additional functionality.
14	Dual NAV Knob Tunes the standby frequencies for the NAV receiver (large knob for MHz; small knob for kHz). Press to switch the cyan tuning arrow between NAV1 and NAV2.
15	NAV VOL/ID Knob Controls NAV audio volume level. Press to toggle the Morse code identifier audio ON and OFF. Volume level is shown in the NAV frequency field as a percentage.
16	NAV Frequency Transfer Key Toggles the standby and active NAV frequencies.

DISPLAY CONTROLLER

The additional controls for the PFD and MFD are located on the Display Controller (GCU 479). The following list provides an overview of the controls located on the Display Controller:

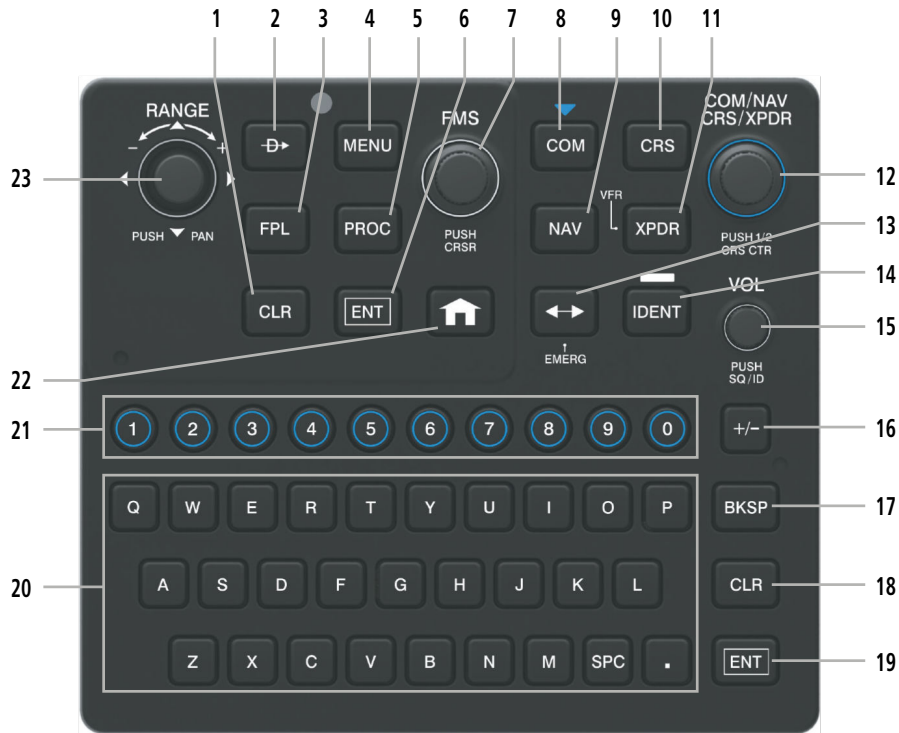


Figure 1-3 Display Controller (GCU 479)

1	CLR Key Erases information, cancels entries, or removes page menus.
2	Direct-to Key Activates the direct-to function and allows the user to enter a destination waypoint and establish a direct course to the selected destination (specified by identifier, chosen from the active route).
3	FPL Key Displays the active Flight Plan Page for creating and editing the active flight plan, or for accessing stored flight plans.
4	Menu Key Displays a context-sensitive list of options for accessing additional features or making setting changes.
5	PROC Key Gives access to IFR departure procedures (DPs), arrival procedures (STARs), and approach procedures (IAPs) for a flight plan or selected airport.
6	ENT Key Validates or confirms a menu selection or data entry.
7	Dual FMS Knob Flight Management System Knob for the MFD. Press the FMS Knob to turn the selection cursor ON and OFF. When the cursor is ON, data may be entered in the applicable window by turning the small and large knobs. The large knob moves the cursor on the page, while the small knob selects individual characters for the highlighted cursor location.
8	COM Key Selects/deselects COM tuning mode for the COM/NAV/CRS/XPDR Knob. When pressed, a blue annunciator above the key illuminates indicating COM tuning mode is active.
9	NAV Key Selects/deselects NAV tuning mode for the COM/NAV/CRS/XPDR Knob. When pressed, a blue annunciator above the key illuminates indicating NAV tuning mode is active.

10	CRS Key Selects/deselects CRS mode for the COM/NAV/CRS/XPDR Knob. When pressed, a blue annunciator above the key illuminates indicating CRS mode is active.
11	XPDR Key Selects/deselects XPDR mode for the COM/NAV/CRS/XPDR Knob. When pressed, a blue annunciator above the key illuminates indicating XPDR mode is active.
12	COM/NAV/CRS/XPDR Knob Acts as follows: <ul style="list-style-type: none"> • <i>COM Tuning Mode</i>: Tunes the standby frequencies for the COM transceiver (large knob for MHz; small knob for kHz). Press to switch the cyan tuning arrow between COM1 and COM2. • <i>NAV Tuning Mode</i>: Tunes the standby frequencies for the NAV receiver (large knob for MHz; small knob for kHz). Press to switch the cyan tuning arrow between NAV1 and NAV2. • <i>CRS Mode</i>: Sets the selected course on the HSI when the VOR1, VOR2, or OBS/SUSP mode is selected. Pressing this knob centers the CDI on the currently selected VOR. The selected course provides course reference to the flight director when operating in Navigation and Approach modes. • <i>XPDR Mode</i>: Selects the transponder code.
13	Frequency Transfer Key (EMERG) Transfers between active and standby COM or NAV tuning frequencies. Selects/deselects NAV tuning mode. Press and hold 2 seconds to tune the emergency frequency (121.5 MHz) automatically into the active frequency field.
14	IDENT Key Activates transponder IDENT function. Annunciator light above the key is lit while Ident is active.
15	VOL Knob Controls COM/NAV audio volume level. Volume level is shown in the COM/NAV frequency field as a percentage. Press to turn the COM automatic squelch On/Off in COM mode, or NAV ID On/Off in NAV mode.
16	Plus-Minus (±) Key Toggles entry between the + and - characters.
17	BKSP Key Moves the cursor back one character space.
18	CLR Key Erases information, cancels entries, or removes page menus.
19	ENT Key Validates or confirms a menu selection or data entry.
20	Alphabetic Keys Allow the user to enter data quickly, without having to select individual characters with the FMS Knob. When the Quick Select Box is shown on the Active Flight Plan Page on the MFD, alphanumeric keys can be used to enter data into the Quick Select Box area.

<p>21</p>	<p>Numeric Keys <i>Blue Mode:</i> Allow the user to enter numeric data quickly in COM, NAV, and XPDR fields. Blue mode is enabled for the following conditions:</p> <ul style="list-style-type: none"> • COM, NAV, or XPDR tuning mode is selected, and no white mode conditions are active. <p><i>White Mode:</i> Allow the user to enter numeric data quickly in FMS fields, without having to select individual numbers with the FMS Knob. White mode is enabled for the following conditions:</p> <ul style="list-style-type: none"> • FMS cursor is active on any MFD page. • Map pointer is active on any MFD map. • Flight Plan page, Weight and Balance page, Fuel Initialization page, or Checklist page are displayed.
<p>22</p>	<p>Home Key Displays the Navigation Map Page.</p>
<p>23</p>	<p>Joystick Changes the map range when rotated. Activates the map pointer when pressed. Moves the Quick Select Box or cursor on the Active Flight Plan Page on the MFD when joystick is moved left, right, up, or down.</p>

SECURE DIGITAL CARDS

NOTE: Refer to the Appendices for instructions on updating the aviation databases.

NOTE: Ensure that the system is powered off before inserting the SD card.

The GDU data card slots use Secure Digital (SD) cards and are located on the top right portion of the display bezels. Each display bezel is equipped with two SD card slots. SD cards are used system software updates. Also, flight plans may be imported or exported from an SD card in the MFD.

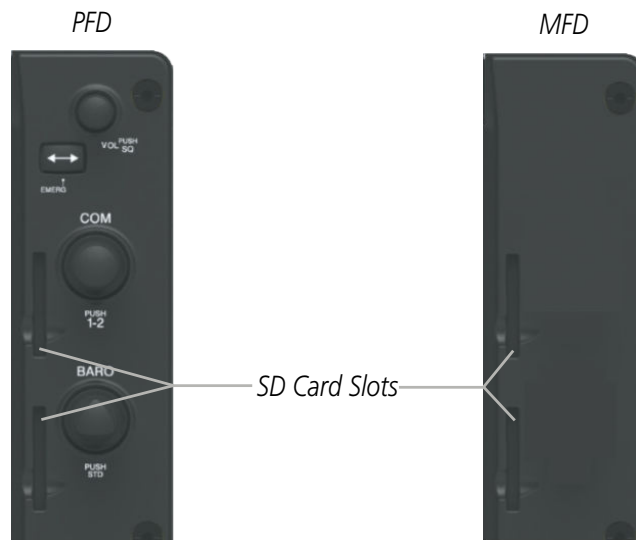


Figure 1-4 PFD/MFD Display Bezel SD Card Slots


Inserting and Removing an SD card:


Insert the SD card in the SD card slot, pushing the card in until the spring latch engages. The front of the card should remain flush with the face of the display bezel. To remove, gently press on the SD card to release the spring latch and eject the card.

1.3 SYSTEM OPERATION

This section discusses powering up the system, normal and reversionary display operation, system status, ADAHRS modes of operation, and GPS receiver operation.

SYSTEM POWER-UP

 **NOTE:** See the Appendices for additional information regarding system-specific annunciations and alerts.

 **NOTE:** See the Pilot's Operating Handbook (POH) for specific procedures concerning avionics power application and emergency power supply operation.

The system is integrated with the aircraft electrical system and receives power directly from electrical busses. The PFD, MFD, and supporting sub-systems include both power-on and continuous built-in test features that exercise the processor, RAM, ROM, and external inputs and outputs to provide safe operation.

When powering up the system, test annunciations are displayed and key annunciator lights also become momentarily illuminated on the audio panel and the display bezels. On the PFD, the ADAHRS begins to initialize and an alignment message is displayed. All system annunciations should disappear typically within one minute of power-up.

When the MFD powers up, the MFD Power-up Screen displays the following information:

- System version and Airframe description
- Basemap Land database version
- Safe Taxi database name and effective dates
- Terrain database name and version
- Obstacle database name and effective dates
- Navigation database name and effective dates
- Airport Directory name and effective dates
- FliteCharts/ChartView database information
- IFR/VFR charts database information
- Crew Profile
- Copyright
- Checklist File

Current database information includes the valid operating dates, cycle number and database type. When this information has been reviewed for currency (to ensure that no databases have expired), the pilot is prompted to continue.

NORMAL OPERATION

PFD

In normal mode, the PFD presents graphical flight instrumentation (attitude, heading, airspeed, altitude and vertical speed), thereby replacing the traditional flight instrument cluster.

MFD

In normal mode, the right portion of the MFD displays a full-color moving map with navigation information, while the left portion of the MFD is dedicated to the Engine Indication System (EIS).



Figure 1-5 Normal Operation

REVERSIONARY MODE



NOTE: The system alerts the pilot when backup paths are utilized by the LRUs. Refer to the Appendices for further information regarding system-specific alerts.

Reversionary mode is a mode of operation in which all important flight information is presented identically on at least one of the remaining displays. In Reversionary Mode, all essential flight information from the PFD is combined with the EIS and presented on the operating display. As when the PFD is operating normally, windows for flight planning, nearest airports, and procedures are available. The Inset Map is moved to the right side of the display.

Should the connection between a PFD and the GIA functions become inoperative, the GIA can no longer communicate with the PFD (refer to Figure 1-1). As a result, the NAV and COM functions provided to the failed PFD or MFD by the GIA are flagged as invalid (amber “X”) on the remaining PFD. The system reverts to backup paths for the ADAHRS, Engine/Airframe Unit, and Transponder, as required. The change to backup paths is completely automated for all LRUs and no pilot action is required.

Reversionary Mode may also be manually activated by pressing the red DISPLAY BACKUP Button. Pressing this button again deactivates Reversionary Mode.

DISPLAY BACKUP Button
Manually Activates/Deactivates
Reversionary Mode on Both Displays

NAV1 and COM1 (provided by the failed
PFD) Flagged Invalid




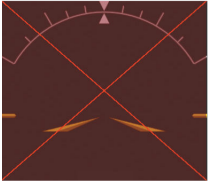








Figure 1-6 Reversionary Mode (Failed PFD)

SYSTEM ANNUNCIATIONS

NOTE: Upon power-up, certain windows remain invalid as system equipment begins to initialize. All windows should be operational within one minute of power-up. If any window continues to remain flagged, the system should be serviced by a Garmin-authorized repair facility.

When an LRU or an LRU function fails, a large red or amber “X” is typically displayed on windows associated with the failed data. Refer to the Pilot’s Operating Handbook (POH) for additional information regarding pilot responses to these annunciations.

NOTE: Refer to the POH for additional information regarding pilot responses to these annunciations.

System Annunciation	Comment
	ADAHRS is aligning.
	Display system is not receiving attitude information from the ADAHRS.
	ADAHRS calibration incomplete or configuration module failure.
	GPS information is either not present or is invalid for navigation use. Note that ADAHRS utilizes GPS inputs during normal operation. ADAHRS operation may be degraded if GPS signals are not present (see POH).
	Display system is not receiving airspeed input from the ADAHRS.
	Display system is not receiving vertical speed input from the ADAHRS.
	Display system is not receiving valid heading input from the ADAHRS or magnetometer.
	Display system is not receiving altitude input from the ADAHRS or magnetometer.
	Display system is not receiving valid OAT information from the ADAHRS.
	Display system is not receiving valid ISA information from the ADAHRS.


System Annunciation	Comment
	Display system is not receiving valid transponder information.
Other Various Amber/Red X Indications	A red or amber 'X' through any other display field (such as engine instrumentation fields) indicates that the field is not receiving valid data.

Table 1-1 System Annunciations

Viewing LRU Information:

- 1) Use the **FMS** Knob to select the 'Aux - System Status' Page.
- 2) To place the cursor in the 'LRU Info' Box,
Press the **LRU** Softkey.
Or:
 - a) Press the **MENU** Key.
 - b) With 'Select LRU' Window highlighted, press the **ENT** Key.
- 3) Use the **FMS** Knob to scroll through the box to view LRU status information.

SYSTEM STATUS

The System Status Page displays the status and software version numbers for all detected system LRUs. Pertinent information on all system databases is also displayed. Active LRUs are indicated by green check marks and failed LRUs are indicated by red "X"s. Failed LRUs should be noted and a service center or Garmin dealer informed.

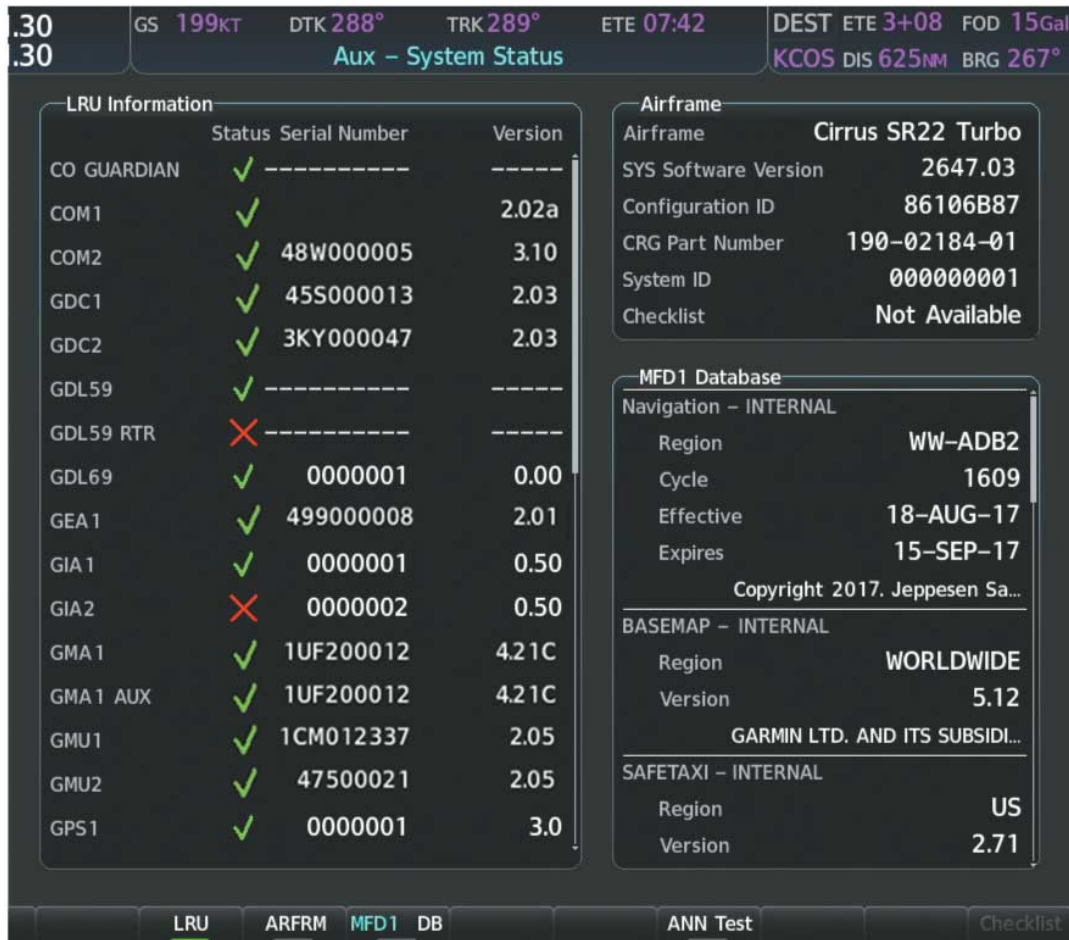


Figure 1-7 Example System Status Page

The LRU and ARFRM Softkeys on the System Status Page select the applicable list ('LRU Information' or 'Airframe' Window) through which the FMS Knob can be used to scroll information within the selected window.

Pressing the MFD1 DB Softkey (label annunciator turns green indicating the softkey is selected) places the cursor in the database window. Use the FMS Knob to scroll through database information for the MFD. Pressing the softkey again will change the softkey label to PFD1 DB. PFD database information is now displayed in the database window. Pressing the softkey a third time will change the softkey label back to MFD1 DB. MFD database information is displayed again in the database window.

The STBY DB Softkey, when available on the System Status Page, makes the standby navigation database become the active navigation database on the next power cycle. Refer to the Database Management section in the Appendices for more information.

The ANN Test Softkey, when selected, causes an annunciation test tone to be played.

ADAHRS OPERATION

In addition to using internal sensors, the ADAHRS uses GPS information, magnetic field data and air data to assist in attitude/heading calculations. In normal mode, the ADAHRS relies upon GPS and magnetic field measurements. If either of these external measurements is unavailable or invalid, the

ADAHRS uses air data information for attitude determination. Eight ADAHRS modes of operation are available and depend upon the combination of available sensor inputs as shown in the following table. Loss of air data, GPS, or magnetometer sensor inputs is communicated to the pilot by system messages.


NOTE: Refer to the Appendices for specific ADAHRS system message information.

NOTE: Aggressive maneuvering while the ADAHRS is not operating normally can degrade ADAHRS accuracy.

ADAHRS Mode	GPS Data Available	Magnetometer Data Available	Air Data Available	Condition	Attitude Indicator
ADAHRS Normal	Yes	Yes	Yes	Valid Pitch/Roll/Heading.	
ADAHRS no-Air Data	Yes	Yes	No		
ADAHRS no-GPS	No	Yes	Yes		
ADAHRS no-GPS/no-Mag	No	No	Yes	Valid Pitch/Roll. Heading will coast-on-gyros until it becomes invalid.	
ADAHRS no-Mag Data	Yes	No	Yes	Valid Pitch/Roll. Invalid Heading.	
ADAHRS no-Mag/no-Air Data	Yes	No	No		
ADAHRS coast-on-gyros until invalid	No	Yes	No	Invalid Pitch/Roll/Heading.	
ADAHRS no-Mag/coast-on-gyros until invalid	No	No	No		

Table 1-2 ADAHRS Operation

GPS INPUT FAILURE

 **NOTE:** *In-flight initialization of ADAHRS, when operating without any valid source of GPS data and at true air speed values greater than approximately 200 knots, is not guaranteed. Under these rare conditions, it is possible for in-flight ADAHRS initialization to take an indefinite amount of time which would result in an extended period of time where valid ADAHRS outputs are unavailable.*

The system provides two sources of GPS information. If a single GPS receiver fails, or if the information provided from one of the GPS receivers is unreliable, the ADAHRS seamlessly transitions to using the other GPS receiver. An alert message informs the pilot of the use of the backup GPS path. If both GPS inputs fail, the ADAHRS continues to operate in reversionary No-GPS mode so long as the air data and magnetometer inputs are available and valid.

AIR DATA INPUT FAILURE

A failure of the air data input has no effect on ADAHRS output while operating in normal mode. A failure of the air data input while the ADAHRS is operating in reversionary No-GPS mode results in invalid attitude and heading information on the PFD (as indicated by red “X” flags).

MAGNETOMETER FAILURE

If the magnetometer input fails, the ADAHRS transitions to one of the reversionary No-Magnetometer modes and continues to output valid attitude information. However, if the aircraft is airborne, the heading output on the PFD does become invalid (as indicated by a red “X”).

GPS RECEIVER OPERATION

Each GIA Integrated Avionics Unit (IAU) contains a GPS receiver. Information collected by the specified receiver (GPS1 for the #1 IAU or GPS2 for the #2 IAU) may be viewed on the ‘Aux - GPS Status’ Page.

GPS1 provides information to the MFD and GPS2 provides data to the PFD. Internal system checking is performed to ensure both GPS receivers are providing accurate data to the GDUs. In some circumstances, both GPS receivers may be providing accurate data, but one receiver may be providing a better GPS solution than the other receiver. In this case the GPS receiver producing the better solution will be automatically coupled to both GDUs. “BOTH ON GPS 1” or “BOTH ON GPS 2” will then be displayed in the Reversionary Sensor Window (see Appendix A) indicating which GPS receiver is being used. Both GPS receivers are still functioning properly, but one receiver is performing better than the other at that particular time.

These GPS sensor annunciations are most often seen after system power-up when one GPS receiver has acquired satellites before the other, or one of the GPS receivers has not yet acquired a SBAS signal. While the aircraft is on the ground, the SBAS signal may be blocked by obstructions causing one GPS receiver to have difficulty acquiring a good signal. Also, while airborne, turning the aircraft may result in one of the GPS receivers temporarily losing the SBAS signal.

If the sensor annunciation persists, check for a system failure message in the ‘Messages’ Window on the PFD. If no failure message exists, check the GPS Status Page and compare the information for GPS1 and GPS2. Discrepancies may indicate a problem.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CWS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

Viewing GPS receiver status information:

- 1) Use the large **FMS** Knob to select the Auxiliary Page Group (see Section 1.4 for information on navigating MFD page groups).
- 2) Use the small **FMS** Knob to select 'Aux - GPS Status' Page.

Selecting the GPS receiver for which data may be reviewed:

- 1) Use the **FMS** Knob to select the 'Aux - GPS Status' Page.
- 2) To change the selected GPS receiver:

Press the desired **GPS** Softkey.

Or:

- a) Press the **MENU** Key
- b) Use the **FMS** Knob to highlight the receiver which is not selected and press the **ENT** Key.

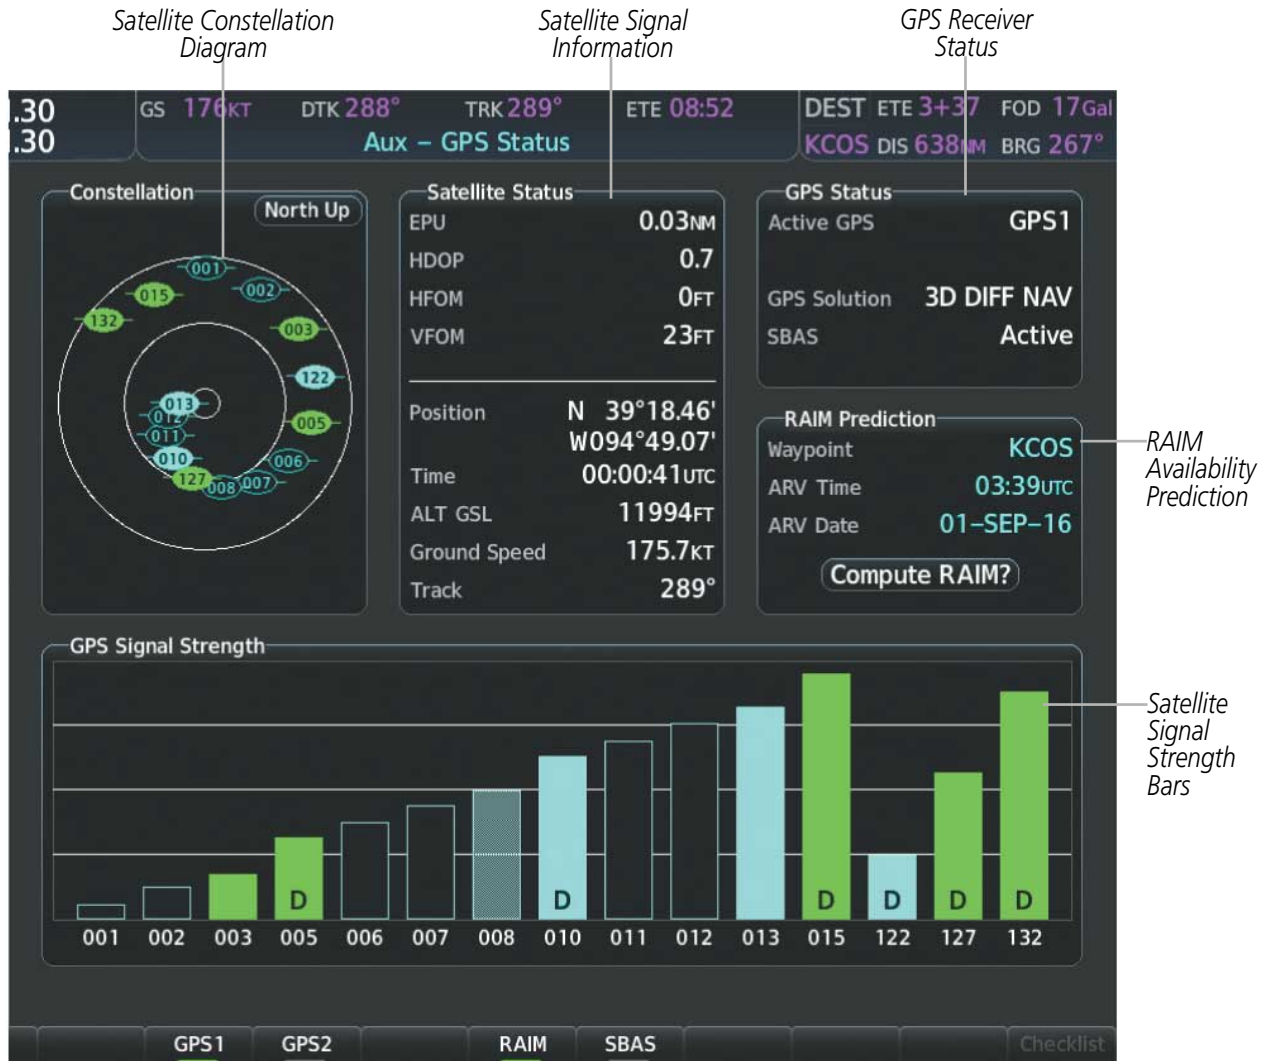


Figure 1-8 GPS Status Page

SATELLITE CONSTELLATION DIAGRAM

The GPS Status Page displays satellites currently in view at their respective positions on a sky view diagram. The sky view is always in a north-up orientation, with the outer circle representing the horizon, the inner circle representing 45° above the horizon, and the center point showing the position directly overhead.

Each satellite is represented by an oval containing the Pseudo-random noise (PRN) number (i.e., satellite identification number). Satellites whose signals are currently being used are represented by solid ovals.

SATELLITE STATUS

This box provides information regarding signal status. The accuracy of the aircraft's GPS fix is calculated using Estimated Position Uncertainty (EPU), Dilution of Precision (DOP), and horizontal and vertical figures of merit (HFOM and VFOM). EPU is the radius of a circle centered on an

estimated horizontal position in which actual position has 95% probability of laying. EPU is a statistical error indication and not an actual error measurement.

DOP measures satellite geometry quality (i.e., number of satellites received and where they are relative to each other) on a range from 0.0 to 9.9, with lower numbers denoting better accuracy. HFOM and VFOM, measures of horizontal and vertical position uncertainty, are the current 95% confidence horizontal and vertical accuracy values reported by the GPS receiver.

The current calculated GPS position, time, altitude, ground speed, and track for the aircraft are displayed below the satellite signal accuracy measurements.

GPS STATUS

The GPS solution type (ACQUIRING, 2D NAV, 2D DIFF NAV, 3D NAV, 3D DIFF NAV) for the active GPS receiver (GPS1 or GPS2) is shown in the upper right of the GPS Status Page. When the receiver is in the process of acquiring enough satellite signals for navigation, the receiver uses satellite orbital data (collected continuously from the satellites) and last known position to determine the satellites that should be in view. “Acquiring” is indicated as the solution until a sufficient number of satellites have been acquired for computing a solution.

When the receiver is in the process of acquiring a 3D differential GPS solution, 3D NAV is indicated as the solution until the 3D differential fix has finished acquisition. SBAS (Satellite-Based Augmentation System) indicates “Inactive”. When acquisition is complete, the solution status indicates 3D DIFF NAV and SBAS indicates “Active”.

RAIM PREDICTION

In most cases performing a RAIM prediction is not necessary. However, in some cases, the selected approach may be outside the SBAS coverage area, and it may be necessary to perform a RAIM prediction for the intended approach.

Receiver Autonomous Integrity Monitoring (RAIM) is a GPS receiver function that performs a consistency check on all tracked satellites. RAIM ensures that the available satellite geometry allows the receiver to calculate a position within a specified RAIM protection limit (2.0 nautical miles for oceanic and enroute, 1.0 nm for terminal, and 0.3 nm for non-precision approaches). During oceanic, enroute, and terminal phases of flight, RAIM is available nearly 100% of the time.

The RAIM prediction function also indicates whether RAIM is available at a specified date and time. RAIM computations predict satellite coverage within ± 15 min of the specified arrival date and time.

Because of the tighter protection limit on approaches, there may be times when RAIM is not available. The system automatically monitors RAIM and warns with an alert message when it is not available. If RAIM is not predicted to be available for the final approach course, the approach does not become active, as indicated by the messages, “Approach is not active” and “RAIM not available from FAF to MAP”. If RAIM is not available when crossing the FAF, the missed approach procedure must be flown.



NOTE: *The system RAIM prediction capability does not meet all RAIM prediction requirements. Reference the RAIM/Fault Detection and Exclusion (FDE) Prediction Tool at flygarmin.com as required.*

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CAS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

Predicting RAIM availability at a selected waypoint:

- 1) Select the 'Aux - GPS Status' Page.
- 2) If necessary, press the **RAIM** Softkey.
- 3) Press the **FMS** Knob. The 'Waypoint' Field is highlighted.
- 4) Turn the small **FMS** Knob to display the 'Waypoint Information' Window.
- 5) Enter the desired waypoint:

Use the **FMS** Knob to enter the desired waypoint by identifier, facility, or city name and press the **ENT** Key.

Or:

- a) Turn the small **FMS** Knob counter-clockwise to display the waypoint selection submenu.
 - b) Turn the small **FMS** Knob clockwise to display the Flight Plan, Nearest, Recent, or User Waypoints, if required.
 - c) Turn the large **FMS** Knob clockwise to select the desired waypoint. The system automatically fills in the 'Ident, Facility, City' Field with the information for the selected waypoint.
 - d) Press the **ENT** Key to accept the waypoint entry.
- 6) Use the **FMS** Knob to enter an arrival time and press the **ENT** Key.
 - 7) Use the **FMS** Knob to enter an arrival date and press the **ENT** Key.
 - 8) With the cursor highlighting 'Compute RAIM?', press the **ENT** Key. Once RAIM availability is computed, one of the following is displayed:
 - 'Compute RAIM?'—RAIM has not been computed for the current waypoint, time, and date combination
 - 'Computing Availability'—RAIM calculation in progress
 - 'RAIM Available'—RAIM is predicted to be available for the specified waypoint, time, and date
 - 'RAIM Not Available'—RAIM is predicted to be unavailable for the specified waypoint, time, and date

Predicting RAIM availability at present position:

- 1) Select the 'Aux - GPS Status' Page.
- 2) If necessary, press the **RAIM** Softkey.
- 3) Press the **FMS** Knob. The 'Waypoint' Field is highlighted.
- 4) Press the **MENU** Key.
- 5) With 'Set WPT to Present Position' highlighted, press the **ENT** Key.

- 6) Press the **ENT** Key to accept the waypoint entry.
- 7) Use the **FMS** Knob to enter an arrival time and press the **ENT** Key.
- 8) Use the **FMS** Knob to enter an arrival date and press the **ENT** Key.
- 9) With the cursor highlighting 'Compute RAIM?', press the **ENT** Key. Once RAIM availability is computed, one of the following is displayed:
 - 'Compute RAIM?'—RAIM has not been computed for the current waypoint, time, and date combination
 - 'Computing Availability'—RAIM calculation in progress
 - 'RAIM Available'—RAIM is predicted to be available for the specified waypoint, time, and date
 - 'RAIM Not Available' is predicted to be unavailable for the specified waypoint, time, and date

SBAS SELECTION

In certain situations, such as when the aircraft is outside or on the fringe of the SBAS coverage area, it may be desirable to disable EGNOS, WAAS or MSAS (although it is not recommended). When disabled, the 'SBAS' Field in the 'GPS Status' Box indicates Disabled. There may be a small delay for the 'GPS Status' Box to be updated upon WAAS and MSAS enabling/disabling.

Disabling SBAS:

- 1) Select the 'Aux - GPS Status' Page.
- 2) If necessary, press the **SBAS** Softkey.
- 3) Press the **FMS** Knob, and turn the large **FMS** Knob to highlight 'EGNOS', 'MSAS' or 'WAAS'.
- 4) Press the **ENT** Key to uncheck the box.
- 5) Press the **FMS** Knob to remove the cursor.

GPS SATELLITE SIGNAL STRENGTHS

The GPS Status Page can be helpful in troubleshooting weak (or missing) signal levels due to poor satellite coverage or installation problems. As the GPS receiver locks onto satellites, a signal strength bar is displayed for each satellite in view, with the appropriate satellite PRN number (01-32 or 120-138 for WAAS) below each bar. The progress of satellite acquisition is shown in three stages, as indicated by signal bar appearance:

- No bar—Receiver is looking for the indicated satellite
- Hollow bar—Receiver has found the satellite and is collecting data
- Cyan bar—Receiver has collected the necessary data and the satellite signal can be used
- Green bar—Satellite is being used for the GPS solution

- Checkered bar—Receiver has excluded the satellite (Fault Detection and Exclusion)
- “D” indication—Denotes the satellite is being used as part of the differential computations

Each satellite has a 30-second data transmission that must be collected (signal strength bar is hollow) before the satellite may be used for navigation (signal strength bar becomes solid).

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CMS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

1.4 ACCESSING SYSTEM FUNCTIONALITY

SOFTKEY FUNCTION

Selection softkeys are located along the bottom of the displays. The softkeys shown depend on the softkey level previously selected. The bezel keys below the softkey labels can be used to select the appropriate softkey. There are three types of softkeys. One selects a simple on/off state, indicated by an annunciator on the softkey label displayed as green (on) or gray (off). The next type of softkey selects among several options, indicated by the softkey label changing (with the exception of the Map Range keys) to reflect the name of the chosen option. The last type of softkey, when pressed displays another set of softkeys available for the selected function. Also, these softkeys revert to the previous level after 45 seconds of inactivity. When a softkey function is disabled, the softkey label is subdued (dimmed).



Figure 1-9 Softkeys (First-Level PFD Configuration)

PFD SOFTKEYS

The PFD softkeys provide control over the PFD display and some flight management functions, including GPS, NAV, terrain, traffic, and weather (optional). Each softkey sublevel has a **Back** Softkey which can be pressed to return to the previous level. If new messages remain after acknowledgement, the **Alerts** Softkey will show “Message” in black text with a white background. The **Alerts** Softkey is visible in all softkey levels. For the top level softkeys and the transponder (XPDR) levels, the **Ident** Softkey remains visible.

The following table describes PFD Softkey functions. Softkeys which display another set of softkeys are indicated in the table by showing the given set as an increased level. For example, the **Map/HSI** Softkey is shown in the Level 1 column. When pressed, the **Map/HSI** Softkey will display another set of softkeys and these softkeys are explained in the Level 2 column. If a softkey on Level 2 provides yet another set of softkey functions, those new available softkeys are then explained in the Level 3 column, etc.

Level 1	Level 2	Level 3	Level 4	Description
Map/HSI				Displays the PFD Map display settings softkeys.
	Layout			Displays the PFD Map selection softkeys.
		Map Off		Removes the PFD map from display (Inset or Traffic).
		Inset Map		Displays the Inset Map.
		HSI Map		Displays the HSI Map.

Level 1	Level 2	Level 3	Level 4	Description
		Inset Trfc		Replaces the Inset Map with a dedicated traffic display.
		HSI Trfc		Replaces the HSI Map with a dedicated traffic display.
	Detail			<p>Selects desired amount of map detail:</p> <ul style="list-style-type: none"> • All (No Declutter): All map features visible. • Detail 1: Removes everything except for the active flight plan. • Detail 2: Declutters land and SUA data. • Detail 3: Declutters land data.
	Traffic			Displays traffic information on PFD Map.
	TER			<ul style="list-style-type: none"> • Topo: Displays topographical data (e.g., coastlines, terrain, rivers, lakes) and elevation scale on PFD Map. • REL: Displays relative terrain information on the PFD Map. • Off: Removes terrain
	WX LGND			Displays/removes the name of the selected data link weather provider (SiriusXM) and the weather product icon and age box (for enabled weather products).
	PRECIP or NEXRAD			Displays Connex weather and coverage on PFD Map. Displays XM NEXRAD weather and coverage on PFD Map (subscription optional).
	METAR			Displays METAR information on PFD Map (subscription optional).
	Lightning			Adds/removes the display of SiriusXM lightning information on PFD Map (optional).

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CDS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

Level 1	Level 2	Level 3	Level 4	Description
		LTNG Off		Disables lightning function on PFD Map. The softkey annunciator is green when the lightning function is off.
		Datalink		Selects the data link weather source for the PFD Map.
		STRMSCP		Adds or removes the display of Stormscope information on the PFD Map. The softkey annunciator is green when the function is on. When the function is off, the annunciator is gray.
TFC Map				Replaces the PFD Map with a dedicated traffic display. The default display is the Inset Map.
PFD Opt				Displays second-level softkeys for additional PFD options.
	SVT			Displays additional SVT overlay softkeys. (optional)
		Pathways		Displays Pathway Boxes on the Synthetic Vision Display.
		Terrain		Enables synthetic terrain depiction.
		HDG LBL		Displays compass heading along the Zero-Pitch line.
		APT Sign		Displays position markers for airports within approximately 15 nm of the current aircraft position. Airport identifiers are displayed when the airport is within approximately 9 nm.
		Wire		Displays power lines on the Synthetic Vision Display.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CNS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

Level 1	Level 2	Level 3	Level 4	Description
	AOA			<p>Selects the display mode of the AOA Indicator (optional).</p> <ul style="list-style-type: none"> • Off: Disables the display of the AOA Indicator on the PFD. • Auto: Enables automatic display of the AOA Indicator on the PFD when the angle of attack is ≥ 0.2, or when flaps are extended. • On: Enables the display of the AOA Indicator on the PFD.
	Wind			Displays the wind option softkeys.
		Off		Wind information not displayed.
		Option 1		Wind direction arrow and speed.
		Option 2		Headwind/Tailwind and crosswind components and wind direction arrow.
		Option 3		Wind direction arrow with direction and speed.
	DME			Displays DME Information (optional).
	Bearing 1			Cycles the Bearing 1 Information Window through NAV1, NAV2, GPS/waypoint identifier and GPS-derived distance information, ADF/frequency, and Off.
	Sensors			Displays the sensor selection softkeys.
		ADC		Displays ADC selection softkeys.
			ADC 1	Selects the #1 ADC.
			ADC 2	Selects the #2 ADC.
		AHRS		Displays the AHRS selection softkeys.
			AHRS 1	Selects the #1 AHRS.
			AHRS 2	Selects the #2 AHRS.

Level 1	Level 2	Level 3	Level 4	Description
	Bearing 2			Cycles the Bearing 2 Information Window through NAV1, NAV2, GPS/waypoint identifier and GPS-derived distance information, ADF/frequency, and Off.
	ALT Units			Displays softkeys to select altitude unit parameters.
		Meters		When enabled, displays overlays altimeter with meters.
		IN		Press to display the BARO setting as inches of mercury.
		HPA		Press to display the BARO setting as hectopascals.
	STD Baro			Sets barometric pressure to 29.92 in Hg (1013 hPa if metric units are selected) and returns to top-level softkeys.
OBS				Selects OBS mode on the CDI when navigating by GPS (only available with active leg). When OBS is on, the softkey annunciator is green.
CDI				Cycles through GPS, NAV1, and NAV2 navigation modes on the CDI.
ADF/DME				Displays the ADF/DME Tuning Window, allowing selection and tuning of the ADF and DME (optional).
XPDR				Displays the transponder selection softkeys.
	Standby			Selects transponder Standby Mode (transponder does not reply to any interrogations).
	On			Activates transponder (transponder replies to identification interrogations).
	Alt			Altitude Reporting Mode (transponder replies to identification and altitude interrogations).

Level 1	Level 2	Level 3	Level 4	Description
	VFR			Automatically enters the VFR code (1200 in the U.S.A. only).
	Code			Displays transponder code selection softkeys 0-7.
		0-7		Use numbers to enter code.
		Ident		Activates the Special Position Identification (SPI) pulse for 18 seconds, identifying the transponder return on the ATC screen.
		BKSP		Removes numbers entered, one at a time.
	Ident			Activates the Special Position Identification (SPI) pulse for 18 seconds, identifying the transponder return on the ATC screen.
Ident				Activates the Special Position Identification (SPI) pulse for 18 seconds, identifying the transponder return on the ATC screen.
Tmr/Ref				Displays Timer 'References' Window.
Nearest				Displays 'Nearest Airports' Window.
Alerts				Displays the Alerts Window when pressed. System generated messages cause the Alerts Softkey label to change to a flashing 'Message' label. Pressing the Message Softkey opens the Alerts Window, acknowledges the message, and the softkey reverts to the 'Alerts' label.

Table 1-3 PFD Softkeys

MFD SOFTKEYS

The MFD softkeys provide control over flight management functions, including GPS, NAV, terrain, traffic, and weather (optional). There are many softkey functions available on the MFD depending on the page group and screen selected.

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CWS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

The following table provides an example of the MFD Softkey functions accessed from the Navigation Map screen. Further information concerning softkeys providing more navigation and flight planning functions may be found in the Flight Management Section. Terrain, traffic, and weather softkey descriptions may be found in the Hazard Avoidance section. Further description of optional equipment and corresponding softkey functions may be found in the Additional Features Section.

Level 1	Level 2	Level 3	Description
Engine			Displays EIS - Engine Page and second-level engine softkeys; select again to exit page (see the EIS Section for more information).
	Anti-Ice		Displays Anti-Ice Softkeys.
		Left	Selects manual mode and opens the left tank valve and closes the right tank valve.
		Auto	Selects Auto Tank Mode.
		Right	Selects manual mode and opens the right tank valve and closes the left tank valve.
	DCLTR		Declutters the Engine Temperatures Box removing bars and temperatures readouts.
	Assist		Identifies temperature peaks.
	Fuel-W&B		Displays Initial Usable Fuel Page and softkeys.
		Full	Resets initial usable fuel to full.
		Tabs	Resets initial usable fuel to tabs.
		Undo	Rejects the last entry and resets to the previous entry.
		W&B	Saves the usable fuel amount shown on the Initial Usable Fuel Page and displays the Weight and Balance Page.
Map Opt			Displays second level Map Options softkeys
	Traffic		Displays traffic information on Navigation Map Page.
	Inset		Displays inset window second level softkeys.
		Off	Removes VSD/Flight Plan Progress Inset from Navigation Map Page.
		FPL PROG	Displays Flight Plan Progress window.

Level 1	Level 2	Level 3	Description
		VSD	Displays VSD inset on Navigation Map Page. The softkey annunciator is green when the VSD is displayed.
		VSD [Mode]	<p>Displays VSD profile information of terrain/obstacles along the current track, vertical track vector, and selected altitude depending on the mode selected..</p> <ul style="list-style-type: none"> • Auto: Automatically displays either VSD profile information for active flight plan information or along current track with no active flight plan. • FPL: Displays VSD profile information for active flight plan. • TRK: Displays VSD profile information along current track.
	TER		<p>Displays terrain on the map; cycles through the following:</p> <ul style="list-style-type: none"> • Off: No terrain information shown on MFD Map. • Topo: Displays topographical data (e.g., coastlines, terrain, rivers, lakes) and elevation scale on MFD Map. • REL: Displays relative terrain information on the MFD Map.
	AWY		<p>Displays airways on the map; cycles through the following:</p> <ul style="list-style-type: none"> • Off: No airways are displayed. • On: All airways are displayed. • LO: Only low altitude airways are displayed. • HI: Only high altitude airways are displayed.
	STRMSCP		Displays Stormscope information on Navigation Map Page (optional).
	NEXRAD		Displays XM NEXRAD weather and coverage on Navigation Map Page (optional).

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CWS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

Level 1	Level 2	Level 3	Description
	XM LTNG		Displays XM lightning information on Navigation Map Page (optional).
	METAR		Displays METAR information on PFD Map (subscription optional).
	Legend		Displays legends for the displayed XM Weather products (optional).
Detail			Selects desired amount of map detail; cycles through the following levels: <ul style="list-style-type: none"> • Detail All: All map features visible. • Detail-3: Declutters land data. • Detail-2: Declutters land and SUA data. • Detail-1: Removes everything except for the active flight plan.
Charts			When available, displays optional airport and terminal procedure charts (optional).
	CHRT Opt		Displays chart display settings softkeys (if available).
	Show Map or Chart		Show Map displays the applicable 'WPT — Airport Information' Page upon the map for the chart currently selected. Chart displays the chart for the 'WPT — Airport Information' Page that is currently selected and returns to the Charts Level 2 Softkeys.
	Info		Pressing the Info 1 or Info 2 Softkey returns to the airport diagram when the view is on a different chart.
	DP		Displays departure procedure chart.
	STAR		Displays standard terminal arrival procedure chart.
	APR		Displays approach procedure chart.
	WX		Displays weather information.
	NOTAM		Displays NOTAM information for selected airport, when available.
Checklist			When available, displays optional checklists.

Table 1-4 MFD Navigation Map Page Softkeys

MENUS

The system has a **MENU** Key that, when pressed, displays a context-sensitive list of options. This options list allows the user to access additional features or make settings changes which specifically relate to the currently displayed window/page. There is no all-encompassing menu. Some menus provide access to additional submenus that are used to view, edit, select, and review options. Menus display 'No Options' when there are no options for the window/page selected. The main controls used in association with all window/page group operations are described in Section 1.2. Softkey selection does not display menus or submenus.

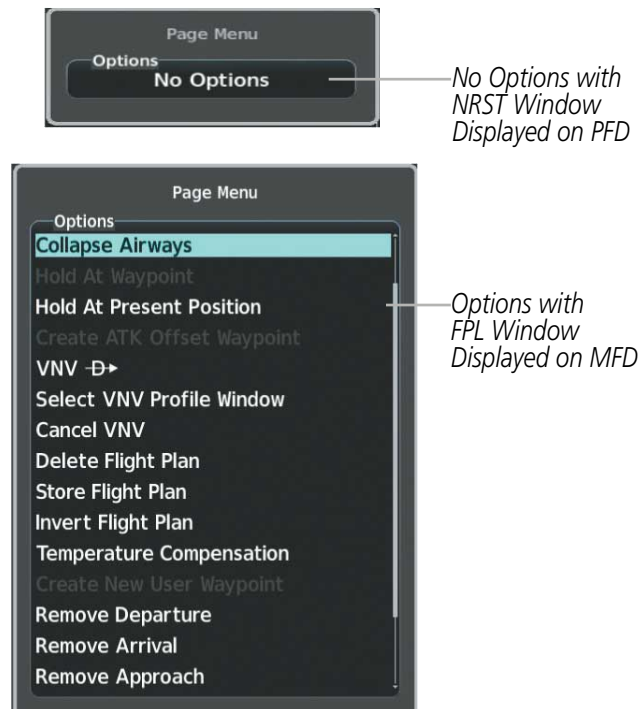


Figure 1-10 Page Menu Examples

Navigating the Page Menu Window:

- 1) Press the **MENU** Key to display the 'Page Menu' Window.
- 2) Turn the **FMS** Knob to scroll through a list of available options (a scroll bar appears to the right of the window when the option list is longer than the window).
- 3) Press the **ENT** Key to select the desired option.
- 4) The **CLR** Key may be pressed to remove the menu and cancel the operation. Pressing the **FMS** Knob also removes the displayed menu.

MFD PAGE GROUPS



NOTE: Refer to other supporting sections in this Pilot's Guide for details on specific pages.

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CNS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

Information on the MFD is presented on pages grouped according to function. The Display Title is comprised of the page group and active page title and is displayed in the upper center of the screen below the Navigation Data Bar. In the bottom right corner of the screen, a page group window is displayed by turning either FMS Knob. The page group tabs are displayed along the bottom of the window. The page titles are displayed in a list above the page group tabs.

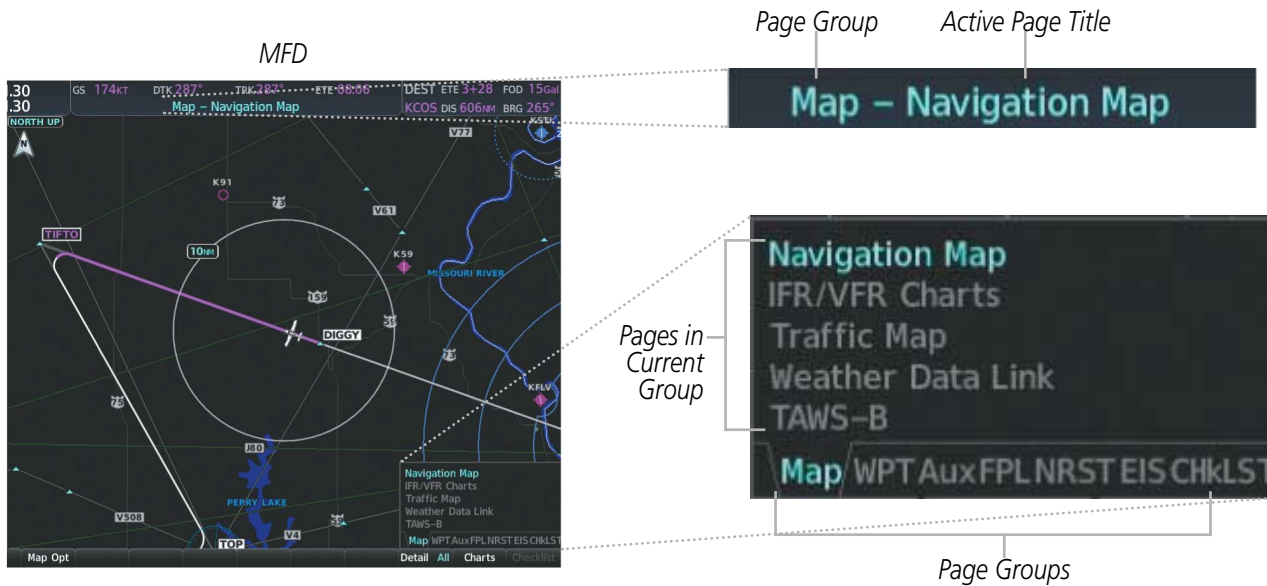


Figure 1-11 Page Title and Page Groups

The main page groups are navigated using the FMS Knob; specific pages within each group can vary depending on the configuration of optional equipment.

Selecting a page using the FMS Knob:

- 1) Turn the large **FMS** Knob to display the list of page groups; continue turning the large **FMS** Knob until the desired page group is selected.
- 2) Turn the small **FMS** Knob to display the desired page within a specific page group.

There are several pages which may be selected by pressing the appropriate softkey at the bottom of the page (or from the page menu). In this case, the page title will change when a different page softkey is pressed, but the page will remain the same, i.e. the **Radio** and **Info** Softkeys show different page titles (“Aux - XM Radio” and “Aux - XM Information” respective) within the same page, “XM Radio”.

Page Group	Pages within Page Group
Map (Map Page Group)	<ul style="list-style-type: none"> • Navigation Map • IFR/VFR Charts (<i>optional</i>) • Traffic Map • Stormscope (<i>optional</i>) • Weather Data Link (<i>optional</i>) • Terrain Proximity / Terrain-SVT or TAWS—B (<i>optional</i>)
WPT (Waypoint Page Group)	<ul style="list-style-type: none"> • Airport Information <ul style="list-style-type: none"> • Airport Information (Info 1 Softkey) • Airport Directory Information (Info 2 Softkey) • Departure Information (DP Softkey) • Arrival Information (STAR Softkey) • Approach Information (APR Softkey) • Weather Information (<i>optional</i>) (WX Softkey) • NOTAM Information (NOTAM Softkey) • Intersection Information • NDB Information • VOR Information • VRP Information • User WPT Information

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CWS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CNS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

Page Group	Pages within Page Group
Aux (Auxiliary Page Group)	<ul style="list-style-type: none"> • Weight and Balance • Trip Planning • Utility • GPS Status • System Setup 1/2 • XM Radio (<i>optional</i>) <ul style="list-style-type: none"> • XM Radio (Radio Softkey) • XM Information (Info Softkey) • Satellite Phone Pages (<i>optional</i>) <ul style="list-style-type: none"> • Telephone (Phone Softkey) • Text Messaging (SMS Softkey) • Connex Page (<i>optional</i>) • System Status • Video (<i>optional</i>) • ADS-B Status • Connex Setup • Databases
FPL (Flight Plan Page Group)	<ul style="list-style-type: none"> • Active Flight Plan <ul style="list-style-type: none"> • Wide View, Narrow View (View Softkey) • Flight Plan Catalog <ul style="list-style-type: none"> • Stored Flight Plan (New Softkey) • SurfaceWatch Setup (<i>optional</i>)
CHKLST (Checklist Page Group)	<ul style="list-style-type: none"> • Checklist

Page Group	Pages within Page Group
NRST (Nearest Page Group)	<ul style="list-style-type: none"> • Nearest Airports • Nearest Intersection • Nearest NDB • Nearest VOR • Nearest VRP • Nearest User WPTS • Nearest Frequencies • Nearest Airspaces
EIS (Engine Instruments Page Group)	<ul style="list-style-type: none"> • Engine • Initial Usable Fuel (Fuel Softkey)

Table 1-5 Page Group and Pages

PROCEDURE PAGES (PROC)

The Procedure Pages may be accessed at any time on the MFD by pressing the **PROC** Key. A menu is initialized, and when a departure, approach, or arrival is selected, the appropriate Procedure Loading Page is opened. Turning the **FMS** Knob does not scroll through the Procedure pages.


- Approach Loading
- Arrival Loading
- Departure Loading

SPLIT SCREEN FUNCTIONALITY

Chart pages may be viewed in split screen mode with the Navigation Map Page and the Active Flight Plan Page. When the system is powered-up on the ground, following acknowledgement of the MFD Power-up Screen, the Navigation Map Page and Active Flight Plan Page will be displayed in normal page view. To activate the split screen functionality, press the **Charts** Softkey. Two display panes are displayed on the MFD. If split screen is activated from the Navigation Map Page, the page title will show 'Map - Chart + Navigation Map'. If split screen is activated from the Active Flight Plan Page, the page title will change to show 'FPL - Chart + Active Flight Plan'.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CWS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

MFD in Split Screen Mode

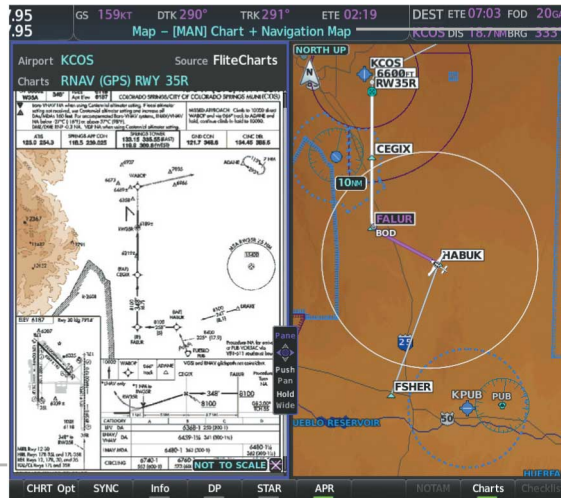

Page Title shows Map - Chart + Navigation Map

Dark purple Pane Selector shows Charts is the active display pane

Softkeys for the active display pane

Figure 1-12 Split Screen Mode

CONTROLLING DISPLAY PANES

In split screen mode, the active display pane is outlined by a dark purple box called the pane selector. Softkeys and menu options will automatically change depending on which display pane is active. Display panes may be displayed vertically in Narrow View, or horizontally in Wide View. In Narrow View, move the Joystick left or right to move the pane selector. In Wide View, move the Joystick up and down to move the pane selector. To change between Wide View and Narrow View, push and hold the Joystick.

For information on viewing Charts and the Active Flight Plan Page with the Flight Plan map, see the Flight Management Section.

For more information on Charts and how to enable Charts Full Screen, see the Additional Features section.

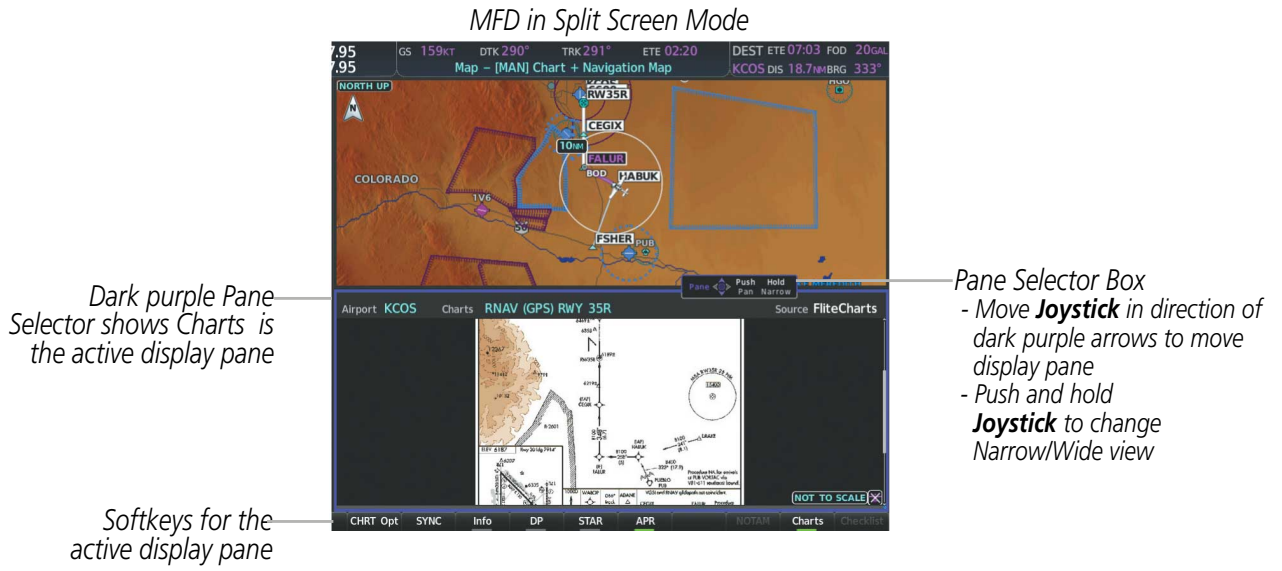


Figure 1-13 Split Screen in Wide View

Enabling/disabling split screen mode:

- 1) From the 'Map - Navigation Map' Page or the 'FPL - Active Flight Plan' Page press the **Charts** Softkey, or press the **MENU** Key and select 'Chart Mode On'.
- 2) To disable the split screen mode, press the **Charts** Softkey again or press the **MENU** Key and select 'Chart Mode Off'. The display returns to the base page, either the Navigation Map Page or the Active Flight Plan Page.

SYSTEM SETTINGS

System settings and crew profiles are managed from the System Setup Pages. Fields shown in cyan text may be edited. Managing crew profiles and editing the system system settings are discussed in this section.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CWS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

Configure System Time

Change Display Unit Settings

*Configure Alert Settings
BARO Alerts -
Airspace Alerts -
Arrival Alerts -*

Fields shown in Cyan may be edited

*Configure settings
- GPS CDI
- Channel Spacing
- Flight Director Format
- Nearest Airport*

Restore System Defaults

*Crew Profile
- Choose active profile
- Create new profile
- Edit, rename, and delete existing profile (other than default profile)
- Import / Export profile to SD Card*

*Select System Setup Page
- Setup 1
- Setup 2*

Figure 1-14 System Setup 1/2 Pages

If desired, the default system settings may be restored at any time.

Restoring system setup defaults:

- 1) Select the 'Aux - System Setup (1 or 2)' Page.
- 2) Press the **Defaults** Softkey; or press the **MENU** Key, highlight 'Restore Page Defaults', and press the **ENT** Key. The message 'Restore Setup (1 or 2) Page Defaults?' is displayed.
- 3) With 'OK' highlighted, press the **ENT** Key.

CREW PROFILES

System settings may be saved under a crew profile. When the system is powered on, the last selected crew profile is shown on the MFD Power-up Screen. The system can store up to 25 profiles; the currently active profile, the amount of memory used, and the amount of memory available are shown at the top of the System Setup Page in the box labeled "Crew Profile". From here, crew

profiles may be created, selected, renamed, or deleted. Crew profiles may also be exported from the system to an SD card, or imported from an SD card into the system.

CREW PROFILE IMPORT/EXPORT MESSAGES

In some circumstances, some messages may appear in conjunction with others:

Message	Description
'No crew profile files found.'	Displayed if the SD card does not have one or more valid pilot profile filenames.
'Overwrite existing profile?'	Displayed if the profile name matches the name of existing profile.
'Profile name invalid. Enter a different profile name.'	Displayed if the profile name is invalid.
'All available crew profiles in use. Delete a profile before importing another.'	Displayed if the maximum number for pilot profiles has been reached.
'Crew profile import failed.'	Displayed if the importing operation fails for any other reason.
'Crew profile import succeeded.'	Displayed if the importing operation succeeds.
'Overwrite existing file?'	Displayed if the filename matches the name of an existing file on the SD card.
'Crew profile export failed.'	Displayed if the export operation fails.
'Crew profile export succeeded.'	Displayed if the export operation succeeds.

Table 1-6 Crew Profile Import/Export Messages

Creating a profile:

- 1) Select the 'Aux - System Setup (1 or 2)' Page.
- 2) Press the **FMS** Knob momentarily to activate the flashing cursor.
- 3) Turn the large **FMS** Knob to highlight 'Create' in the 'Crew Profile' Box.
- 4) Press the **ENT** Key. A 'Create Profile' Window is displayed.
- 5) Use the **FMS** Knob to enter a profile name up to 16 characters long and press the **ENT** Key. Crew profile names cannot begin with a blank as the first letter.
- 6) In the next field, use the small **FMS** Knob to select the desired settings upon which to base the new profile. Profiles can be created based on Garmin factory defaults, default profile settings (initially based on Garmin factory defaults unless edited by the pilot), or other previously created profile settings.
- 7) Press the **ENT** Key.
- 8) With 'Create' highlighted, press the **ENT** Key to create the profile.

Or:

Use the large **FMS** Knob to select 'Create & Activate' and press the **ENT** Key to activate the new profile.

- 9) To cancel the process, select 'Cancel' with the large **FMS** Knob and press the **ENT** Key.

Selecting an active profile:

- 1) Select the 'Aux - System Setup (1 or 2)' Page.
- 2) Press the **FMS** Knob momentarily to activate the flashing cursor.
- 3) Turn the large **FMS** Knob to highlight the 'Active' profile Field in the 'Crew Profile' Box.
- 4) Turn the small **FMS** Knob to display the crew profile list and highlight the desired profile.
- 5) Press the **ENT** Key. The system loads and displays the system settings for the selected profile.

Renaming a Profile:

- 1) Select the 'Aux - System Setup (1 or 2)' Page.
- 2) Press the **FMS** Knob momentarily to activate the flashing cursor.
- 3) Turn the large **FMS** Knob to highlight 'Rename' in the 'Crew Profile' Box.
- 4) Press the **ENT** Key.
- 5) In the 'Rename Profile' Window, turn the **FMS** Knob to select the profile to rename.
- 6) Press the **ENT** Key.
- 7) Use the **FMS** Knob to enter a new profile name up to 16 characters long and press the **ENT** Key.
- 8) With 'Rename' highlighted, press the **ENT** Key.
- 9) To cancel the process, use the large **FMS** Knob to select 'Cancel' and press the **ENT** Key.

Deleting a profile:

- 1) Select the 'Aux - System Setup (1 or 2)' Page.
- 2) Press the **FMS** Knob momentarily to activate the flashing cursor.
- 3) Turn the large **FMS** Knob to highlight 'Delete' in the 'Crew Profile' Box.
- 4) Press the **ENT** Key.
- 5) In the 'Delete Profile' Window, turn the **FMS** Knob to select the profile to delete.
- 6) Press the **ENT** Key.

- 7) With 'Delete' highlighted, press the **ENT** Key.
- 8) To cancel the process, use the large **FMS** Knob to select 'Cancel' and press the **ENT** Key.

Importing a profile from an SD card:

- 1) Insert an SD card containing the crew profile(s) into the top card slot on the MFD.
- 2) Turn the **FMS** Knob to select the 'Aux - System Setup (1 or 2)' Page.
- 3) Press the **Import** Softkey.
 - Or:**
 - a) Press the **MENU** Key.
 - b) Turn the **FMS** Knob to highlight 'Import Crew Profile' and press the **ENT** Key.
- 4) The system displays the 'Crew Profile Importing' Window with 'Import' highlighted. Turn the large **FMS** Knob to highlight the 'Profile Name' Field, then scroll to the desired profile name with the large and small **FMS** Knobs, then press the **ENT** Key. Then press the **ENT** Key with 'Import' highlighted.
- 5) If the imported profile name is the same as an existing profile on the system, the system displays an 'Overwrite existing profile? OK or CANCEL' prompt. Press the **ENT** Key to replace profile on the system with the profile imported from the SD card, or turn the **FMS** Knob to highlight 'CANCEL' and press the **ENT** Key to return to the 'Crew Profile Importing' Window.
- 6) If successful, the system displays 'Crew profile import succeeded' in the Window below. With 'OK' highlighted, press the **ENT** or **CLR** Keys or press the **FMS** Knob to return to the 'Aux - System Setup (1 or 2)' Page. The imported profile becomes the active profile.



Figure 1-15 Crew Profile Import on the (Aux - System Setup Page)


Exporting a profile to an SD card:

- 1) Insert the SD card for storing the Crew Profile into the top card slot on the MFD.
- 2) Turn the **FMS** Knob to select the 'Aux - System Setup (1 or 2)' Page.

- 3) Press the **Export** Softkey. The system displays the 'Crew Profile Exporting' Window.

Or:

 - a) Press the **MENU** Key.
 - b) Turn the **FMS** Knob to highlight 'Export Crew Profile' and press the **ENT** Key.
- 4) To export the crew profile using the current selected profile, press the **ENT** Key with 'Export' highlighted. To change the selected profile, turn the large **FMS** Knob to highlight the 'Profile Name' Field, then scroll to the desired profile name with the large and small **FMS** Knobs, then press the **ENT** Key. Then press the **ENT** Key with 'Export' highlighted.
- 5) If the selected profile to be exported is the same as an existing profile file name on the SD card, the system displays an 'Overwrite existing profile? OK or CANCEL' prompt. Press the **ENT** Key to replace the profile on the SD card with the profile to be exported, or turn the **FMS** Knob to highlight 'CANCEL' and press the **ENT** Key to return to the 'Crew Profile Exporting' Window without exporting the profile.
- 6) If successful, the window displays 'Crew profile export succeeded.' With 'OK' highlighted, press the **ENT** or **CLR** Keys, or press the **FMS** Knob to return to the 'Aux - System Setup (1 or 2)' Page.

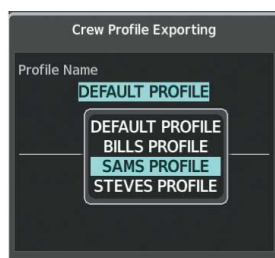

Crew Profile Exporting Window, Enter a Name to Use for Exported Profile



Export Successful

Figure 1-16 Crew Profile Export on the (Aux - System Setup Page)

DATE/TIME

The system obtains the current Universal Time Coordinated (UTC) date and time directly from the GPS satellite signals (shown on the 'Aux - GPS Status' Page). System time (displayed in the lower right corner of the PFD) can be displayed in three formats: local 12-hr, local 24-hr, or UTC. Local time is set by adding/subtracting an offset (hours:minutes) to/from UTC.



Figure 1-17 System Time (UTC Format)

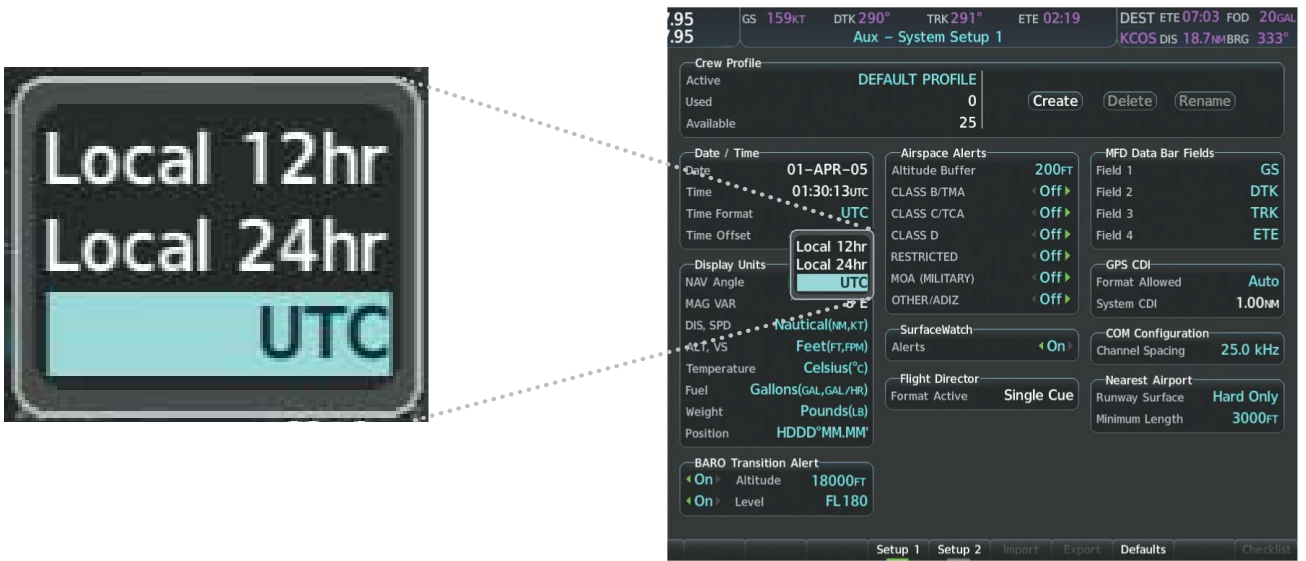


Figure 1-18 Date/Time Settings (System Setup 1 Page)

Configuring the system time:

- 1) Select the 'Aux - System Setup 1' Page.
- 2) Press the **FMS** Knob to activate the cursor.
- 3) Turn the large **FMS** Knob to highlight the 'Time Format' Field.

- 4) Turn the small **FMS** Knob to select the desired format and press the **ENT** Key to confirm selection. If local time format is selected, the 'Time Offset' Field is highlighted.
- 5) If necessary, use the **FMS** Knob to enter the desired time offset (\pm HH:MM) and press the **ENT** Key to confirm selection.

GPS POSITION

The References Window on the PFD shows the current GPS position at the bottom of the window using the selected display format (HHDD°MM.MM' or HDDD°MM'SS.S").

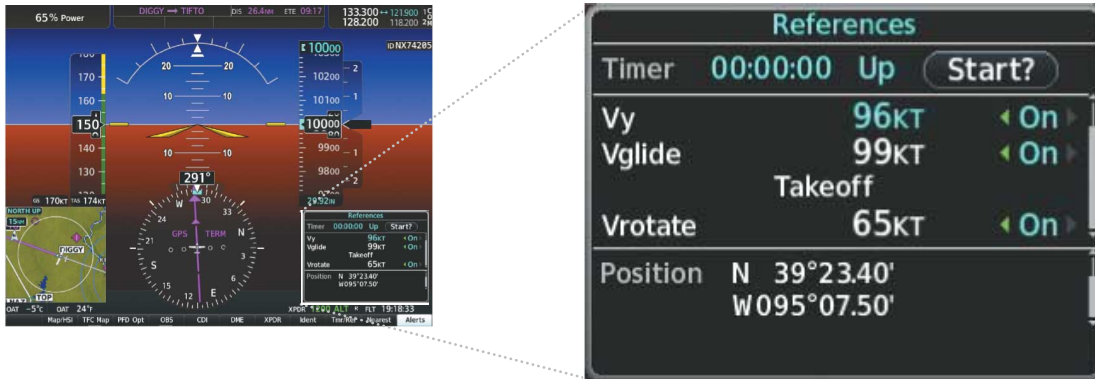


Figure 1-19 GPS Position (References Window)

Viewing the GPS Position in the References Window:

- 1) Press the **Tmr/Ref** Softkey.
- 2) Turn the large **FMS** Knob until the 'Position' Field appears.
- 3) To remove the 'References' Window, press the **Tmr/Ref** Softkey or press the **CLR** Key.

Changing the GPS Position display format:

- 1) On the MFD, turn the **FMS** Knob to select the 'Aux - System Setup 1' Page.
- 2) Press the **FMS** Knob momentarily to activate the flashing cursor.
- 3) Turn the large **FMS** Knob to highlight the 'Position' Field in the 'Display Units' Box.
- 4) Turn the small **FMS** Knob to highlight the desired selection (HHDD°MM.MM' or HDDD°MM'SS.S") and press the **ENT** Key.

DISPLAY UNITS

Units in which various quantities are displayed on the system screens are listed on the System Setup Page. The Navigation Angle reference, the Temperature units, and the Position units can be set from here.

Category	Settings	Affected Quantities
Navigation Angle	Magnetic (North)* True (North)	Heading Course Bearing Track Desired Track Wind Direction (Trip Planning Page)
Distance and Speed	Metric Nautical*	Crosstrack error (HSI) Bearing distances (information windows) DME distance (information window) Flight plan distances Map ranges (some) DIS, GS, TAS, XTK Fields (Navigation Data Bar) Most distances on MFD Altitude buffer distance (System Setup) Arrival Alert trigger distance (System Setup) All speeds on MFD †
Altitude and Vertical Speed	Feet* Meters	All altitudes on MFD All elevations on MFD ††
Temperature	Celsius* Fahrenheit	All temperatures on PFD Total Air Temperature (Trip Planning Page) †††
Fuel and Fuel Flow**	Gallons Liters	Fuel Parameters (Trip Planning Page) †††
Weight**	Pounds Kilograms	N/A
Position**	HDDD°MM.MM' HDDD°MM'SS.S"	All positions
<p>* <i>Default setting</i></p> <p>** <i>Contact a Garmin-authorized service center to change this setting</i></p> <p>† Excludes: airspeed indicator, altitude, true airspeed (PFD), wind speed vector, map range (Traffic Map Page, Terrain Proximity/HTAWS Page), CDI scaling (System Setup), and fuel range calculation (EIS)</p> <p>†† Excludes: altimeter, Vertical Speed Indicator, and VNV altitudes (Active Flight Plan)</p> <p>††† Excludes: Engine Indication System (EIS)</p>		

Table 1-7 Display Unit Settings (System Setup Page)

Changing a display unit setting:

- 1) While on the 'Aux - System Setup 1' Page, press the **FMS** Knob momentarily to activate the flashing cursor.
- 2) Turn the large **FMS** Knob to highlight the desired field in the 'Display Units' Box.

- 3) Turn the small **FMS** Knob to select the desired units.
- 4) Press the **ENT** Key. Press the **CLR** Key to cancel the action without changing the units.

BARO TRANSITION ALERT

See the Flight Instruments section for a discussion on setting the Baro Transition Alert.

AIRSPACE ALERTS

See the Flight Management section for a discussion on Airspace Alerts settings.

SURFACEWATCH

See the Additional Features section for more information on setting the SurfaceWatch Alerts.

FLIGHT DIRECTOR

See the Flight Instruments section for a discussion setting the Flight Director format.

MFD DATA BAR FIELDS

See the Flight Management section for a discussion on the MFD Data Bar Fields settings.

GPS CDI

See the Flight Instruments section for a discussion on setting the GPS CDI format.

COM CONFIGURATION

See the Audio Panel & CNS section for a discussion on the COM Configuration for channel spacing.

NEAREST AIRPORT

See the Flight Management section for a discussion on the Nearest Airport settings.

STABILITY AND PROTECTION

See the Additional Features Section for information on enabling and disabling the Stability and Protection feature.

PAGE NAVIGATION

The large FMS Knob displays the Page Group Tabs and navigates through the tabs. The small FMS Knob navigates through the pages listed within a specific group. The number of clicks it takes to display the Page Group Tabs and change to the next tab can be controlled from the 'Page Navigation' Box on the 'Aux - System Setup 2' Page.

Off – Displays the Page Group Window with one click of either FMS Knob.

On – Displays the Page Group Window and navigates to the next page group with one click of either FMS Knob.

The pilot can select, from the 'Aux - System Setup 2' Page, the amount of time the Page Group Window is displayed (in the lower right corner of the MFD). The timeout can range from two to ten seconds.

Selecting page navigation settings:

- 1) Use the **FMS** Knob to select the 'Aux - System Setup 2' Page.
- 2) Press the **FMS** Knob momentarily to activate the flashing cursor.
- 3) Turn the large **FMS** Knob to highlight the 'Change On 1st Click' Field in the 'Page Navigation' Box.
- 4) Turn the small **FMS** Knob to select 'Off' or 'On'.
- 5) Turn the large **FMS** Knob to highlight the 'Timeout Seconds' Field in the 'Page Navigation' Box.
- 6) Turn the small **FMS** Knob to select the desired number of seconds
- 7) Press the **FMS** Knob momentarily to remove the flashing cursor.

AUDIO ALERTS

The 'Audio' Box on the System Setup 2 Page allows the audio alert voice setting (male or female).

Changing the audio alert voice:

- 1) Use the **FMS** Knob to select the Aux - System Setup 2 Page.
- 2) Press the **FMS** Knob momentarily to activate the flashing cursor.
- 3) Turn the large **FMS** Knob to highlight the Voice Field in the Audio Box.
- 4) Use the **FMS** Knob to select the desired voice setting and press the **ENT** Key.

CHARTS

See the Additional Features Section for information on setting up auto taxi chart.

SYSTEM UTILITIES

For flight planning purposes, timers, trip statistics, and a scheduler feature are provided on the 'Aux - Utility' Page. The timers available include a stopwatch-like generic timer, a total time in flight timer, and a record of the time of departure. Trip statistics—odometer, trip odometer, and average trip and maximum groundspeeds—are displayed from the time of the last reset.

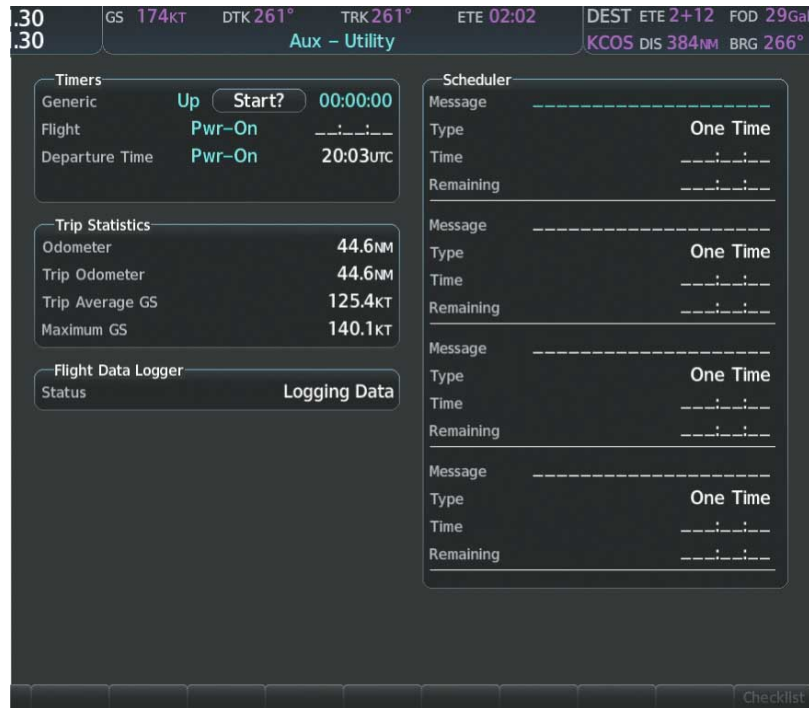


Figure 1-20 Utility Page

TIMERS

The system timers available on the 'Aux - Utility' Page include:

- Stopwatch-like generic timers
- Total-time-in-flight timer
- Time since departure

The generic timer can be set to count up or down from a specified time (HH:MM:SS). When the countdown on the timer reaches zero the digits begin to count up from zero. If the timer is reset before reaching zero on a countdown, the digits are reset to the initial value. If the timer is counting up when reset, the digits return to zero.

The flight timer can be set to count up from zero starting at system power-up or from the time that the aircraft lifts off; the timer can also be reset to zero at any time.

The system records the time at which departure occurs, depending on whether the pilot prefers the time to be recorded from system power-up or from aircraft lift off. The displayed departure time can also be reset to display the current time at the point of reset. The format in which the time is displayed is controlled from the System Setup 1 Page.

Setting the generic timer:

- 1) Use the **FMS** Knob to select the 'Aux - Utility' Page.
- 2) Press the **FMS** Knob momentarily to activate the flashing cursor.

- 3) Turn the small **FMS** Knob to select the timer counting direction (Up/Dn) and press the **ENT** Key.
- 4) If a desired starting time is desired:
 - a) Use the large **FMS** Knob to highlight the HH:MM:SS 'Generic' Field.
 - b) Use the **FMS** Knob to enter the desired time and press the **ENT** Key.
- 5) Turn the large **FMS** Knob to highlight 'Start?' and press the **ENT** Key to start the timer. The field changes to 'Stop?'
- 6) To stop the timer, press the **ENT** Key with 'Stop?' highlighted. The field changes to 'Reset?'
- 7) To reset the timer, press the **ENT** Key with 'Reset?' highlighted. The field changes back to 'Start?' and the digits are reset.

Setting the flight timer starting criterion:

- 1) Use the **FMS** Knob to select the 'Aux - Utility' Page.
- 2) Press the **FMS** Knob momentarily to activate the flashing cursor.
- 3) Turn the large **FMS** Knob to highlight the 'Flight' timer Field.
- 4) Turn the small **FMS** Knob to select the starting criterion (Pwr-On or In-Air) and press the **ENT** Key.

Resetting the flight timer:

- 1) Use the **FMS** Knob to select the 'Aux - Utility' Page.
- 2) Press the **MENU** Key.
- 3) With 'Reset Flight Timer' highlighted, press the **ENT** Key.

Setting the departure timer starting criterion:

- 1) Use the **FMS** Knob to select the 'Aux - Utility' Page.
- 2) Press the **FMS** Knob momentarily to activate the flashing cursor.
- 3) Turn the large **FMS** Knob to highlight the 'Departure Time' Field.
- 4) Turn the small **FMS** Knob to select the starting criterion (Pwr-On or In-Air) and press the **ENT** Key.

Resetting the departure time:

- 1) Use the **FMS** Knob to select the 'Aux - Utility' Page.
- 2) Press the **MENU** Key.
- 3) Use the **FMS** Knob to highlight 'Reset Departure Time' and press the **ENT** Key.

TRIP STATISTICS

The odometer and trip odometer record the total mileage traveled from the last reset; these odometers can be reset independently. Resetting the trip odometer also resets the average trip groundspeed. Maximum groundspeed for the period of time since the last reset is also displayed.

Resetting trip statistics readouts:

- 1) Use the **FMS** Knob to select the 'Aux - Utility' Page.
- 2) Press the **MENU** Key. The following reset options for trip statistics are displayed:
 - Reset Trip ODOM/AVG GS—Resets trip average ground speed readout and odometer
 - Reset Odometer—Resets odometer readout only
 - Reset Maximum Speed—Resets maximum speed readout only
 - Reset All—Resets flight timer, departure timer, odometers, and groundspeed readouts
- 3) Use the **FMS** Knob to highlight the desired reset option and press the **ENT** Key. The selected parameters are reset to zero and begin to display data from the point of reset.

SCHEDULER

The system's Scheduler feature can be used to enter and display reminder messages (e.g., "Switch fuel tanks", "Overhaul", etc.) in the 'Messages' Window on the PFD. Messages can be set to display based on a specific date and time (event), once the message timer reaches zero (one-time; default setting), or recurrently whenever the message timer reaches zero (periodic). Message timers set to periodic alerting automatically reset to the original timer value once the message is displayed. When power is cycled, messages are retained until deleted, and message timer countdown is restarted.

Scheduler messages appear in the 'Alerts' Window on the PFD and cause the Alerts Softkey label to change to a flashing Message label. Pressing the Message Softkey opens the 'Alerts' Window and acknowledges the scheduler message. The softkey reverts to the Alerts label. Pressing the Alerts Softkey again removes the 'Alerts' Window from the display and the scheduler message is deleted from the message queue.

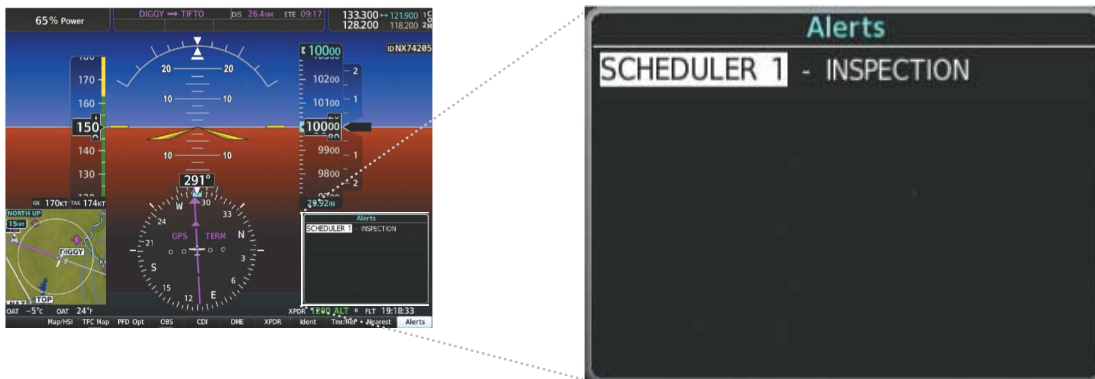


Figure 1-21 PFD Alerts Window

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CWS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

Entering a scheduler message:

- 1) Select the 'Aux - Utility' Page.
- 2) Press the **FMS** Knob momentarily to activate the flashing cursor.
- 3) Turn the large **FMS** Knob to highlight the first empty field within the 'Scheduler' Box.
- 4) Use the **FMS** Knob to enter text within the 'Message' Field to be displayed in the 'Messages' Window and press the **ENT** Key.
- 5) Press the **ENT** Key again or use the large **FMS** Knob to move the cursor to the 'Type' Field.
- 6) Turn the small **FMS** Knob to select set the message alert type:
 - Event—Message issued at the specified date/time
 - One-time—Message issued when the message timer reaches zero (default setting)
 - Periodic—Message issued each time the message timer reaches zero
- 7) Press the **ENT** Key again or use the large **FMS** Knob to move the cursor to the next field.
- 8) For periodic and one-time message, use the **FMS** Knob to enter the timer value (HHH:MM:SS) from which to countdown and press the **ENT** Key.
- 9) For event-based messages:
 - a) Use the **FMS** Knob to enter the desired date (DD-MMM-YYY) and press the **ENT** Key.
 - b) Press the **ENT** Key again or use the large **FMS** Knob to move the cursor to the next field.
 - c) Use the **FMS** Knob to enter the desired time (HH:MM) and press the **ENT** Key.
- 10) Press the **ENT** Key again or use the large **FMS** Knob to move the cursor to enter the next message.

Deleting a scheduler message:

- 1) Select the 'Aux - Utility' Page.
- 2) Press the **FMS** Knob momentarily to activate the flashing cursor.
- 3) Turn the large **FMS** Knob to highlight the 'Message' Field of the scheduler message to be deleted.
- 4) Press the **CLR** Key to clear the message text. If the **CLR** Key is pressed again, the message is restored.
- 5) Press the **ENT** Key to confirm message deletion.

1.5 DISPLAY BACKLIGHTING

The PFD and MFD display backlighting and the PFD and MFD bezel can be adjusted manually in one of two ways:

- Using the individual dimmer bus control for the desired display (this also adjusts the Display Controller, Autopilot controller (optional) and the Audio Panel Keys), or
- The PFD Setup Menu and procedures below. In normal operating mode, backlighting can only be adjusted from a PFD. In reversionary mode, adjustments can be made from remaining displays.

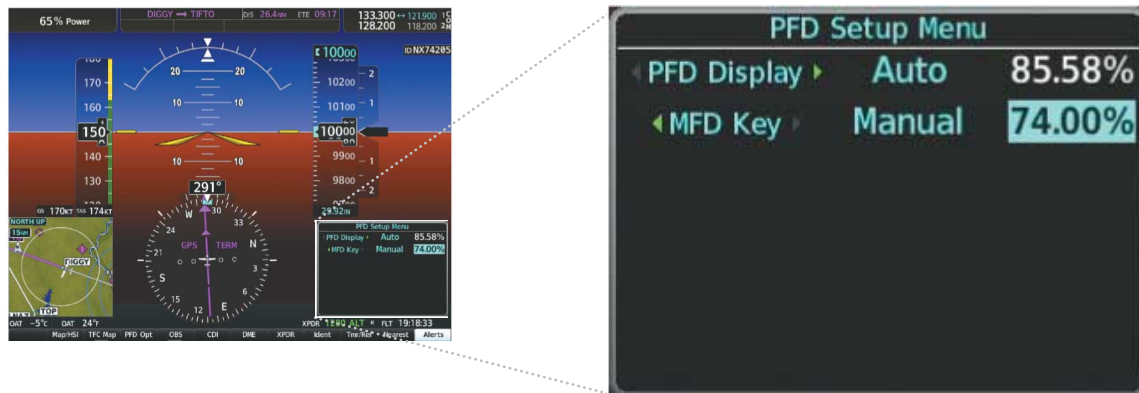


Figure 1-22 PFD Setup Menu

Adjusting display backlighting:

- 1) Press the PFD **MENU** Key to display the 'PFD Setup Menu'. 'Auto' is now highlighted next to 'PFD Display'.
- 2) Turn the small **FMS** Knob to select 'Manual' and press the **ENT** Key. The intensity value is now highlighted.
- 3) Use the **FMS** Knob to enter the desired backlighting then press the **ENT** Key.
- 4) To remove the menu, press the **CLR** or **MENU** Key.

Adjusting key backlighting:

- 1) Press the PFD **MENU** Key to display the 'PFD Setup Menu'. 'Auto' is now highlighted next to 'PFD Display'.
- 2) Turn the large **FMS** Knob to highlight 'PFD Display', or 'MFD Display' as desired.
- 3) Turn the small **FMS** Knob in the direction of the green arrowhead to display 'PFD Key', or 'MFD Key'.
- 4) Turn the large **FMS** Knob to highlight 'Auto'.
- 5) Turn the small **FMS** Knob to select 'Manual' and press the **ENT** Key. The intensity value is now highlighted.

- 6) Use the **FMS** Knob to enter the desired backlighting and press the **ENT** Key.
- 7) To remove the menu, press the **CLR** or **MENU** Key.

BLANK PAGE

SECTION 2 FLIGHT INSTRUMENTS

2.1 OVERVIEW



NOTE: *The Automatic Flight Control System (AFCS) provides additional readouts and bugs on selected flight instruments. Refer to the AFCS Section for details on these bugs and readouts, as they appear on the display during certain AFCS modes.*

The system increases pilot situational awareness by providing an easy-to-scan Primary Flight Display (PFD), featuring a large horizon, airspeed, attitude, altitude, vertical speed, and course deviation information. In addition to the flight instruments, navigation, communication, terrain, traffic, and weather information are also presented on the PFD and explained in other sections of this Pilot's Guide. The following flight instruments and supplemental flight data are displayed on the PFD:

- Airspeed Indicator, showing
 - Indicated airspeed
 - True Airspeed
 - Airspeed awareness ranges
 - Vspeed Reference Bugs
- Attitude Indicator with slip/skid indication
- Altimeter, showing
 - Trend vector
 - Barometric setting
 - Selected altitude
- Vertical Deviation, Glideslope, and Glidepath Indicators
- Vertical Speed Indicator (VSI)
- Vertical Navigation (VNV) indications
- Outside Air Temperature (OAT)
- Horizontal Situation Indicator, showing
 - Turn Rate Indicator
 - Bearing pointers and information windows
 - Navigation Source
 - Course Deviation Indicator (CDI)
 - DME Information Window (optional)
 - HSI Map
 - Angle of Attack Indicator (optional)
- ADF/DME Tuning Window (Optional)

- Timer/References Window, Showing
 - Generic timer
 - Vspeed values
 - Barometric Minimum Descent Altitude (MDA) or Decision Height (DH)
- Wind data

The PFD also displays various alerts and annunciations discussed throughout this pilot's guide.

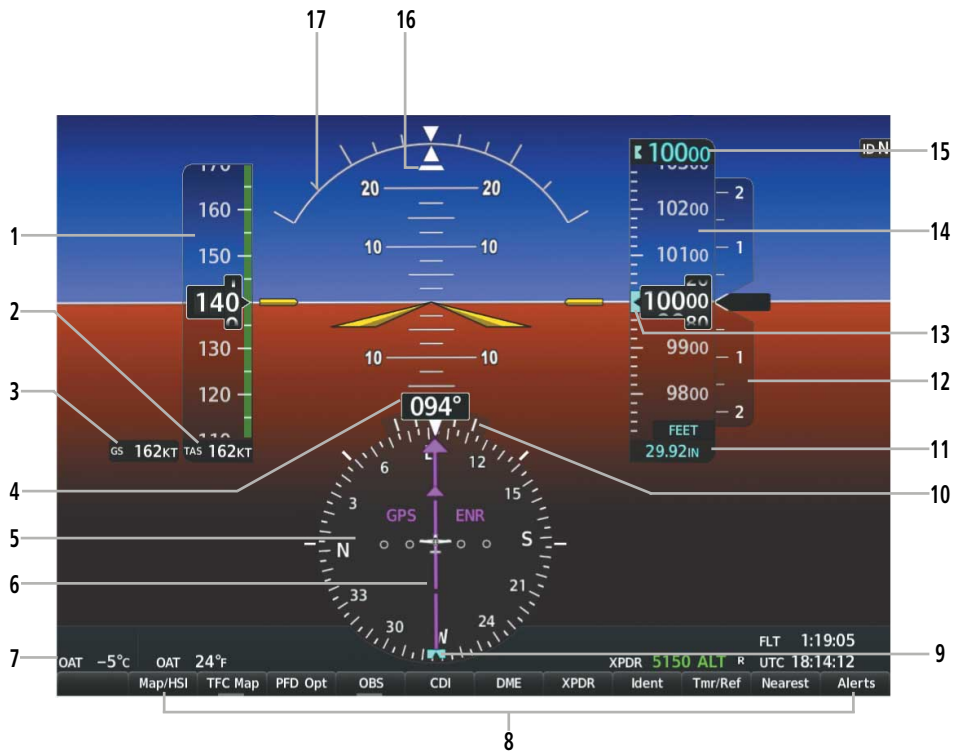


Figure 2-1 Primary Flight Display (PFD) with Basic Information

1	Airspeed Indicator	10	Turn Rate Indicator
2	True Airspeed	11	Barometric Altimeter Setting
3	Ground Speed	12	Vertical Speed Indicator
4	Current Heading	13	Selected Altitude Bug
5	Horizontal Situation Indicator (HSI)	14	Altimeter
6	Course Deviation Indicator	15	Selected Altitude
7	Outside Air Temperature	16	Slip/Skid Indicator
8	Softkeys	17	Attitude Indicator
9	Selected Heading Bug		

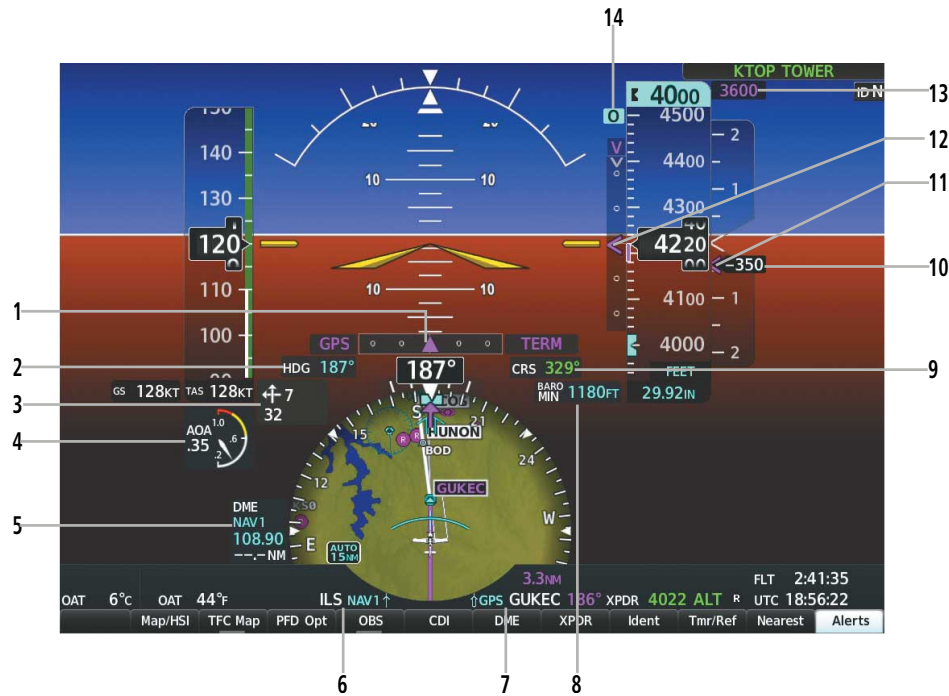


Figure 2-2 PFD with Additional Information

1	Course Deviation Indicator and To/From Indicator	8	Barometric Minimums/Decision Height
2	Selected Heading	9	Selected Course
3	Wind Information	10	Current Vertical Speed
4	Angle of Attack (AOA) Indicator (optional)	11	Required Vertical Speed
5	DME Information Window	12	Vertical Deviation Indicator
6	Bearing 1 Information	13	VNV Target Altitude
7	Bearing 2 Information	14	Marker Beacon Annunciation

2.2 FLIGHT INSTRUMENTS

ATTITUDE INDICATOR

Attitude information is displayed over a virtual blue sky and brown ground with a white horizon line. The Attitude Indicator displays the pitch, roll, and slip/skid information.

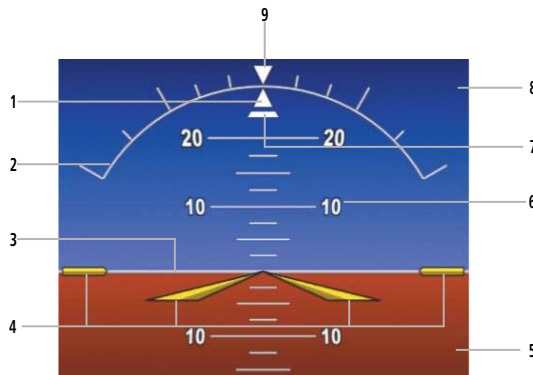


Figure 2-3 Attitude Indicator

1	Roll Pointer	6	Pitch Scale
2	Roll Scale	7	Slip/Skid Information
3	Horizon Line	8	Sky Representation
4	Aircraft Symbol	9	Roll Scale Zero
5	Land Representation		

The horizon line is part of the pitch scale. Above and below the horizon line, major pitch marks and numeric labels are shown for every 10°, up to 80°. Minor pitch marks are shown for intervening 5° increments, up to 25° below and 45° above the horizon line. Between 20° below to 20° above the horizon line, minor pitch marks occur every 2.5°. When the optional Synthetic Vision System is activated, the pitch scale is reduced to 10° up and 7.5° down; refer to the Garmin SVT discussion for details.

The inverted white triangle indicates zero on the roll scale. Major tick marks at 30° and 60° and minor tick marks at 10°, 20°, and 45° are shown to the left and right of the zero. Angle of bank is indicated by the position of the pointer on the roll scale. When the optional Electronic Stability and Protection System (Garmin ESP™) system is installed and enabled, additional indications also appear on the roll scale; refer to the Additional Features Section for more information about Garmin ESP.

The Slip/Skid Indicator is the bar beneath the roll pointer. The indicator bar moves with the roll pointer and moves laterally away from the pointer to indicate uncoordinated flight. Slip (inside the turn) or skid (outside the turn) is indicated by the location of the bar relative to the pointer. One bar of displacement is equal to one half ball of displacement on a traditional Slip/Skid Indicator.



Figure 2-4 Slip/Skid Indicator

AIRSPEED INDICATOR

NOTE: Refer to the Pilot’s Operating Handbook (POH) for speed criteria and Vspeed values.

The Airspeed Indicator displays airspeed on a moving tape rolling number gauge. The true airspeed is displayed in knots below the Airspeed Indicator. The numeric labels and major tick marks on the moving tape are shown at intervals of 10 knots. The minor tick marks on the moving tape are shown at intervals of five knots. Speed indication starts at 20 knots, with 60 knots of airspeed viewable at any time. The indicated airspeed is displayed inside the black pointer. The pointer remains black until reaching the never-exceed speed (V_{NE}), at which point it becomes red. The optional Approach Speed Cue, available on models with an Angle of Attack (AOA) computer, appears as a hollow green circle on the airspeed tape and represents V_{REF} for the aircraft configuration.

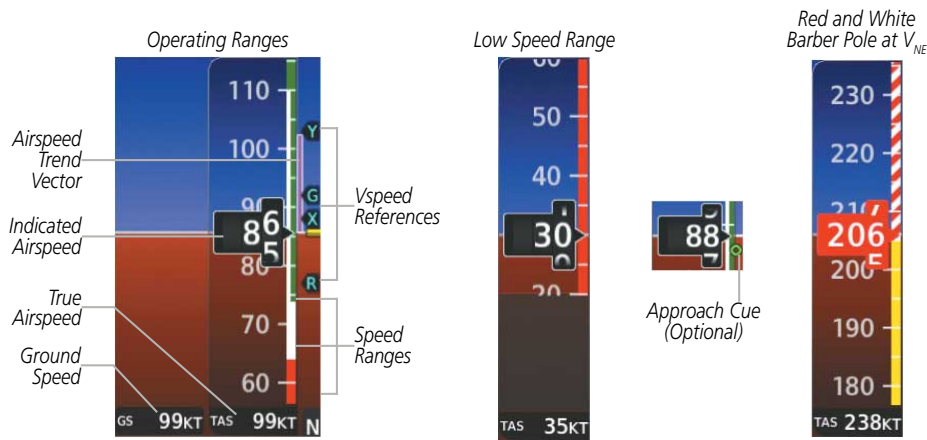


Figure 2-5 Airspeed Indicator Ranges

Color coded stripes appear on the Airspeed Indicator to show the operating ranges. The low speed range stripe is red. Normal operating range is green, caution range is amber, and the never exceed speed (V_{NE}) begins with a red and white barber pole. The flap operating range is indicated by a white stripe.

A red low speed awareness band extends up to the low speed awareness velocity, V_{LSA}

The Airspeed Trend Vector is a vertical magenta line that appears to the right of the color-coded speed range strip when airspeed is either accelerating or decelerating. One end of the magenta line is anchored to the tip of the airspeed pointer while the other end moves continuously up or down corresponding to the rate of acceleration or deceleration. For any constant rate of acceleration or deceleration, the moving end of the line shows approximately what the indicated airspeed value will be in six seconds. If the trend vector crosses V_{NE} , the indicated airspeed number changes to amber. The trend vector is absent if the speed remains constant or if any data needed to calculate airspeed is not available due to a system failure.

Vspeeds (Glide, V_R , V_X , V_Y) bugs can be turned on/off from the Timer/References Window. V_R is categorized as a takeoff Vspeed. When active (on), the Vspeeds are displayed at their respective locations to the right of the airspeed scale. When the indicated airspeed is below 20 knots, enabled Vspeeds Reference Bugs and their numeric values appear in a list at the bottom of the airspeed tape, ordered from highest to lowest.

For the SR20 and SR22 only, the pilot can also modify the value of the V_Y bug, within an allowable range. If the pilot changes value of this bug, an asterisk appears to the right of the speed in the References Window to indicate the pilot has changed the bug from its default value.

On the next avionics power cycle, all vspeed reference bugs are in their default states.

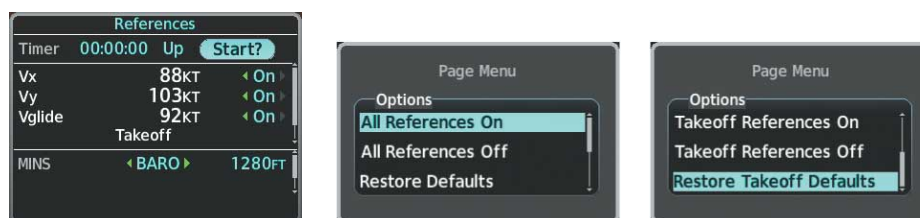


Figure 2-6 Timer/References Window and Menu

The pilot can enable/disable Vspeed bugs all at once or by category (takeoff).

Enabling/disabling or modifying Individual Vspeed Reference Bugs:

- 1) Press the **Tmr/Ref** Softkey.
- 2) Turn the large **FMS** Knob to highlight the desired value to change. For the SR20 or SR22 only, this also includes the speed value for V_Y .
- 3) Turn the small **FMS** Knobs to change the value for the selected item ('On', 'Off', or set the desired vspeed value, if applicable).
- 4) To remove the window, press the **CLR** Key or the **Tmr/Ref** Softkey.

Enabling/disabling Vspeed Reference Bugs as a group or restoring defaults:

- 1) Press the **Tmr/Ref** Softkey.
- 2) Press the **MENU** Key.
- 3) Turn the **FMS** Knob to scroll as needed to highlight the desired selection.

- 4) Press the **ENT** Key.
- 5) To remove the References Window, press the **CLR** Key or the **Tmr/Ref** Softkey.

ALTIMETER

The Altimeter displays barometric altitude values on a moving tape rolling number gauge. The pilot can choose display units format for the Altimeter as feet or meters.

If the altitude is displayed in feet, the Altimeter shows 600 feet of barometric altitude at a time, with numeric labels and major tick marks displayed at intervals of 100 feet. Minor tick marks are at intervals of 20 feet.

If the altitude is displayed in meters, the Altimeter shows 180 meters of barometric altitude at a time, with numeric labels and major tick marks displayed at intervals of 50 meters. Minor tick marks are at intervals of 10 meters.

The Indicated Altitude is displayed in the black pointer.

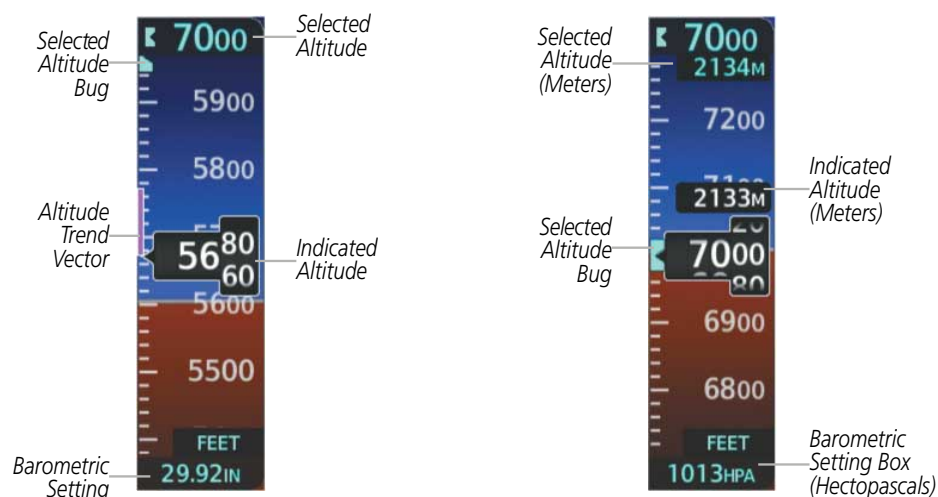


Figure 2-7 Altimeter Settings, In Hg and Metric

Selecting the Altimeter and Vertical Speed Indicator units:

- 1) Turn the **FMS** Knob to select the 'Aux — System Setup 1' Page on the MFD.
- 2) Press the **FMS** Knob to activate the cursor.
- 3) Turn the large **FMS** Knob to highlight the ALT, VS datafield in the 'Display Units' Window.
- 4) Turn the small **FMS** Knob to highlight either 'Feet(FT,FPM)' or 'Meters(MT,MPS)' and press the **ENT** Key. This setting affects altitude displays system-wide, in addition to those shown on the PFD.

Setting the Selected Altitude:

- 1) Turn the **ALT SEL** Knob to set the Selected Altitude in 100-ft increments. When meters are displayed, the Selected Altitude is adjusted in 50 meter increments. If a Minimum

Descent Altitude/Decision Height (MDA/DH) has been set, this altitude is also available for the Selected Altitude as the **ALT SEL** Knob is turned.

- 2) If desired, press the **ALT SEL** Knob to synchronize the selected altitude to the displayed altitude to the nearest 10 ft.

The pilot can choose to display overlays for the indicated altitude and Selected Altitude using alternate display units. For example, if the Altimeter is displaying feet, the system can show a metric overlay for the indicated and selected altitudes without changing the scale or display units of the Altimeter.

Enabling altitude units overlays:

- 1) Press the **PFD Opt** Softkey to display the second-level softkeys..
- 2) Press the **ALT Units** Softkey.
- 3) Press the **Meters or Feet** Softkey to enable/disable the altitude overlays.
- 4) Press the **Back** Softkey twice to return to the top-level softkeys.

A magenta Altitude Trend Vector extends up or down the left of the altitude tape, the end resting at the approximate altitude to be reached in six seconds at the current vertical speed. The trend vector is not shown if altitude remains constant or if data needed for calculation is not available due to a system failure.

The barometric pressure setting is displayed below the Altimeter in inches of mercury (in Hg) or hectopascals (hPa) when metric units are selected. Adjusting the altimeter barometric pressure setting creates discontinuities in VNV vertical navigation, moving the descent path. For large adjustments, it may take several minutes for the aircraft to re-establish on the descent path. If the change is made while nearing a waypoint with a VNV Target Altitude, the aircraft may not re-establish on the descent path in time to meet the vertical constraint.



NOTE: *Adjusting the altimeter barometric setting creates discontinuities in VNAV vertical deviation, moving the descent path. For large adjustments, it may take several minutes for the aircraft to re-establish on the descent path. If the change is made while nearing a waypoint with a VNAV Target Altitude, the aircraft may not re-establish on the descent path in time to meet the vertical constraint.*



WARNING: *Do not use a QFE altimeter setting with this system. System functions will not operate properly with a QFE altimeter setting. Use only a QHN altimeter setting for the height above mean sea level, or the standard pressure setting, as applicable.*

Selecting the altimeter barometric pressure setting:

Turn the **BARO** Knob to select the desired setting.

Selecting standard barometric pressure:

Press the **BARO** Knob to select standard pressure; STD BARO is displayed in the Barometric Setting box.

Or:

- 1) Press the **PFD Opt** Softkey to display the second-level softkeys.
- 2) Press the **STD Baro** Softkey; STD BARO is displayed in the Barometric Setting box.

Changing altimeter barometric pressure setting units:

- 1) Press the **PFD Opt** Softkey to display the second-level softkeys.
- 2) Press the **ALT Units** Softkey.
- 3) Press the **IN** Softkey to display the barometric pressure setting in inches of mercury (in Hg).

Or:

Press the **HPA** Softkey to display the barometric pressure setting in hectopascals (hPa).

- 4) Press the **Back** Softkey twice to return to the top-level softkeys.

The Baro Transition Alerts flash the barometric pressure setting to remind the pilot to change the barometric pressure setting to or from standard. Two alerts are available. The altitude Baro Transition Alert occurs when climbing through the transition altitude beginning at 200 feet below this altitude. The flight level Baro Transition Alert occurs when descending through the transition flight level beginning at 200 feet above this flight level. The barometric pressure setting stops flashing after the pilot changes the barometric pressure setting. The pilot can enable/disable either Baro Transition Alert, and choose the altitude or flight level used to trigger the alerts.

Setting the Baro Transition Alerts:

- 1) Use the FMS Knob to select the 'Aux - System Setup 1' Page on the MFD.
- 2) Press the **FMS** Knob to activate the cursor.
- 3) To enable/disable the Baro Transition Alert based on altitude, turn the large **FMS** Knob to highlight the 'On' or 'Off' field for the BARO Transition Alert Altitude in the 'BARO Transition Alert' Box.
- 4) If desired, turn the small **FMS** Knob to set the BARO Transition Alert Altitude 'On' or 'Off'.
- 5) Turn the large **FMS** Knob to highlight the 'Altitude' field.
- 6) Use the **FMS** Knobs to change the altitude and press the ENT Key to accept or press the CLR Key to return to the previous altitude selection.
- 7) Turn the large **FMS** Knob to highlight the 'On' or 'Off' field for the BARO Transition Alert Level.
- 8) If desired, turn the small **FMS** Knob to set the BARO Transition Alert Flight Level 'On' or 'Off'.
- 9) Turn the large **FMS** Knob to highlight the 'Flight Level' field.

- 10) Use the **FMS** Knobs to change the Flight Level for the alert and press the ENT Key to accept or press the CLR Key to return to the previous altitude selection.
- 11) Push the **FMS** Knob to deactivate the cursor.

VERTICAL SPEED INDICATOR (VSI)

The Vertical Speed Indicator (VSI) displays the aircraft vertical speed using a non-moving tape. The current vertical speed is displayed in the pointer along the tape. The pilot can choose the display units format for the VSI and altimeter as feet or meters.

If the VSI is displayed in feet, numeric labels with major tick marks appear at 1000 and 2000 feet per minute (fpm). Minor tick marks appear for every 500 fpm. If the current vertical speed is at least 100 fpm, digits appear in the pointer. If the rate of ascent/descent exceeds 2000 fpm, the pointer appears at the corresponding edge of the tape while displaying the current vertical speed numerically.

If the VSI is displayed in meters, numeric labels with major tick marks appear at 5 and 10 meters per second. Minor tick marks appear for every 2.5 meters per second. If the current vertical speed is at least 0.5 meters per second, digits appear in the pointer. If the rate of ascent or descent exceeds 10 meters per second, the pointer appears at the corresponding edge of the tape while displaying the current vertical speed numerically.

A magenta chevron bug is displayed as the Required Vertical Speed Indication (RVSI) for reaching a VNV Target Altitude once the “TOD [Top of Descent] within 1 minute” alert has been generated. See the Flight Management Section for details on VNV features, and refer to the Supplemental Flight Data discussion later in this section for more information about VNV indications on the PFDs.

VERTICAL DEVIATION

When Vertical Navigation (VNV) is being used, the Vertical Deviation Indicator (VDI) appears to the left of the altimeter and is displayed with a magenta ‘V’ at the top of the scale and a magenta chevron indicating the baro-VNAV vertical deviation. The VDI appears in conjunction with the “TOD within 1 minute” alert. The VDI is removed from the display if vertical deviation becomes invalid. See the Flight Management Section for details on VNV features, and refer to the Supplemental Flight Data discussion later in this section for more information about VNV indications on the PFD.

The Glideslope Indicator appears to the left of the Altimeter whenever an ILS frequency is tuned in the active NAV field and the aircraft heading and selected course are within 107°. A green diamond acts as the Glideslope Indicator, like a glideslope needle on a conventional indicator. The Glideslope Preview, a hollow gray diamond, is displayed when the navigation source is set to GPS, in addition to a localizer frequency being tuned on the navigation receiver and receiving glideslope information. When the system auto-switches the active navigation source to the localizer frequency the Glideslope Indicator is displayed as a solid green diamond. If a localizer frequency is tuned and there is no glideslope, “NO GS” is displayed in place of the diamond.

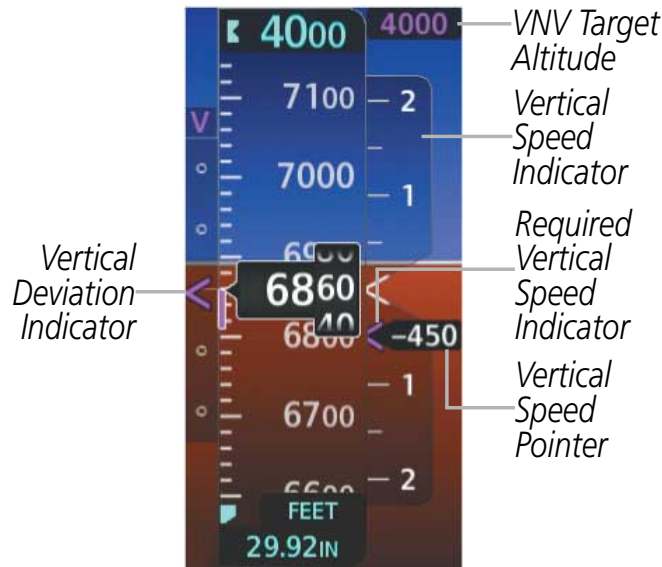


Figure 2-8 Vertical Speed and Deviation Indicators (VSI and VDI)

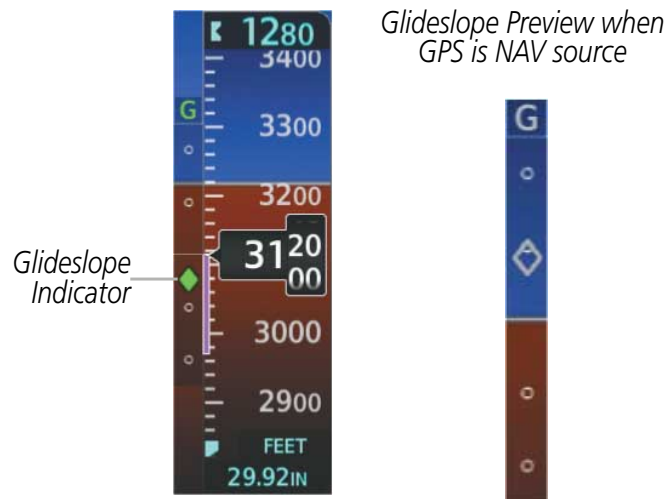


Figure 2-9 Glideslope Indicator and Glideslope Preview Indicator

NOTE: The Glideslope Indicator appears on the display as soon as the Final Approach Fix (FAF) becomes the active waypoint. Depending on procedure design, pilot action, and/or ATC clearance, the aircraft may be centered on or above the glideslope when the Glideslope Indicator appears.

The glidepath is analogous to the glideslope for RNAV approach service levels supporting SBAS vertical guidance (LNAV+V, LNAV/VNAV, LP, LPV, LP+V). When one of these RNAV approaches is loaded into the flight plan, GPS is the selected navigation source, and SBAS is used for vertical approach guidance, the Glideslope Indicator appears as a magenta diamond. Full-scale deflection (two dots), is angular with upper and lower limits. The upper limit is +/-492 feet (150 meters) and lower limits depend on approach service level.

- LNAV/VNAV, LNAV+V, and LP+V, is +/- 148 feet (45 meters).
- LPV is +/- 49 feet (15 meters).

If the approach type downgrades past the final approach fix (FAF), “NO GP” is displayed in place of the diamond.

While executing an SBAS approach with an LNAV/VNAV approach service level, and between the FAF and MAP, the Vertical Deviation Limit Indicators appear as vertical white lines indicating the area where deviation exceeds allowable limits for the glidepath. The Vertical Deviation Limit Indicator provides a scaled representation of +/- 75 feet of the calculated glidepath. The “window” between the lines represents the area of acceptable deviation. The length of the lines change while progressing through the final approach. When the Glidepath Indicator enters an excessive deviation area, the Glidepath and Vertical Deviation Limit Indicators become amber.

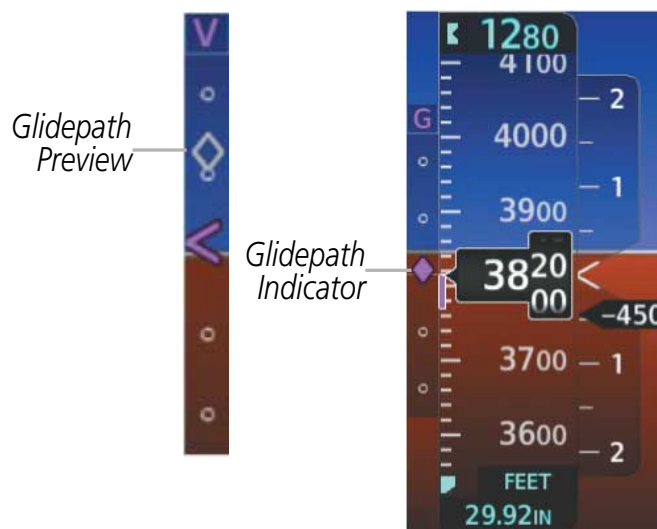


Figure 2-10 Glidepath Preview Indicator and Glidepath Indicator

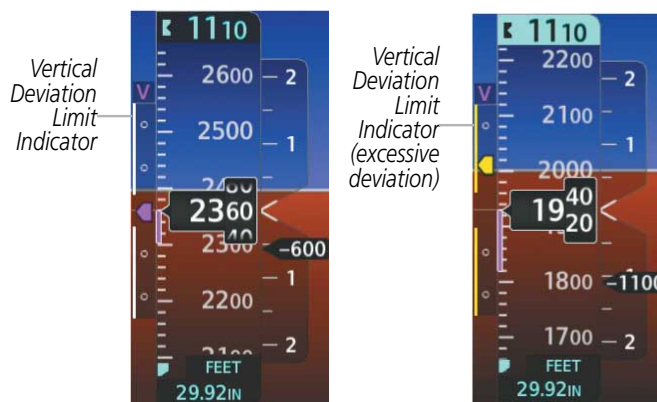


Figure 2-11 Glidepath Indicator (Baro-VNAV) and Vertical Deviation Limit Indicators

While executing an LNAV/VNAV approach and SBAS is unavailable, baro-VNAV (barometric vertical navigation) is used for vertical guidance. This occurs due to any of the following conditions:

- SBAS fails or becomes unavailable prior to the FAF
- The aircraft is outside of SBAS coverage
- SBAS is manually disabled on the ‘Aux — GPS Status’ Page

Baro-VNAV is also the source of vertical approach guidance if the LNAV/VNAV procedure does not support SBAS vertical guidance.

While baro-VNAV is being utilized, the Glidepath Indicator appears as a magenta pentagon. If the approach type downgrades past the final approach fix (FAF), “NO GP” is displayed in place of the pentagon.

VERTICAL NAVIGATION (VNV) INDICATIONS

When a VNV flight plan has been activated, VNV indications (VNV Target Altitude, RVSI, VDI) appear on the PFD in conjunction with the “TOD within 1 minute” message and “Vertical track” voice alert. See the Flight Management and AFCS sections for details on VNV features. VNV indications are removed from the PFD according to the criteria listed in the table.



Figure 2-12 Vertical Navigation Indications (PFD)


Criteria	VNV Indication Removed		
	Required Vertical Speed (RSVI)	Vertical Deviation (VDI)	VNV Target Altitude
Aircraft > 1 min before the next TOD due to flight plan change	X	X	X
VNV cancelled (CNCL VNV Softkey selected on MFD)	X	X	X
Distance to active waypoint cannot be computed due to unsupported flight plan leg type (see Flight Management Section)	X	X	X
Aircraft > 250 feet below active VNV Target Altitude	X	X	X
Current crosstrack or track angle error has exceeded limit	X	X	X
Active altitude-constrained waypoint can not be reached within maximum allowed flight path angle and vertical speed	X	X	

Table 2-1 VNV Indication Removal Criteria

ANGLE OF ATTACK (AOA) INDICATOR

The optional Angle of Attack (AOA) Indicator appears on the PFD below the airspeed indicator and is shown when the Inset Map is not displayed. The AOA Indicator displays the normalized angle of attack. White, amber, and red arcs indicate AOA ranges. A normalized AOA value of 1.0 corresponds to a stall, and will cause Low Speed ESP to activate if this condition is reached. The system dynamically calculates the red and amber arc ranges based on parameters such as bank angle, and flaps position. The red arc begins at the Stall Warning threshold and ends at 1.0 (Stall threshold). The amber arc represents maneuvering margin to a 35 degree bank angle. At bank angles of 35 degrees or greater, the amber band has zero thickness. The pointer color matches the color of the arc associated with the current AOA value.

The pilot can enable/disable the display of the AOA Indicator on the PFD, or select the auto mode. In auto mode, the AOA Indicator appears when the AOA is 0.2 or greater, or the flaps are partially or fully extended. Otherwise, the AOA Indicator is removed. Refer to Additional Features section for details regarding the optional Garmin ESP™.

 **NOTE:** The display of the Angle Of Attack indicator is mutually exclusive with the Inset Map. Only one can be displayed at a time.

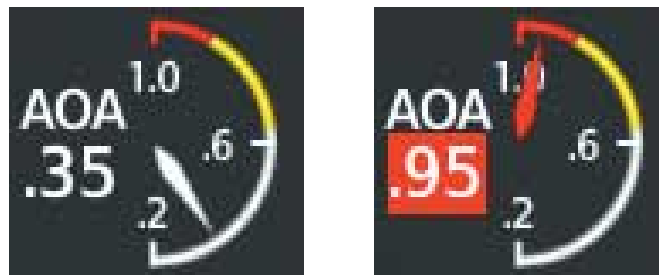


Figure 2-13 Angle of Attack (AOA) Indicator

Selecting the Angle of Attack (AOA) display mode:

- 1) Press the **PFD Opt** Softkey.
- 2) Press the **AOA** Softkey.
- 3) Press the **On, Off, or Auto** Softkey. Pressing the **Auto** Softkey shows the AOA Indicator when the normalized AOA is 0.2 or greater, or when the flaps are partially or fully extended.
- 4) Press the **Back** Softkey to return to the top-level PFD softkeys.

HORIZONTAL SITUATION INDICATOR (HSI)

The Horizontal Situation Indicator (HSI) displays a rotating compass card in a heading-up orientation. Letters indicate the cardinal points with numeric labels every 30°. Major tick marks are at 10° intervals and minor tick marks are at 5° intervals. A digital reading of the current heading appears on top of the HSI. The HSI also presents turn rate, course deviation, bearing, and selected navigation source information. The HSI is available in two formats: a 360° compass rose and a 210° HSI Map. The HSI Map is mutually exclusive with the Inset Maps.

The HSI with the HSI map disabled presents a Course Deviation Indicator (CDI) with a Course Pointer, To/From Indicator, and a sliding deviation bar and scale. The Course Pointer is a single line arrow (GPS, VOR1, and LOC) or a double line arrow (VOR2 and LOC2) which points in the direction of the set course. The To/From Indicator rotates with the Course Pointer and appears when the system is receiving the active NAVAID.



Figure 2-14 Horizontal Situation Indicator (HSI)

1	Turn Rate/Heading Trend Vector	8	Lateral Deviation Scale
2	Current Track Indicator	9	Aircraft Symbol
3	Course Deviation Indicator	10	Flight Phase
4	Navigation Source	11	Heading Bug
5	Course Pointer	12	Lubber Line
6	To/From Indicator	13	Current Heading
7	Rotating Compass Card	14	Turn Rate Indicator

The HSI Map is a 210 ° expanded compass rose which also includes a navigation map with overlay capabilities such as topographical, weather, traffic, and land information. The HSI Map contains a Course Pointer, a combined To/From Indicator with a sliding deviation indicator, and a lateral deviation scale. Upon passing a station, the To/From Indicator points to the tail of the aircraft. Depending on the navigation source, the CDI on the HSI Map can appear either as an arrowhead (GPS, VOR, OBS) as a diamond (LOC). Refer to the Flight Management Section for information about using HSI Map overlays.



Figure 2-15 HSI Map

The following information appears above the Current Heading when the HSI Map is enabled:

A sliding deviation indicator (the To/From and deviation indicators are combined)	OBS Mode/Suspend Mode Status
Deviation scale	Dead Reckoning (DR) Mode Annunciation
Navigation Source	Crosstrack Error (XTK)
Flight Phase	Back Course Annunciation (BC)

For the HSI Map, when a localizer is the active navigation source and the difference between the selected course and current heading is greater than 107°, a 'BC' annunciation appears instead of the Flight Phase above the selected course readout to indicate backcourse sensing is active. This annunciation does not apply to the HSI when the HSI Map is disabled. In either case, when the system detects LOC BC guidance is active, the localizer guidance behaves as if a front course were selected.

The Selected Course is shown to the upper right of the HSI for three seconds after being adjusted or the pilot selects a different navigation source with the CDI Softkey.

Enabling/disabling the HSI Map on the PFD:

- 1) Press the **Map/HSI** Softkey.
- 2) Press the **Layout** Softkey.
- 3) Press the **HSI Map** Softkey to enable the HSI Map.

Or:

Press the **Map Off** Softkey to disable the HSI Map.

- 4) Press the **Back** Softkey twice to return to the top-level softkeys.

Adjusting the selected heading:

- 1) Turn the **HDG** Knob to set the selected heading.
- 2) Press the **HDG** Knob to synchronize the bug to the current heading.

Adjusting the Selected Course:

- 1) Turn the **COM/NAV CRS/XPDR** Knob to set the Selected Course.
- 2) Press the **COM/NAV CRS/XPDR** Knob to re-center the CDI and return the course pointer to the bearing of the active waypoint or navigation station (see OBS Mode for adjusting a GPS course).

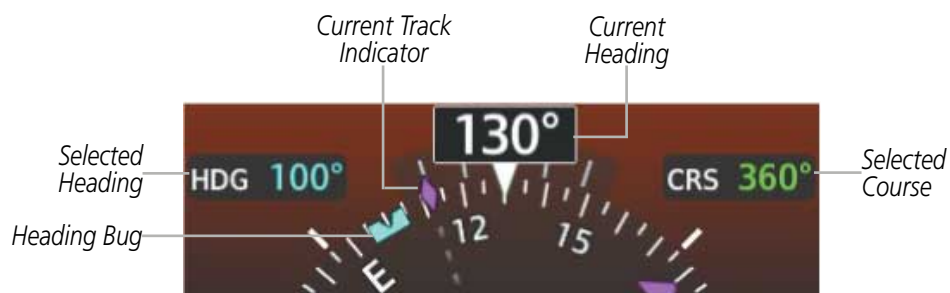


Figure 2-16 Heading and Course Indications (Magnetic)

The Current Track Indicator, a magenta diamond connected to a dashed gray line on the HSI, represents the current over the ground the aircraft is flying.

Navigation angles (track, heading, course, bearing) are corrected to the computed magnetic variation (Mag Var) or referenced to true north (T), set on the 'Aux - System Setup 1' Page. When an approach referenced to true north has been loaded into the flight plan, the system generates a message to change the navigation angle setting to True at the appropriate time.



Figure 2-17 Heading and Course Indications (True)

Changing the navigation angle true/magnetic setting:

- 1) Use the **FMS** Knob to select the 'AUX - System Setup 1' Page on the MFD.
- 2) Press the **FMS** Knob to activate the cursor.

- 3) Turn the large **FMS** Knob to highlight 'Nav Angle' in the 'Display Units' box.
- 4) Turn the small **FMS** Knob to highlight the desired setting and press the **ENT** Key.
 - True - References angles to true north (T)
 - Magnetic - Angles corrected to the computed magnetic variation (Mag Var)

COURSE DEVIATION INDICATOR (CDI)

NOTE: During a heading change of greater than 105° with respect to the course, the CDI on the Arc HSI switches to the opposite side of the deviation scale and displays reverse sensing.

The Course Deviation Indicator (CDI) moves left or right from the course pointer along a lateral deviation scale to display aircraft position relative to the course. If the course deviation data is not valid, the CDI is not displayed.

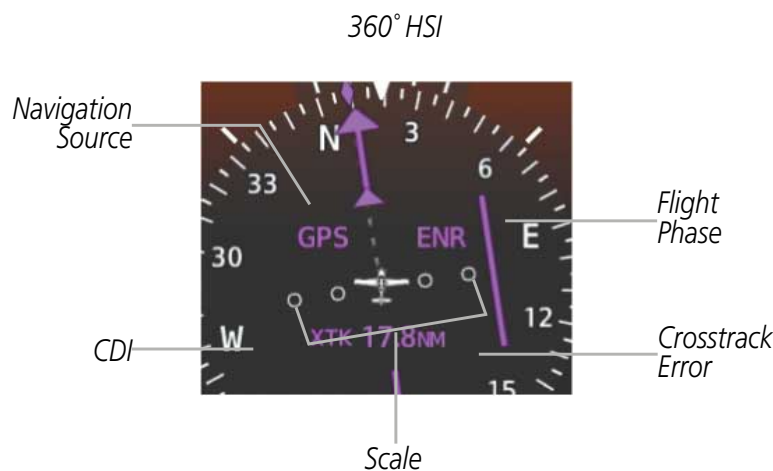


Figure 2-18 Course Deviation Indicator

The CDI can display two sources of navigation, GPS or VOR/LOC. Color indicates the current navigation source, magenta for GPS and green for VOR and LOC. The full scale limits for the CDI are defined by a GPS-derived distance when coupled to GPS. When navigating using a VOR or localizer (LOC), the CDI uses the same angular limits as a mechanical CDI. If the CDI exceeds the maximum deviation on the scale (two dots) while navigating with GPS, the crosstrack error (XTK) is displayed below the white aircraft symbol.

When navigating with GPS and an ILS or localizer approach is activated, a preview of the approach course is indicated by the dashed gray pointer and CDI on the HSI as shown on the left of Figure 2-21. As the aircraft approaches the final approach course, the two course pointers converge. When the system auto-switches to the localizer NAV source, the pointer and CDI will change to green.

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CNS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index



Localizer Approach
Course Preview

Figure 2-19 Navigation Sources

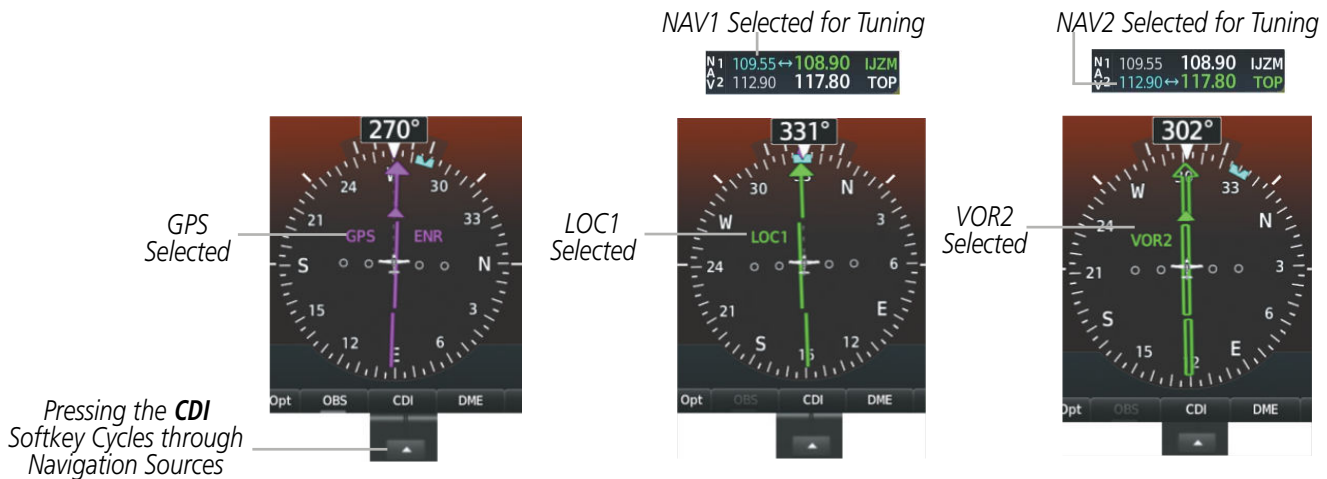


Figure 2-20 Selecting a Navigation Source

Changing navigation sources:

- 1) Press the **CDI** Softkey to change from GPS to VOR1 or LOC1. This places the cyan tuning box over the NAV1 standby frequency in the upper left corner of the PFD.
- 2) Press the **CDI** Softkey again to change from VOR1 or LOC1 to VOR2 or LOC2. This places the cyan tuning box over the NAV2 standby frequency.
- 3) Press the **CDI** Softkey a third time to return to GPS.

TURN RATE INDICATOR

The Turn Rate Indicator is located directly above the rotating compass card. Tick marks to the left and right of the lubber line denote half-standard and standard turn rates. A magenta Turn Rate Trend Vector shows the current turn rate. The end of the trend vector gives the heading predicted in 6

seconds, based on the present turn rate. A standard-rate turn is shown on the indicator by the trend vector stopping at the standard turn rate tick mark, corresponding to a predicted heading of 18° from the current heading. At rates greater than 4 deg/sec, an arrowhead appears at the end of the magenta trend vector and the prediction is no longer valid.



Figure 2-21 Turn Rate Indicator

The system automatically switches from GPS to LOC navigation source and changes the CDI scaling accordingly when all of the following occur:

- A localizer or ILS approach has been loaded into the active flight plan
- The final approach fix (FAF) is the active waypoint, the FAF is less than 15 nm away, and the aircraft is moving toward the FAF
- A valid localizer frequency has been tuned
- The GPS CDI deviation is less than 1.2 times full-scale deflection

GPS steering guidance is still provided after the CDI automatically switches to LOC until LOC capture, up to the Final Approach Fix (FAF) for an ILS approach, or until GPS information becomes invalid. Activating a Vector-to-Final (VTF) also causes the CDI to switch to LOC navigation source. GPS steering guidance is not provided after this switch.

On some ILS approaches where the glideslope intercept point is at or in close proximity to the fix prior to the FAF, it is possible to be above the glideslope when the navigation source automatically switches from GPS to LOC. The probability of this occurring varies based on air temperature.

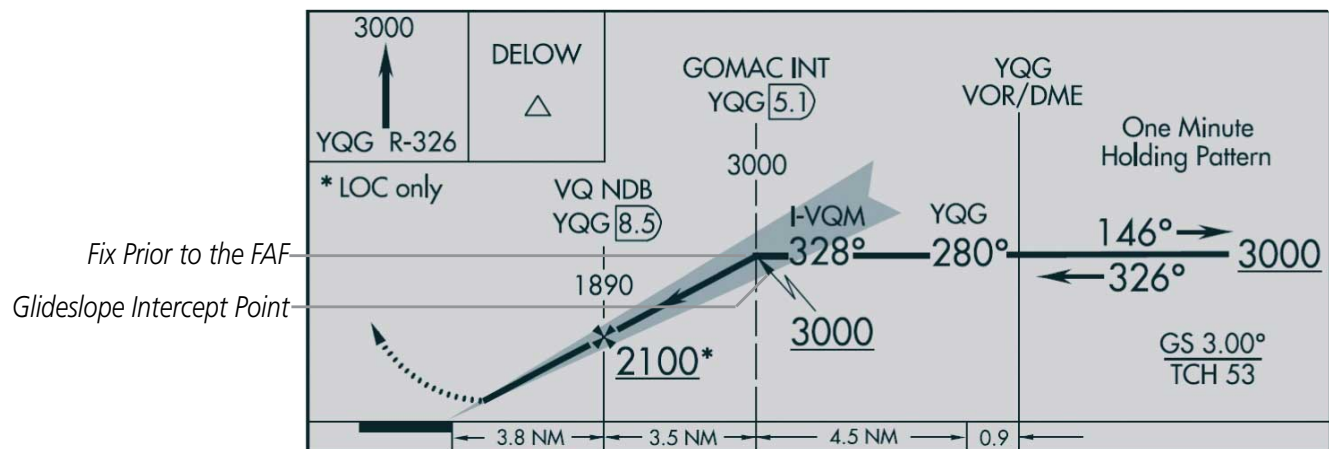


Figure 2-22 ILS Approach with Glideslope Intercept Point at Fix Prior to the FAF

GPS CDI SCALING

When GPS is the selected navigation source, the flight plan legs are sequenced automatically and annunciations appear on the HSI for the flight phase. Flight phase annunciations are normally shown in magenta, but when cautionary conditions exist the color changes to amber. If the current leg in the flight plan is a heading leg, 'HDG LEG' is annunciated in magenta beneath the aircraft symbol.

The current GPS CDI scale setting is displayed as 'System CDI' on the AUX - System Setup Page and the full-scale deflection setting may also be changed (2.0 nm, 1.0 nm, 0.3 nm, or Auto) from this page. If the selected scaling is smaller than the automatic setting for enroute and terminal phases, the CDI is scaled accordingly and the selected setting is displayed rather than the flight phase annunciation.

When set to Auto (default), the GPS CDI scale automatically adjusts to the desired limits based upon the current phase of flight.

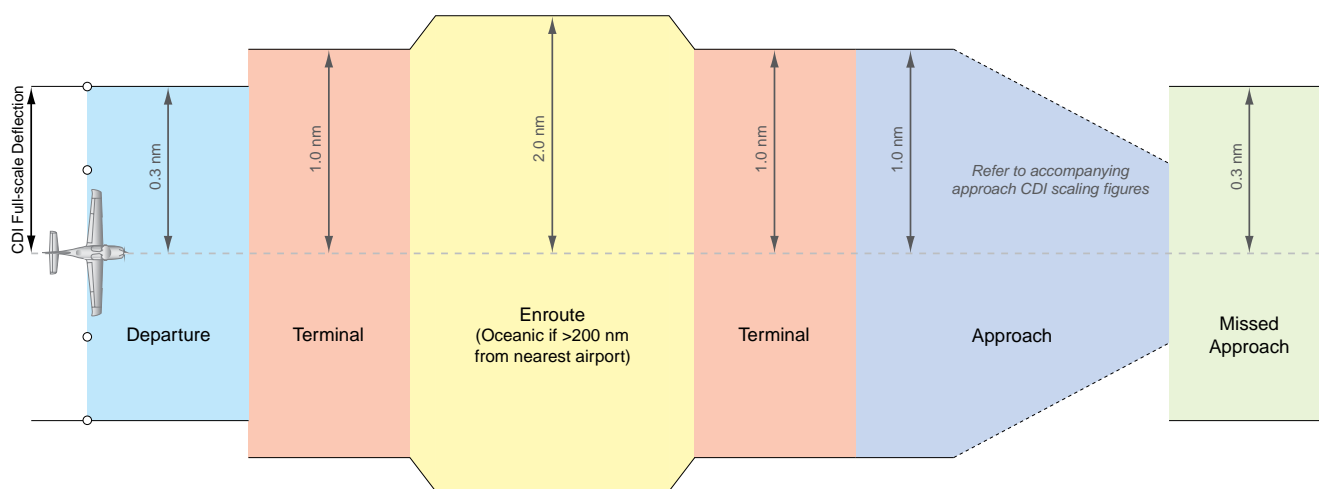


Figure 2-23 Automatic CDI Scaling

- Once a departure procedure is activated, the CDI is scaled for **departure** (0.3 nm).
- The system switches from departure to **terminal** CDI scaling (1.0 nm) under the following conditions:

The next leg in the procedure is not aligned with the departure runway

The next leg in the departure procedure is not CA, CD, CF, CI, CR, DF, FA, FC, FD, FM, IF, or TF (see Glossary for leg type definitions)

After any leg in the departure procedure that is not CA or FA

- At 30 nm from the departure airport the **enroute** phase of flight is automatically entered and CDI scaling changes to 2.0 nm over a distance of 1.0 nm, except under the following conditions:

When navigating with an active departure procedure, the flight phase and CDI scale does not change until the aircraft arrives at the last departure waypoint (if more than 30 nm from the departure airport) or the leg after the last departure waypoint has been activated or a direct-to waypoint is activated.

- If after completing the departure procedure the nearest airport is more than 200 nm away from the aircraft and the approach procedure has not yet commenced, the CDI is scaled for oceanic flight (4.0 nm).

- Within 31 nm of the destination airport (**terminal** area), the CDI scale gradually ramps down from 2.0 nm to 1.0 nm over a distance of 1.0 nm, except under the following conditions:

Upon reaching the first waypoint of an arrival route that is more than 31 nm from the destination airport, the flight phase changes to terminal and the CDI scale begins to transition down from 2.0 nm to 1.0 nm over a distance of 1.0 nm.

- During **approach**, the CDI scale ramps down even further (see Figures Below). This transition normally occurs within 2.0 nm of the final approach fix (FAF). The CDI switches to approach scaling automatically once the approach procedure is activated or if Vector-to-Final (VTF) is selected.

If the active waypoint is the FAF, the ground track and the bearing to the FAF must be within 45° of the final approach segment course.

If the active waypoint is part of the missed approach procedure, the active leg and preceding missed approach legs must be aligned with the final approach segment course and the aircraft must not have passed the turn initiation point.

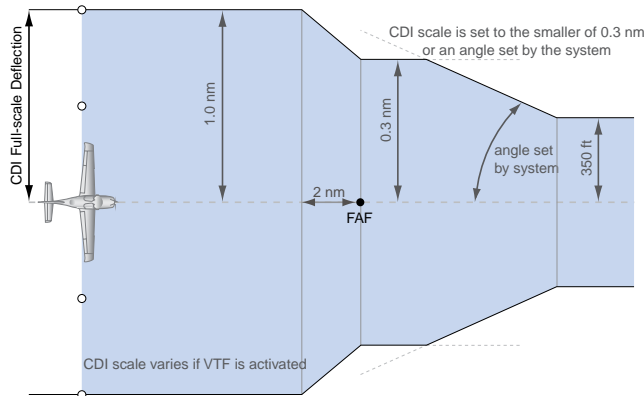


Figure 2-24 Typical LNAV and LNAV+V, and Visual Approach CDI Scaling

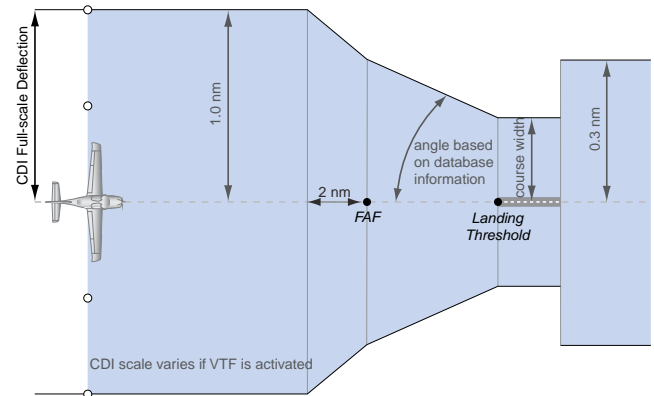


Figure 2-25 Typical LNAV/VNAV, LPV, LP+V, and LP Approach CDI Scaling

- When a missed approach is activated, the CDI scale changes to 0.3 nm.
 - The system automatically switches back to **terminal** scaling under the following conditions:
 - The next leg in the missed approach procedure is not aligned with the final approach path
 - The next leg in the missed approach procedure is not CA, CD, CE, CI, CR, DE, FA, FC, FD, FM, IF, or TF
- After any leg in the missed approach procedure that is not CA or FA


Flight Phase	Annunciation*	Automatic CDI Full-scale Deflection
Departure	DPRT	0.3 nm
Terminal	TERM	1.0 nm
Enroute	ENR	2.0 nm
Oceanic	OCN	4.0 nm
Approach (Non-precision)	LNAV	1.0 nm decreasing to 350 feet depending on variables
Approach (Non-precision with Advisory Vertical Guidance)	LNAV+V	
Approach (Non-precision with Advisory Vertical Guidance)	VISUAL	
Approach (LNAV/VNAV)	LNAV	1.0 nm decreasing to a specified course width, then 0.3 nm, depending on variables
Approach (LPV)	LPV	
Approach (Non-precision with Advisory Vertical Guidance)	LP+V	
Approach (LP)	LP	
Missed Approach	MAPR	

Table 2-2 Automatic GPS CDI Scaling

Changing the selected GPS CDI setting:

- 1) Turn the **FMS** Knob to select the 'AUX - System Setup 1' Page on the MFD.
- 2) Press the **FMS** Knob to activate the cursor.
- 3) Turn the large **FMS** Knob to highlight 'Format Allowed' in the 'GPS CDI' box.
- 4) Turn the small **FMS** Knob to highlight the desired setting and press the **ENT**Key.
- 5) To cancel the selection, press the **FMS** Knob or press the **CLR** Key.

OBS MODE

 **NOTE:** VNV is inhibited while automatic waypoint sequencing has been suspended.

Enabling Omni-bearing Selector (OBS) Mode suspends the automatic sequencing of waypoints in a GPS flight plan (GPS must be the selected navigation source), but retains the current “active-to” waypoint as the navigation reference even after passing the waypoint. ‘OBS’ is annunciated to the lower right of the aircraft symbol when OBS Mode is selected.

While OBS Mode is enabled, a course line is drawn through the “active-to” waypoint on the moving map. If desired, the course to/from the waypoint can now be adjusted. When OBS Mode is disabled, the GPS flight plan returns to normal operation with automatic sequencing of waypoints, following the course set in OBS Mode. The flight path on the moving map retains the modified course line.

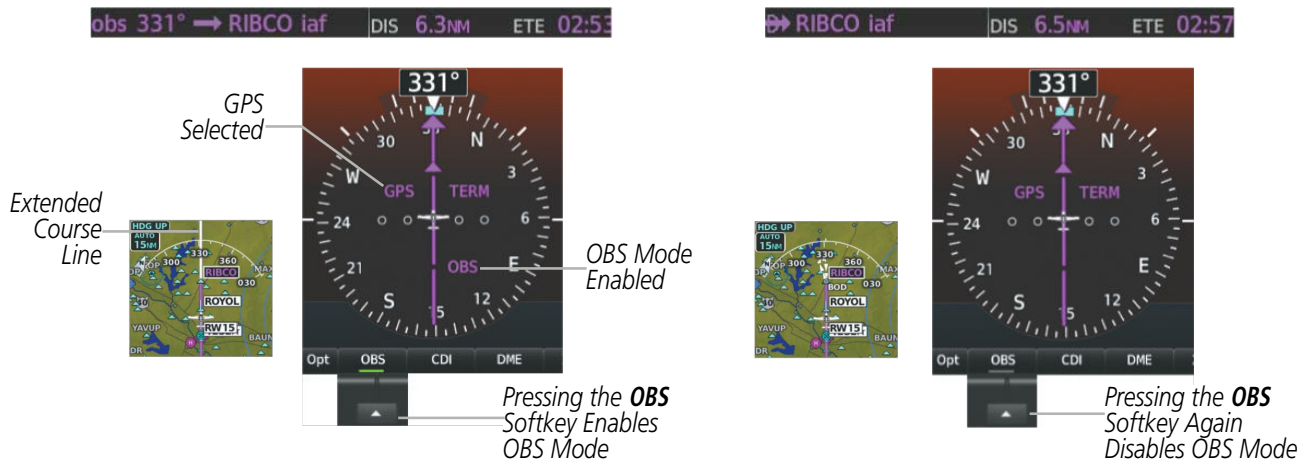


Figure 2-26 Omni-bearing Selector (OBS) Mode



NOTE: When OBS mode is active to a VOR waypoint, the course pointer and current track indicator are relative to the published magnetic variation of the VOR which can be outdated with respect to the current magnetic variation. Consequently, in OBS mode a slight offset may exist between indicated heading and selected course and track indicator even when there is no crosswind.

As the aircraft crosses the missed approach point (MAP), automatic approach waypoint sequencing is suspended. SUSP appears on the HSI at the lower right of the aircraft symbol. The OBS Softkey label changes to indicate the suspension is active as shown in the figure. Pressing the SUSP Softkey, deactivates the suspension and resumes automatic sequencing of approach waypoints.

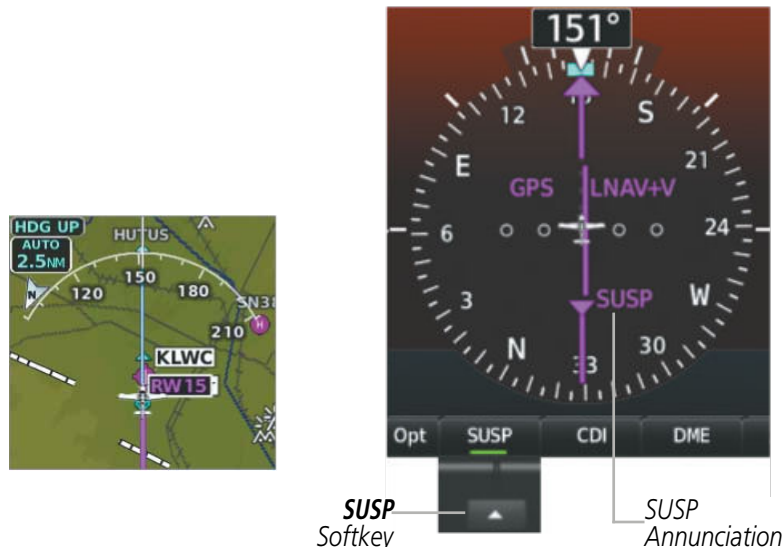


Figure 2-27 Suspending Automatic Waypoint Sequencing

Enabling/disabling OBS Mode while navigating a GPS flight plan:

- 1) Press the **OBS** Softkey to select OBS Mode.
- 2) Turn the **COM/NAV CRS/XPDR** Knob to select the desired course to/from the waypoint. Press the **COM/NAV CRS/XPDR** Knob to synchronize the Selected Course with the bearing to the next waypoint.
- 3) Press the **OBS** Softkey again to return to automatic waypoint sequencing.

BEARING POINTERS AND INFORMATION WINDOWS

Two bearing pointers (the second of which is an optional feature) and associated information can be displayed on the HSI for the NAV, GPS and ADF sources. The bearing pointers are cyan and are single-line (BRG1) or double-line (BRG2). A pointer symbol is shown in the information window to indicate the navigation source. The bearing pointers never override the CDI and are visually separated from the CDI by a white ring. Bearing pointers may be selected but not necessarily visible due to data unavailability.

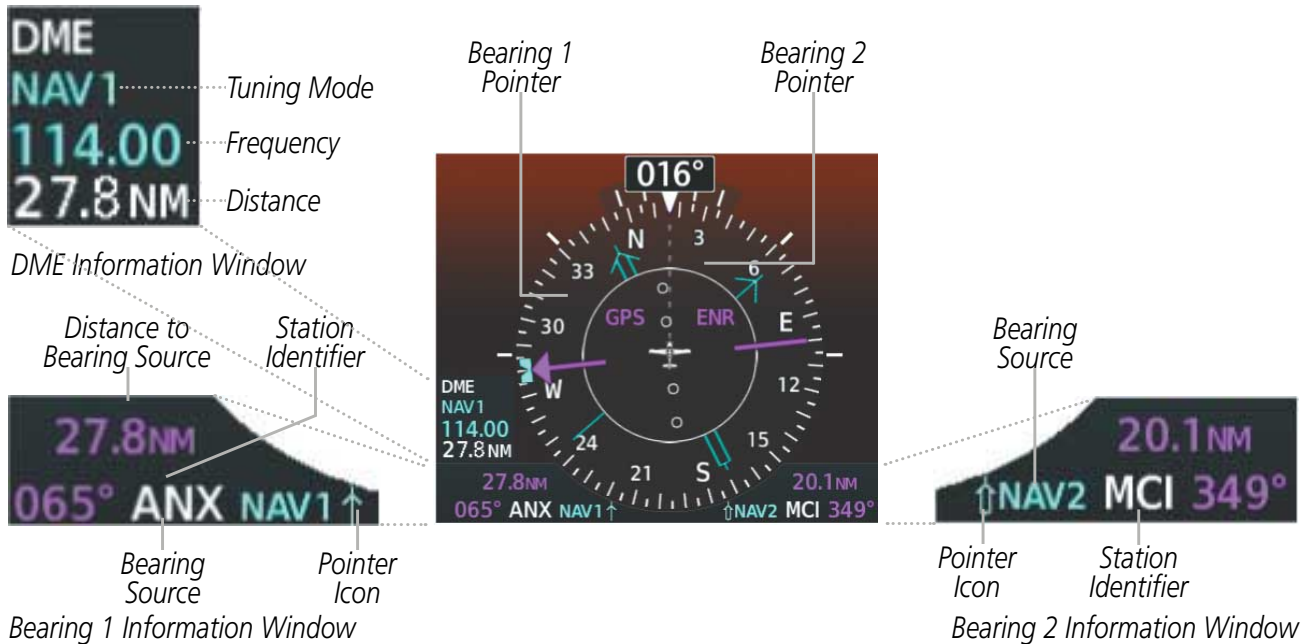


Figure 2-28 HSI with Bearing and DME Information

When a bearing pointer is displayed, the associated information window is also displayed. The Bearing Information Windows are displayed at the lower sides of the HSI and give the following information:

Bearing source (NAV, GPS, ADF)	GPS-derived great circle distance to bearing source
Pointer icon (BRG1 = single line, BRG2 = double line)	Frequency (NAV)
Station/waypoint identifier (NAV, FMS)	

If the NAV radio is the bearing source and is tuned to an ILS frequency (refer to the Audio Panel and CNS Section for information on tuning the radios), the bearing pointer is removed from the HSI and the frequency is replaced with “ILS”. When NAV1 or NAV2 is the selected bearing source, the frequency is replaced by the station identifier when the station is within range. If GPS is the bearing source, the active waypoint identifier is displayed in lieu of a frequency.

The bearing pointer is removed from the HSI and “NO DATA” is displayed in the information window under these conditions:

- The NAV radio is not receiving the tuned VOR station
- GPS is the bearing source and an active waypoint is not selected.

Selecting bearing display and changing sources:

- 1) Press the **PFD Opt** Softkey.
- 2) Press either **Bearing 1** or **Bearing 2** Softkey to display the desired bearing pointer and information window with a NAV source.
- 3) Press either **Bearing 1** or **Bearing 2** Softkey again to change the bearing source to GPS.
- 4) Press either **Bearing 1** or **Bearing 2** Softkey a third time to change the bearing source to ADF (note: ADF radio installation is optional).
- 5) To remove the bearing pointer and information window, press either **Bearing 1** or **Bearing 2** Softkey again.

DME INFORMATION WINDOW

The DME Information Window is displayed above the BRG1 Information Window on the 360° HSI and in a box above and along side the Arc HSI. It shows the DME label, tuning mode (NAV1, NAV2, or HOLD), frequency, and distance. When a signal is invalid, the distance is replaced by –. – NM Refer to the Audio Panel and CNS Section for information on tuning the DME.



NOTE: DME installation is optional.

Displaying the DME Information Window:

- 1) Press the **PFD Opt** Softkey.
- 2) Press the **DME** Softkey to display the DME Information Window above the BRG1 Information Window.
- 3) To remove the DME Information Window, press the **DME** Softkey again.

2.3 SUPPLEMENTAL FLIGHT DATA

In addition to the flight instruments, the PFD also displays various supplemental information, including temperatures, wind data, and Generic Timer.

GENERIC TIMER

The generic timer can be accessed via softkeys on the PFD and allows for quick access for timing functions (either counting up or down) for the pilot.

Setting the Generic Timer:

- 1) Press the **Tmr/Ref** Softkey.
- 2) Turn the large **FMS** Knob to select the timer field (HH:MM:SS).
- 3) Use the **FMS** Knob to enter the desired time.
- 4) Press the **ENT** Key. The Up/Dn field is now highlighted.
- 5) Turn the small **FMS** Knob to display the UP/DOWN Window.
- 6) Turn the small **FMS** Knob to select 'Up' or 'Dn'.
- 7) Press the **ENT** Key. 'Start?' is now highlighted.
- 8) Press the **ENT** Key to start the timer. The field changes to 'Stop?'. If the timer is counting DOWN, it will start counting UP after reaching zero.
- 9) To stop the timer, press the **ENT** Key with 'Stop?' highlighted. The field changes to 'Reset?'
- 10) To reset the timer, press the **ENT** Key with 'Reset?' highlighted. The field changes back to 'Start?' and the digits are reset.
- 11) To remove the window, press the **CLR** Key or the **Tmr/Ref** Softkey.

TEMPERATURE DISPLAYS

The Outside Air Temperature (OAT) appears in degrees Celsius (°C) and Fahrenheit (°F) in the lower-left corner of the PFD in normal operating mode. The system removes OAT displays in Reversionary Mode.



Figure 2-29 Outside Air Temperature (OAT) on the PFD

WIND DATA

Wind direction and speed (relative to the aircraft) in knots can be displayed in a window to the upper left of the HSI. When the window is selected for display, but wind information is invalid or unavailable, the window shows “NO WIND DATA”. Wind data can be displayed in two different ways:

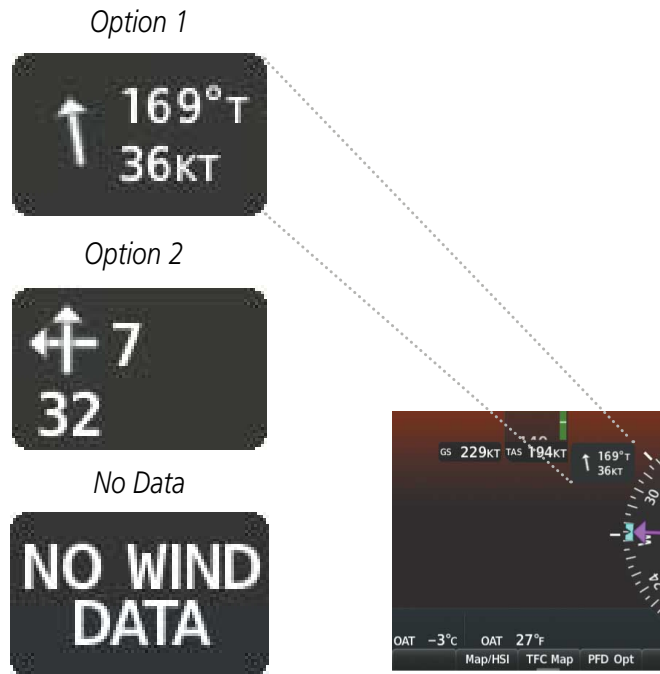


Figure 2-30 Wind Data on the PFD

Displaying Wind Data on the PFD:

- 1) Press the **PFD Opt** Softkey.
- 2) Press the **Wind** Softkey to display wind data.
- 3) Press one of the **Option** Softkeys to change how wind data is displayed.
 - **Option 1**: Wind direction arrow with numeric True direction and speed
 - **Option 2**: Headwind/tailwind and crosswind arrows with numeric speed components
- 4) To remove the wind information, press the **Off** Softkey.
- 5) Press the **Back** Softkey twice to return to the top-level PFD softkeys.

2.4 PFD ANNUNCIATIONS AND ALERTING FUNCTIONS

The following annunciations and alerting functions are displayed on the PFD. Refer to Appendix A for more information on alerts and annunciations.

ALTITUDE ALERTING

The Altitude Alerting function provides visual and audio alerts when approaching the Selected Altitude. Whenever the Selected Altitude is changed, Altitude Alerting is reset. Altitude Alerting is based on the altitude information shown on the PFD. Altitude Alerting is independent of the AFCS.

The following occur when approaching the Selected Altitude:

- Upon passing through 1000 feet of the Selected Altitude, the Selected Altitude Box changes to black text on a cyan background, and flashes for five seconds.
- When the aircraft passes within 200 feet of the Selected Altitude, the Selected Altitude changes to cyan text on a black background, flashes for five seconds, and the system issues a single aural chime.
- After reaching the Selected Altitude, if the aircraft flies outside the deviation band (± 200 feet of the Selected Altitude), the Selected Altitude Box changes to amber text on a black background, flashes for five seconds, and system issues an “altitude” voice alert.



Figure 2-31 Altitude Alerting Visual Annunciations

LOW ALTITUDE ANNUNCIATION

NOTE: The Low Altitude Annunciation is available only when SBAS is available. If optional Terrain-SVT or TAWS-B Systems are installed, the Low Altitude annunciation is not shown unless Terrain-SVT or TAWS-B is inhibited, unavailable, or has failed.

When the Final Approach Fix (FAF) is the active waypoint in a GPS SBAS approach using vertical guidance, a Low Altitude Annunciation may appear if the current aircraft altitude is at least 164 feet below the prescribed altitude at the FAF. A black-on-amber ‘LOW ALT’ annunciation appears to the top left of the Altimeter, flashing for several seconds then remaining displayed until the condition is resolved.



Figure 2-32 Low Altitude Annunciation on PFD

MARKER BEACON ANNUNCIATIONS

Marker Beacon Annunciations are displayed on the PFD to the left of the Selected Altitude. Outer marker reception is indicated in blue, middle in amber, and inner in white. Refer to the Audio Panel and CNS Section for more information on Marker Beacon Annunciations.

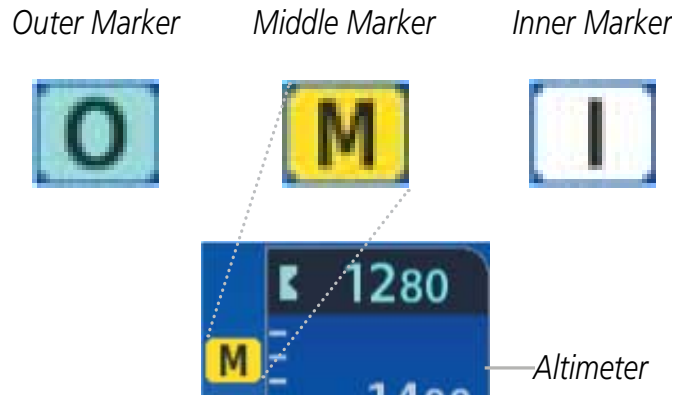


Figure 2-33 Marker Beacon Annunciations

MINIMUM DESCENT ALTITUDE/DECISION HEIGHT ALERTING

For altitude awareness, a Minimum Descent Altitude (MDA) or Decision Height (DH), based on either barometric altitude or temperature compensated barometric altitude can be set. When active, the altitude setting is displayed to the lower left of the altimeter, with a bug at the corresponding altitude along the altimeter (once the altitude is within the visible range of the tape). The following visual annunciations alert the pilot when approaching the MDA or DH:

- When the aircraft altitude descends to within 2500 feet of the MDA/DH setting, the BARO MIN, RA MIN, or COMP MIN box appears with the altitude in cyan (or magenta for COMP MIN) text. The bug appears on the altitude tape in cyan (or magenta for COMP MIN) once in range.
- When the aircraft passes through 100 feet of the MDA/DH, the bug and text turn white.
- Once the aircraft reaches MDA/DH, the bug and text become amber and the voice alert, “Minimums. Minimums”, is heard.

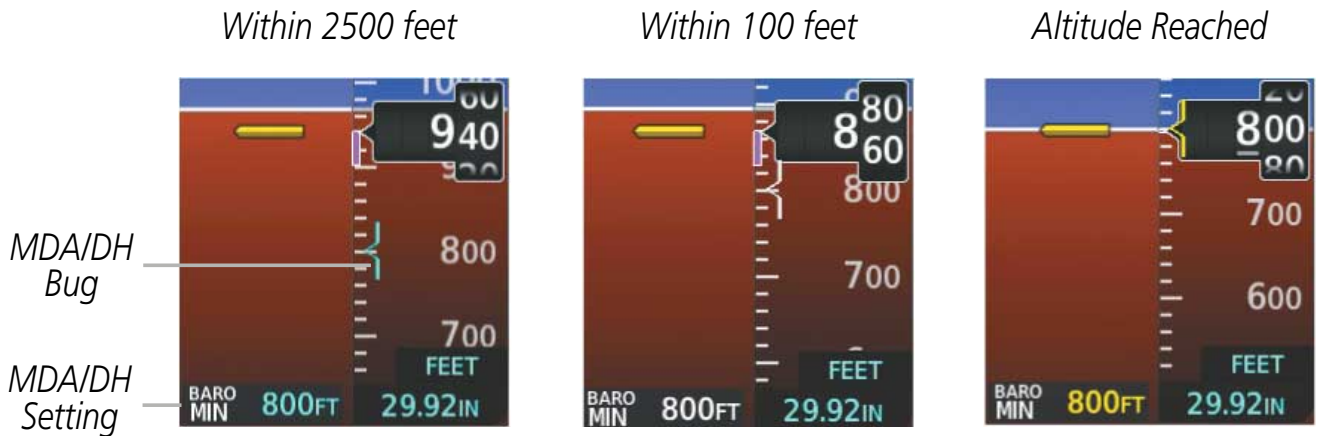


Figure 2-34 Minimum Descent Altitude/Decision Height Alerting Visual Annunciations

Alerting is inhibited while the aircraft is on the ground and until the aircraft reaches 150 feet above the setting for the alert. If the aircraft proceeds to climb after having reached the MDA/DH, once it reaches 50 feet above the MDA/DH, alerting is disabled. The MDA/DH value is reset if the current approach is deleted, another approach is loaded, or on the next avionics power cycle.

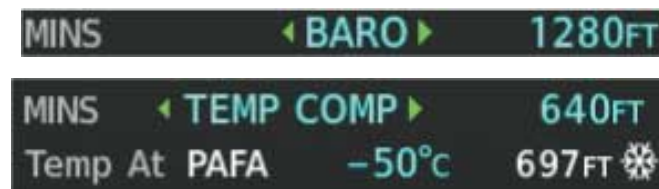



Figure 2-35 BARO and TEMP COMP MDA/DH


Setting the Minimum Descent Altitude/Decision Height and bug:


- 1) Press the **Tmr/Ref** Softkey.
- 2) Turn the large **FMS** Knob to highlight the Minimums field.
- 3) Turn the small **FMS** Knob to select 'BARO' or 'TEMP COMP.' 'Off' is selected by default. Press the **ENT** Key or turn the large **FMS** Knob to highlight the next field.
- 4) Use the small **FMS** Knob to enter the desired altitude (from zero to 16,000 feet).
- 5) If TEMP COMP was selected, press the **ENT** Key or turn the large **FMS** Knob to highlight the next field and then enter the temperature (-59°C to 59°C)
- 6) To remove the window, press the **CLR** Key or the **Tmr/Ref** Softkey.

2.5 GARMIN SVT

GARMIN SVT (SYNTHETIC VISION TECHNOLOGY)

 **WARNING:** Use appropriate primary systems for navigation, and for terrain, obstacle, and traffic avoidance. SVT is intended as an aid to situational awareness only and may not provide either the accuracy or reliability upon which to solely base decisions and/or plan maneuvers to avoid terrain, obstacles, or traffic.

 **NOTE:** Do not use the flight path marker as a flight director.

 **NOTE:** Terrain alerting is not available north of 89° North latitude and south of 89° South latitude. This is due to limitations present within the Terrain database and the system's ability to process the data representing the affected areas.

Garmin SVT™ (Synthetic Vision Technology) is an optional visual enhancement to the system. SVT depicts a forward-looking attitude display of the topography immediately in front of the aircraft. The field of view is 29 degrees to the left and 35.5 degrees to the right. In Reversionary Mode, the field of view is 21.5 degrees to the left and 35.5 degrees to the right. SVT information is shown on the Primary Flight Display (PFD), or on the Multifunction Display (MFD) in Reversionary Mode. The depicted imagery is derived from the aircraft attitude, heading, GPS three-dimensional position, and a 4.9 arc-second database of terrain, obstacles, and other relevant features. The terrain data resolution is 4.9 arc-seconds, meaning that the terrain elevation contours are stored in squares measuring 4.9 arc-seconds on each side, is required for the operation of SVT. Loss of any of the required data, including temporary loss of the GPS signal, will cause SVT to be disabled (although the softkeys will still appear functional) until the required data is restored.

The SVT terrain display shows land contours (colors are consistent with those of the topographical map display), large water features, towers, wind turbines, and other obstacles over 200' AGL that are included in the obstacle database. Cultural features on the ground such as roads, highways, railroad tracks, cities, and state boundaries are not displayed even if those features are found on the MFD map. The terrain display also includes a north–south east–west grid with lines oriented with true north and spaced at one arc-minute intervals to assist in orientation relative to the terrain.

Terrain-SVT, which is included with the Garmin-SVT option, or the optional Terrain Awareness and Warning System (TAWS) provide visual and auditory alerts to indicate the presence of terrain and obstacle threats relevant to the projected flight path. Terrain alerts are displayed in red and yellow shading on the PFD.

Garmin-SVT can be displayed on the Multifunction Display (MFD) in Reversionary Mode. If SVT is enabled when switching to Reversionary Mode, it will take up to 30 seconds to be displayed. The standard, non-SVT PFD display will be shown in the interim.

The terrain display is intended for situational awareness only. It may not provide the accuracy or fidelity on which to base decisions and plan maneuvers to avoid terrain or obstacles. Navigation must not be predicated solely upon the use of the Garmin-SVT or TAWS-B terrain or obstacle data displays.

The following SVT enhancements appear on the PFD:

Flight Path Marker	Terrain Alerting
Horizon Heading Marks	Obstacle Alerting including wire obstacles
Airport Signs	Pathways
Runway Display	Traffic symbols



Figure 2-36 Synthetic Vision Imagery

SVT OPERATION

SVT is activated from the PFD using the softkeys located along the bottom edge of the display. Pressing the softkeys turns the related function on or off. When SVT is enabled, the pitch attitude scale is reduced from 20 degrees up and down to 10 degrees up to 7.5 degrees down.

SVT functions are displayed on three levels of softkeys. The **PFD Opt** Softkey leads into the PFD function Softkeys, including synthetic vision. Pressing the **SVT** Softkey displays the SVT feature softkeys. The softkeys are labeled **Pathways**, **Terrain**, **HDG LBL**, **APT Sign**, and **Wire**. The **Back** Softkey returns to the previous level of softkeys. Synthetic Terrain must be active before any other SVT feature may be activated.

Pathways, **HDG LBL**, **APT Sign**, and **Wire** Softkeys are only available when the **Terrain** Softkey is activated (gray with black characters). After activating the **Terrain** Softkey, the **Pathways**, **HDG LBL**, **APT Sign**, and **Wire** softkeys may be activated in any combination to display desired features. When system power is cycled, the last selected state (on or off) of the **Pathways**, **Terrain**, **HDG LBL**, **APT Sign**, and **Wire** softkeys is remembered by the system.

- **Pathways** Softkey enables display of rectangular boxes that represent course guidance.
- **Terrain** Softkey enables synthetic terrain depiction.

- HDG LBL Softkey enables horizon heading marks and digits.
- APT Sign Softkey enables airport signposts.
- Wire Softkey enables wire obstacle (power line) display.

Activating and deactivating SVT:

- 1) Press the **PFD Opt** Softkey.
- 2) Press the **SVT** Softkey.
- 3) Press the **Terrain** Softkey. The SVT display will cycle on or off with the **Terrain** Softkey.

Activating and deactivating Pathways:

- 1) Press the **PFD Opt** Softkey.
- 2) Press the **SVT** Softkey.
- 3) Press the **Pathways** Softkey. The Pathway feature will cycle on or off with the **Pathways** Softkey.

Activating and deactivating Horizon Headings:

- 1) Press the **PFD Opt** Softkey.
- 2) Press the **SVT** Softkey.
- 3) Press the **HDG LBL** Softkey. The horizon heading display will cycle on or off with the **HDG LBL** Softkey.

Activating and deactivating Airport Signs:

- 1) Press the **PFD Opt** Softkey.
- 2) Press the **SVT** Softkey.
- 3) Press the **APT Sign** Softkey. Display of airport signs will cycle on or off with the **APT Sign** Softkey.

Enabling/disabling Wire Obstacles on SVT:

- 1) Press the **PFD Opt** Softkey.
- 2) Press the **SVT** Softkey.
- 3) Press the **Wire** Softkey.

SVT FEATURES



Figure 2-37 SVT on the Primary Flight Display

NOTE: Pathways and terrain features are not a substitute for standard course and altitude deviation information provided by the altimeter, CDI, and VDI.

AIRPORT SIGNS

Airport Signs provide a visual representation of airport location and identification on the synthetic terrain display. When activated, the signs appear on the display when the aircraft is approximately 15 nm from an airport and disappear at approximately 4.5 nm. Airport signs are shown without the identifier until the aircraft is approximately eight nautical miles from the airport. Airport signs are not shown behind the airspeed or altitude display. Airport signs are activated and deactivated by pressing the APTSIGNS Softkey.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CNS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index



Figure 2-38 Airport Signs

FLIGHT PATH MARKER

The Flight Path Marker (FPM), also known as a Velocity Vector, is displayed on the PFD at groundspeeds above 30 knots. The FPM depicts the approximate projected path of the aircraft accounting for wind speed and direction relative to the three-dimensional terrain display.

The FPM is always available when the Synthetic Terrain feature is in operation. The FPM represents the direction of the flight path as it relates to the terrain and obstacles on the display, while the airplane symbol represents the aircraft heading.

The FPM works in conjunction with the Pathways feature to assist the pilot in maintaining desired altitudes and direction when navigating a flight plan. When on course and altitude the FPM is aligned inside the pathway boxes as shown.

The FPM may also be used to identify a possible conflict with the aircraft flight path and distant terrain or obstacles. Displayed terrain or obstacles in the aircraft's flight path extending above the FPM could indicate a potential conflict, even before an alert is issued by TAWS. However, decisions regarding terrain and/or obstacle avoidance should not be made using only the FPM.

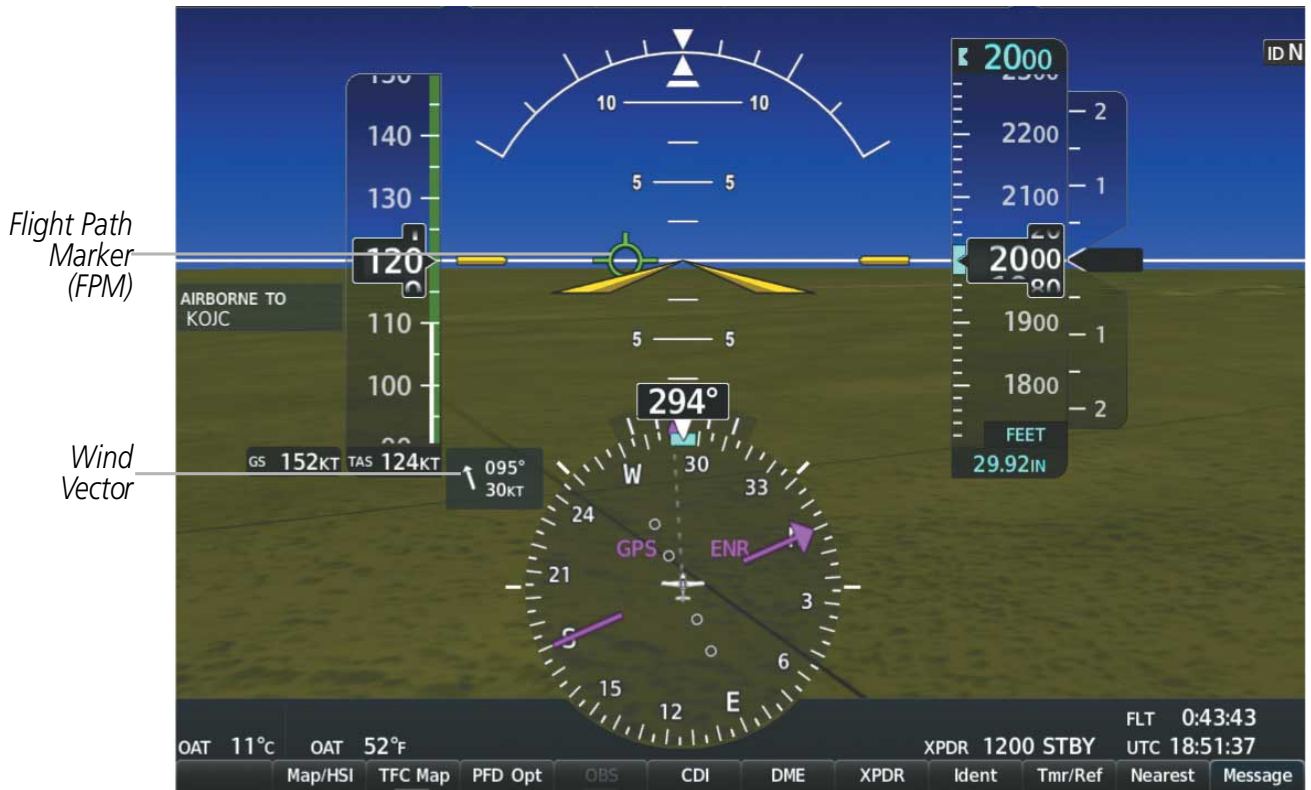


Figure 2-39 Flight Path Marker

HORIZON HEADING

The Horizon Heading is synchronized with the HSI and shows approximately 60 degrees of compass heading in 30 degree increments on the Zero Pitch Line. Horizon Heading tick marks and digits appearing on the zero pitch line are not visible behind either the airspeed or altitude display. Horizon Heading is used for general heading awareness, and is activated and deactivated by pressing the HDG LBL Softkey.

PATHWAYS

Pathways provide a three-dimensional perspective view of the selected route of flight shown as colored rectangular boxes representing the horizontal and vertical flight path of the active flight plan. The box size represents 700 feet wide by 200 feet tall during enroute, oceanic, and terminal flight phases. During an approach, the box width is 700 feet or one half full scale deviation on the HSI, whichever is less. The height is 200 feet or one half full scale deviation on the VDI, whichever is less. The altitude at which the pathway boxes are displayed is determined by the higher of either the selected altitude or the VNV altitude programmed for the active leg in the flight plan.



NOTE: Pathways and terrain features are not a substitute for standard course and altitude deviation information provided by the altimeter, CDI, and VDI.

The color of the rectangular boxes may be magenta, green, or white depending on the route of flight and navigation source selected. The active GPS or GPS overlay flight plan leg is represented by

magenta boxes that correspond to the Magenta CDI. A localizer course is represented by green boxes that correspond to a green CDI. An inactive leg of an active flight plan is represented by white boxes corresponding to a white line drawn on the PFD maps or MFD map indicating an inactive leg.

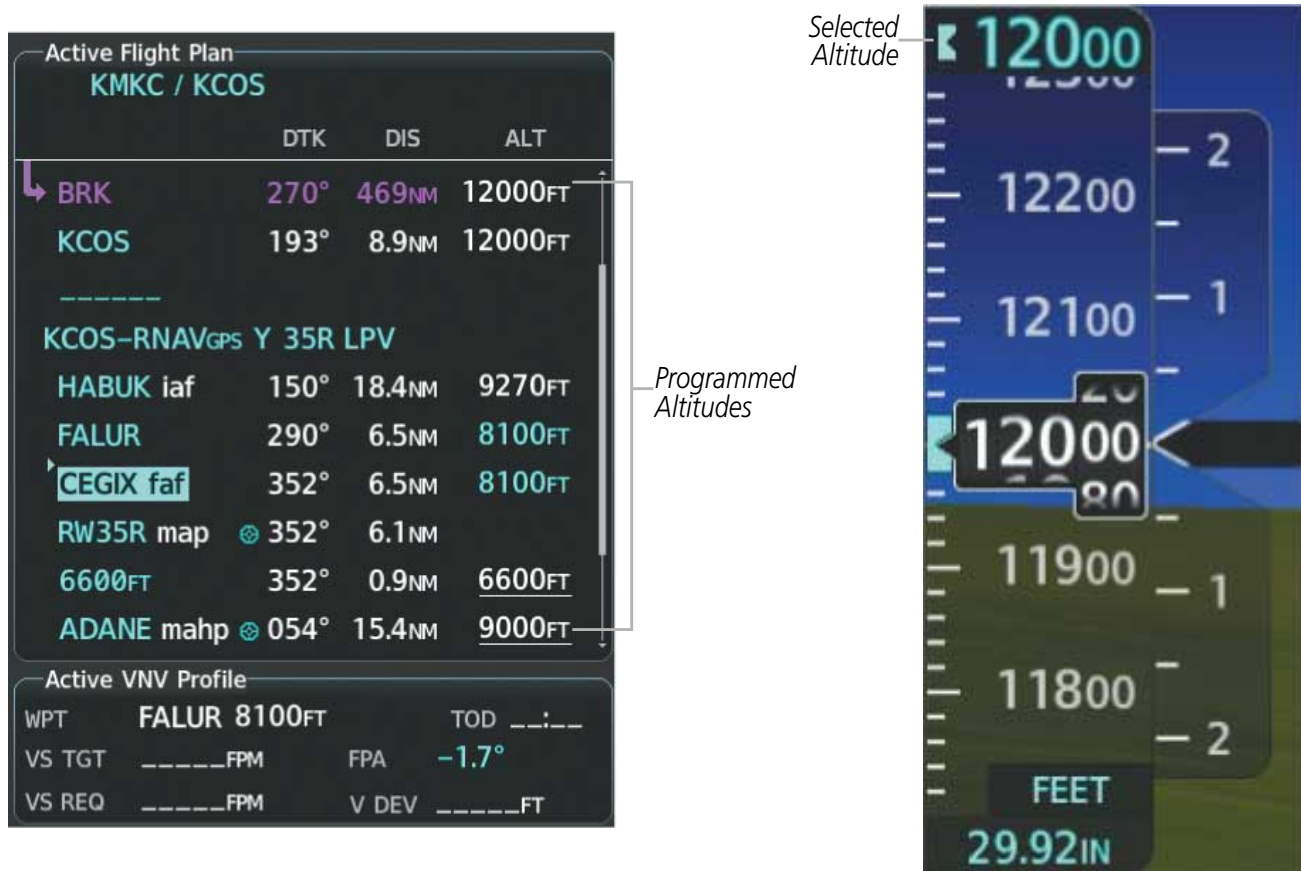


Figure 2-40 Programmed and Selected Altitude

Pathways provide supplemental glidepath/glideslope information on an active ILS, LPV, LNAV/VNAV, and some LNAV approaches. Pathways are intended as an aid to situational awareness and should not be used independent of the CDI, VDI, glide path indicator, and glide slope indicator. They are removed from the display when the selected navigation information is not available. Pathways are not displayed beyond the active leg when leg sequencing is suspended and are not displayed on any portion of the flight plan leg that would lead to intercepting a leg in the wrong direction.

DEPARTURE AND ENROUTE

Prior to intercepting an active flight plan leg, pathways are displayed as a series of boxes with pointers at each corner that point in the direction of the active waypoint. Pathways are not displayed for the first leg of the flight plan if that segment is a Heading-to-Altitude leg. The first segment displaying pathways is the first active GPS leg or active leg with a GPS overlay. If this leg of the flight plan route is outside the SVT field of view, pathways will not be visible until the

aircraft has turned toward this leg. While approaching the center of the active leg and prescribed altitude, the number of pathway boxes decreases to a minimum of four.

Climb profiles cannot be displayed due to the variables associated with aircraft performance. Flight plan legs requiring a climb are indicated by pathways displayed at a level above the aircraft at the altitude selected or programmed.

DESCENT AND APPROACH

During an approach, Pathways be can shown for the programmed descent, level transition flight, and at the Selected Altitude within the approach segments. When an approach providing vertical guidance is activated, the corresponding approach glideslope or glidepath will be displayed using a color corresponding to the selected navigation source and conditions.

White Pathways represent the next segment of the approach that is not yet active. Magenta Pathways represent the active segment with GPS as the navigation source. Green Pathways indicate the ILS/LOC navigation source. During the arrival/approach phases of flight, gray pathways indicate the anticipated preview glidepath/glideslope. The gray Approach Preview Pathways will be displayed beginning at the start of the segment leading to the FAF waypoint. With active approach vertical guidance, the selected altitude will be displayed as a level gray Pathway if the Selected Altitude is lower than the glidepath/glideslope. The gray Selected Altitude Preview Pathways are displayed until they converge with the green glideslope or magenta glidepath pathways. If approach vertical guidance is not yet active, pathways at the Selected Altitude will be displayed in magenta throughout the arrival/approach.

During an ILS approach, the initial approach segment is displayed in magenta at the segment altitudes if GPS is the selected as the navigation source on the CDI. When switching to localizer inbound with the LOC selected as the navigation source on the CDI, pathways are displayed in green along the localizer and glideslope. VOR, LOC, BC, and ADF approach segments that are approved to be flown using GPS are displayed in magenta boxes. Segments that are flown using other than GPS or ILS, such as heading legs or VOR final approach courses are not displayed.

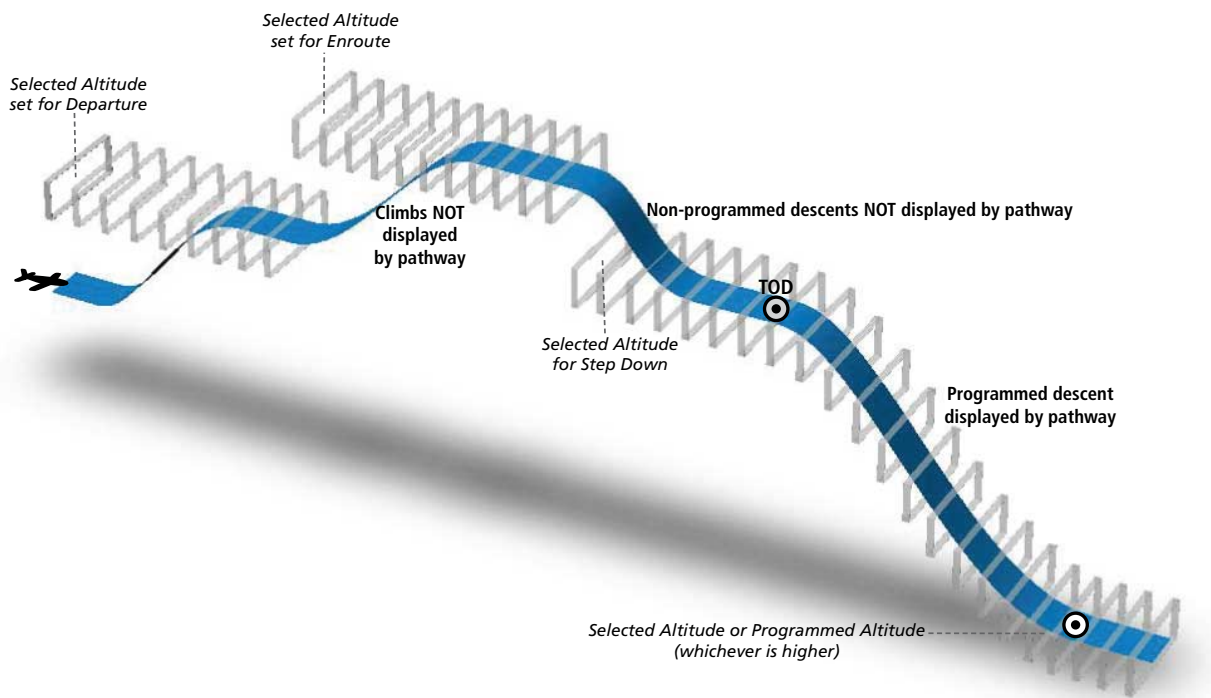


Figure 2-41 SVT Pathways, Enroute and Descent

MISSED APPROACH

Upon activating the missed approach, pathways lead to the Missed Approach Holding Point (MAHP) and are displayed as a level path at the published altitude for the MAHP, or the selected altitude, whichever is the highest. If the initial missed approach leg is a Course-to-Altitude (CA) leg, the pathway boxes will be displayed level at the altitude published for the MAHP. If the initial missed approach leg is defined by a course using other than GPS, pathways are not displayed for that segment. In this case, the pathways displayed for the next leg may be outside the field of view and will be visible when the aircraft has turned in the direction of that leg.

Pathways are displayed along each segment including the path required to track course reversals that are part of a procedure, such as holding patterns. Pathway boxes will not indicate a turn to a MAHP unless a defined geographical waypoint exists between the MAP and MAHP.

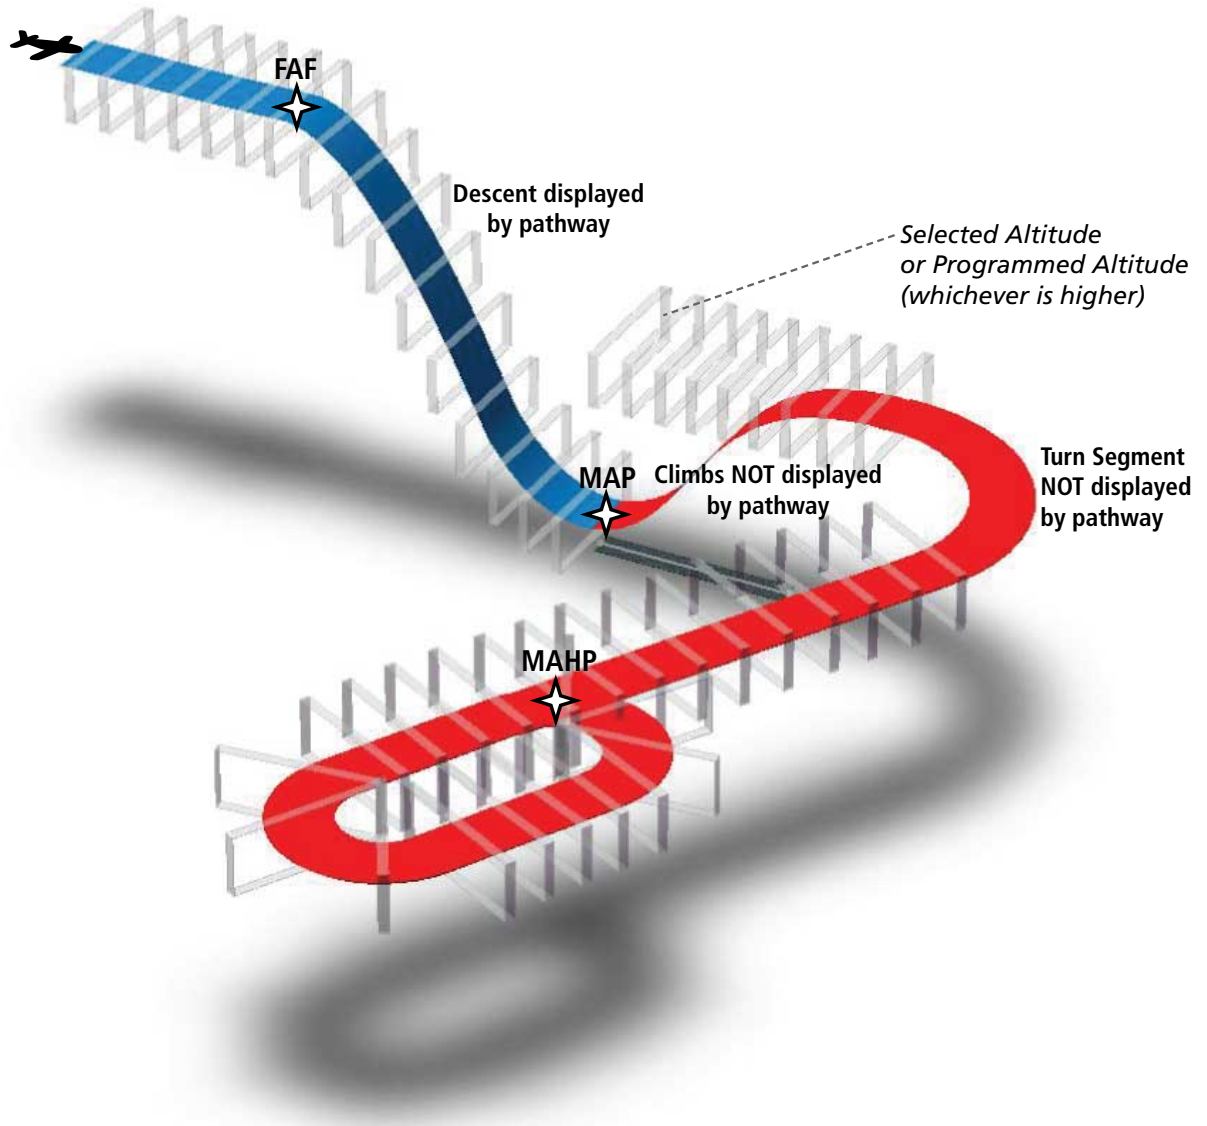


Figure 2-42 SVT Pathways, Approach, Missed Approach, and Holding

RUNWAYS

WARNING: Do not use the Garmin SVT runway depiction as the sole means for determining the proximity of the aircraft to the runway or for maintaining the proper approach path angle during landing.


NOTE: Not all airports have runways with endpoint data in the database, therefore, these runways are not displayed.

Runway data provides improved awareness of runway location with respect to the surrounding terrain. All runway thresholds are depicted at their respective elevations as defined in the database.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CWS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

In some situations, where threshold elevations differ significantly, crossing runways may appear to be layered. As runways are displayed, those within 45 degrees of the aircraft heading are displayed in white. Other runways will be gray in color. When an approach for a specific runway is active, that runway will appear brighter and be outlined with a white box, regardless of the runway orientation as related to aircraft heading. As the aircraft gets closer to the runway, more detail such as runway numbers and centerlines will be displayed.

TRAFFIC

 **WARNING:** Intruder aircraft at or below 500 ft. AGL may not appear on the SVT display or may appear as a partial symbol.

Traffic symbols are displayed in their approximate locations as determined by the related traffic systems. Traffic symbols are displayed in three dimensions, appearing larger as they are getting closer, and smaller when they are further away. Traffic within 250 feet laterally of the aircraft will not be displayed on the SVT display. Traffic symbols and coloring are consistent with that used for traffic displayed in the Inset map or MFD traffic page. If the traffic altitude is unknown, the traffic will not be displayed on the SVT display. For more details refer to the traffic system discussion in the Hazard Avoidance section.

TERRAIN ALERTING

Terrain alerting on the synthetic terrain display is triggered by Forward-looking Terrain Avoidance (FLTA) alerts, and corresponds to the yellow terrain shading for a caution alert and the red shading for a warning alert on the navigation maps and 'Map - Terrain-SVT' or 'Map - TAWS-B' Pages. For more detailed information regarding Terrain-SVT and TAWS-B, refer to the Hazard Avoidance Section.

In some instances, a terrain or obstacle alert may be issued with no conflict shading displayed on the synthetic terrain. In these cases, the conflict is outside the SVT field of view to the left or right of the aircraft.

Obstacles are represented on the synthetic terrain display by standard two-dimensional tower or wind turbine symbols found on map displays. Obstacle symbols appear in the perspective view with relative height above terrain and distance from the aircraft. Unlike the map displays, which color obstacles relative to the aircraft's altitude, obstacles on the synthetic terrain display do not change colors to warn of potential conflict with the aircraft's flight path until the obstacle is associated with an actual FLTA alert. Obstacles greater than 1000 feet below the aircraft altitude are not shown. Obstacles are shown behind the airspeed and altitude displays.



Figure 2-43 Terrain Alert

WIREAWARE POWER LINE OBSTACLES

NOTE: The WireAware obstacle database does not contain all known power lines. And as such, obstacle avoidance is the sole responsibility of the flight crew.

To enhance safety, SVT incorporates Garmin’s WireAware™ wire obstacle technology. WireAware database information mainly includes Hazardous Obstacle Transmission (HOT) power lines which are typically high voltage transmission lines depicted on the VFR Sectional charts, and are considered of special interest to pilots. These include power lines which may span rivers, valleys, canyons, or be in close proximity to airports/heliports. For wire obstacles present in the obstacle database, the system shows these on the maps as well as the Synthetic Vision display; see Hazard Avoidance section for more information about WireAware alerting.

ZERO PITCH LINE

The Zero Pitch Line is drawn completely across the display and represents the horizon when the terrain horizon is difficult to distinguish from other terrain being displayed. It may not align with the terrain horizon, particularly when the terrain is mountainous or when the aircraft is flown at high altitudes.



Figure 2-44 Obstacle

FIELD OF VIEW

The PFD field of view can be represented on the MFD ‘Map - Navigation Map’ Page. Two dashed lines forming a V-shape in front of the aircraft symbol on the map, represent the forward viewing area shown on the PFD.

The following figure compares the PFD forward looking depiction with the MFD plan view and Field of View turned on.



Figure 2-45 PFD and MFD SVT Field of View Comparison

Enabling/disabling SVT Field of View on the Navigation Map Page:

- 1) While viewing the 'Map — Navigation Map' Page, press the **MENU** Key to display the page menu.
- 2) Turn the large **FMS** Knob to highlight 'Map Settings' and press the **ENT** Key.
- 3) Turn the small **FMS** Knob to select the 'Map' Group and press the **ENT** Key.
- 4) Turn the large **FMS** Knob to scroll through the 'Map' Group options to 'Field of View'.
- 5) Turn the small **FMS** Knob to select 'On' or 'Off'.
- 6) Press the **FMS** Knob to return to the 'Map - Navigation Map' page.

2.6 ABNORMAL OPERATIONS

ABNORMAL GPS CONDITIONS

The annunciations listed in the table below can appear on the HSI when abnormal GPS conditions occur. Refer to the Flight Management Section for more information on Dead Reckoning Mode.

Annunciation	Location	Description
GPS LOI	Right of HSI	Loss of Integrity Monitoring—GPS integrity is insufficient for the current phase of flight
GPS INTEG OK	Right of HSI	Integrity OK—GPS integrity has been restored to within normal limits (annunciation displayed for 5 seconds)
DR	Lower left of aircraft symbol if HSI Map is disabled, or on aircraft icon if HSI Map enabled	Dead Reckoning—System is using projected position rather than GPS position to compute navigation data and sequence active flight plan waypoints

Table 2-3 Abnormal GPS Conditions Annunciated on HSI



Figure 2-46 Example HSI Annunciations

In Dead Reckoning Mode, the CDI is removed (when GPS is the selected navigation source), and the following items on the PFD are then shown in amber:

- Current Track Bug
- Wind Data

- Distances in the Bearing Information windows
- GPS bearing pointers

These items should be verified when operating in Dead Reckoning Mode and they become increasingly inaccurate over time.

COMPARATOR ANNUNCIATIONS

The Comparator monitors critical values generated by redundant sensors. If differences in the sensors exceed a specified amount, a miscompare annunciation is displayed in black text on an amber background. If one or both of the sensed values are unavailable, a no compare annunciation is displayed with black text on a white background. Refer to the Appendix A for more information on alerts and annunciations.

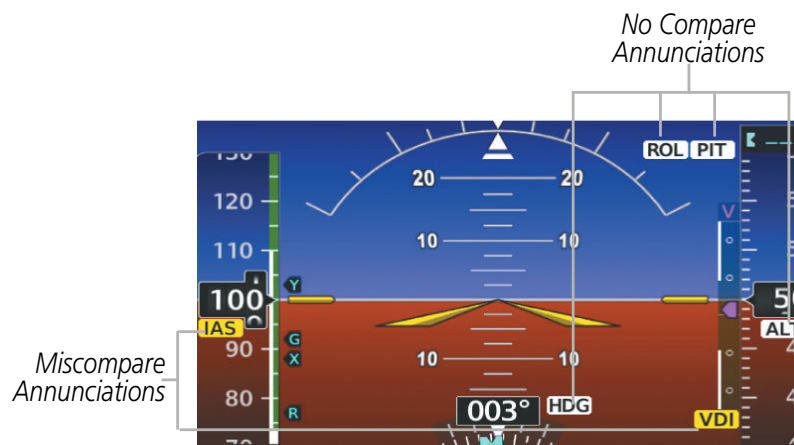


Figure 2-47 Sensor Comparator Annunciations on the PFD

Annunciation	Condition
ALT	Difference in altitude sensors is > 200 ft.
IAS	If either airspeed sensor detects > 35 knots, and the difference in sensors is > 10 knots
	If either airspeed sensor detects > 80 knots, and the difference in sensors is > 7 knots.
HDG	Difference in heading sensors is > 6 degrees.
PIT	Difference in pitch sensors is > 5 degrees.
ROL	Difference in roll sensors is > 6 degrees.
ALT	No data from one or both altitude sensors.
IAS	No data from one or both airspeed sensors.

Annunciation	Condition
HDG	No data from one or both heading sensors.
PIT	No data from one or both pitch sensors.
ROL	No data from one or both roll sensors.

Table 2-4 Sensor Comparator Annunciations

REVERSIONARY SENSOR ANNUNCIATIONS

Reversionary sensor selection (Dual ADAHRS only) for the AHRS and ADC is annunciated on the above the roll scale on the PFD. Reversionary sensor selection for the GPS is annunciated to the right of the HSI. These annunciations reflect reversionary sensors selected on the PFD. Pressing the PFD Opt Softkey accesses the Sensors Softkey. Pressing the Sensors Softkey accesses the ADC and AHRS softkeys. These softkeys allow switching of the sensors being viewed on the PFD. With certain types of sensor failures, the system may make some sensor selections automatically. The GPS sensor cannot be switched manually.

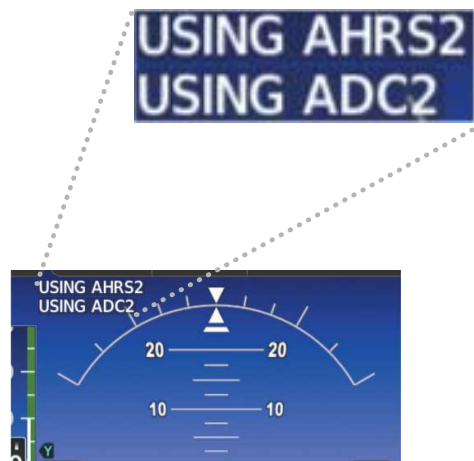


Figure 2-48 Reversionary Sensor Annunciations

Reversionary Sensor Window Text	Condition
USING ADC2	PFD1 is displaying data from the #2 Air Data Computer
USING AHRS2	PFD1 is displaying data from the #2 AHRS.

Table 2-5 Reversionary Sensor Annunciations

SVT TROUBLESHOOTING

SVT is intended to be used with traditional attitude, heading, obstacle, terrain, and traffic inputs. SVT is disabled when valid attitude or heading data is not available for the display. In case of invalid SVT data, the PFD display reverts to the standard blue-over-brown attitude display.

SVT becomes disabled without the following data resources:

- Attitude data
- Heading data
- GPS position data
- 4.9 Arc-second Terrain data
- Obstacle data
- TAWS/Terrain-SVT function is not available, in test mode, or failed
- The position of the aircraft exceeds the range of the terrain database.

SVT IN REVERSIONARY MODE

SVT can be displayed on the Multifunction Display (MFD) in Reversionary Mode. If it is enabled when switching to Reversionary Mode, SVT will take up to 30 seconds to be displayed. The standard, non-SVT PFD display will be shown in the interim.

UNUSUAL ATTITUDES

When the aircraft enters an unusual pitch attitude, red chevrons pointing toward the horizon warn of extreme pitch. The chevrons are displayed on the Attitude Indicator, starting at 50° above and 30° below the horizon line.

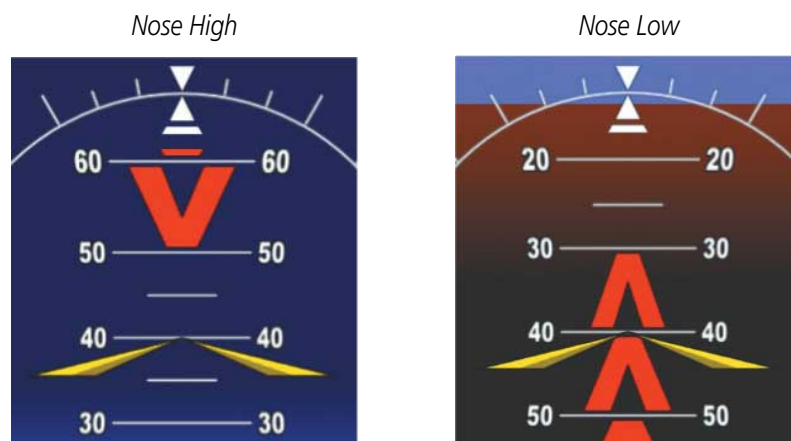


Figure 2-49 Pitch Attitude Warnings with SVT Disabled

If pitch exceeds +30°/-20° or bank exceeds 65°, some information displayed on the PFD is removed. The Altimeter and Airspeed, Attitude, Vertical Speed, and Horizontal Situation indicators remain on the display and the Bearing Information, Alerts, and Annunciation windows can be displayed during such situations. The following information is removed from the PFD and its softkeys are disabled when the aircraft experiences unusual attitudes:

Traffic Annunciations	PFD Setup Menu	Minimum Descent Altitude/ Decision Height readout
AFCS Annunciations	Windows displayed in the lower right corner of the PFD:	Vertical Deviation, Glideslope, and Glidepath Indicators

Inset Map	— References Window	Altimeter Barometric Setting
Outside Air Temperature (OAT)	— Nearest Airports	Selected Altitude
Wind data	— Flight Plan	VNV Target Altitude
Selected Heading readout	— Messages	Ground Speed
Selected Course readout	— Procedures	True Airspeed
Transponder Status Box	System Time	

SVT UNUSUAL ATTITUDES

During extreme pitch attitudes, the display shows either a brown or blue colored bar at the top or bottom of the screen to represent earth or sky. The blue colored bar is also displayed when terrain gradient is great enough to completely fill the display. This is intended to prevent losing sight of the horizon during extreme pitch attitudes.

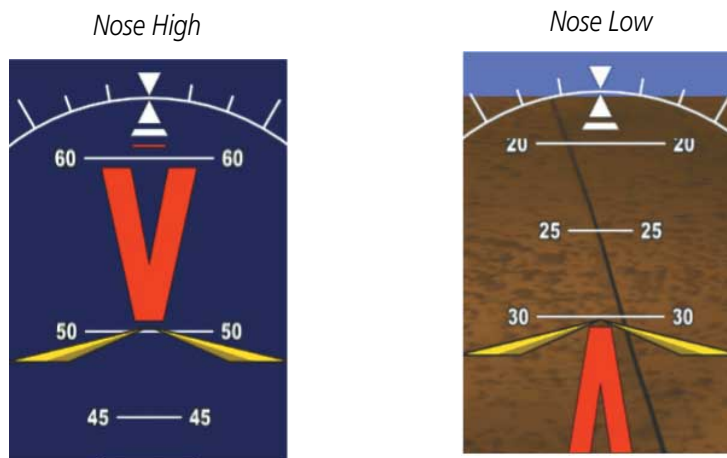


Figure 2-50 Pitch Attitude Warnings with SVT Enabled

SECTION 3 ENGINE INDICATION SYSTEM

NOTE: Refer to the Aircraft Flight Manual (AFM) for limitations.

The system offers improved flight operations and reduces crew workload by automatically monitoring critical system parameters and providing system alerts during all phases of flight. The Engine Indication System (EIS) displays electrical, fuel, and engine information on the left side of the Multi Function Display (MFD). EIS information can also be fully expanded to an entire page by pressing the Engine Softkey. In Reversionary Mode, the display-combines Primary Flight Display (PFD) symbology with the EIS.

Green bands on the instruments indicate normal ranges of operation; amber and red bands indicate caution and warning, respectively. White or uncolored bands indicate areas outside of normal operation. When unsafe operating conditions occur, the corresponding displays, pointers, and labels change color corresponding to the level of the condition; warnings also flash (except fuel at destination). If sensory data to an instrument becomes invalid or unavailable, an amber 'X' is displayed across the instrument. However, the numeric displays in the Fuel Calculation Box, TKS FIKI Anti Ice Box (optional), and the density altitude in the Air Data Box are replaced with dashes instead of 'X's when the data is invalid or out of range.



Figure 3-1 MFD (SR20)

3.1 ENGINE INDICATION SYSTEM (EIS) DISPLAY

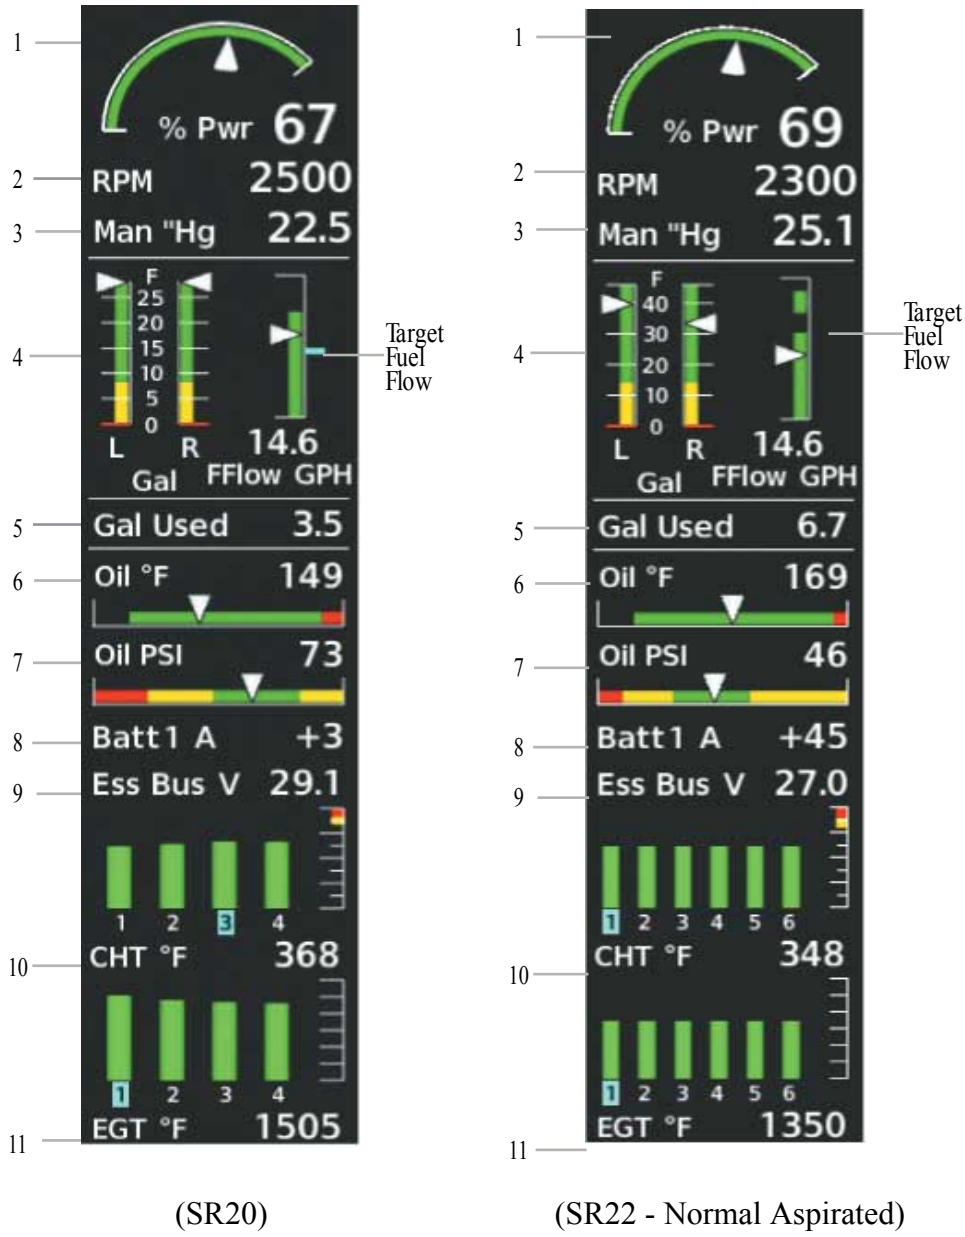


Figure 3-2 EIS Display


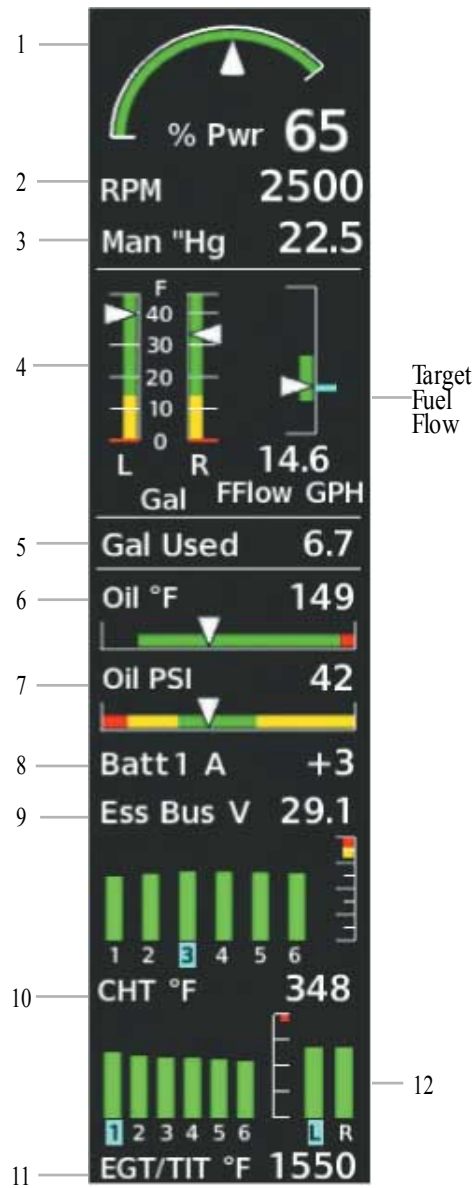


Figure 3-3 EIS Display (SR22T)

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CWS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

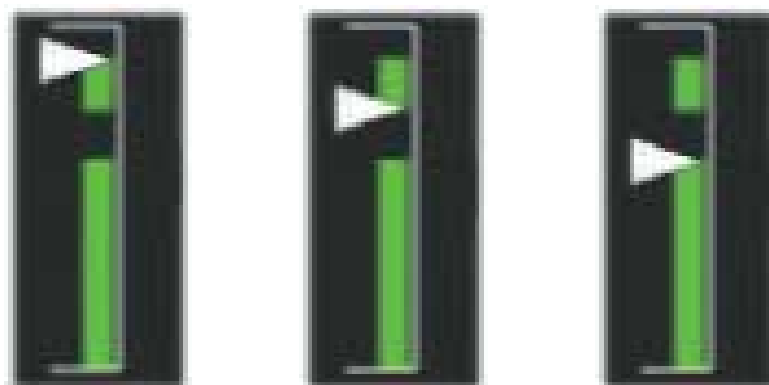

Max Continuous Flow

Best Power

Best Economy


Figure 3-4 EIS Fuel Flow Performance Indications

1	Percent Power Indicator (% Pwr)	Displays engine power as a percentage.
2	Tachometer (RPM)	Displays propeller speed in revolutions per minute.
3	Engine Manifold Pressure Indicator (Man "Hg)	Displays manifold pressure in inches of Mercury to indicate engine power.
4	Fuel Quantity Indicator (GAL)	Displays fuel quantities, in gallons, for the left (L) and right (R) fuel tanks.
	Fuel Flow Indicator (FFlow GPH)	Displays fuel flow in gallons per hour. (SR20, SR22T Only) Displays a cyan target fuel flow indicator for Lean of Peak to the right of the fuel flow indicator strip. (SR22 Only) Displays black band indicator for Rich of Peak and Lean of Peak fuel flow targets. See Figure 3-4 for example of Max Continuous Flow, Best Power, and Best Economy indications.
5	Gallons Used Indicator (Gal Used)	Displays the fuel used in gallons.
6	Oil Temperature Indicator (Oil °F)	Displays engine oil temperature in degrees Fahrenheit.
7	Oil Pressure Indicator (Oil PSI)	Displays pressure of oil supplied to the engine in pounds per square inch (psi).
8	Ammeter (Batt1 A)	Displays the battery 1 load in amperes.
9	Voltmeter (ESS Bus V)	Displays the essential bus voltage in volts.
10	Cylinder Head Temperature Indicator (CHT °F)	Displays the head temperature of the hottest cylinder (CHT; cylinder number is shown below bar).

11	Exhaust Gas Temperature Indicator (EGT °F)	Displays the exhaust gas temperature (cylinder number is shown below bar) (normally aspirated models only, shown in Figure 3-2).
	Exhaust Gas Temperature/Turbine Inlet Temperature Indicator (EGT/TIT °F)	Displays the exhaust gas temperature and turbine inlet temperature (cylinder number or turbine inlet side is shown below bar) (Turbo models only, shown in Figure 3-3).
12	Left and Right Turbine Inlet Temperature	Displays the temperature at the left (L) and right (R) turbine inlet (Turbo models only, shown in Figure 3-3).

3.2 ENGINE PAGE

Pressing the **Engine** Softkey accesses the EIS - Engine Page, which displays all engine, fuel, fuel calculation, electrical, air data, and optional ice protection information. Pressing the optional **Anti-Ice** Softkey accesses the second-level softkeys. Pressing the **Fuel-W&B** Softkey accesses the second-level softkeys.


 **NOTE:** The ice protection system (optional) must be operated in accordance with the approved flight manual limitations. This option is only available on SR22 and SR22T models.


Level 1	Level 2	Level 3	Description
Engine			Displays full Engine Page and second-level engine softkeys; press again to return to the EIS Display and top-level softkeys (see the EIS Section for more information).
	Anti-Ice (Optional)		Displays Anti-Ice softkeys (optional -TKS FIKI only; See Operational Note above).
		Left	Selects manual mode and opens the left tank valve and closes the right tank valve.
		Auto	Selects auto tank selection mode.
		Right	Selects manual mode and opens the right tank valve and closes the left tank valve.
		Back	Returns to the EIS Display and top-level softkeys.
	DCLTR		Removes bars and temperature displays from the Engine Temperature Box.
	Assist		Identifies EGT peaks.
	Fuel-W&B		Fuel W&B Information.
		Full	Sets onboard fuel quantity to full.
		Tabs	Resets fuel totalizer to tabs (usable fuel).
		Undo	Resets to the initial usable fuel amount shown on the Initial Usable Fuel Page.
		Fuel-W&B	Displays the Aux - W&B Page.

 **NOTE:** Refer to the Pilot's Operating Handbook (POH) for engine operating limitations.

1	Percent Power Indicator (% Pwr)	Displays engine power as a percentage.
2	Tachometer (RPM x100)	Displays propeller speed in revolutions per minute.

3	Engine Manifold Pressure Indicator (Man "Hg)	Displays manifold pressure in inches of mercury to indicate engine power.
4	Fuel Flow Indicator (FFlow GPH)	Displays fuel flow in gallons per hour. (SR20, SR22T Only) Displays a cyan target fuel flow indicator for Lean of Peak to the right of the fuel flow indicator strip. (SR22 Only) Displays black band indicator for Rich of Peak and Lean of Peak fuel flow targets.
5	Oil Temperature and Pressure Indicators (Oil °F PSI)	Displays oil temperature in degrees Fahrenheit (°F) and pressure in pounds per square inch (psi).
6	Electrical Group (Electrical)	Displays the alternator and battery current in amperes and the essential and main bus voltage.
7	Fuel Calculation Group (Fuel Calculation)	Displays calculated fuel at destination, fuel used, fuel remaining, time remaining, range (in nautical miles) and economy (in nautical miles per gallon) based on the displayed fuel remaining and the fuel flow totalizer.
8	Fuel Quantity Indicator	Displays fuel quantities, in gallons, for the left (L) and right (R) fuel tanks.
9	Air Data	Displays density altitude, outside air temperature (OAT) in °F and °C, and international standard atmosphere (ISA) temperature deviation.
10	Oxygen Pressure Indicator	Displays oxygen pressure in tank in pounds per square inch (optional).
11	Anti-Ice Fluid Quantity Indicator (TKS FIKI)	TKS FIKI – Displays the quantity of anti-ice fluid remaining in the left (L) and right (R) tanks in gallons (optional – See Operational Note below).
12	Engine Temperature Group (Engine Temperatures)	Displays head (CHT) and exhaust gas temperatures (EGT) of all cylinders in °F (all models) and turbine inlet temperatures (turbo models only).

 **NOTE:** The ice protection system (optional) must be operated in accordance with the approved flight manual limitations. This option is only available on SR22 and SR22T models.

 **NOTE:** Depictions of equipment may differ from the installed equipment. Examples shown may not represent all possible aircraft configurations.

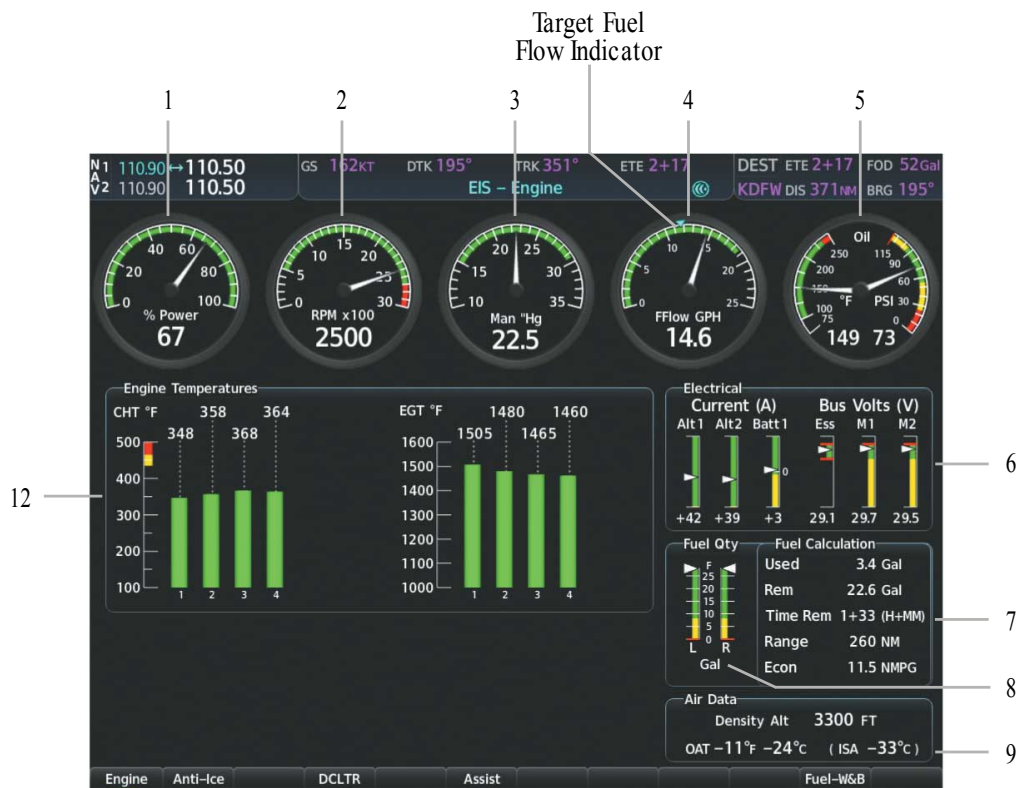


Figure 3-5 Engine Page (SR20)

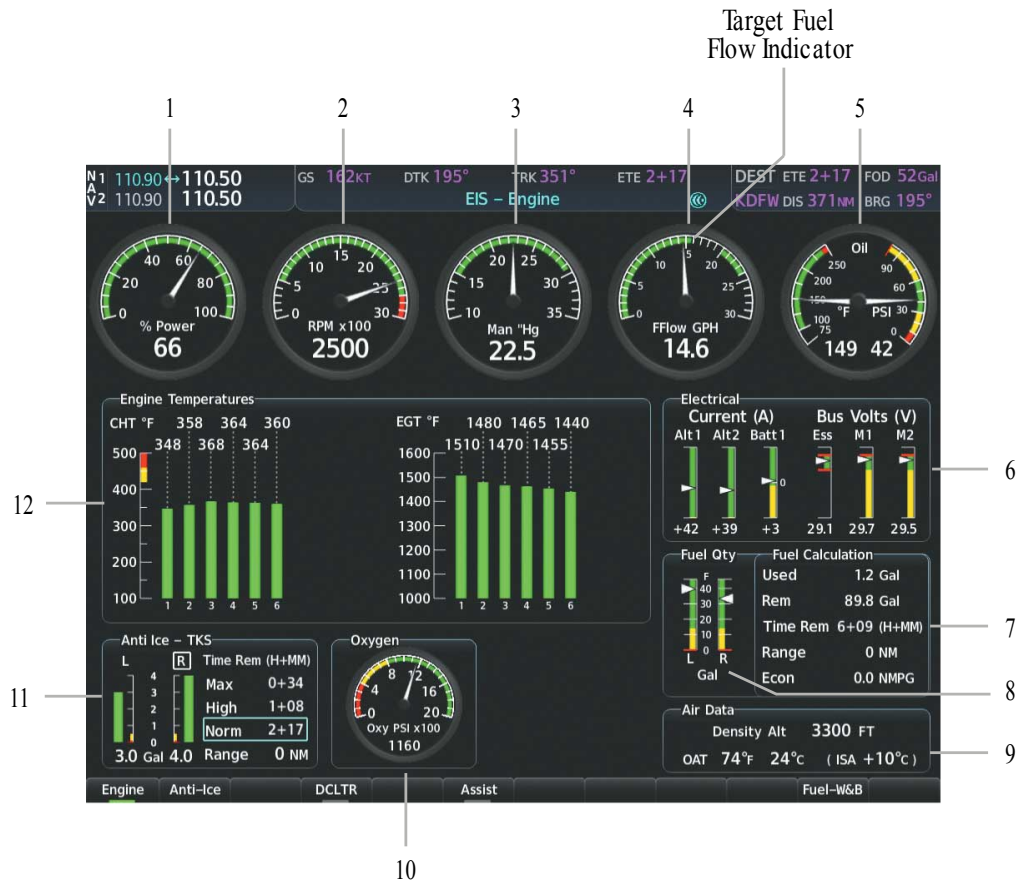


Figure 3-6 Engine Page (SR22) with TKS FIKI and Oxygen

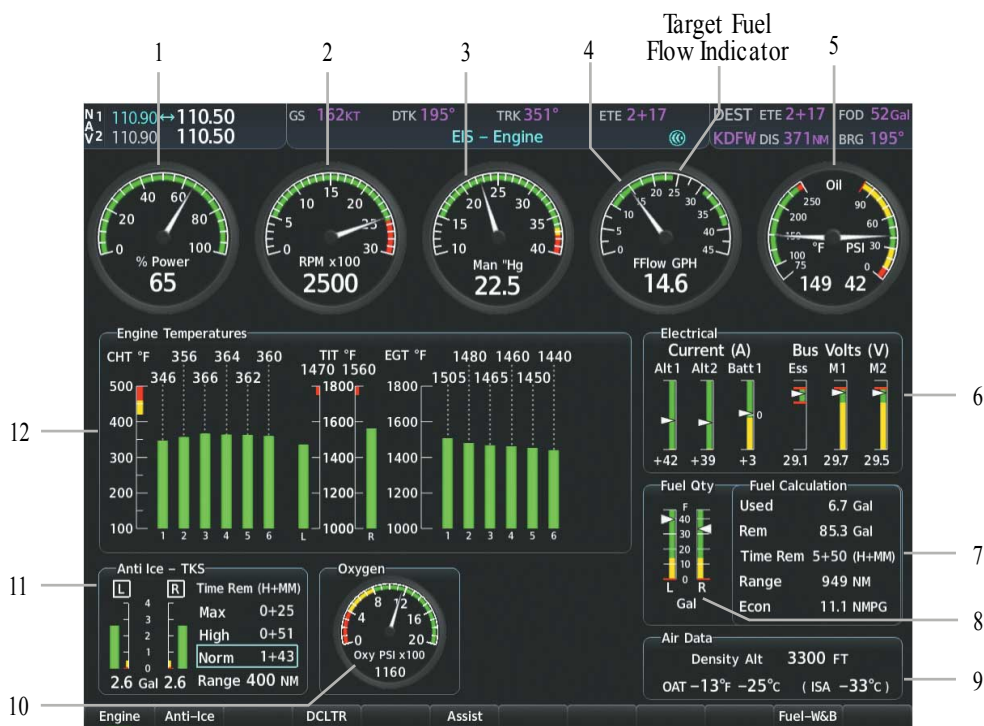


Figure 3-7 Engine Page (SR22T) with TKS FIKI and Oxygen

FUEL CALCULATIONS

NOTE: Fuel calculations do not use the aircraft fuel quantity indicators and are calculated from the last time the fuel was reset.

Fuel used (Used), time remaining (Time Rem), range (in nautical miles), and economy (Econ) are calculated based on the displayed fuel remaining (Rem) and the fuel flow totalizer. The calculated range is based upon ground speed, distance, economy, and fuel remaining. See the Flight Management Section for information regarding the map feature related to the EIS Fuel Calculations.

Adjusting the fuel totalizer quantity:

- 1) Press the **Engine** Softkey to display the Engine Page.
- 2) Press the **Fuel — W&B** Softkey to access the Initial Usable Fuel Page.
- 3) Turn the **FMS** Knob (small knob adjusts in 1 gallon increments and large knob in 10 gallon increments) to increase or decrease the initial usable fuel displayed.

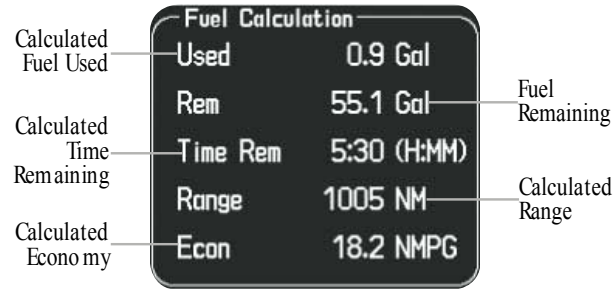


Figure 3-8 Fuel Calculation Group



Figure 3-9 Full Fuel (SR22 shown as example) Initial Usable Fuel Page

TKS FLIGHT INTO KNOWN ICING (FIKI) ANTI-ICE SYSTEM

The system interfaces with the optional TKS Flight Into Known Icing (FIKI) anti-ice system. Refer to the applicable Pilot’s Operating Handbook (POH) for a detailed system description of the installed ice protection system.

NOTE: The ice protection system (optional) must be operated in accordance with the approved flight manual limitations. This option is only available on SR22 and SR22T models.

The FIKI system offers five pilot-selectable (external to the system) modes of operation and a more sophisticated quantity indicator located on the full Engine Page. To accommodate the additional modes, the TKS FIKI system employs several additional sensors. The system receives inputs from these sensors and provides indications as to the status of the TKS FIKI system.

AUTO TANK SELECTION MODE

In the default tank selection mode (Auto), the system assures that the fluid levels of the two tanks are kept relatively even by periodically closing the tank with the lowest level. The system uses the anti-ice fluid tank quantities to control the tank shut-off valves. When the system is on and operating in Auto mode, the shut-off valves close under the following conditions:

- The fluid quantity is empty (indicated from the fluid level sensor and level switch)
- The left and right tank level imbalance is greater than 0.25 gallons (low tank will be closed until level balance is within 0.15 gallons)
- The fluid quantity is unreliable (a miscompare between the level sensor and level switch or an out of range level sensor value)

While operating in Auto mode a white box is displayed around the 'L' and 'R', located on top of each fluid quantity indicator, when both tanks are open (Figure 3-10). During normal operation, the white box will highlight the left or right tanks as the fluid levels change.

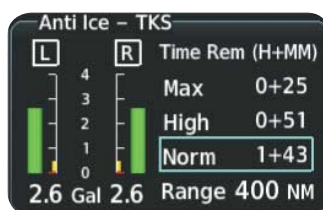


Figure 3-10 Auto Tank Mode (Normal)

If a fluid level comparison fault is detected (the fluid level sender disagrees with the fluid level switch for a particular tank) the corresponding fluid quantity indicator is grayed out (Figure 3-11) and that quantity is not used in the endurance and range calculations. When the fluid level sender is out of range, the fluid quantity indicator is marked with an amber 'X' (Figure 3-12)



Figure 3-11 Fluid Level Unreliable

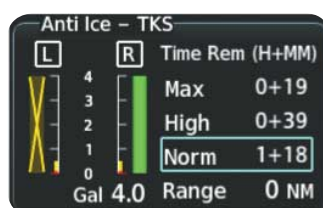


Figure 3-12 Fluid Level Out Of Range

MANUAL TANK MODE

Manual tank mode allows the pilot to control either tank's shut-off valve. Manual may be selected by pressing the **Anti-Ice** Softkey to access the second-level softkeys **Left**, **Auto**, and **Right**. A cyan box is displayed around the selected tank, gallons remaining in the selected tank, and pump operating mode.

- **Left** Softkey – opens left tank valve and closes right tank valve
- **Auto** Softkey – returns to Auto tank mode
- **Right** Softkey – opens right tank valve and closes left tank valve

While operating in manual tank mode, only the selected/open tank's quantity is used for the range and endurance calculations.



Figure 3-13 Manual Tank Mode (Right tank selected)

PUMP OPERATING MODES


The Ice Protection systems consists of various pump operating modes listed below.

NOTE: The ice protection system (optional) must be operated in accordance with the approved flight manual limitations. This option is only available on SR22 and SR22T models.

Operating Mode	System Operation	Comments
OFF	System Off	No modes selected
Norm	Both pumps operate on a timed, repeating cycle – 30 seconds ON and 90 seconds OFF	Provides 50% flow rate for light/moderate icing †
High	A single pump (#1) operates continuously	Provides 100% flow rate for moderate icing †
Max (momentary)	Both pumps operate continuously for 120 seconds	Provides 200% flow rate for severe icing or to expedite the removal of previous ice buildup †

Pump Bkup	A single pump (#2) operates continuously	This mode is used in the event of a timer box failure or when Backup mode is selected. Pump #2 provides 100% flow rate, bypassing the timer box †
† — Refer to the POH for pilot recommended actions		

Table 3-1 FIKI System Operating Modes

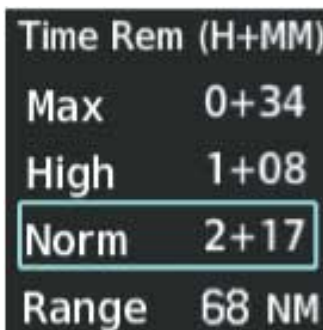


Time Rem (H+MM)
Max 0+34
High 1+08
Norm 2+17
Range 68 NM

Figure 3-14 Normal Operating Mode



Time Rem (H+MM)
Max 0+39
High 1+18
Norm 2+36
Range 36 NM

Figure 3-15 High Operating Mode

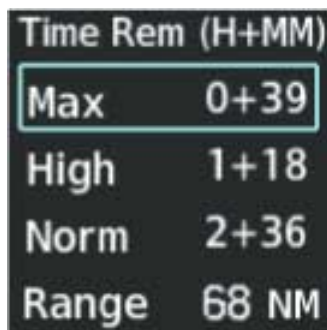

Time Rem (H+MM)
Max 0+39
High 1+18
Norm 2+36
Range 68 NM

Figure 3-16 Max Operating Mode

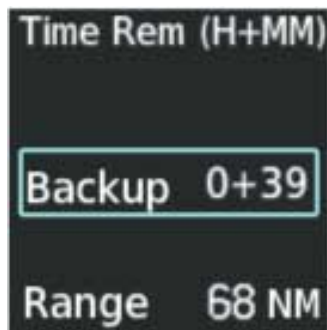


Figure 3-17 Pump Backup Mode

3.3 LEANING ASSIST MODE

NOTE: The pilot should follow the engine manufacturer's recommended leaning procedures in the Pilot's Operating Handbook (POH).

A leaning assist function is available on the Engine Page to assist in the leaning process.

When the **Assist** Softkey is pressed, the system initially highlights the number and places a cyan box around the EGT display of the cylinder with the hottest EGT. The Δ Peak temperature is the difference between the peak temperature and the present temperature for the peaked cylinder. When the first peak is detected, "1st" is annunciated below that cylinder's EGT bar and the temperature is enclosed in a cyan box.

The system continues to detect peak EGTs for each cylinder lean of peak as the fuel flow is decreased, and the peak of each cylinder's EGT is indicated by a cyan marker on the graph. Once all cylinders are lean of peak, the last cylinder to peak is denoted by the "Last" annunciation below its bar on the graph.

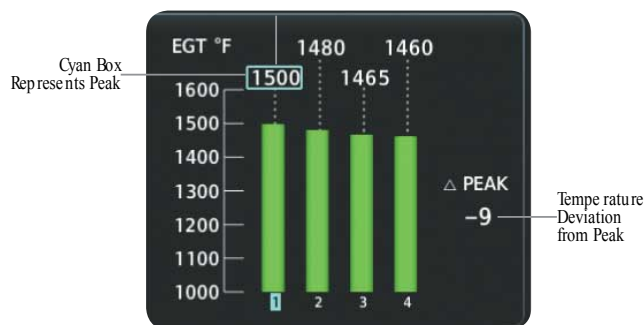


Figure 3-18 Leaning Assist Mode

Accessing Leaning Assist Mode:

- 1) Press **Engine** softkey to display the Engine Page.
- 2) Press the **Assist** Softkey to identify peaks.

3.4 REVERSIONARY MODE

In reversionary mode, the display combines PFD symbology with the EIS Display (refer to the System Overview for information about display Reversionary Mode).

In reversionary mode, the EIS is separated into two displays: Engine (identical to the normal EIS Display on the MFD) and System. For a description of the EIS Display, refer to Section 3.1. The System Display shows various system parameters and fuel calculations.



Figure 3-19 Reversionary Mode (SR22T)

NOTE: Fuel calculations do not use the aircraft fuel quantity indicators and are calculated anytime the initial usable fuel is changed.

NOTE: Refer to the Pilot's Operating Handbook (POH) for limitations.

In Reversionary Mode, the EIS System Display shows the engine, fuel calculations, electrical, and various system parameters. Fuel calculations are based on the displayed fuel remaining and the fuel flow totalizer.

1	Percent Power Indicator (% Pwr)	Displays engine power as a percentage.
2	Tachometer (RPM)	Displays propeller speed in revolutions per minute.
3	Engine Manifold Pressure Indicator (Man "Hg)	Displays manifold pressure in inches of Mercury to indicate engine power.

4	Fuel Calculation Group (Fuel Calc)	Displays calculated fuel at destination, fuel used, fuel remaining, time remaining, range (in nautical miles) and economy (in nautical miles per gallon) based on the displayed fuel remaining and the fuel flow totalizer.
5	Electrical Group (Electrical)	Displays the alternator and battery current in amperes and the essential and main bus voltage.
6	Miscellaneous (Misc)	Displays engine hours, anti-ice gallons (optional) and oxygen pressure (optional).

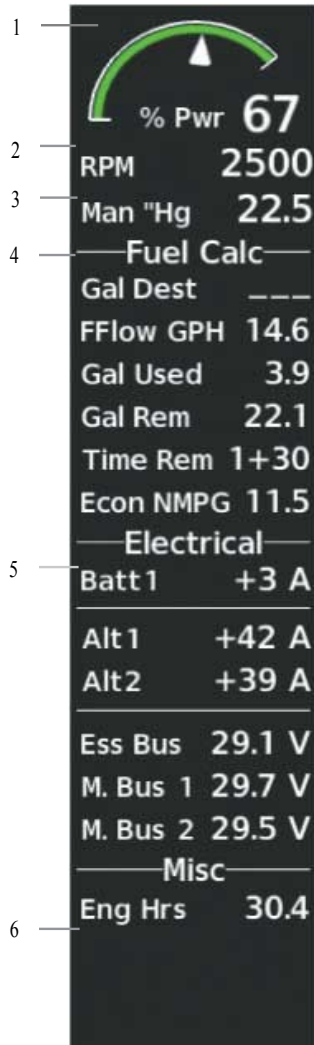


Figure 3-20 System Display (SR20)

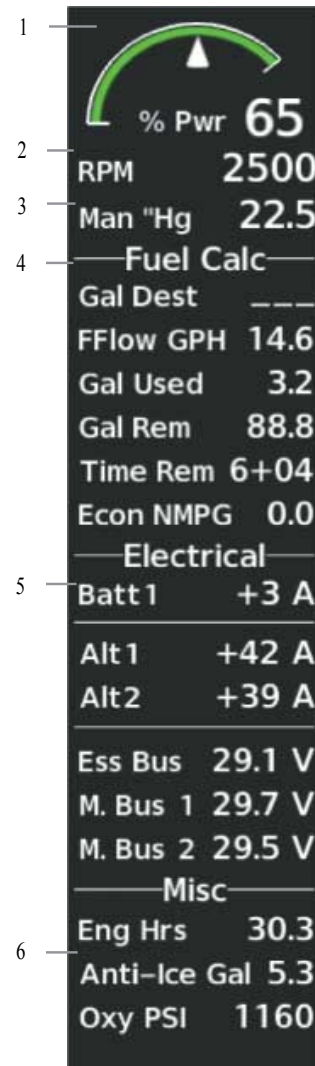


Figure 3-21 System Display (SR22 Models with optional Anti-Ice and Oxygen)

Accessing the EIS System Display:

- 1) Press **Engine** softkey.
- 2) Press the **System** Softkey.
- 3) To return to the default Engine Display, press the **Engine** or **Back** Softkey.

BLANK PAGE

SECTION 4 AUDIO PANEL AND CNS

4.1 OVERVIEW

The Communication/Navigation/Surveillance (CNS) system includes the Audio Panel, communication radios, navigation radios, and a Mode S transponder. The System Overview Section provides a block diagram description of the Audio Panels and CNS system interconnection.

CNS operation is performed by the following Line Replaceable Units (LRUs):

- Primary Flight Display (PFD)
- Multi Function Display (MFD)
- Integrated Avionics Unit (2)
- Audio Panel
- Mode S Transponder
- Control Unit

The MFD/PFD controls are used to tune the communication transceivers and navigation radios.

The Audio Panel provides the traditional audio selector functions of microphone and receiver audio selection. The Audio Panel includes an intercom system (ICS) between the pilot, copilot, and passengers, a marker beacon system, and a COM clearance recorder. Ambient noise from the aircraft radios is reduced by a feature called Master Avionics Squelch (MASQ). When no audio is detected, MASQ processing further reduces the amount of background noise from the radios.

The Mode-S transponder is controlled with softkeys and the **FMS** Knob located on the Primary Flight Display (PFD). The Transponder Data Box is located to the left of the System Time Box. The data box displays the active four-digit code, mode, and reply status.

MFD/PFD CONTROLS AND FREQUENCY DISPLAY



Figure 4-1 PFD Controls, COM Frequency Tuning Boxes, Transponder Code, and DME Tuning Window

1	COM Frequency Box – Displays COM standby and active frequency fields and volume. The selected and decoded COM transceiver frequency is displayed in green.
2	COM Knob – Tunes the standby frequencies for the COM transceiver (large knob for MHz; small knob for kHz). Press to move the frequency selected for tuning (cyan digits) and Frequency Transfer Arrow between COM1 and COM2
3	COM Frequency Transfer Key – Transfers the standby and active COM frequencies. Press and hold this key for two seconds to tune the emergency frequency (121.500 MHz) automatically into the active frequency field.
4	COM VOL/SQ Knob — Controls COM audio volume level. Press to turn the COM automatic squelch on and off. Volume level is shown in the COM frequency field as a percentage.
5	DME Tuning Window — Displays DME frequency pairing mode. Display by pressing the DME Softkey.

6	ENT Key – Validates or confirms DME pairing mode and Auto-tune selection.
7	FMS Knob – Flight Management System Knob, used to enter transponder codes and Auto-tune entries when NRST Window is present. Press the FMS Knob to turn the selection cursor on and off. The large knob moves the cursor in the window. The small knob selects individual characters for the highlighted cursor location.
8	Transponder Data Box – Indicates the selected transponder code, operating mode, reply, and ident status for the transponder.

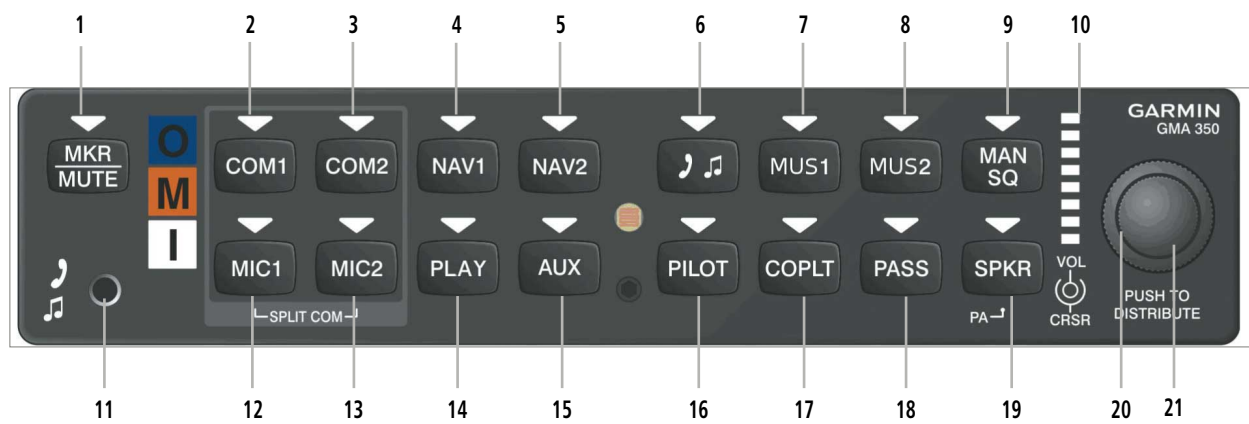


Figure 4-2 MFD Controls and NAV Frequency Tuning Boxes


9	NAV VOL/ID Knob — Controls NAV audio volume level. Press to turn the Morse code identifier audio on and off. Volume level is shown in the NAV frequency field as a percentage.
10	NAV Frequency Transfer Key – Transfers the standby and active NAV frequencies.

11	NAV Knob – Tunes the standby frequencies for the NAV receiver (large knob for MHz; small knob for kHz). Press to move the tuning box (light blue box) and Frequency Transfer Arrow between NAV1 and NAV2.
12	NAV Frequency Box – Displays NAV standby and active frequency fields, volume, and station ID. The frequency of the NAV radio selected for navigation is displayed in green.

AUDIO PANEL CONTROLS



GMA 350 Controls

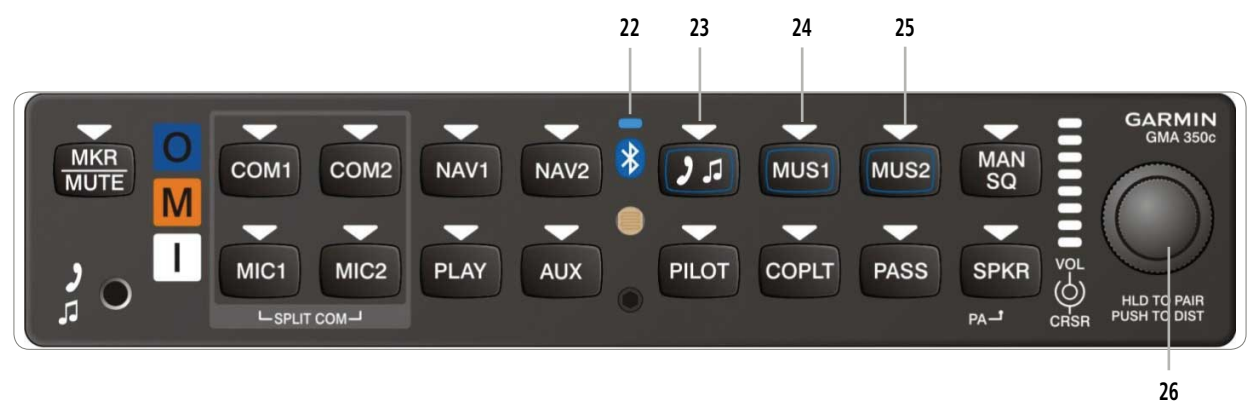



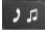


GMA 350c (Bluetooth) Controls

Figure 4-3 GMA 350/350c Audio Panel Controls

NOTE: When a key is selected, a triangular annunciator above the key is illuminated.

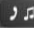1	MKR/MUTE – Selects marker beacon receiver audio. Mutes the currently received marker beacon receiver audio. Deactivates automatically and marker beacon audio is heard when the next marker beacon signal is received. Also, stops play of recorded COM audio
2	COM1 – When selected, audio from the #1 COM receiver can be heard.
3	COM2 – When selected, audio from the #2 COM receiver can be heard.

4	NAV1 – When selected, audio from the #1 NAV receiver can be heard.
5	NAV2 – When selected, audio from the #2 NAV receiver can be heard.
6	 – Selects and deselects audio from a telephone or entertainment device connected to the Front Panel Jack. Audio from a telephone device connected to the rear of the audio panel is used if a device is not connected to the Front Panel Jack. Press and hold to enable/disable  muting during reception.
7	MUS 1 – Selects and deselects music entertainment audio. Press and hold to enable/disable MUS1 muting during reception.
8	MUS 2 – Selects and deselects music entertainment audio. Press and hold to enable/disable MUS2 muting during reception.
9	MAN SQ – Manual Squelch annunciator. When lit, intercom squelch is controlled manually.
10	Volume Indicator – Indicates volume/squelch setting relative to full scale.
11	Front Panel Jack – Used for an entertainment or telephone input.
12	MIC1 – Selects the #1 transmitter for transmitting. COM1 receive is simultaneously selected when this key is pressed allowing received audio from the #1 COM receiver to be heard. COM2 receive can be added by pressing the COM2 Key. Selection of a second MIC button initiates Split-COM mode. When in Split-COM mode, the pilot is using COM1, the copilot is using the COM2.
13	MIC2 – Selects the #2 transmitter for transmitting. COM2 receive is simultaneously selected when this key is pressed allowing received audio from the #2 COM receiver to be heard. COM1 receive can be added by pressing the COM1 Key. Selection of a second MIC button initiates Split-COM mode. When in Split-COM mode, the pilot is using COM1, the copilot is using the COM2.
14	PLAY – Press once to play the latest recorded memory block. Press while audio is playing begins playing the previously recorded memory block. Each subsequent press thereafter plays the previous block of memory.
15	AUX – When selected, audio from the ADF and DME (if equipped) can be heard
16	PILOT – Controls the pilot intercom isolation.
17	COPLT – Controls the copilot intercom system. Press and hold to toggle copilot configuration between crew and passenger.
18	PASS – Controls the passenger intercom system. Press and hold to enable/disable passenger muting during reception.
19	SPKR – Selects and deselects the cabin speaker. COM, NAV, AUX, and MKR receiver audio can be heard on the speaker. Press and hold for 2 seconds for Passenger Address (PA). The SPKR Key flashes during PA.
20	Cursor (CRSR) Control Knob – Turn to move the cursor (flashing white or blue annunciator) to the desired source.
21	Volume (VOL) Control Knob – Turn the smaller knob to control volume or squelch of the selected source (indicated by the flashing white or blue annunciator). When the volume control cursor is not active press to switch to Blue-Select mode. If the volume control cursor is active, press twice (once to cancel the cursor, twice to activate Blue-Select mode).

22	<p>Bluetooth® Connection Annunciator – (GMA 350c only) A flashing blue annunciator indicates the unit is discoverable. A solid blue annunciator indicates an active Bluetooth connection.</p>
23	<p> Key Annunciator – (GMA 350c only) Assigns the Bluetooth device to the  audio source. Press the  key until the annunciator turns blue. The key annunciator will cycle from OFF to WHITE to BLUE. WHITE selects the wired audio source and BLUE selects the Bluetooth audio source. NOTE: The Bluetooth audio can only be assigned to one source at a time. Once the Bluetooth audio is assigned to an audio source, the remaining entertainment audio sources will only cycle between OFF and WHITE.</p>
24	<p>MUS1 Key Annunciator – (GMA 350c only) Assigns the Bluetooth device to the MUS1 audio source. Press the MUS1 key until the annunciator turns blue. The key annunciator will cycle from OFF to WHITE to BLUE. WHITE selects the wired audio source and BLUE selects the Bluetooth audio source. NOTE: The Bluetooth audio can only be assigned to one source at a time. Once the Bluetooth audio is assigned to an audio source, the remaining entertainment audio sources will only cycle between OFF and WHITE.</p>
25	<p>MUS2 Key Annunciator – (GMA 350c only) Assigns the Bluetooth device to the MUS2 audio source. Press the MUS2 key until the annunciator turns blue. The key annunciator will cycle from OFF to WHITE to BLUE. WHITE selects the wired audio source and BLUE selects the Bluetooth audio source. NOTE: The Bluetooth audio can only be assigned to one source at a time. Once the Bluetooth audio is assigned to an audio source, the remaining entertainment audio sources will only cycle between OFF and WHITE.</p>
26	<p>Control Knob Press and Hold – (GMA 350c only) Press and hold for two seconds to enable the GMA 350c as discoverable for pairing. The Bluetooth Annunciator with flash to indicate that the unit is discoverable. The unit will remain discoverable for 90 seconds or until a successful pair is established. Once a successful pair is established, the audio “Bluetooth paired” is played.</p>

CONTROL UNIT

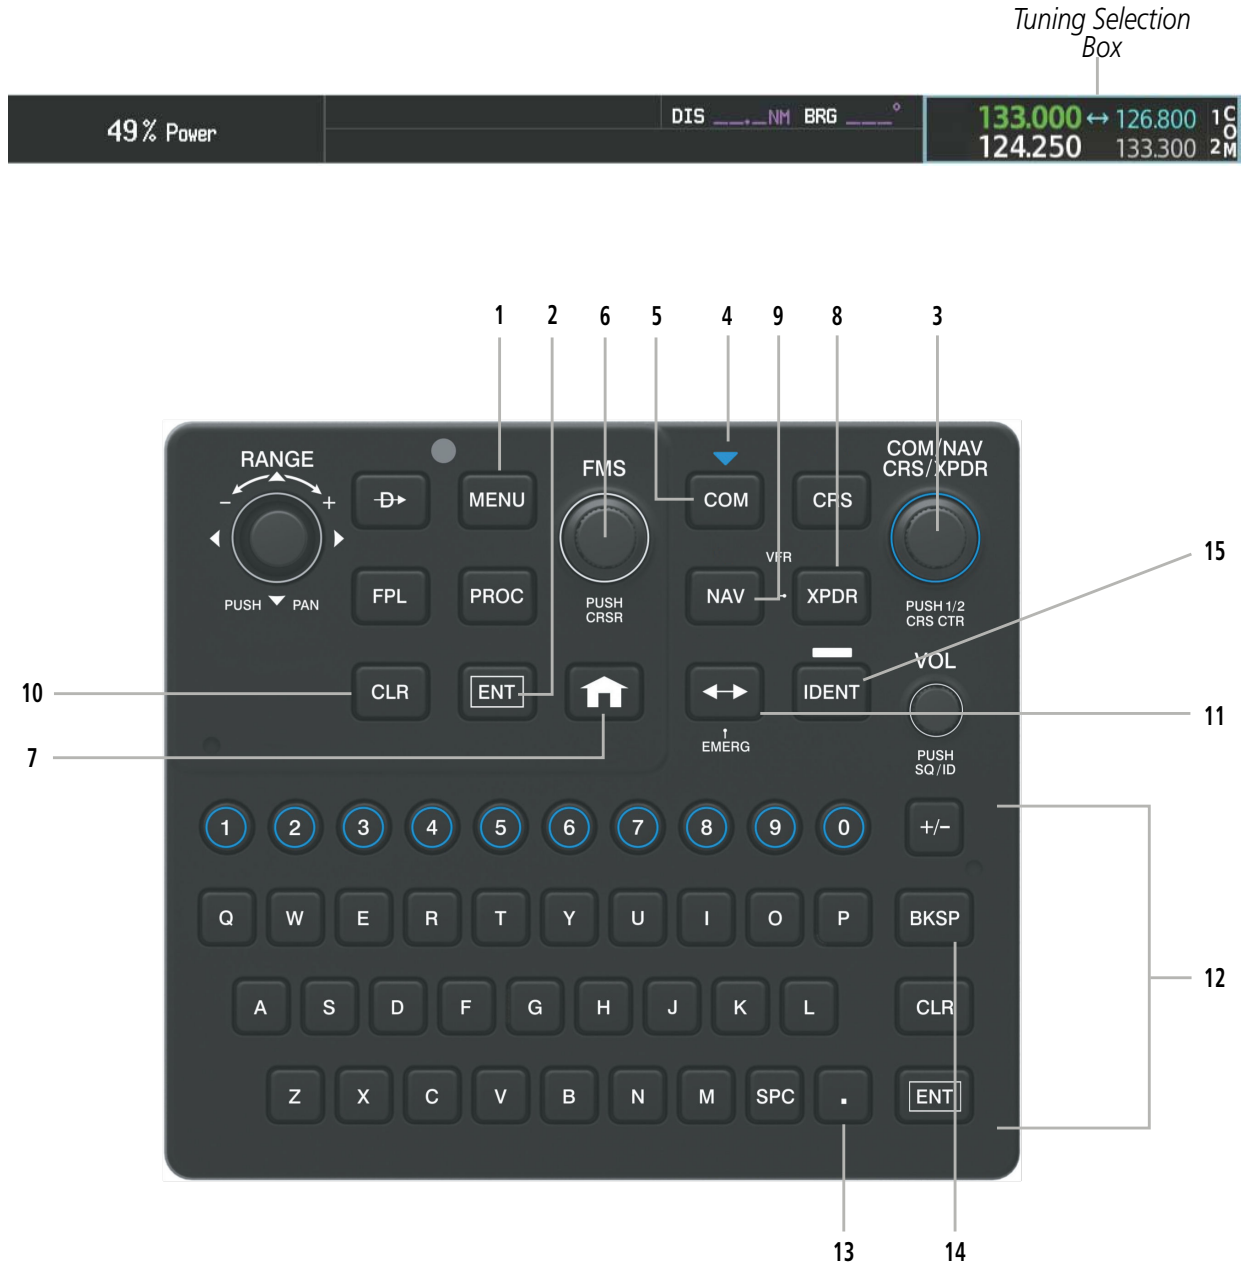


Figure 4-4 Control Unit and Frequency Tuning Display on the PFD

1	MENU Key – Displays a list of options for accessing additional features or making setting changes.
2	ENT Key – Validates or confirms a menu selection or data entry.
3	COM/NAV/CRS/XPDR Knob – Dual concentric knob used for data entry in one of four modes. NAV/COM Tuning Modes: Acts as the NAV or COM Knob. XPDR Mode: Acts as the XPDR Softkey.

4	BLUE Indicators – Indicates one of four modes is always active. Pressing the COM, NAV, CRS or XPDR key selects that mode.
5	COM Key – Selects COM radio tuning mode on the Control Unit. The COM tuning box is outlined with a cyan selection line when the COM frequency is active on the control unit.
6	FMS Knob – Activates the Control Unit cursor on pages that allow flight crew data input. It is used to select DME modes, and Auto-tune entries when a NRST or WPT Window is present. Press the FMS Knob to turn the selection cursor on and off. The large knob moves the cursor in the window. The small knob selects individual characters for the highlighted cursor location.
7	HOME Key – Defaults to Navigation Map on the MFD.
8	XPDR Key – Places Control Unit in Transponder Mode. Transponder code entry can be performed with either the number keypad or COM/NAV/CRS/XPDR Knob.
9	NAV Key – Selects NAV radio tuning mode on the Control Unit. The NAV tuning box is outlined with a cyan selection line when the NAV frequency is active on the control unit.
10	CLR Key – Erases information, cancels entries, or removes menus.
11	Frequency Transfer Key (EMERG) – Transfers the standby and active COM or NAV frequencies. Press and hold for two seconds to tune the emergency frequency (121.500 MHz) automatically into the COM active frequency field.
12	Alphanumeric Keys – Allows data entry (rather than using the COM/NAV/CRS/XPDR Knob to select characters/numbers). The numeric keys are white when entering data on the MFD and blue when entering radio frequencies and transponder codes.
13	Decimal Key – Enters a decimal point.
14	BKSP Key – Moves cursor back one character space and removes last character entered.
15	IDENT Key – Pressing the IDENT key sends a distinct identity indication to Air Traffic Control (ATC). A green IDENT indication is displayed in the PFD mode field of the Transponder Data Box for a duration of 18 seconds. A white IDENT indicator is displayed on the Control Unit.

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CNS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

4.2 COM OPERATION

COM TUNING BOXES

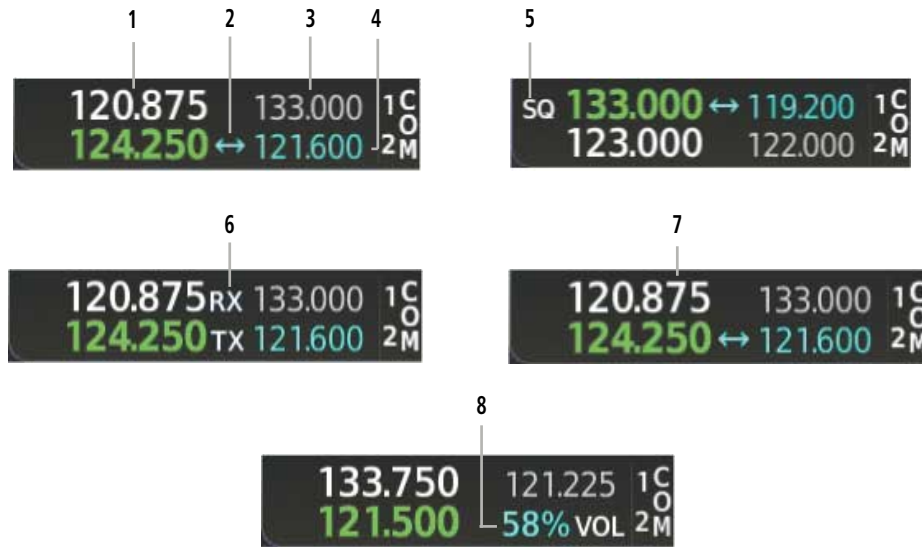


Figure 4-5 COM Tuning Box Indications



NOTE: When turning on the system for use, the system remembers the last frequencies used and the active COM transceiver state prior to shutdown.

1	Active Field – The COM Frequency Box is composed of four fields; the two active frequencies are on the left. An active COM frequency is displayed in green and indicates that the COM transceiver is selected on the Audio Panel (MIC1 or MIC2 Key). Both active COM frequencies appearing in white indicate that no COM radio is selected for transmitting.
2	Frequency Transfer Arrow – Moves between the upper and lower radio frequency fields with the frequency that is selected for tuning. Indicates which COM transceiver is selected for frequency transfer between the Standby and Active fields.
3	Standby Field – The COM Frequency Box is composed of four fields; the two standby frequencies are on the right. Frequencies in the standby field are displayed in either cyan or gray. The standby frequency that is selected for tuning is cyan. The other standby frequency is gray.
4	Selected Tuning Frequency – The frequency selected for tuning is cyan and moves between the upper and lower radio frequency fields with the Frequency Transfer Arrow. Indicates which standby COM transceiver frequency is selected for tuning.
5	Automatic Squelch Indication – Indicates that Automatic Squelch is disabled. Automatic Squelch quiets unwanted static noise when no audio signal is received, while still providing good sensitivity to weak COM signals. When Automatic Squelch is disabled, COM audio reception is always on. Continuous static noise is heard over the headsets and speaker, if selected.

6	Transmit and Receive Indications – During COM transmission, a white TX appears by the active COM frequency replacing the Frequency Transfer Arrow. During COM signal reception, a white RX appears by the active COM frequency replacing the Frequency Transfer Arrow.
7	Frequency Spacing – The COM radios can tune either 25-kHz spacing (118.000 to 136.975 MHz) or 8.33-kHz spacing (118.000 to 136.990 MHz) for 760-channel or 3040-channel configuration. When 8.33-kHz channel spacing is selected, all of the 25-kHz channel spacing frequencies are also available in the complete 3040-channel list.
8	COM Volume – COM radio volume level can be adjusted from 0 to 100% using the VOL/SQ Knob. Turning the knob clockwise increases volume, turning the knob counterclockwise decreases volume. When adjusting volume, the level is displayed in place of the standby frequencies. Volume level indication remains for two seconds after the change.

COM TRANSCIVER MANUAL TUNING

The COM frequency controls and frequency boxes are on the upper right side of the PFD.

Manually tuning a COM frequency:

- 1) Turn the **COM** Knob to tune the desired frequency (large knob for MHz; small knob for kHz).
- 2) Press the **Frequency Transfer** Key to transfer the frequency to the active field.
- 3) Adjust the volume level with the COM **VOL/SQ** Knob.
- 4) Press the COM **VOL/SQ** Knob to turn automatic squelch on and off.

Manually tuning a COM frequency from the Control Unit:

- 1) Press the **COM** Key to select the COM frequency box.
- 2) Turn the **COM/NAV CRS/XPDR** Knob to tune the desired frequency in the COM Tuning Box (large knob for MHz; small knob for kHz).
- 3) Press the **Frequency Transfer** Key to transfer the frequency to the active field.

AUTO-TUNING THE COM FREQUENCY

COM frequencies can be automatically tuned from the following:

- Nearest Airports Window (PFD)
- WPT – Airport Information Page
- NRST – Nearest Airports Page
- NRST – Nearest Frequencies Page (ARTCC, FSS, WX)
- NRST – Nearest Airspaces Page

AUTO-TUNING FROM THE PFD

COM frequencies for the nearest airports can be automatically tuned from the Nearest Airports Window on the PFD. When the desired frequency is entered, it becomes a standby frequency. Pressing the Frequency Transfer Key places this frequency into the COM Active Frequency Field.



Press the **NRST** Softkey to Open the Nearest Airports Window

Figure 4-6 Nearest Airports Window

Auto-tuning a COM frequency for a nearby airport from the PFD:

- 1) Press the **Nearest** Softkey on the PFD to open the Nearest Airports Window. A list of 25 nearest airport identifiers and COM frequencies is displayed.
- 2) Turn the **FMS** Knob to scroll through the list and highlight the desired COM frequency.
- 3) Press the **ENT** Key to load the COM frequency into the COM Standby Frequency Field.
- 4) Press the **Frequency Transfer** Key to transfer the frequency to the COM Active Frequency Field.

AUTO-TUNING FROM THE MFD

Frequencies can be automatically loaded into the COM Frequency Box from pages in the NRST or WPT page group by highlighting the frequency and pressing the ENT Key.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CNS**
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

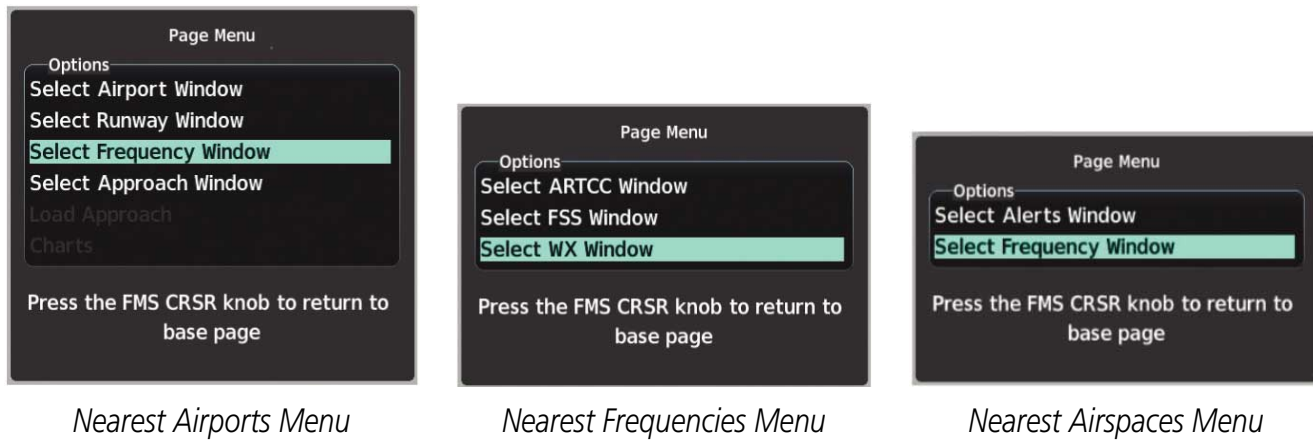


Figure 4-7 Nearest Pages Menus

On the WPT - Airport Information Page, the cursor can be placed on the frequency field by pressing the FMS Knob and scrolling through the list. With the desired frequency highlighted, press the ENT Key to bring up the 'Load Frequency' Options menu. Use the FMS Knobs to select the desired COM radio field and press the ENT Key to load it.

*Press **INFO-1** Softkey for AIRPORT, RUNWAYS, and FREQUENCIES Windows*

*Use the **FMS** Knob to select the desired COM radio field in which to load the frequency, and then Press the **ENT** Key.*

Selected Airport Identifier and Information

Runway Information

*Press **ENT** Key to display the Load Frequency Options Menu.*

COM Frequency Loads into selected Frequency Field

Figure 4-8 Airport Information Page and PFD Frequency Display

COM frequencies can also be auto-tuned from the NRST - Nearest Airspaces, NRST - Nearest Frequencies, and NRST - Nearest Airports Pages on the MFD in a similar manner using the appropriate softkeys or MENU Key, the FMS Knob, and the ENT Key.

Auto-tuning a COM frequency from the WPT and NRST Pages:

- 1) From any page that the COM frequency can be auto-tuned, activate the cursor by pressing the **FMS** Knob or pressing the appropriate softkey.
- 2) Turn the **FMS** Knob to place the cursor on the desired COM frequency.
- 3) Press the **ENT** Key to display the Load Frequency options Menu.

- 4) Turn the **FMS** Knob to select the desired COM radio field in which to load the frequency.
- 5) Press the **ENT** Key to load the COM frequency into the selected COM radio field.
Or:
 - 1) From any page that the COM frequency can be auto-tuned, press the **MENU** Key to display the page menu.
 - 2) Turn the large **FMS** Knob to scroll through the menu options.
 - 3) Press the **ENT** Key to place the cursor on the desired selection.
 - 4) Turn the large **FMS** Knob to scroll through the frequency options.
 - 5) Press the **ENT** Key to display the Load Frequency options Menu.
 - 6) Turn the **FMS** Knob to select the desired COM radio field in which to load the frequency.
 - 7) Press the **ENT** Key to load the COM frequency into the selected COM radio field.

FREQUENCY SPACING

The COM radios can tune either 25-kHz spacing (118.000 to 136.975 MHz) or 8.33-kHz spacing (118.000 to 136.990 MHz) for 760-channel or 3040-channel configuration. When 8.33-kHz channel spacing is selected, all of the 25-kHz channel spacing frequencies are also available in the complete 3040-channel list. COM channel spacing is set on the System Setup 1 Page of the Aux Page Group.

While the COM Configuration Window is selected, the softkeys are blank.



Select 8.33-kHz or 25.0-kHz COM Frequency Channel Spacing

Figure 4-9 Aux - System Setup 1 Page

Changing COM frequency channel spacing:

- 1) Select the Aux – System Setup 1 Page.
- 2) Press the **FMS** Knob to activate the flashing cursor.
- 3) Turn the large **FMS** Knob to highlight the Channel Spacing Field in the COM Configuration Box.
- 4) Turn the small **FMS** Knob to select the desired channel spacing.
- 5) Press the **ENT** Key to complete the channel spacing selection.

4.3 NAV OPERATION

NAV TUNING BOXES

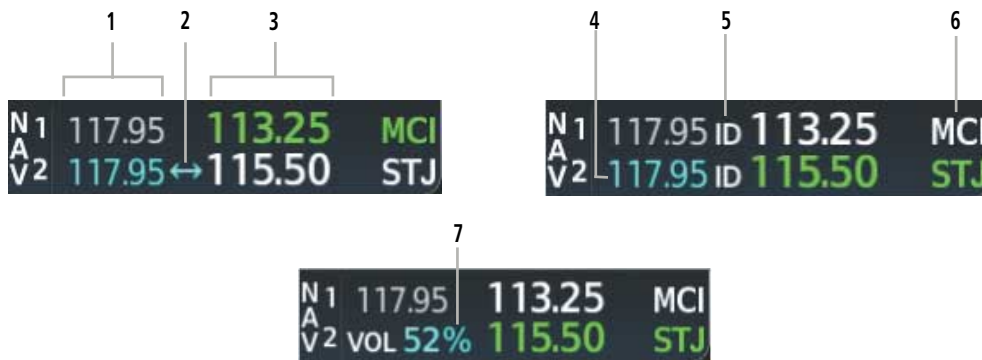


Figure 4-10 NAV Tuning Box Indications

1	Standby Fields – The NAV Frequency Box is composed of four fields; the two standby frequencies are on the left. Frequencies in the standby field are displayed in either cyan or gray. The standby frequency selected for tuning is cyan. The other standby frequency is gray.
2	Frequency Transfer Arrow – Moves between the upper and lower radio frequency fields with the frequency that is selected for tuning. Indicates which NAV transceiver is selected for frequency transfer between the Standby and Active fields.
3	Active Fields – The NAV Frequency Box is composed of four fields; the two active frequencies are on the right. An active NAV frequency is displayed in green. The active NAV radio is selected by pressing the CDI softkey on the PFD. Both active NAV frequencies appearing in white indicate that no NAV radio is selected.
4	Selected Tuning Frequency – The frequency selected for tuning is cyan and moves between the upper and lower radio frequency fields with the Frequency Transfer Arrow. Indicates which standby NAV frequency is selected for tuning.
5	VOR/LOC Morse Code Audio Indication – When the Morse Code Identifier audio is on for a NAV radio, a white ID replaces the Frequency Transfer Arrow to the left of the active NAV frequency. In order to listen to either station identifier, press the NAV1 or NAV2 Key on the Audio Panel. Pressing the VOL/ID Knob turns on/off the Morse code audio only in the radio with the NAV Tuning Box. To turn on/off both NAV IDs, transfer the NAV Tuning Box between NAV1 and NAV2 by pressing the small NAV Knob and pressing the VOL/ID Knob again to turn the Morse code off in the other radio.
6	Decoded Morse Code Station Identifier – The NAV Frequency Box displays the decoded Morse Code station identifier that is received from the navigation source. Audio verification of the selected station identifier is still required, and can be accomplished by selecting the corresponding NAV radio on the audio panel and pressing the NAV VOL/ID Knob.
7	NAV VOLUME – NAV radio volume level can be adjusted from 0 to 100% using the VOL/SQ Knob. Turning the knob clockwise increases volume, turning the knob counterclockwise decreases volume. When adjusting volume, the level is displayed in place of the standby frequencies. Volume level indication remains for two seconds after the change.

NAV RADIO SELECTION AND ACTIVATION

The NAV Frequency Box is composed of four fields; two standby fields and two active fields. The active frequencies are on the right side and the standby frequencies are on the left.

A NAV radio is selected for navigation by pressing the **CDI** Softkey located on the PFD. The active NAV frequency selected for navigation is displayed in green. Pressing the **CDI** Softkey once selects NAV1 as the navigation radio. Pressing the **CDI** Softkey a second time selects NAV2 as the navigation radio. Pressing the **CDI** Softkey a third time activates GPS mode. Pressing the **CDI** Softkey again cycles back to NAV1.

While cycling through the **CDI** Softkey selections, the selected NAV standby frequency is selected for tuning, the Frequency Transfer Arrow is placed in the selected NAV Frequency Field, and the active NAV frequency color changes to green.

The three navigation modes that can be cycled through are:

- **VOR1 (or LOC1)** – If NAV1 is selected, a green single line arrow (not shown) labeled either VOR1 or LOC1 is displayed on the HSI and the active NAV1 frequency is displayed in green.
- **VOR2 (or LOC2)** – If NAV2 is selected, a green double line arrow (shown) labeled either VOR2 or LOC2 is displayed on the HSI and the active NAV2 frequency is displayed in green.
- **GPS** – If GPS Mode is selected, a magenta single line arrow (not shown) appears on the HSI and neither NAV radio is selected. Both active NAV frequencies are then displayed in white and the previously selected NAV standby frequency remains selected for tuning.

See the Flight Instruments Section for selecting the DME and Bearing Information windows and using VOR as the source for the bearing pointer.

The NAV Frequency Box displays the decoded Morse Code station identifier that is received from the navigation source. Audio verification of the selected station identifier is still required, and can be accomplished by selecting the corresponding NAV radio on the audio panel and pressing the **NAV VOL/ID** Knob.

NAV radios are selected for listening by pressing the corresponding keys on the Audio Panel. Pressing the **NAV1**, **NAV2**, or **AUX** Key selects and deselects the navigation radio source. Selected audio can be heard over the headset and the speakers (if selected). All radios can be selected individually or simultaneously.

NAV RECEIVER MANUAL TUNING

The NAV frequency controls and frequency boxes are on the upper left side of the MFD.

Manually tuning a NAV frequency:

- 1) Rotate the **NAV** Knob to tune the desired frequency in the NAV Tuning Box.
- 2) Press the **Frequency Transfer** Key to transfer the frequency to the NAV Active Frequency Field.
- 3) Adjust the volume level with the NAV **VOL/ID** Knob.
- 4) Press the NAV **VOL/ID** Knob to turn the Morse code identifier audio on and off.

Manually tuning a NAV frequency from the Control Unit:

- 1) Press the **NAV** Key to select the NAV frequency box.
- 2) Turn the **COM/NAV CRS/XPDR** Knob to tune the desired frequency in the NAV Tuning Box (large knob for MHz; small knob for kHz).
- 3) Press the **Frequency Transfer** Key to transfer the frequency to the active field.

AUTO-TUNING A NAV FREQUENCY FROM THE MFD

NAV frequencies can be selected and loaded from the following MFD pages:

- WPT – Airport Information
- WPT – VOR Information
- NRST – Nearest Airports
- NRST – Nearest VOR
- NRST – Nearest Frequencies (FSS, WX)
- NRST – Nearest Airspaces

The MFD provides auto-tuning of NAV frequencies from waypoint and nearest pages. During enroute navigation, the NAV frequency is entered automatically into the NAV standby frequency field. During approach activation the NAV frequency is entered automatically into the NAV active frequency field.

Frequencies can be automatically loaded into the NAV Frequency Box from pages in the NRST or WPT page group by highlighting the frequency and pressing the ENT Key.

Auto-tuning a NAV frequency from the WPT and NRST Pages:

- 1) From any page that the NAV frequency can be auto-tuned, activate the cursor by pressing the **FMS** Knob, or by pressing the appropriate softkey.
- 2) Turn the **FMS** Knob to place the cursor on the desired NAV identifier or NAV frequency.
- 3) Press the **ENT** Key to display the Load Frequency options window.
- 4) Turn the **FMS** Knob to select the desired NAV radio field in which to load the frequency.
- 5) Press the **ENT** Key to load the NAV frequency into the selected NAV radio field.

Or:

- 1) When on the NRST pages, press the **MENU** Key to display the page menu.
- 2) Turn the large **FMS** Knob to scroll through the menu options.
- 3) Press the **ENT** Key to place the cursor in the desired window.
- 4) Scroll through the frequency selections with the **FMS** Knob.
- 5) Press the **ENT** Key to display the Load Frequency options window.

- 6) Turn the **FMS** Knob to select the desired NAV radio field in which to load the frequency.
- 7) Press the **ENT** Key to load the NAV frequency into the selected NAV radio field.


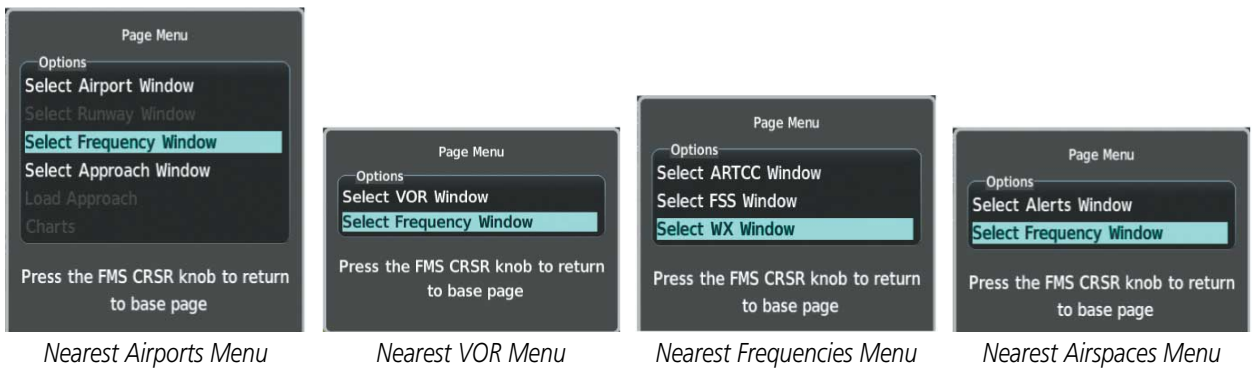


Figure 4-11 Nearest Pages Menu

In the example shown, the VOR list is selected with the VOR Softkey or from the page menu. The FMS Knob or ENT Key is used to scroll through the list. The cursor is placed on the frequency with the FREQ Softkey and loaded into the NAV Tuning Box with the ENT Key.

NAV Frequency Loads into selected Frequency Field

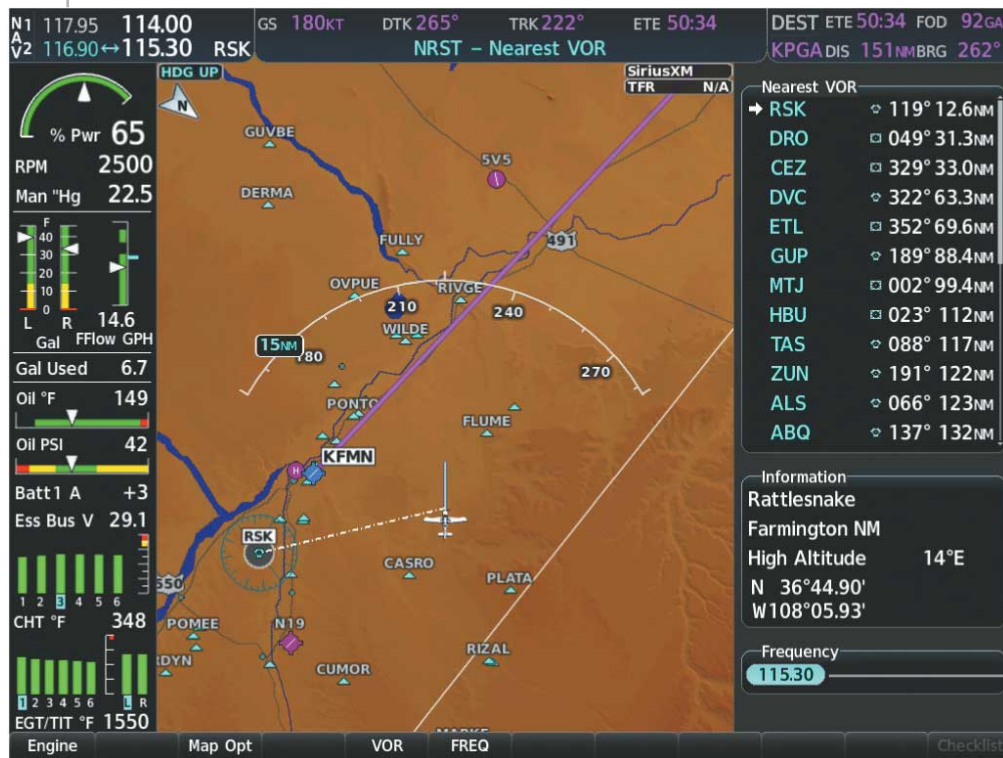

Press **ENT** Key to display the Load Frequency Options Menu.

Press the **VOR** Softkey to Place the Cursor on the VOR Identifier

Press the **FREQ** Softkey to Place the Cursor on the VOR Frequency

Use the **FMS** Knob to select the desired NAV radio field in which to load the frequency, and then Press the **ENT** Key.

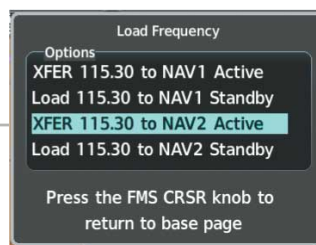


Figure 4-12 Loading the NAV Frequency from the NRST – Nearest VOR Page

While enroute, NAV frequencies can also be auto-tuned from the NRST — Nearest Airports, WPT — Airport Information, WPT — VOR Information, and NRST — Nearest Frequencies Pages on the MFD in a similar manner using the appropriate softkeys or MENU Key, the FMS Knob, and the ENT Key.

AUTO-TUNING NAV FREQUENCIES ON APPROACH ACTIVATION

NOTE: The primary NAV frequency is auto-tuned upon loading a VOR or ILS/Localizer approach.

NOTE: When an ILS/LOC approach has been activated while navigating by GPS, the system automatically switches to LOC as the final approach course is intercepted (within 15 nm of the FAF). See the Flight Management Section for details.

NAV frequencies are automatically loaded into the NAV Frequency Box on approach activation.

When loading or activating a VOR or ILS/LOC approach, the approach frequency is automatically transferred to a NAV frequency field as follows:

- If the current CDI navigation source is GPS, the approach frequency is transferred to the NAV1 active frequency field. The frequency that was previously in the NAV1 active frequency field is transferred to standby.
- If the current CDI navigation source is GPS, and if the approach frequency is already loaded into the NAV1 standby frequency field, the standby frequency is transferred to active.
- If the current CDI navigation source is NAV1 or NAV2, the approach frequency is transferred to the standby frequency fields of the selected CDI NAV radio.

MARKER BEACON RECEIVER

NOTE: The marker beacon indicators operate independently of marker beacon audio and cannot be turned off.

The marker beacon receiver is used as part of the ILS. The marker beacon receiver is always on and detects any marker beacon signals within the reception range of the aircraft.

The receiver detects the three marker tones – outer, middle, and inner – and provides the marker beacon annunciations located on the Audio Panel and to the left of the Altimeter on the PFD.



Figure 4-13 Marker Beacon Key and Annunciator Lights

The Audio Panel provides three different states of marker beacon operation; On, Muted, and Deselected. Pressing the MKR/MUTE Key selects and deselects marker beacon audio. The key annunciator indicates when marker beacon audio is selected. Marker beacon audio is not heard when the annunciator is off or when the annunciator is on with the marker beacon audio muted.

During marker beacon audio reception, pressing the MKR/MUTE Key mutes the audio but does not affect the marker annunciations. The marker tone is silenced, then waits for the next marker tone. The MKR/MUTE Key Annunciator is illuminated, indicating audio muting. The audio returns when the

next marker beacon signal is received. If the MKR/MUTE Key is pressed during signal reception (O, M, I indication) while marker beacon audio is muted, the audio is deselected and the MKR/MUTE Key Annunciator is extinguished.

Pressing the HI SENS Key switches between high and low marker beacon receiver sensitivity. The HI SENS function (annunciator illuminated) is used to provide an earlier indication when nearing a marker during an approach. The LO SENS function (annunciator extinguished) results in a narrower marker dwell while over a station.

DME TUNING

NOTE: When another auxiliary window is turned on, the DME Tuning Window is replaced on the PFD.

NOTE: When turning on the system for use, the system will remember the last frequency used for DME tuning and the NAV1, NAV2, or HOLD state prior to shutdown.

The PFD tunes the optional DME transceiver. The UHF DME frequency is tuned by pairing with a VHF NAV frequency. DME frequency pairing is automatic and only the VHF NAV frequency is shown.

The DME Tuning Window is located to the right of the HSI in the lower right corner of the PFD. The DME transceiver is tuned by selecting NAV1, NAV2, or HOLD in the DME Tuning Window. Pressing the DME Softkey switches the DME Tuning Window on and off

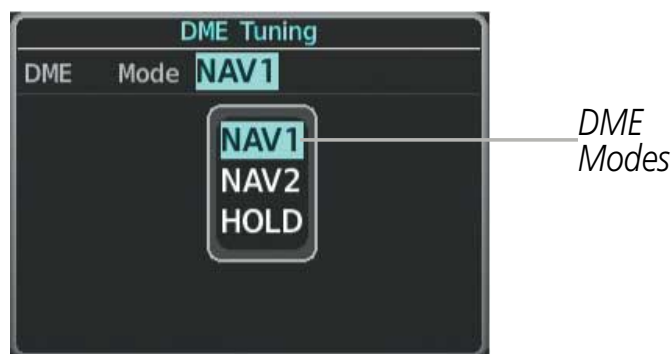


Figure 4-14 DME Tuning Window

The following DME transceiver pairing can be selected:

- NAV1 – Pairs the DME frequency from the selected NAV1 frequency.
- NAV2 – Pairs the DME frequency from the selected NAV2 frequency.
- HOLD – When in the HOLD position, the DME frequency remains paired with the last selected NAV frequency.

Pressing the CLR Key or FMS Knob while in the process of DME pairing cancels the data entry and reverts back to the previously selected DME tuning state. Pressing the FMS Knob activates/deactivates the cursor in the DME Tuning Window.

See the Flight Instruments Section for displaying the DME information window.

Selecting DME transceiver pairing:

- 1) Press the **DME** Softkey to display the DME Tuning Window.
- 2) Turn the small **FMS** Knob to select the DME tuning mode.
- 3) Press the **ENT** Key to complete the selection.

4.4 MODE S TRANSPONDER

The system is equipped with a Mode S Transponder. The Mode S Transponder provides Mode A, Mode C, and Mode S interrogation and reply capabilities. Selective addressing or Mode Select (Mode S) capability includes the following features:

- Level-2 reply data link capability (used to exchange information between aircraft and ATC facilities)
- Surveillance identifier capability
- Flight ID (Flight Identification) reporting – The Mode S Transponder reports aircraft identification as either the aircraft registration or a unique Flight ID.
- Altitude reporting
- Airborne status determination
- Transponder capability reporting
- Mode S Enhanced Surveillance (EHS) requirements
- Acquisition squitter – Acquisition squitter, or short squitter, is the transponder 24-bit identification address. The transmission is sent periodically, regardless of the presence of interrogations. The purpose of acquisition squitter is to enable Mode S ground stations and aircraft equipped with a Traffic Avoidance System (TAS) to recognize the presence of Mode S equipped aircraft for selective interrogation.
- Extended squitter – The extended squitter is transmitted periodically and contains information such as altitude (barometric and GPS), GPS position, and aircraft identification. The purpose of extended squitter is to provide aircraft position and identification to ADS-B Ground-Based Transceivers (GBTs) and other aircraft.

The Hazard Avoidance Section provides more details on traffic avoidance systems.

TRANSPONDER CONTROLS

Transponder function is displayed on three levels of softkeys on the PFD: Top-level, Mode Selection, and Code Selection. When the top-level **XPDR** Softkey is pressed, the following **XPDR** and Mode Selection softkeys appear: **Standby**, **On**, **ALT**, **VFR**, **Code**, **Ident**, **Back**.

When the **Code** Softkey is pressed, the number softkeys appear: **0**, **1**, **2**, **3**, **4**, **5**, **6**, **7**, **Ident**, **BKSP**, **Back**. The digits 8 and 9 are not used for code entry. Pressing the numbered softkeys in sequence enters the transponder code. If an error is made, pressing the **BKSP** Softkey moves the code selection cursor to the previous digit. Pressing the **BKSP** Softkey again moves the cursor to the next previous digit.

Pressing the **Back** Softkey during code selection reverts to the Mode Selection Softkeys. Pressing the **Back** Softkey during mode selection reverts to the top-level softkeys.

The code can also be entered with the **FMS** Knob on the PFD. Code entry must be completed with either the softkeys or the **FMS** Knob, but not a combination of both.

Pressing the **Ident** Softkey while in Mode or Code Selection initiates the ident function and reverts to the top-level softkeys.

After 45 seconds of transponder control inactivity, the system reverts back to the top-level softkeys.

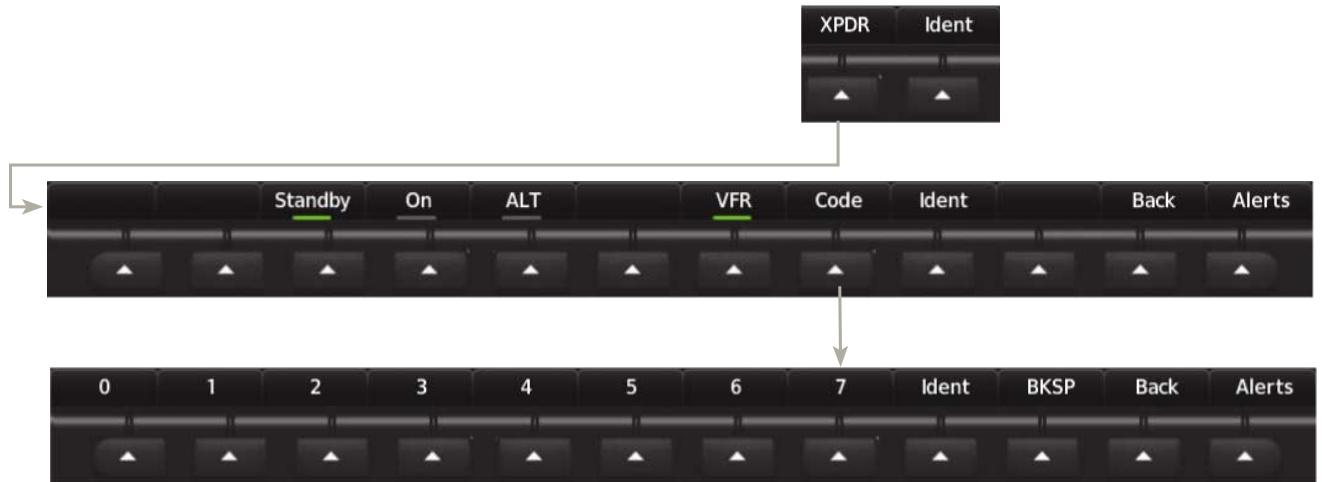


Figure 4-15 XPDR Softkeys (PFD)

TRANSPONDER MODE SELECTION

Mode selection can be automatic (Altitude Mode) or manual (Standby, ON, and Altitude Modes). The Standby, On, and ALT Softkeys can be accessed by pressing the XPDR Softkey.

STANDBY MODE (MANUAL)

NOTE: In Standby Mode, the IDENT function is inhibited.

Standby Mode can be selected at any time by pressing the Standby Softkey. In Standby, the transponder is powered and new codes can be entered, but no replies or squitters are transmitted.. When Standby is selected, a white STBY indication and transponder code appear in the mode field of the Transponder Data Box.



Figure 4-16 Standby Mode

MANUAL ON MODE

On Mode can be selected at any time by pressing the On Softkey. An On indication will appear in the mode field of the Transponder Data Box. Selecting On mode enables transmission of transponder replies and squitters, but transmissions will not include altitude information. The On indication and transponder code in the Transponder Data Box will appear green while airborne and white while on the ground. When the transponder is operating with an air state of on-ground it will disable replies to Mode A, Mode C, and Mode S all-call interrogations so the aircraft will not show up on the traffic systems of other aircraft.

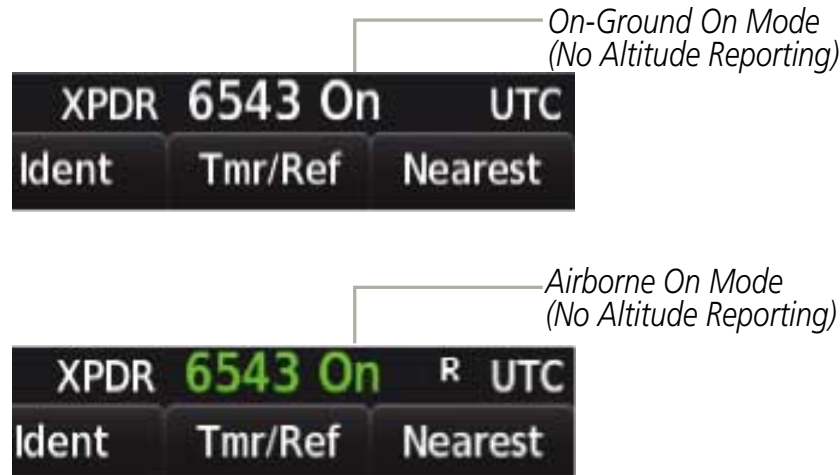


Figure 4-17 On Mode

ALTITUDE MODE

ALT Mode can be selected at any time by pressing the ALT Softkey. When ALT mode is selected, an ALT indication will appear in the mode field of the Transponder Data Box. Selecting ALT mode enables transmission of transponder replies and squitters. Transmissions will include pressure altitude information. The ALT indication and transponder code in the Transponder Data Box will appear green while airborne and white while on the ground. When the transponder is operating with an air state of on-ground it will disable replies to Mode A, Mode C, and Mode S all-call interrogations so the aircraft will not show up on the traffic systems of other aircraft.

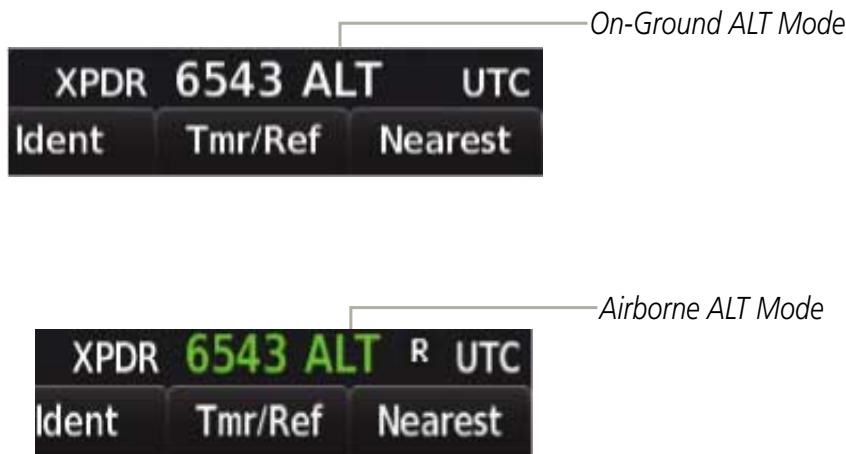


Figure 4-18 Altitude Mode

REPLY STATUS

When the transponder sends replies to interrogations, a white R indication appears momentarily in the reply status field of the Transponder Data Box.

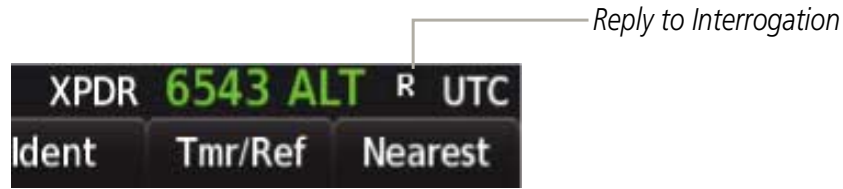


Figure 4-19 Reply Indication

Selecting a transponder mode:

- 1) Press the **XPDR** Softkey to display the Transponder Mode Selection Softkeys.
- 2) Press the desired softkey to activate the transponder mode.

ENTERING A TRANSPONDER CODE

Pressing the CLR Key or small FMS Knob before code entry is complete cancels code entry and restores the previous code. Waiting for 10 seconds after code entry is finished activates the code automatically.

VFR CODE

The VFR code can be entered either manually or by pressing the **XPDR** Softkey, then the **VFR** Softkey. When the **VFR** Softkey is pressed, the pre-programmed VFR code is automatically displayed in the code field of the Transponder Data Box. Pressing the **VFR** Softkey again restores the previous identification code.

The pre-programmed VFR Code is set at the factory to 1200. If a VFR code change is required, contact a Garmin-authorized service center for configuration.



Figure 4-20 VFR Code

Entering a transponder code with softkeys:

- 1) Press the **XPDR** Softkey to display the Transponder Mode Selection Softkeys.
- 2) Press the **CODE** Softkey to display the Transponder Code Selection Softkeys, for digit entry.
- 3) Press the digit softkeys to enter the code in the code field. When entering the code, the next softkey in sequence must be pressed within 10 seconds, or the entry is cancelled and restored to the previous code. Pressing the **BKSP** Softkey moves the code selection cursor to the previous digit. Five seconds after the fourth digit has been entered, the transponder code becomes active.



Figure 4-21 Entering a Code

Entering a transponder code with the PFD FMS Knob:

- 1) Press the **XPDR** and the **CODE** Softkeys as in the previous procedure to enable code entry.
- 2) Turn the small **FMS** Knob on the PFD to enter the first two code digits.
- 3) Turn the large **FMS** Knob to move the cursor to the next code field.
- 4) Enter the last two code digits with the small **FMS** Knob.
- 5) Press the **ENT** Key to complete code digit entry.

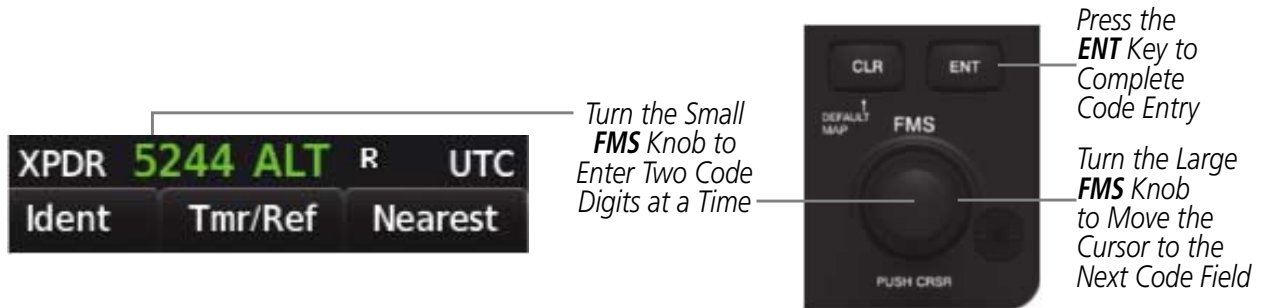


Figure 4-22 Entering a Code with the FMS Knob

Entering a transponder code with the Control Unit FMS Knob

- 1) Press the **XPDR** and the **Code** Softkeys on the PFD.
- 2) Turn the small **FMS** Knob to enter the first two code digits.
- 3) Turn the large **FMS** Knob to move the cursor to the next code field.
- 4) Enter the last two code digits with the small **FMS** Knob.
- 5) Press the **ENT** Key to complete code digit entry.

IDENT FUNCTION

NOTE: In Standby Mode, the Ident Softkey is inoperative.

Pressing the PFD **Ident** Softkey or Control Unit **Ident** key sends a distinct identity indication to Air Traffic Control (ATC). The indication distinguishes the identifying transponder from all the others on the air traffic controller's screen. The PFD **Ident** Softkey appears on all levels of transponder softkeys. When the **Ident** Softkey is pressed, a green **Ident** indication is displayed in the PFD mode field of the

Transponder Data Box for a duration of 18 seconds. A white **Ident** indicator is displayed on the Control Unit.

After the **Ident** Softkey is pressed, the system reverts to the top-level softkeys.

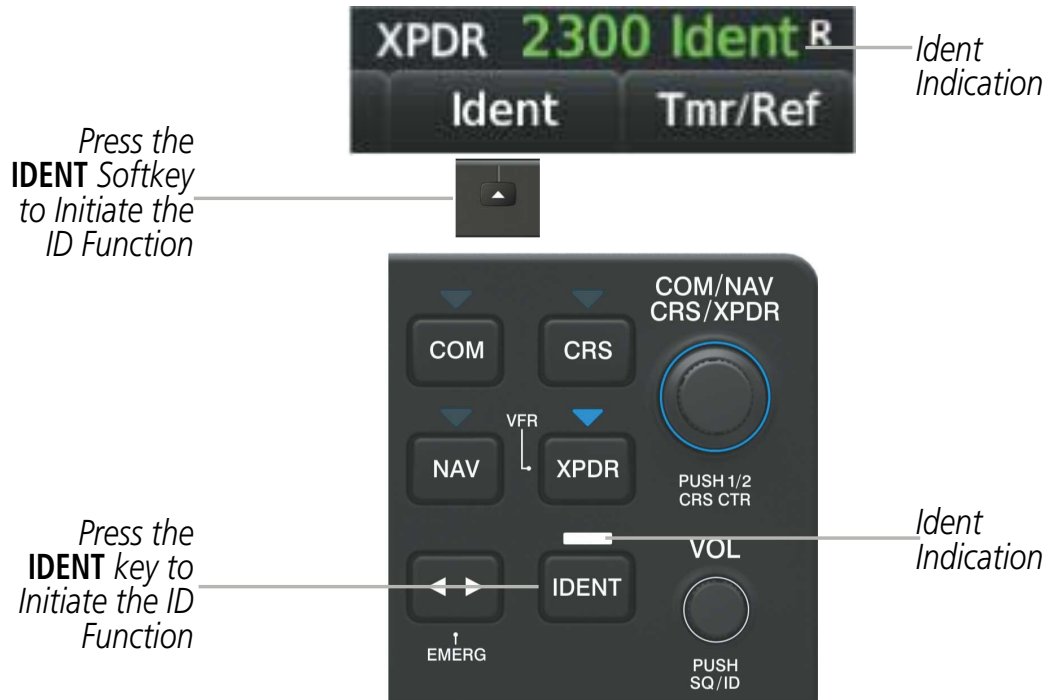


Figure 4-23 Ident Softkey and Indications

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CNS**
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

4.5 ADDITIONAL AUDIO PANEL OPERATIONS

POWER-UP

The Audio Panel performs a self-test during power-up. During the self-test all Audio Panel annunciator lights illuminate for approximately two seconds. Once the self-test is completed, most of the settings are restored to those in use before the unit was last turned off.

MONO/STEREO HEADSETS

Stereo headsets are recommended for use in this aircraft.

Using a monaural headset in a stereo jack shorts the right headset channel output to ground. While this does not damage the Audio Panel, a person listening on a monaural headset hears only the left channel in both ears. If a monaural headset is used at one of the passenger positions, any other passenger using a stereo headset hears audio in the left ear only.

SPEAKER

All of the radios can be heard over the cabin speaker. Pressing the **SPKR** Key selects and deselects the cabin speaker. Speaker audio is muted when the PTT is pressed.

PASSENGER ADDRESS MODE (PA MODE)

Press and hold the **SPKR** Key for 2 seconds to initiate Passenger Address Mode. PA Mode is annunciated by a rapid blinking of the **SPKR** annunciator. When in PA Mode the crew can use the PTT “Push-to-Talk” button to deliver announcements over the speaker, to the passenger headsets, or both depending on configuration.

SPLIT-PA MODE

During Split-PA Mode the pilot can continue to use the radio(s) while the copilot delivers PA announcements. To initiate Split-PA Mode, first enter Split-COM Mode by pressing more than one **MIC** Key simultaneously, then press and hold the **SPKR** Key for 2 seconds.

CLEARANCE RECORDER AND PLAYER

The Audio Panel contains a digital clearance recorder that records up to 2.5 minutes of the selected COM radio signal. Recorded COM audio is stored in separate memory blocks. Once 2.5 minutes of recording time have been reached, the recorder begins recording over the stored memory blocks, starting from the oldest block.

The **PLAY** Key controls the play function. Pressing the **PLAY** Key once plays the latest recorded memory block. Pressing the **PLAY** Key while audio is playing begins playing the previously recorded memory block. Each subsequent press of the **PLAY** Key selects the previously recorded memory block.

Pressing the **MKR/MUTE** Key during play of a memory block stops play. If a COM input signal is detected during play of a recorded memory block, play is halted.

Powering off the unit automatically clears all recorded blocks.

INTERCOM

The GMA 350 includes a six-position intercom system (ICS), one music input, and one telephone/entertainment input for the pilot, copilot and passengers. The intercom provides Pilot, Copilot, and Passenger audio isolation.



Figure 4-24 Intercom Controls

Press the PILOT, COPLT, and/or PASS Keys to distribute as required. If the annunciators are lit, those positions will share intercom audio. If an annunciator is NOT lit that position is isolated from the others.

COPILOT CONFIGURED AS CREW OR PASSENGER

NOTE: When the copilot position is configured as a passenger, the **COPLT** Key is disabled and the copilot headset is treated as a 'passenger' for intercom and entertainment audio distribution.

The copilot position can be configured as crew (COPLT Key enabled) or as a passenger (COPLT Key disabled). Pressing and holding the COPLT Key toggles the copilot position configuration between passenger and crew. The aural message “Copilot Configured as Passenger” or “Copilot Configured as Crew” is heard.

INTERCOM MODES

NOTE: In the following modes the copilot position is configured as crew.

ALL INTERCOM MODE

In 'All Intercom' mode the Pilot, Copilot, and Passengers hear each other and hear the aircraft audio.



PILOT ISOLATE MODE

In 'Pilot Isolate' mode the Pilot, Copilot, and Passengers hear the aircraft audio. The Copilot and Passengers also hear each other.




PASSENGER/CREW ISOLATE MODE

In ‘Passenger/Crew Isolate’ mode the Pilot and Copilot hear the aircraft audio and each other. The Passengers hear each other.




COPILOT ISOLATE MODE

In ‘Copilot Isolate’ mode the Pilot, Copilot, and Passengers hear the aircraft audio. The Pilot and Passengers also hear each other. The Copilot has the option to use Split-COM mode.



ALL ISOLATE MODE

In ‘All Isolate’ mode the Pilot and Copilot hear the aircraft audio. The Copilot has the option to use Split-COM mode. The Passengers hear each other.



PILOT & COPILOT ISOLATE MODE

In ‘Pilot & Copilot Isolate’ mode the Pilot, Copilot, and Passengers hear the aircraft audio. The Passengers hear each other. The Copilot has the option to use Split-COM mode.




PILOT & PASSENGER ISOLATE MODE

In ‘Pilot & Passenger Isolate’ mode the Pilot and Copilot hear the aircraft audio. The Passengers hear each other.



COPILOT & PASSENGER ISOLATE MODE

In ‘Copilot & Passenger Isolate’ mode the Pilot and Copilot can hear the aircraft audio. The Copilot has the option to use Split-COM mode. The Passengers hear each other.



BLUE-SELECT MODE (TELEPHONE/ENTERTAINMENT DISTRIBUTION)

The music (MUSIC) and telephone/entertainment (🎵) audio are distributed using the Blue-Select Mode. The following example indicates that the pilot, copilot, and passengers will all hear the telephone/entertainment audio.



Figure 4-25 Blue-Select Mode (Telephone/Entertainment Distribution)

The Blue-Select Mode is entered by pressing the small knob when the volume control cursor (flashing white annunciator) is not active. If the volume control cursor is active, press the small knob twice. The first press will cancel the volume control cursor, the second will activate Blue-Select Mode.

The annunciator over the 🎵 Button will be flashing blue. Any combination of the annunciators over the PILOT, COPLT, and PASS buttons may be blue. Select the desired button to turn the blue annunciator on or off to distribute the telephone audio to selected crew/passenger positions. Turn the large knob to select MUS, and select the crew/passenger positions to receive the music audio.

Selecting any button other than PILOT, COPLT, PASS, MUS or 🎵 will cancel Blue-Select Mode. Pressing the small knob will also cancel Blue-Select Mode. After approximately ten seconds with no input, the Blue-Select Mode will automatically cancel.

ADJUSTING INTERCOM VOLUME

When the cursor is on PILOT, COPLT, or PASS, the Volume Control Knob adjusts the intercom volume for the listener.

ADJUSTING SPEAKER VOLUME

When the cursor is on SPKR, the Volume Control Knob adjusts the speaker volume of the selected sources (COM, NAV, AUX, MKR). Alert volumes are not affected by the speaker volume control knob.

ADJUSTING MKR, AUX, 🎵, AND MUS VOLUME

When the cursor is on MKR, AUX, 🎵, MUS1, or MUS2 the Volume Control Knob adjusts the individual volume of the selected source.

ADJUSTING MANUAL SQUELCH

When the cursor is on MAN SQ, the Volume Control Knob adjusts the ICS Squelch Threshold (the volume level that must be exceeded to be heard over the intercom).



Figure 4-26 Volume/Squelch Control

SPLIT-COM OPERATION

NOTE: Split COM performance is affected by the distance between the COM antennas and the separation of the tuned frequencies. If the selected COM1 and COM2 frequencies are too close together, interference may be heard during transmission on the other radio.

During Split COM operation, both the pilot and the copilot can transmit simultaneously over separate radios. In Split COM mode, the pilot uses COM1 and the copilot uses COM2.

Pressing both MIC Keys simultaneously initiates Split COM Mode (i.e., COM1/COM2). The respective COM1/MIC1 or COM2/MIC2 annunciators are illuminated indicating Split COM operation. Split COM operation is cancelled by pressing one of the selected MIC Keys again.

ENTERTAINMENT INPUTS

The audio panel provides three stereo telephone/entertainment inputs:

- The telephone/entertainment Key (🎵) controls a telephone or entertainment device connected to the rear of the audio panel or to the Front Panel Jack. For GSR 56 equipped aircraft, the Iridium phone audio is connected to the rear input of the audio panel. To use the Iridium phone, ensure there is no other audio source plugged into the Front Panel Jack.
- The MUS1 and MUS2 Key controls the Entertainment Music audio input. External audio jacks can also be used as an entertainment input. GDL 69 (SiriusXM Radio) audio, if equipped, is wired to the MUS1 and MUS2 inputs. The Front Panel Jack does not disable audio connected to the MUS1 and MUS2 inputs.

The Front Panel Jack can be used as an entertainment input or a telephone input. Plugging a device into the Front Panel Jack will disable any audio source connected to the rear telephone/entertainment jack (i.e. GSR 56, if so equipped). The Front Panel Jack is a 3.5-mm stereo jack that is compatible with popular portable entertainment devices such as cell phones and other tablet devices. The headphone outputs of the entertainment devices are plugged into the Front Panel Jack.

Distribution of the entertainment inputs are configured in Blue-Select Mode.

TELEPHONE AND ENTERTAINMENT MUTING

Telephone and entertainment muting can be enabled or disabled by the user, however it is always muted during alerts.

ENABLING/DISABLING MUTING

Press and hold the MUS1, MUS2, or (🎵) Key for two seconds to toggle muting on and off. The aural message “Mute Music on Reception Enabled/Disabled” or “Mute Tel and Jack on Reception Enabled/Disabled” is heard.

SIRIUSXM RADIO ENTERTAINMENT

SiriusXM Radio audio from the Data Link Receiver may be heard by the pilot and passengers simultaneously (optional: requires subscription to SiriusXM Radio Service). Refer to the Additional Features Section for more details on the Data Link Receiver.


Connecting a stereo input to the Stereo Input jack removes the SiriusXM Radio Audio from that input.

3D AUDIO

3D Audio is useful when multiple audio sources are present. By using different responses in each ear, 3D audio processing creates the illusion that each audio source is coming from a unique location or seat position.

Because this feature uses different signals for left and right channels, it requires wiring for stereo intercom and stereo headsets. If 3D audio is activated when mono headsets are in use, the listener will still hear all audio sources; however, there is no benefit from location separation.

With a single COM selected and 3D Audio enabled, the listener hears the audio source at the 12 o'clock position. If both COMs are selected, the listener hears COM1 at 11 o'clock and COM2 at the 1 o'clock position. All other intercom positions are processed to sound like their relative seat location. By default, the GMA 350Hc assumes the pilot sits in the right seat. A Garmin authorized service center can make changes to the default configuration.

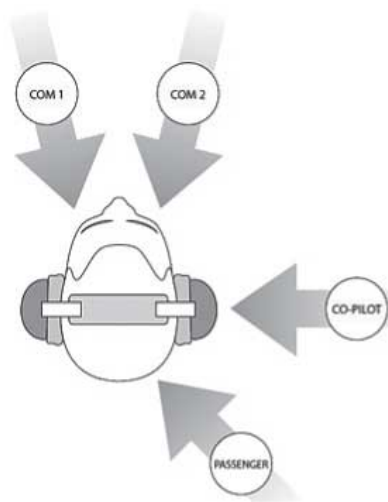

ENABLING 3D AUDIO


Press and hold the PILOT Key to toggle 3D audio processing on and off for all headset positions. When 3D Audio is enabled, the aural message “3D audio left” is heard in the left ear followed by “3D audio right” in the right ear. If the aural messages are not heard in only the left and then the right ear respectively, the cause may be aircraft wiring or headset settings. Refer to the following table if a headset or aircraft wiring problem is suspected.

Symptom(s)	Cause(s)	Solutions(s)
“3D audio left” message heard in both ears. Or: “3D audio right” message not heard	1) Mono headset in use	1) Use a stereo headset
	2) Stereo headset in use with mono/stereo switch set to ‘mono’	2) Set mono/stereo switch on headset to ‘stereo’
	3) Aircraft wiring has left audio wired to both left and right channels of stereo headset jack	3) If after checking solutions #1 and #2 see a service center as soon as possible to inspect/correct wiring. This wiring fault can cause fail-safe audio not to function.
“3D audio left” message heard in both ears, followed by “3D audio right” message heard in both ears	1) Mono headset in use	1) Use a stereo headset
	2) Stereo headset in use with mono/stereo switch set to mono	2) Set mono/stereo switch on headset to ‘stereo’
	3) Incorrect aircraft wiring (left/right shorted together)	3) If after checking solutions #1 and #2 see a service center as soon as possible to inspect/correct wiring. This wiring fault can cause fail-safe audio not to function.
“3D audio right” message heard in both ears. “3D audio left” not heard	1) Incorrect aircraft wiring (right channel used for mono instead of left or left/right swapped)	1) See a service center as soon as possible to inspect/correct wiring. This wiring fault can cause fail-safe audio not to function.
“3D audio left” message heard in right ear only followed by “3D audio right” message heard in left ear only	1) Stereo headset is on backwards	1) Verify correct orientation from the left/right indication on each side of the headset or the position of the boom mic (usually attached on left side). If the headset is backwards left/right position information will be swapped.
	2) Incorrect aircraft wiring (left/right channels swapped)	2) See a service center as soon as possible to inspect/correct wiring. This wiring fault can cause fail-safe audio not to function.

Symptom(s)	Cause(s)	Solutions(s)
"3D audio left" message heard in left ear only, no audio heard in right ear.	1) Aircraft wired for mono intercom	1) See a service center to wire the installation for stereo headsets.
"3D audio right" message heard in right ear only, no audio heard in left ear	1) Incorrect aircraft wiring (right channel used for mono instead of left, or left/right swapped)	1) See a service center as soon as possible to inspect/correct wiring. This wiring fault can cause fail-safe audio not to function.

Table 4-1 3D Audio Troubleshooting


BLUETOOTH® (GMA 350C ONLY)


 **NOTE:** Pairing is only necessary during the first attempt to connect a Bluetooth device to the GMA 350c. Once paired, the GMA 350c and the device will connect automatically.

PAIRING A BLUETOOTH DEVICE WITH THE GMA 350C

Press and hold the inner knob for two seconds. The Bluetooth Annunciator flashes to indicate the unit is discoverable and the aural message "Bluetooth discoverable" is heard. The GMA 350c will remain discoverable for 90 seconds or until a successful pair is established. Once paired, the Bluetooth Annunciator turns steady blue and the aural message "Bluetooth connected/paired" is heard.

ASSIGNING AN AUDIO SOURCE TO THE BLUETOOTH DEVICE

Press the  or MUS key until the annunciator turns blue (the audio from the Bluetooth source will not be heard until this step is complete). The key annunciator cycles OFF-WHITE-BLUE. WHITE selects the wired audio source. BLUE selects the Bluetooth audio source. The BLUE source assignment will persist through Bluetooth audio connection disruptions.

 **NOTE:** The Bluetooth audio can only be assigned to one source at a time. Once the Bluetooth audio is assigned to an audio source, the remaining entertainment audio sources will only cycle between OFF and WHITE.

Bluetooth audio will maintain a separate volume level and Blue Select distribution from the wired audio source. If the Bluetooth connection is supporting a phone call, all intercom positions listening to that source can also speak on the call through the headset MICs.

ADDITIONAL BLUETOOTH CONTROL FUNCTIONS


In addition to the 2 second press and hold of the inner knob discussed above, the knob has two additional functions that are intended to be seldom or never used. The following functions are available if needed for troubleshooting:


- Press and hold the inner knob for 5 seconds to turn off the Bluetooth radio. The aural message "Bluetooth off" is heard. This function electrically turns off the radio, not just the audio source selection. In the event that Bluetooth radio interference with communication or navigation

equipment is suspected, the Bluetooth radio can be powered off without powering off the entire audio panel. A subsequent 5 second press and hold turns the radio back on.

- Press and hold the inner knob for 10 seconds to clear the memory of paired devices (up to 10 are stored). Once cleared, the aural message “**Bluetooth list cleared**” is heard. This function is used as a troubleshooting method when a device is not pairing, or to remove a device that is no longer needed.

4.6 AUDIO PANEL PREFLIGHT PROCEDURE


 **NOTE:** If the pilot and/or copilot are using headsets that have a high/low switch or volume control knob, verify that the switch is in the high position and the volume control on the headsets are at maximum volume setting. On single pilot flights, verify that all other headsets are not connected to avoid excess noise in the audio system.

 **NOTE:** When the **MAN SQ** Key is pressed, the ICS squelch can be set manually by the pilot and copilot. If manual squelch is set to full open, background noise is heard in the ICS system as well as during COM transmissions.

After powering up the system, the following steps aid in maximizing the use of the Audio Panel as well as prevent pilot and copilot induced issues. These preflight procedures should be performed each time a pilot boards the aircraft to insure awareness of all audio levels in the Audio Panel and radios.

Once this procedure has been completed, the pilot and copilot can change settings, keeping in mind the notes above.

Setting the Audio Panel During Preflight:

- 1) Verify that the PILOT, COPLT and PASS annunciators are lit.
- 2) Adjust radio volume levels (COM, NAV) to a suitable level.
- 3) Use the Blue-Select Mode to distribute the telephone/entertainment () , MUS1, and MUS2 appropriately.
- 4) Use the **VOL/CRSR** Knobs to adjust the intercom volumes to the desired level.

4.7 ABNORMAL OPERATION

Abnormal operation of the system includes equipment failures of the system components and failure of associated equipment, including switches and external devices.

STUCK MICROPHONE

If the PTT Key becomes stuck, the COM transmitter stops transmitting after 35 seconds of continuous operation. An alert appears on the PFD to advise the pilot of a stuck microphone.

The MIC Key Annunciator on the Audio Panel flashes as long as the PTT Key remains stuck.

COM TUNING FAILURE

In case of a COM system tuning failure, the emergency frequency (121.500 MHz) is automatically tuned in the radio in which the tuning failure occurred. Depending on the failure mode, an amber X may appear on the frequency display.

AUDIO PANEL FAIL-SAFE OPERATION

If there is a failure of the Audio Panel, a fail-safe circuit connects the pilot's headset (left ear only if stereo) and microphone directly to the COM1 transceiver. Audio is not available on the speaker during Fail-safe operation.

SECTION 5 FLIGHT MANAGEMENT

5.1 INTRODUCTION

The system is an integrated flight, engine, communication, navigation and surveillance system. This section of the Pilot's Guide explains flight management using the system.

The most prominent part of the system are the two full color displays: the Primary Flight Display (PFD) and Multi Function Display (MFD). The information to successfully navigate the aircraft using the GPS sensors is displayed on the PFDs and the MFD. A brief description of the GPS navigation data on the PFD and MFD follows.

Navigation mode indicates which sensor is providing the course data (e.g., GPS, VOR) and the flight plan phase (e.g., Departure (DPRT), Terminal (TERM), Enroute (ENR), Oceanic (OCN), RNAV Approach (LNAV, LNAV+V, L/VNAV, LP, LP+V, LPV), or Missed Approach (MAPR)). L/VNAV, LP, LP+V, and LPV approach service levels are only available with SBAS.

The Inset Map and HSI Map are small versions of the Navigation Map. The Inset Map is displayed in the lower left corner of the PFD (lower right during reversionary mode), and the HSI Map is displayed in the center of the HSI. The Inset Map and the HSI Map may each be referred to as the PFD Map. A PFD Map is displayed by pressing the **Map/HSI** Softkey, pressing the **Layout** Softkey, then pressing either the **Inset Map** or **HSI Map** Softkey. Pressing the **Map Off** Softkey removes the PFD Map.

The Navigation Map displays aviation data (e.g., airports, VORs, airways, airspaces), geographic data (e.g., cities, lakes, highways, borders), topographic data (map shading indicating elevation), and hazard data (e.g., traffic, terrain, weather). The amount of displayed data for the PFD Map can be reduced by pressing the **Map/HSI** Softkey on the PFD, then pressing the **Detail** Softkey. The amount of displayed data for the Navigation Map can be reduced by pressing the **Detail** Softkey on the MFD. The Navigation Map can be oriented three different ways: North Up (NORTH UP), Track Up (TRK UP), or Heading Up (HDG UP).

An aircraft icon is placed on the Navigation Map at the location corresponding to the calculated present position. The aircraft position and the flight plan legs are accurately based on GPS calculations. The basemap upon which these are placed are from a source with less resolution, therefore the relative position of the aircraft to map features is not exact. The leg of the active flight plan currently being flown is shown as a magenta line on the navigation map. The other legs are shown in white.

There are 28 different map ranges available, from 250 feet to 1000 nm. The current range is indicated in the upper left corner of the map and represents the top-to-bottom distance covered by the map. To change the map range on any map, turn the **Joystick** counter-clockwise to zoom in (-, decreasing), or clockwise to zoom out (+, increasing).

The 'Direct To' Window, the 'Flight Plan' Window, the 'Procedures' Window, and the 'Nearest Airports' Window can be displayed in the lower right corner of the PFD. Details of these windows are discussed in detail later in the section.

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CNS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index



Figure 5-1 GPS Navigation Information on the PFD Inset Map



Figure 5-2 GPS Navigation Information on the PFD HSI Map

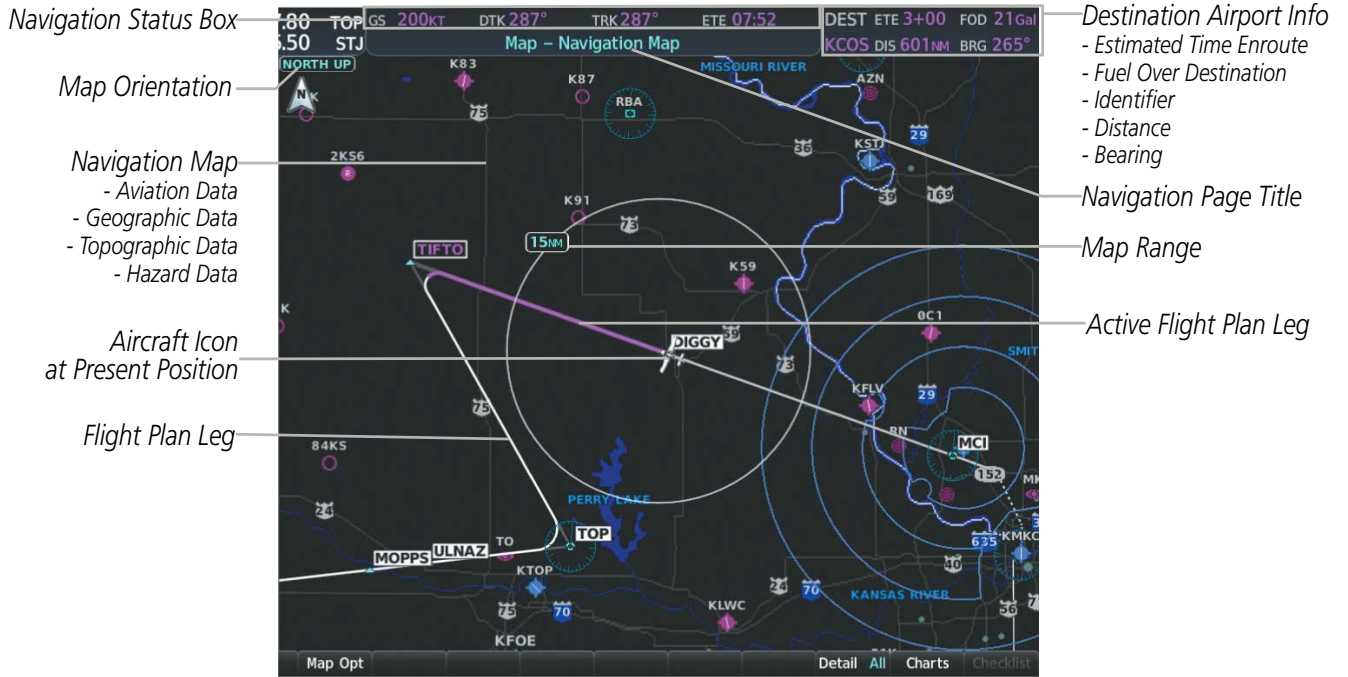


Figure 5-3 GPS Navigation Information on the MFD Navigation Page

NAVIGATION STATUS BOX AND DATA BAR

The Navigation Status Box located at the top of the PFD contains two fields displaying the following information:




Figure 5-4 PFD Navigation Status Box

- Active flight plan leg (e.g., 'D-> KICT' or 'KIXD -> KCOS') or flight plan annunciations (e.g., 'Turn right to 021° in 8 seconds')
- Distance (DIS) and Bearing (BRG) to the next waypoint or flight plan annunciations (e.g., 'TOD within 1 minute')

The symbols used in the PFD Status Box are:

Symbol	Description	Symbol	Description
	Active Leg		Left Holding Pattern
	Direct-to		Vector to Final
	Right Procedure Turn		Right DME Arc/ Radius to Fix Leg




Symbol	Description	Symbol	Description
	Left Procedure Turn		Left DME Arc/ Radius to Fix Leg
	Right Holding Pattern		

Table 5-1 PFD Status Box Symbols

The Navigation Data Bar located at the top of the MFD contains four data fields, each displaying one of the following items:

BRG	Bearing	FOB	Fuel on Board
DEST	Destination Airport Identifier	GS	Ground Speed
DIS	Distance	ISA	Temperature at Standard Pressure
DTG	Distance to Go	LDG	ETA at Final Destination
DTK	Desired Track	MSA	Minimum Safe Altitude
END	Endurance	TAS	True Airspeed
ESA	Enroute Safe Altitude	TKE	Track Angle Error
ETA	Estimated Time of Arrival	TRK	Track
ETE	Estimated Time Enroute	VSR	Vertical Speed Required
FLT	Flight Timer	XTK	Cross-Track Error

Table 5-2 MFD Data Bar Field Items



Figure 5-5 MFD Navigation Data Bar

The navigation information displayed in the four data fields can be selected on the ‘MFD Data Bar Fields’ Box on the ‘Aux-System Setup 1’ Page. The default selections (in order left to right) are GS, DTK, TRK, and ETE.

Changing a field in the MFD Navigation Data Bar:

- 1) Select the ‘Aux - System Setup 1’ Page.
- 2) Press the **FMS** Knob momentarily to activate the flashing cursor.
- 3) Turn the large **FMS** Knob to highlight the desired field number in the ‘MFD Data Bar Fields’ Box.
- 4) Turn the small **FMS** Knob to display and scroll through the data options list to select the desired data.
- 5) Press the **ENT** Key. Pressing the **Defaults** Softkey returns all fields to the default setting.

5.2 USING MAP DISPLAYS

Map displays are used extensively in the system to provide situational awareness in flight. Most system maps can display the following information:

- | | |
|---|--|
| <ul style="list-style-type: none"> • Airports, NAVAIDs, airspaces, airways, land data (highways, cities, lakes, rivers, borders, etc.) with names • Map range • Wind direction and speed • Map orientation • Icons for enabled map features • Aircraft icon (present position) • Obstacle data | <ul style="list-style-type: none"> • Map Pointer information (distance and bearing to pointer, location of pointer, name, and other pertinent information) • Fuel range ring • Flight plan legs • User waypoints • Track vector • Terrain • Topography scale and data |
|---|--|

The information in this section applies to the following maps unless otherwise noted:

- | | |
|--|---|
| <ul style="list-style-type: none"> • All Map Group Pages ('Map') • All Waypoint Group Pages ('WPT') • Trip Planning Page ('Aux') • Flight Plan Pages ('FPL') | <ul style="list-style-type: none"> • All Nearest Group Pages ('NRST') • Direct To Window • PFD Maps • Procedure Loading Pages |
|--|---|

MAP ORIENTATION

Maps are shown in one of three different orientation options, allowing flexibility in determining aircraft position relative to other items on the map (north up) or for determining where map items are relative to where the aircraft is going (track up or heading up). The map orientation is shown in the upper left corner of the map.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CNS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index



Figure 5-6 Map Orientation

- North up (North up) aligns the top of the map display to north (default setting).
- Track up (Track up) aligns the top of the map display to the current ground track.
- Heading up (HDG up) aligns the top of the map display to the current aircraft heading.

The Auto North Up setting configures the map to switch automatically to a north up orientation when the map range reaches a minimum range.

NOTE: When panning or reviewing active flight plan legs in a non-North Up orientation, the map does not show the map orientation nor the wind direction and speed.

NOTE: Map orientation can only be changed on the Navigation Map Page. Any other displays that show navigation data reflect the orientation selected for the Navigation Map Page.

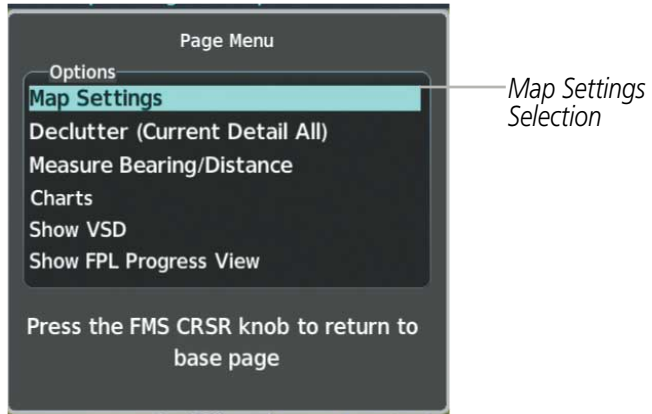


Figure 5-7 Navigation Map Page Menu Window

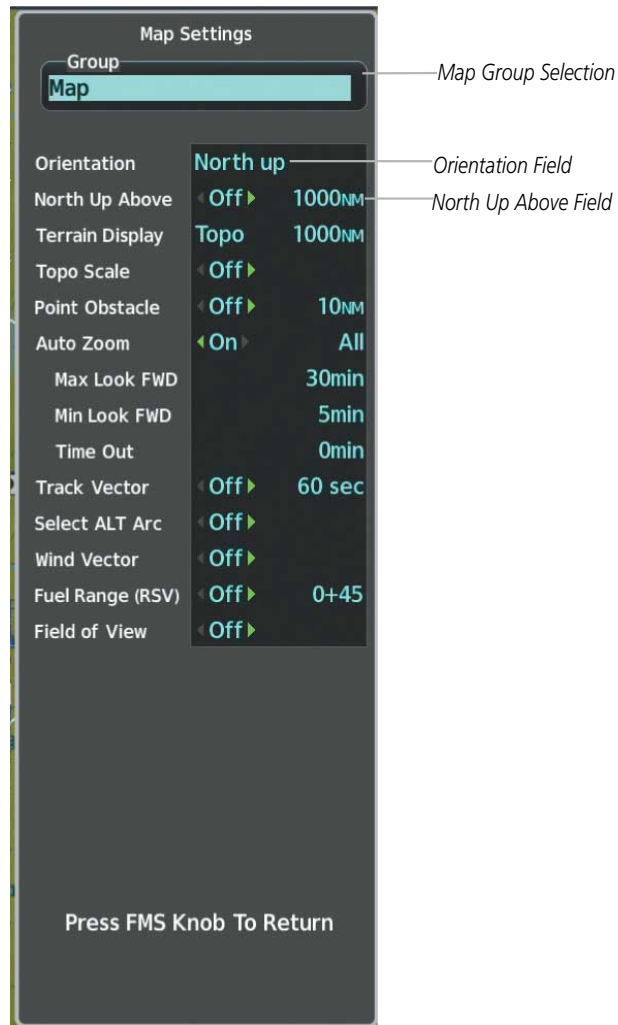


Figure 5-8 Map Settings Window — Map Group

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CWS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

Changing the Navigation Map orientation:


- 1) With the 'Map - Navigation Map' Page displayed, press the **MENU** Key. The cursor flashes on the 'Map Settings' option.
- 2) Press the **ENT** Key to display the 'Map Settings' Window.
- 3) Turn the small **FMS** Knob to select the 'Map' Group.
- 4) Press the **ENT** Key.
- 5) Turn the large **FMS** Knob, or press the **ENT** Key once, to select the 'Orientation' Field.
- 6) Turn the small **FMS** Knob to select the desired orientation.
- 7) Press the **ENT** Key to select the new orientation.
- 8) Press the **FMS** Knob to return to the base page.

Enabling/disabling Auto North Up and selecting the minimum switching range:

- 1) Press the **MENU** Key with the 'Map - Navigation Map' Page displayed. The cursor flashes on the 'Map Settings' option.
- 2) Press the **ENT** Key. The 'Map Settings' Window is displayed.
- 3) Turn the small **FMS** Knob to select the 'Map' Group.
- 4) Press the **ENT** Key.
- 5) Use the large **FMS** Knob to highlight the 'North Up Above' Field.
- 6) Select 'On' or 'Off' using the small **FMS** Knob.
- 7) Press the **ENT** Key to accept the selected option. The flashing cursor highlights the range field.
- 8) Use the small **FMS** Knob to select the desired range.
- 9) Press the **ENT** Key to accept the selected option.
- 10) Press the **FMS** Knob to return to the 'Map - Navigation Map' Page.

MAP RANGE

There are 28 different map ranges available, from 250 feet to 1000 nm. The current range is indicated in the upper left corner of the map and represents the top-to-bottom distance covered by the map. When the map range is decreased to a point that exceeds the capability of the system to accurately represent the map, a magnifying glass icon is shown to the left of the map range. To change the map range turn the Joystick counter-clockwise to decrease the range, or clockwise to increase the range.

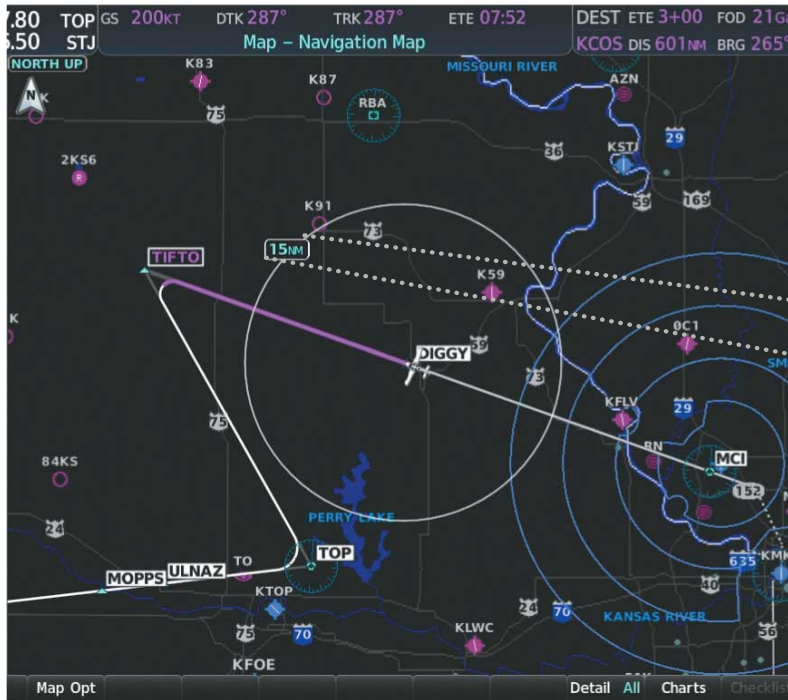

**AUTO
15NM**
Auto Zoom On

15NM

Figure 5-9 Map Range

AUTO ZOOM

Auto zoom allows the system to change the map display range to the smallest range clearly showing the active waypoint. Auto zoom can be overridden by adjusting the range with the Joystick, and remains until the active waypoint changes, a terrain or traffic alert occurs, the aircraft takes off, or the manual override times out (timer set on 'Map Settings' Window). Auto zoom is suspended while the map pointer is active.

If a terrain caution or warning occurs, all navigation maps automatically adjust to the smallest map range clearly showing the potential impact areas. If a new traffic advisory alert occurs, any navigation map displaying traffic advisory alerts automatically adjusts to the smallest map range clearly showing the traffic advisory. When terrain or traffic alerts clear, the map returns to the previous auto zoom range based on the active waypoint.

The auto zoom function can be turned on or off independently for the PFD and MFD. Control of the ranges at which the auto zoom occurs is done by setting the minimum and maximum 'look forward' times (set on the 'Map Settings' Window for the 'Map' Group). These settings determine the minimum and maximum distance to display based upon the aircraft's ground speed.

- Waypoints that are long distances apart cause the map range to increase to a point where many details on the map are decluttered. If this is not acceptable, lower the maximum look ahead time to a value that limits the auto zoom to an acceptable range.
- Waypoints that are very short distances apart cause the map range to decrease to a point where situational awareness may not be what is desired. Increase the minimum look ahead time to a value that limits the auto zoom to a minimum range that provides acceptable situational awareness.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CWS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

- Flight plans that have a combination of long and short legs cause the range to increase and decrease as waypoints sequence. To avoid this, auto zoom can be disabled or the maximum/minimum times can be adjusted.
- The 'time out' time (configurable on the 'Map Settings' Window for the Map Group) determines how long auto zoom is overridden by a manual adjustment of the range knob. At the expiration of this time, the auto zoom range is restored. Setting the 'time out' value to zero causes the manual override to never time out.
- When the maximum 'look forward' time is set to zero, the upper limit becomes the maximum range available (1000 nm).
- When the minimum 'look forward' time is set to zero, the lower limit becomes 1.5 nm.

Configuring automatic zoom:

- 1) Press the **MENU** Key with the 'Map - Navigation Map' Page displayed. The cursor flashes on the 'Map Settings' option.
- 2) Press the **ENT** Key. The 'Map Settings' Window is displayed.
- 3) Turn the small **FMS** Knob to select the 'Map' Group.
- 4) Press the **ENT** Key.
- 5) Turn the large **FMS** Knob to highlight the 'Auto Zoom' On/Off Field, and select 'Off' or 'On' using the small **FMS** Knob.
- 6) Press the **ENT** Key to accept the selected option. The flashing cursor highlights the 'Auto Zoom' display selection Field.
- 7) Select 'MFD', 'PFD', or 'All' using the small **FMS** Knob.
- 8) Press the **ENT** Key to accept the selected option. The flashing cursor highlights the 'Max Look FWD' Field. Times are from zero to 999 minutes.
- 9) Use the **FMS** Knobs to enter the 'Max Look FWD' time. Press the **ENT** Key.
- 10) Repeat step 9 for 'Min Look FWD' (zero to 99 minutes) and 'Time Out' (zero to 99 minutes).
- 11) Press the **FMS** Knob to return to the 'Map - Navigation Map' Page.

MAP PANNING

Map panning allows the pilot to:

- View parts of the map outside the displayed range without adjusting the map range
- Highlight and select locations on the map
- Review information for a selected airport, NAVAID or user waypoint
- Designate locations for use in flight planning
- View airspace and airway information

When the panning function is selected by pushing the Joystick, the Map Pointer flashes on the map display. A window also appears at the top of the map display showing the latitude/longitude position of the pointer, the bearing and distance to the pointer from the aircraft's present position, and the elevation of the land at the position of the pointer.

NOTE: The map is normally centered on the aircraft's position. If the map has been panned and there has been no pointer movement for 60 seconds, the map reverts back to centered on the aircraft position and the flashing pointer is removed.



Figure 5-10 Navigation Map - Map Pointer Activated

When the Map Pointer is placed on an object, the name of the object is highlighted (even if the name was not originally displayed on the map). When any map feature or object is selected on the map display, pertinent information is displayed.



Figure 5-11 Navigation Map - Map Pointer on Point of Interest

When the Map Pointer crosses an airspace boundary, the boundary is highlighted and airspace information is shown. The information includes the name and class of airspace, the ceiling in feet above Mean Sea Level (MSL), and the floor in feet MSL.

Panning the map:

- 1) Push the **Joystick** to display the Map Pointer.
- 2) Move the **Joystick** to move the Map Pointer around the map.
- 3) Push the **Joystick** to remove the Map Pointer and recenter the map on the aircraft's current position.

Reviewing information for an airport, NAVAID, or user waypoint:

- 1) With the desired map page displayed on the MFD, push the **Joystick** to display the Map Pointer and place the Map Pointer on a waypoint.
- 2) Press the **ENT** Key to display the 'WPT - Waypoint Information' Page for the selected waypoint.
- 3) Press the **Go Back** Softkey, the **CLR** Key, or the **ENT** Key to exit the 'WPT - Waypoint Information' Page and return to the Navigation Map showing the selected waypoint.

Reviewing information for a special-use or controlled airspace:

- 1) With the desired map page displayed on the MFD, push the **Joystick** to display the Map Pointer and place the Map Pointer on an open area within the boundaries of an

airspace. (As the Map Pointer crosses the airspace boundary, the boundary is highlighted and airspace information is shown.)

- 2) Press the **ENT** Key to display an options menu.
- 3) 'Review Airspaces' should already be highlighted, if not select it. Press the **ENT** Key to display the 'Information' Window for the selected airspace.
- 4) Press the **FMS** Knob, the **CLR** Key, or the **ENT** Key to exit the 'Information' Window.

MEASURING BEARING AND DISTANCE

Distance and bearing from the aircraft's present position to any point on the viewable navigation map may be calculated using the 'Measure Bearing and Distance' selection from Navigation Map page menu. The bearing and distance tool displays a dashed Measurement Line and a Measure Pointer to aid in graphically identifying points with which to measure. Lat/Long, distance and elevation data for the Measure Pointer is provided in a window at the top of the navigation map.



Figure 5-12 Navigation Map - Measuring Bearing and Distance

Measuring bearing and distance between any two points:

- 1) Press the **MENU** Key (with the 'Map - Navigation Map' Page displayed).
- 2) Use the **FMS** Knob to highlight the 'Measure Bearing/Distance' Field.
- 3) Press the **ENT** Key. A Measure Pointer is displayed on the map at the aircraft's present position.
- 4) Move the **Joystick** to place the reference pointer at the desired location. The bearing and distance are displayed at the top of the map. Elevation at the current pointer

position is also displayed. Pressing the **ENT** Key changes the starting point for measuring.

- 5) To exit the Measure Bearing/Distance option, push the **Joystick**; or select 'Stop Measuring' from the 'Page Menu' Window and press the **ENT** Key.

TOPOGRAPHY

All navigation maps can display various shades of topography colors representing land elevation, similar to aviation sectional charts. The topographic data range is the maximum map range on which topographic data is displayed.

Topographic data can be displayed or removed as described in the following procedures. Topographic data can also be displayed on the selectable VSD Inset at the bottom of the navigation map. In addition, the Navigation Map can display a topographic scale (located in the lower right hand side of the map) showing a scale of the terrain elevation and minimum/maximum displayed elevations.

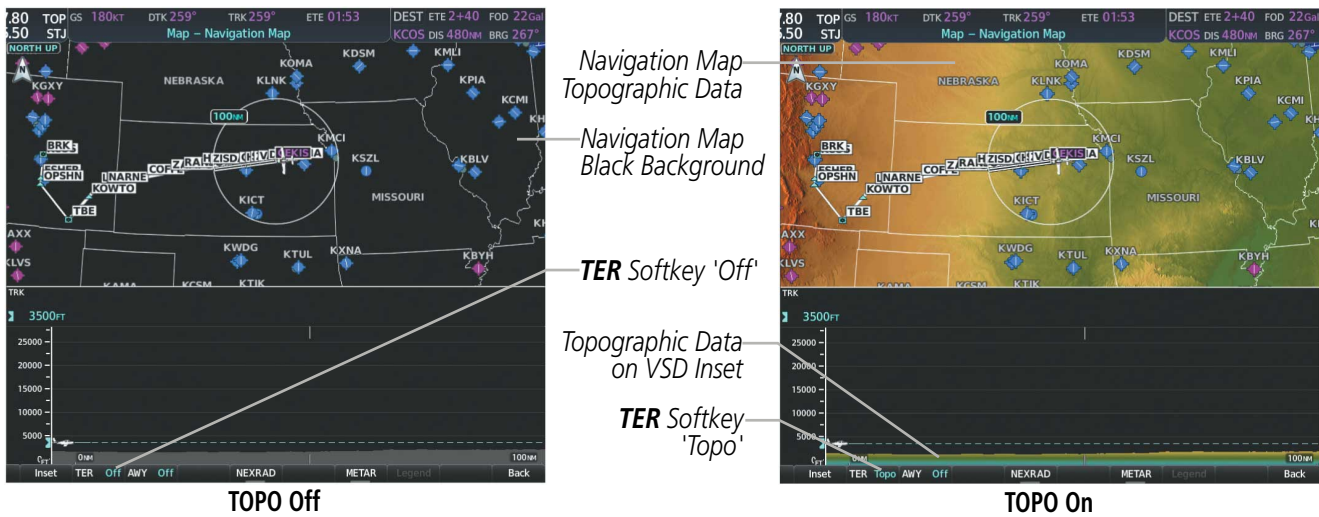


Figure 5-13 Navigation Map - Topographic Data

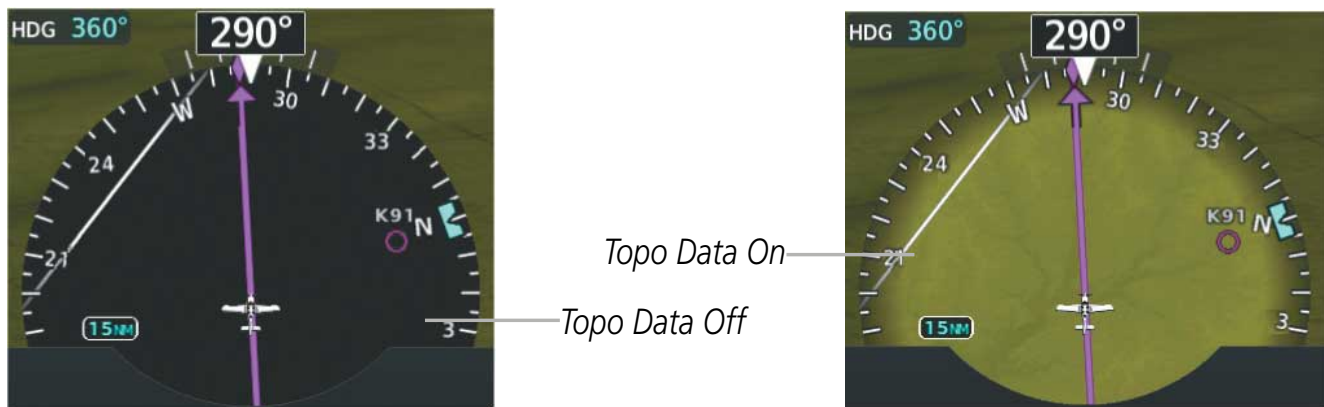


Figure 5-14 PFD HSI Map - Topographic Data

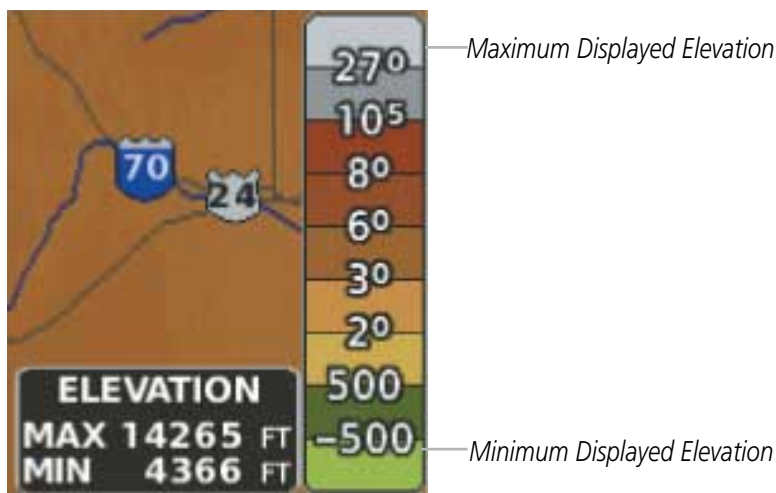


Figure 5-16 Navigation Map - Topo Scale

Figure 5-15 Navigation Map - Topo Scale

Displaying/removing topographic data on all MFD pages displaying navigation maps:

- 1) Press the **Map Opt** Softkey.
- 2) Press the **TER** Softkey until 'Topo' is shown on the softkey to display topographic data.
- 3) Press the **TER** Softkey until 'Off' is shown on the softkey to remove topographic data from the navigation map. When topographic data is removed from the page, all navigation data is presented on a black background.

Displaying/removing topographic data on the PFD Map:

- 1) Press the **Map/HSI** Softkey.
- 2) Press the **TER** Softkey.
- 3) Press the **TER** Softkey until 'Off' is shown on the softkey to remove topographic data from the navigation map. When topographic data is removed from the page, all navigation data is presented on a black background.

Displaying/removing topographic data using the Navigation Map Page Menu:

- 1) Press the **MENU** Key with the 'Map - Navigation Map' Page displayed. The cursor flashes on the 'Map Settings' option.
- 2) Press the **ENT** Key. The 'Map Settings' Window is displayed.
- 3) Turn the small **FMS** Knob to select the 'Map' Group.
- 4) Press the **ENT** Key.
- 5) Turn the large **FMS** Knob to highlight the 'Terrain Display' Field.

- 6) Turn the small **FMS** Knob to select 'Topo' or 'Off'.
- 7) Press the **FMS** Knob to return to the 'Map - Navigation Map' Page.

Selecting a topographical data range (Terrain Display):

- 1) Press the **MENU** Key with the 'Map - Navigation Map' Page displayed. The cursor flashes on the 'Map Settings' option.
- 2) Press the **ENT** Key. The 'Map Settings' Window is displayed.
- 3) Turn the small **FMS** Knob to select the 'Map' Group.
- 4) Press the **ENT** Key.
- 5) Use the large **FMS** knob to highlight the 'Terrain Display' range field. Ranges are from 1 nm to 1000 nm.
- 6) To change the Terrain Display range setting, turn the small **FMS** Knob to display the range list.
- 7) Enter the desired range using the small **FMS** Knob.
- 8) Press the **ENT** Key.
- 9) Press the **FMS** Knob to return to the 'Map - Navigation Map' Page.

Displaying/removing the topographic scale (Topo Scale):

- 1) Press the **MENU** Key with the 'Map - Navigation Map' Page displayed. The cursor flashes on the 'Map Settings' option.
- 2) Press the **ENT** Key. The 'Map Settings' Window is displayed.
- 3) Turn the small **FMS** Knob to select the 'Map' Group. Press the **ENT** Key.
- 4) Turn the large **FMS** Knob to highlight the 'Topo Scale' Field.
- 5) Turn the small **FMS** Knob to select 'On' or 'Off'.
- 6) Press the **FMS** Knob to return to the 'Map - Navigation Map' Page.

MAP SYMBOLS

This section discusses the types of land and aviation symbols that can be displayed. Each listed type of symbol can be turned on or off, and the maximum range to display each symbol can be set. The decluttering of the symbols from the map using the **Detail** Softkey is also discussed.

LAND SYMBOLS

The following items are configured on the land menu:








Land Symbols	Symbol	Default Range (nm)	Max Range (nm)
User Waypoint		25	40
Highways and Roads		N/A	N/A
Interstate Highway (Freeway)		50	400
International Highway (Freeway)		50	400
US Highway (National Highway)		15	150
State Highway (Local Highway)		2.5	100
Local Road (Local Road)	N/A	4	25
Railroads (RAILROAD)		7.5	25
Large City (> 200,000)		100	1000
Medium City (> 50,000)		50	400
Small City (> 5,000)		25	100
State/Province		400	1000
River/Lake		75	100
Latitude/ Longitude (LAT/LON)		1	1000

Table 5-3 Land Symbol Information

AVIATION SYMBOLS

The following items are configured on the aviation menu:

Aviation Symbols	Symbols	Default Range (nm)	Max Range (nm)
Large Airport (Longest Runway \geq 8100 ft)		100	1000
Medium Airport (8100 ft > Longest Runway \geq 5000 ft, or Longest Runway < 5000 ft with control tower)		50	400
Small Airport (Longest Runway < 5000 ft without control tower)		25	150
Taxiways (SafeTaxi)	See Additional Features	1.5	5
Runway Extension		7.5	150
Missed Approach Preview On/Off (Missed APR)	N/A	N/A	N/A
Intersection (INT)		25	40
Non-directional Beacon (NDB)		25	50
VOR		50	250
VOR Compass Rose On/Off	N/A	N/A	N/A
Visual Reporting Point (VRP)		25	1000
Temporary Flight Restriction (TFR)		250	1000
VNAV Constraints		1000	1000
(VNAV Constraints) Show All (show all constraints within flight plan if VNAV Constraints are 'On' above)	N/A	N/A	N/A

Table 5-4 Aviation Symbol Information

AIRSPACE SYMBOLS

The following items are configured on the airspace menu:







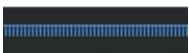


Airspace Symbols	Symbol	Default Range (nm)	Max Range (nm)
Smart Airspace On/Off	N/A	N/A	N/A
Airspace Altitude Labels (Airspace ALT LBL) On/Off:	N/A	N/A	N/A
• Class B Airspace Altitude Label (ceiling/floor)		N/A	N/A
• Class C Airspace Altitude Label (ceiling/floor)		N/A	N/A
• Class D Airspace Altitude Label (ceiling)		N/A	N/A
Class B Airspace/TMA (CLASS B/TMA)		50	150
Class C Airspace/TCA (CLASS C/TCA)		50	100
Class D Airspace (CLASS D)		10	100
Alert/Prohibited/Restricted/Warning Areas (RESTRICTED)		50	100
Military Operations Area [MOA(MILITARY)]		50	250
Other/Air Defense Interdiction Zone (OTHER/ADIZ)		50	250

Table 5-5 Airspace Symbol Information

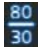SYMBOL SETUP

All navigation maps can display land, aviation and airspace symbols. Symbol types (e.g. runway extensions, railroads) can be removed individually. The range sets the maximum range at which items appear on the display. For example, enabling “Runway Extension” displays a dashed line on

the map extending from each runway of an airport in the flight plan when the range is set at or below the value of the map settings option.

Setting up the Land, Aviation or Airspace group items:

- 1) Press the **MENU** Key with the Navigation Map Page displayed. The cursor flashes on the 'Map Settings' option.
- 2) Press the **ENT** Key. The Map Settings Menu is displayed.
- 3) Turn the small **FMS** Knob to select the desired group.
- 4) Press the **ENT** Key. The cursor flashes on the first field.
- 5) Turn the large **FMS** Knob to select the desired option.
- 6) Turn the small **FMS** Knob to select the desired setting (e.g. On/Off or maximum range).
- 7) Press the **ENT** Key to accept the selected option and move the cursor to the next item.
- 8) Repeat steps 5-7 as necessary.
- 9) Press the **FMS** Knob to return to the Navigation Map Page.

MAP DECLUTTER

The declutter feature allows the pilot to progressively step through four levels of removing map information. The declutter level is displayed in the **Detail** Softkey and next to the Declutter Menu Option.

The following table lists the items that are decluttered at each map detail level. The 'X' represents map items decluttered for each level of detail.

Item	Detail 3	Detail 2	Detail 1
Data Link Radar Precipitation			X
Data Link Lightning			X
Graphical METARs			X
Airports			X
Safe Taxi			X
Runway Labels			X
TFRs			X
Restricted			X
MOA (Military)			X
Intersections		X	X
NDBs		X	X
VORs		X	X
VRPs		X	X
User Waypoints		X	X

Item	Detail 3	Detail 2	Detail 1
Latitude/Longitude Grid		X	X
NAVAIDs (does not declutter if used to define airway)		X	X
Intersections (does not declutter if used to define airway)		X	X
Class B Airspaces/TMA		X	X
Class C Airspaces/TCA		X	X
Class D Airspaces		X	X
Other Airspaces/ADIZ		X	X
Obstacles		X	X
Cities	X	X	X
Roads	X	X	X
Railroads	X	X	X
State/Province Boundaries	X	X	X

Table 5-6 Navigation Map Items Decluttered for each Detail Level

Decluttering the MFD Map:

Press the **Detail** Softkey with the Navigation Map Page displayed. The current declutter level is shown. With each softkey press, another level of map information is removed.

Or:

- 1) Press the **MENU** Key with the Navigation Map Page displayed.
- 2) Turn the **FMS** Knob to highlight 'Declutter'. The current declutter level is shown.
- 3) Press the **ENT** Key to apply the next declutter level and return to the Navigation Map.

Decluttering the PFD Map:

- 1) Press the **Map/HSI** Softkey.
- 2) Press the **Detail** Softkey. The current declutter level is shown. With each selection, another level of map information is removed.

AIRWAYS

This airways discussion is based upon the North American airway structure. The airway structure in places other than North America vary by location, etc. and are not discussed in this guide. Low Altitude Airways (Victor Airways or T-Routes) start 1,200 feet above ground level (AGL) and extend up to 18,000 feet mean sea level (MSL). Low Altitude Airways are designated with a "V" or a "T" before the airway number.

High Altitude Airways (Jet Routes or Q-Routes) start at 18,000 feet MSL and extend upward to 45,000 feet MSL. High Altitude Airways are designated with a "J" or a "Q" before the airway number.

Low Altitude Airways are drawn in gray (the same shade used for roads). High Altitude Airways are drawn in green. When both types of airways are displayed, High Altitude Airways are drawn on top of Low Altitude Airways.

When airways are selected for display on the map, the airway waypoints (VORs, NDBs and Intersections) are also displayed.

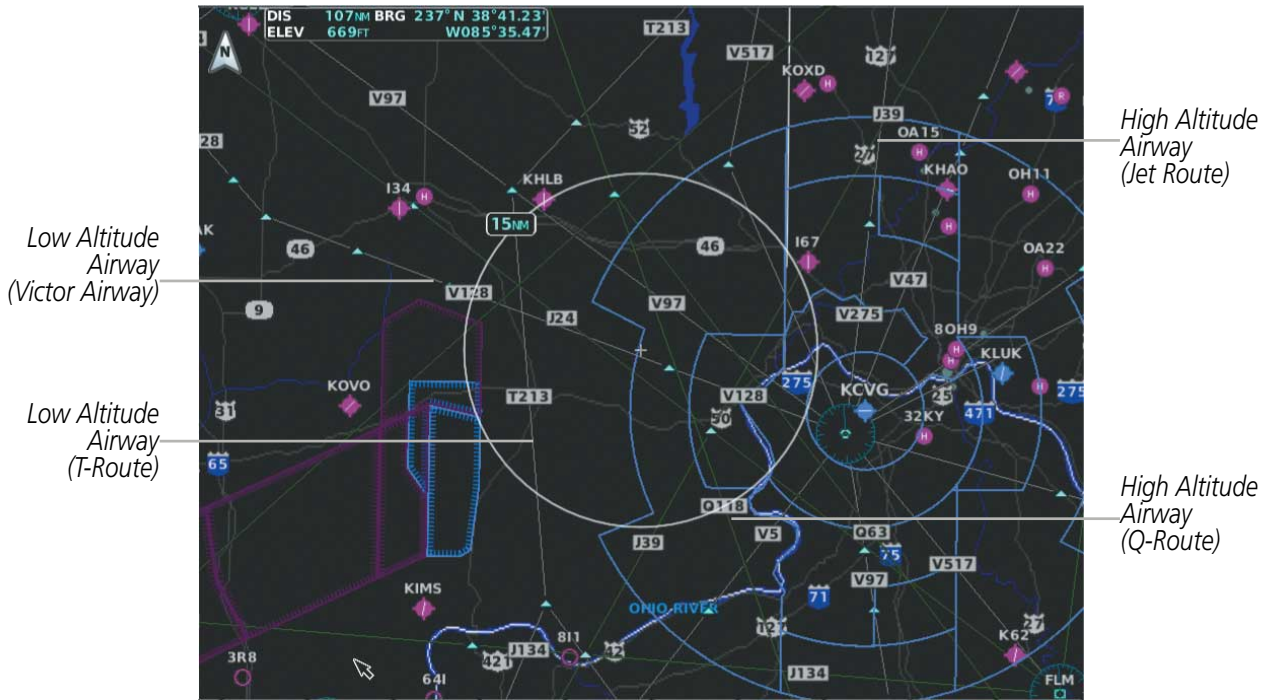


Figure 5-16 Airways on MFD Navigation Page

Airways may be displayed on the map at the pilot’s discretion using either a combination of AWY Softkey presses, or menu selections using the MENU Key from the Navigation Map Page. The Airway range can also be programmed to only display Airways on the MFD when the map range is at or below a specific number.

The following items are configured on the airways menu:


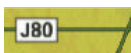
Airways Symbols	Symbol	Default Range (nm)	Maximum Range (nm)
Low Altitude Airways (V Routes and T Routes)		50	100
High Altitude Airways (J Routes and Q Routes)		50	100

Table 5-7 Airways Symbol Information

Displaying/removing airways:

- 1) Press the **Map Opt** Softkey.
- 2) Press the **AWY** Softkey. Both High and Low Altitude Airways are displayed (AWY On).
- 3) Press the softkey again to display Low Altitude Airways only (AWY LO).
- 4) Press the softkey again to display High Altitude Airways only (AWY HI).
- 5) Press the softkey again to remove High Altitude Airways. No airways are displayed (AWY Off).

Or:

- 1) Press the **MENU** Key with the 'Map - Navigation Map' Page displayed. The cursor flashes on the 'Map Settings' option.
- 2) Press the **ENT** Key. The 'Map Settings' Window is displayed.
- 3) Turn the small **FMS** Knob to select the 'Airways' Group, and press the **ENT** Key.
- 4) Turn the large **FMS** Knob to highlight the 'Low ALT Airways' On/Off Field.
- 5) Turn the small **FMS** Knob to select 'Off' or 'On'.
- 6) Press the **FMS** Knob to return to the 'Map - Navigation Map' Page.

Selecting an airway range (Low ALT Airways or High ALT Airways):

- 1) Press the **MENU** Key with the 'Map - Navigation Map' Page displayed. The cursor flashes on the 'Map Settings' option.
- 2) Press the **ENT** Key. The 'Map Settings' Window is displayed.
- 3) Turn the small **FMS** Knob to select the 'Airways' Group, and press the **ENT** Key.
- 4) Turn the large **FMS** Knob to highlight the 'Low ALT Airways' or 'High ALT Airways' range field.
- 5) To change the range setting, turn the small **FMS** Knob to display the range list.
- 6) Select the desired range using the small **FMS** Knob.
- 7) Press the **ENT** Key.
- 8) Press the **FMS** Knob to return to the 'Map - Navigation Map' Page.

ADDITIONAL NAVIGATION MAP ITEMS

Navigation maps can display some additional items. These items (e.g. track vector, wind vector, fuel range ring, SVT field of view, and selected altitude intercept arc) can be displayed/removed individually.

TRACK VECTOR

The map can display a track vector that is useful in minimizing track angle error. The track vector is a solid cyan line segment extended to a predicted location. The track vector look-ahead time is

selectable (30 sec, 60 sec (default), 2 min, 5 min, 10 min, 20 min) and determines the length of the track vector. The track vector shows up to 90 degrees of a turn for the 30 and 60 second time settings. It is always a straight line for the 2 min, 5 min, 10 min and 20 min settings.

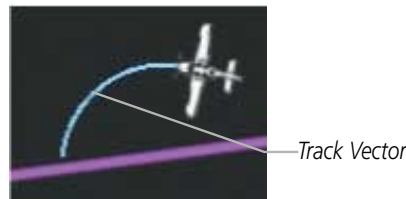


Figure 5-17 Navigation Map -Track Vector

SELECTED ALTITUDE INTERCEPT ARC

The map can display the location along the current track where the aircraft will intercept the selected altitude. The location will be shown as a cyan arc when the aircraft is actually climbing or descending.



Figure 5-18 Navigation Map - Range to Altitude Arc

WIND VECTOR

The map displays a wind vector arrow in the upper right-hand portion of the screen. Wind vector information is displayed as a white arrow pointing in the direction in which the wind is moving for wind speeds greater than or equal to 1 kt.




Figure 5-19 Navigation Map — Wind Vector

NOTE: The wind vector is not displayed until the aircraft is moving. It is not displayed on the Waypoint Information pages.

FUEL RANGE RING

The map can display a fuel range ring which shows the remaining flight distance. A dashed green circle indicates the selected range to reserve fuel. A solid green circle indicates the total endurance range. If only reserve fuel remains, the range is indicated by a solid amber circle.

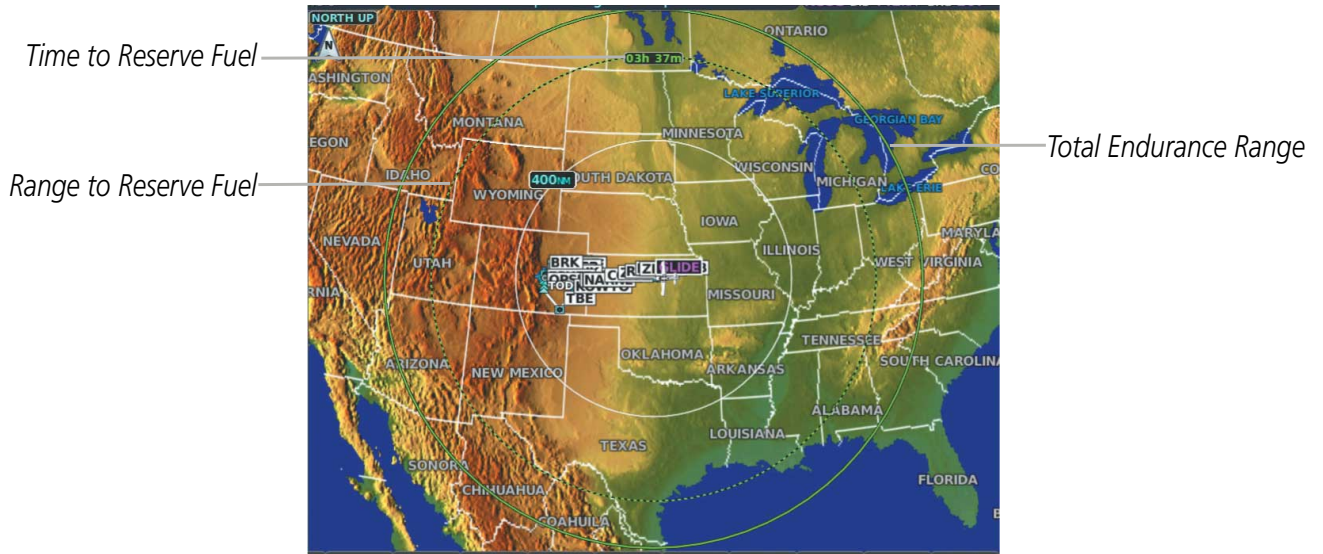


Figure 5-20 Navigation Map — Fuel Range Ring

FIELD OF VIEW (SVT)

The map can display the boundaries of the PFD Synthetic Vision Technology (SVT) lateral field of view. The field of view is shown as two dashed lines forming a V shape in front of the aircraft symbol on the map. This is only available if SVT is installed on the aircraft.

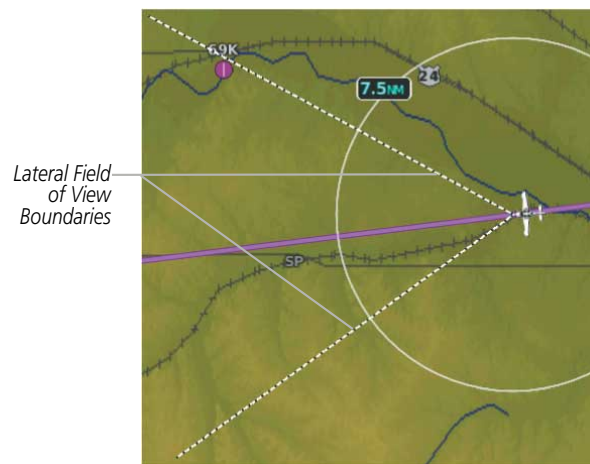


Figure 5-21 Navigation Map — Field of View

Setting up additional Map group items:

- 1) Press the **MENU** Key with the 'Map - Navigation Map' Page displayed. The cursor flashes on the 'Map Settings' option.
- 2) Press the **ENT** Key. The 'Map Settings' Window is displayed.
- 3) Turn the small **FMS** Knob to select the 'Map' Group.
- 4) Press the **ENT** Key. The cursor flashes on the first field.

- 5) Turn the large **FMS** Knob to select the desired option.
- 6) Turn the small **FMS** Knob to select 'On' or 'Off'.

Or

If it is a data field, use the **FMS** Knob to select the range or time value.

- 7) Press the **ENT** Key to accept the selected option and move the cursor to the next item.
- 8) Repeat steps 5-7 as necessary.
- 9) Press the **FMS** Knob to return to the 'Map - Navigation Map' Page.

DESTINATION AIRPORT INFORMATION

Information for the destination airport is displayed in the upper right corner of the MFD, and is determined as follows:

- If no arrival or approach is loaded, or if an arrival waypoint is part of the active leg and no approach is loaded, then the destination airport is displayed as the last airport in the active flight plan. The last airport in the active flight plan will also be displayed as the destination airport when the active leg is providing guidance past the Missed Approach Point (MAP) of an approach.
- If an arrival waypoint is part of the active leg and an approach is loaded, or approach has been activated, the displayed destination airport becomes the airport associated with the approach.
- If an airport is entered as a direct-to waypoint and is not in the active flight plan, then that airport is displayed as the destination airport.

If none of these conditions are met, then the destination airport is undefined and the destination information fields are shown as dashes.

If FOD is positive, but less than 18 gallons, the FOD value is shown in amber. If FOD is zero or negative, the FOD value is shown in red.

If FOD is less than -99 gallons, dashes will be displayed in place of the FOD value

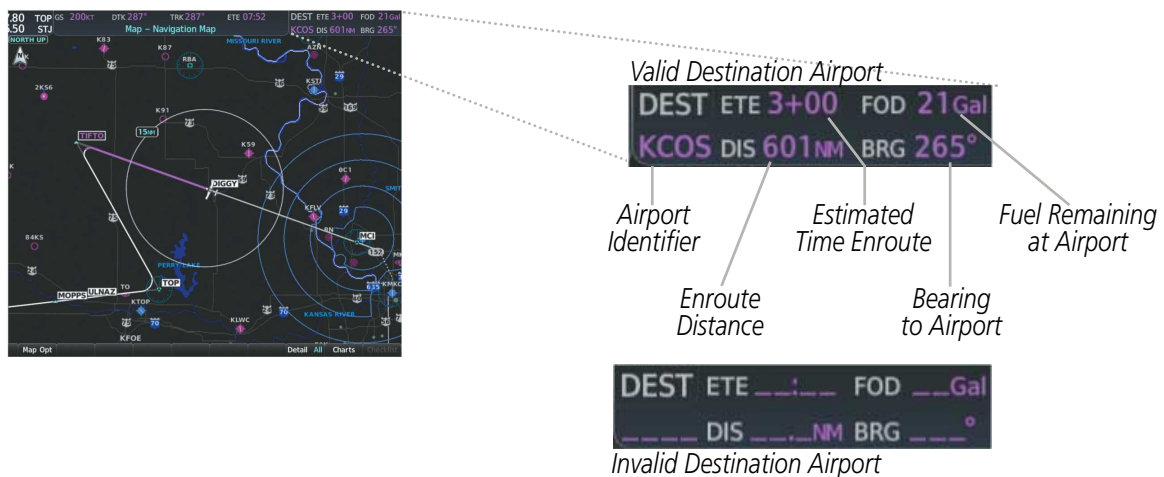


Figure 5-22 Destination Airport Information

5.3 WAYPOINTS

Waypoints are predetermined geographical positions (internal database) or pilot-entered positions, and are used for all phases of flight planning and navigation.

Communication and navigation frequencies can be tuned “automatically” from various Waypoint Information (WPT) pages, Nearest (NRST) pages, and the ‘Nearest Airports’ Window (on PFD). This auto-tuning feature simplifies frequency entry over manual tuning. Refer to the Audio Panel and CNS section for details on auto-tuning.

Waypoints can be selected by entering the ICAO identifier, entering the name of the facility, or by entering the city name. See the System Overview section for detailed instructions on entering data in the system. As a waypoint identifier, facility name, or location is entered, the Spell’N’Find feature scrolls through the database, displaying those waypoints matching the characters which have been entered to that point. A direct-to navigation leg to the selected waypoint can be initiated by pressing the **Direct-to** Key on any of the waypoint pages.



Figure 5-23 Waypoint Information Window

If duplicate entries exist for an identifier, a ‘Duplicate Waypoints’ Window is displayed when the ENT Key is pressed.

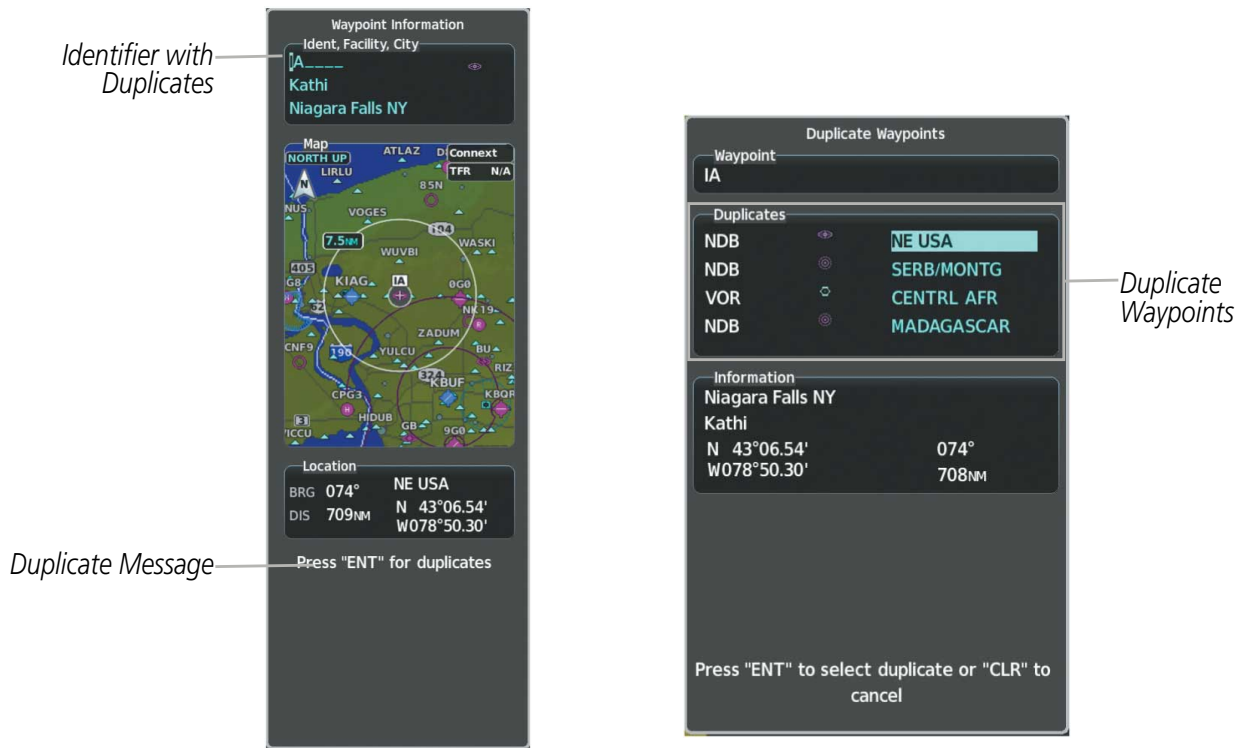


Figure 5-24 Waypoint Information Window - Duplicate Identifier

AIRPORTS

NOTE: North Up orientation on the Airport Information Page cannot be changed; the pilot needs to be aware of proper orientation if the Navigation Map orientation is different from the Airport Information Page Map.

The Airport Information Page is the first page in WPT Page Group and allows the pilot to view airport information, load frequencies (COM, NAV, and lighting), review runways, and review instrument procedures that may be involved in the flight plan. See the Audio Panel and CNS Section for more information on loading frequencies (auto-tuning). After engine startup, the Airport Information Page defaults to the airport where the aircraft is located. After a flight plan has been loaded, it defaults to the destination airport. On a flight plan with multiple airports, it defaults to the airport which is the current active waypoint.

In addition to displaying a map of the currently selected airport and surrounding area, the Airport Information Page displays airport information in three boxes labeled Airport, Runways, and Frequencies. For airports with multiple runways, information for each runway is available. This information is viewed on the Airport Information Page by pressing the Info Softkey until 'Info 1' is displayed in the softkey label.

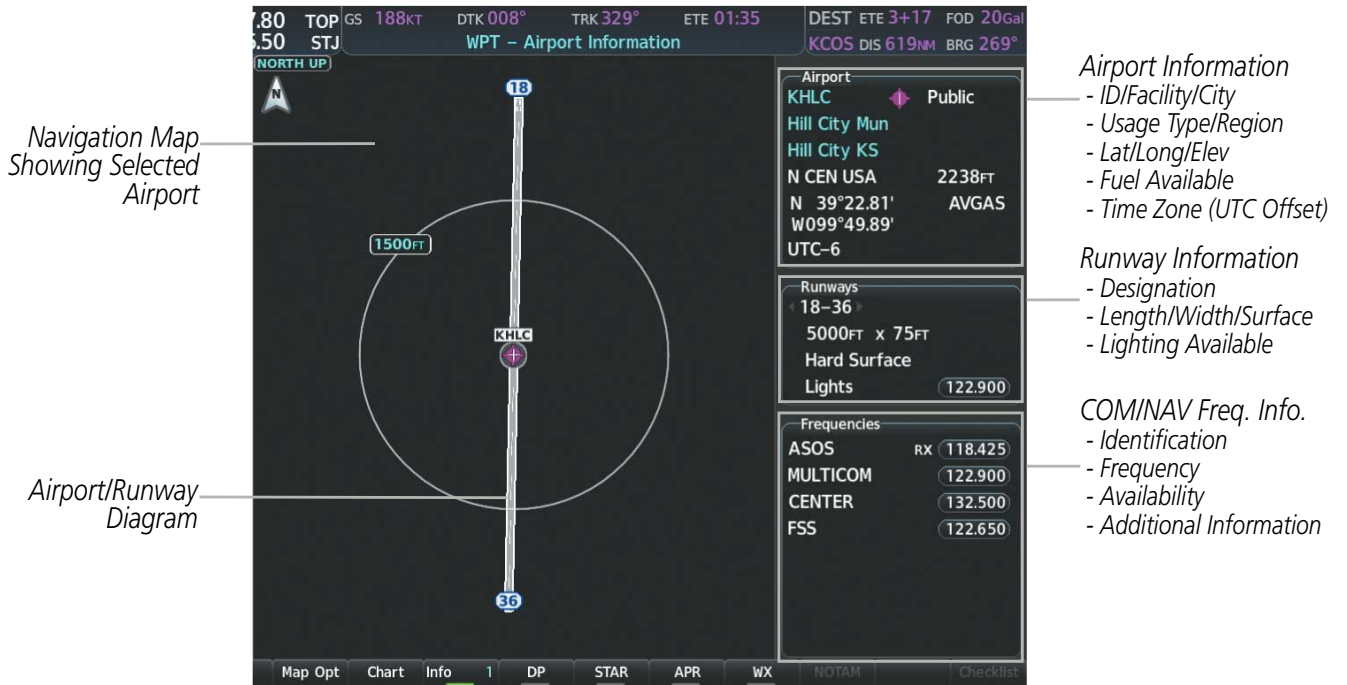


Figure 5-25 Airport Information Page

The following descriptions and abbreviations are used on the Airport Information Page:

- Usage type: Public, Military, Private, or Heliport
- Runway surface type: Hard, Turf, Sealed, Gravel, Dirt, Soft, Unknown, or Water.
- Runway lighting type: No Lights, Part Time, Full Time, Unknown, or PCL Freq (for pilot-controlled lighting)
- COM Availability: TX (transmit only), RX (receive only), PT (part time), i (additional information available)

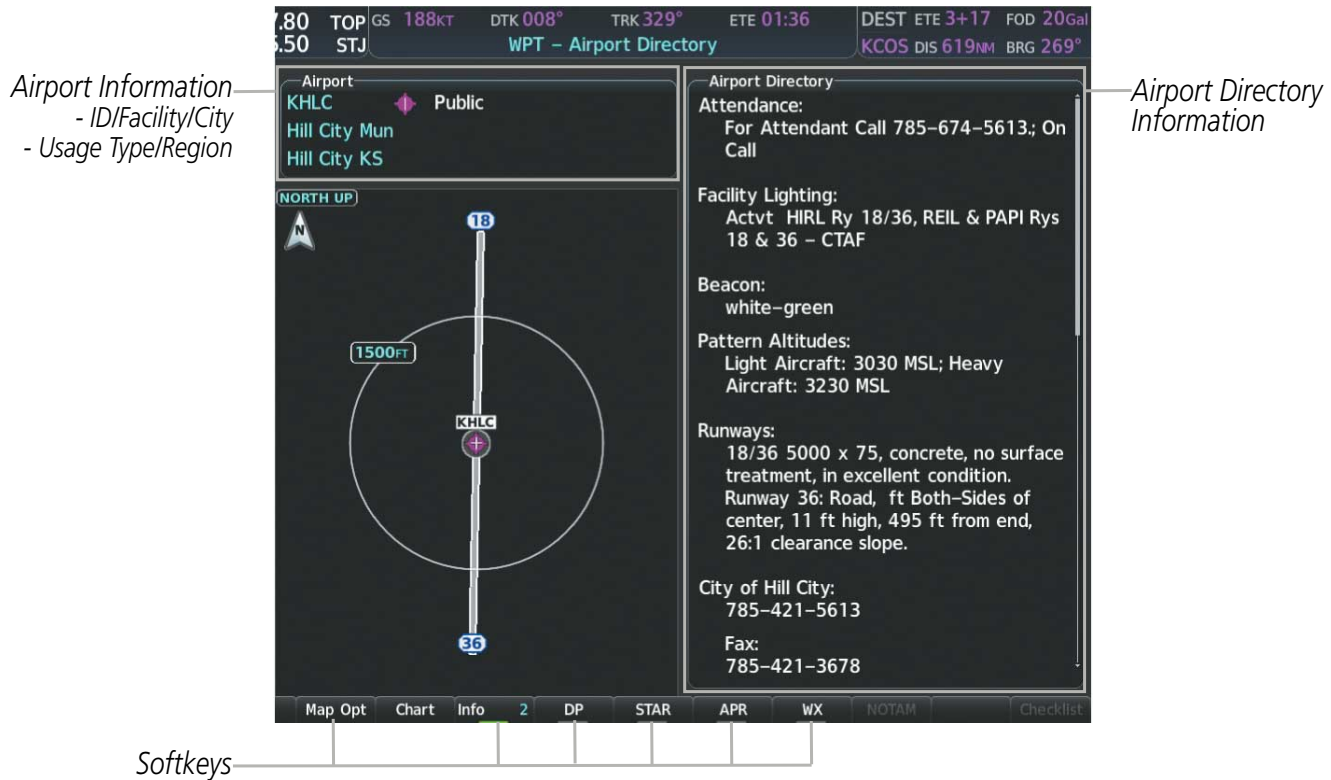


Figure 5-26 Airport Directory Page Example

The airport directory information is viewed on the Airport Directory Page by pressing the Info Softkey until 'Info 2' is displayed in the softkey label. The following are types of airport directory information shown (if available) on the Airport Directory Page:

- **Airport:** Identifier, Type, Name, City, State, Map
- **Control Tower:** Full/Part-time Hours, Days Open
- **Attendance:** Annual, weekly, daily, hours
- **Facility Lighting and Beacon:** Hours operating, Type and Location, CTAF, beacon colors
- **Noise Abatement:** Flying Procedures
- **Pattern Altitudes:** Aircraft Class/Altitude
- **Runways:** Headings, Length, Width, Facility Obstructions, Surface, Condition, Clearance Slope
- **FBO:** Name/Type, Frequencies, Services, Fees, Fuel, Credit Cards, Phone/Fax, Hours Internet, Courtesy Car
- **Aircraft Businesses/Clubs:** Name, Type (sales, training, servicing), Frequencies/Phone/Fax, Credit Cards, Internet, Services
- **Frequencies:** Type/Frequency
- **Instrument Approaches:** Published Approach, Frequency
- **Services Available:** Category, Specific Service

- Frequencies: Type/Frequency
- Weather Contacts: Service Type and Frequencies/Phone (AWOS/ASOS)
- Obstructions: General Airport Obstructions
- Flight Service Station (FSS): FSS Name, Phone Numbers
- Approaches: Types
- General Information and/or Notes: Fees, Airport Notes, Local Area Information
- Special Operations at Airport: Helicopters, etc.
- Restaurants: On the Field and Nearby
- Transportation: Taxi Services, Car Rentals, Type and Availability (public, shuttle, limo, etc.)
- Attractions: Hotels, Museums, Raceways, Golfing, etc.
- NAVAIDs: Type, Identifier, Frequency, Radial, Distance
- Charts: VFR Sectional
- Elevation: Airfield Elevation (feet)
- Mag Var: Airfield Magnetic Variation (degrees)
- Airport Manager: Phone

The airport 'Frequencies' Box uses the descriptions and abbreviations listed in the following table:

Communication Frequencies			Navigation Frequencies
Approach *	Control	Pre-taxi	ILS
Arrival *	CTA *	Radar	LOC
ASOS	Departure *	Ramp	
ATIS	FSS	Terminal *	
AWOS	Gate	TMA *	
Center	Ground	Tower	
Class B *	Helicopter	TRSA *	
Class C *	Multicom	Unicom	
Clearance	Other		
* May include Additional Information			

Table 5-8 Airport Frequency Abbreviations

A departure, arrival, or approach can be loaded using the softkeys on the Airport Information Page. See the Procedures section for details. METARs or TAFs applicable to the selected airport can be selected for display (see the Hazard Avoidance section for details about weather).

Selecting an airport for review by identifier, facility name, or location:

- 1) From the 'WPT - Airport Information' Page (**Info 1** Softkey), press the **FMS** Knob.
- 2) Use the **FMS** Knobs and enter an identifier, facility name, or location.

- 3) Press the **ENT** Key.
- 4) Press the **FMS** Knob to remove the cursor.

Selecting a runway:

- 1) With the 'WPT - Airport Information' Page (**Info 1** Softkey) displayed, press the **FMS** Knob to activate the cursor.
- 2) Turn the large **FMS** Knob to place the cursor in the 'Runways' Box, on the runway designator.
- 3) Turn the small **FMS** Knob to display the desired runway (if more than one) for the selected airport.
- 4) To remove the flashing cursor, press the **FMS** Knob.

Viewing a destination airport:

From the 'WPT - Airport Information' Page (**Info 1** Softkey) press the **MENU** Key. Select 'View Destination Airport'. The Destination Airport is displayed.

The system provides a **Nearest** Softkey on the PFD, which gives the pilot quick access to nearest airport information (very useful if an immediate landing is required). The 'Nearest Airports' Window displays a list of up to 25 of the nearest airports (three entries can be displayed at one time). If there are more than three they are displayed in a scrollable list. If there are no nearest airports available, "None Within 200nm" is displayed.



Figure 5-27 Nearest Airports Window on PFD

Pressing the ENT Key while the 'Nearest Airports' Window is shown displays the PFD 'Airport Information' Window for the highlighted airport. Pressing the ENT Key again returns to the 'Nearest Airports' Window with the cursor on the next airport in the list. Continued presses of the ENT Key sequences through the information pages for all airports in the Nearest Airports list.



Figure 5-28 Airport Information Window on PFD

Viewing information for a nearest airport on the PFD:

- 1) Press the **Nearest** Softkey to display the 'Nearest Airports' Window.
- 2) Turn the **FMS** Knob to highlight the desired airport identifier, and press the **ENT** Key to display the Airport Information Window.
- 3) To return to the Nearest Airports Window press the **ENT** Key (with the cursor on 'BACK') or press the **CLR** Key. The cursor is now on the next airport in the 'Nearest Airports' Window list. (Repeatedly pressing the **ENT** Key moves through the airport list, alternating between the 'Nearest Airports' Window and the 'Airport Information' Window.)
- 4) Press the **CLR** Key or the **Nearest** Softkey to close the PFD Nearest Airports Window.

The Nearest Airports Page on the MFD is first in the group of NRST pages because of its potential use in the event of an in-flight emergency. In addition to displaying a map of the currently selected airport and surrounding area, the page displays nearest airport information in five boxes labeled Nearest Airports, Information, Runways, Frequencies, and Approaches.

The selected airport is indicated by a white arrow, and a dashed white line is drawn on the navigation map from the aircraft position to the nearest airport. Up to five nearest airports, one runway, up to three frequencies, and up to four approaches are visible at one time. If there are more

than can be shown, each list can be scrolled. If there are no items for display in a boxed area, text indicating that fact is displayed. The currently selected airport remains in the list until it is unselected.

See the Audio Panel & CNS Section for frequency selection and the Procedures Section for approaches.



Figure 5-29 Nearest Airport Page

Viewing information for a nearest airport on the MFD:

- 1) Turn the large **FMS** Knob to select the 'NRST' page group.
- 2) Turn the small **FMS** Knob to select the 'Nearest Airports' Page (it is the first page of the group, so it may already be selected). If there are no Nearest Airports available, 'None Within 200nm' is displayed.
- 3) Press the **APT** Softkey; or press the **FMS** Knob; or press the **MENU** Key, highlight 'Select Airport Window' and press the **ENT** Key. The cursor is placed in the 'Nearest Airports' Box. The first airport in the nearest airports list is highlighted.
- 4) Turn the **FMS** Knob to highlight the desired airport. (Pressing the **ENT** Key also moves to the next airport.)
- 5) Press the **FMS** Knob to remove the flashing cursor.

Viewing runway information for a specific airport:

- 1) With the 'NRST - Nearest Airports' Page displayed, press the **RNWX** Softkey; or press the **MENU** Key, highlight 'Select Runway Window'; and press the **ENT** Key. The cursor is placed in the 'Runways' Box.
- 2) Turn the small **FMS** Knob to select the desired runway.
- 3) Press the **FMS** Knob to remove the flashing cursor.

The 'Nearest Airports' Box on the System Setup Page defines the minimum runway length and surface type used when determining the 25 nearest airports to display on the MFD Nearest Airports Page. A minimum runway length and/or surface type can be entered to prevent airports with small runways or runways that are not appropriately surfaced from being displayed. Default settings are 3000 feet (or meters) for runway length and "Hard Only" for runway surface type.

Selecting nearest airport surface and minimum runway length matching criteria:

- 1) Use the **FMS** Knob to select the 'Aux - System Setup 1' Page.
- 2) Press the **FMS** Knob momentarily to activate the flashing cursor.
- 3) Turn the large **FMS** Knob to highlight the 'Runway Surface' Field in the 'Nearest Airport' Box.
- 4) Turn the small **FMS** Knob to select the desired runway option (Any, Hard Only, Hard/Soft).
- 5) Press the **ENT** Key. The cursor moves to the 'Minimum Length' Field in the 'Nearest Airport' Box.
- 6) Use the **FMS** Knob to enter the minimum runway length (zero to 25,000 feet) and press the **ENT** Key.
- 7) Press the **FMS** Knob to remove the flashing cursor.

INTERSECTIONS

 **NOTE:** The VOR displayed on the Intersection Information Page is the nearest VOR, not necessarily the VOR used to define the intersection.

The Intersection Information Page is used to view information about intersections. In addition to displaying a map of the currently selected intersection and surrounding area, the Intersection Information Page displays information about the VOR which is nearest to the selected intersection.



Navigation Map Showing Selected Intersection

Selected Intersection

Intersection Identifier

Intersection Info
- Region
- Lat/Long

Nearest VOR Info
- Identifier/Type (symbol)
- Radial to VOR
- Distance to VOR

Figure 5-30 Intersection Information Page

The Nearest Intersections Page can be used to quickly find an intersection close to the flight path. The selected intersection is indicated by a white arrow.

NOTE: The list only includes intersections that are within 200 nm.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CNS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index



Figure 5-31 Nearest Intersection Page

Selecting an intersection:

- 1) With the 'WPT - Intersection Information' Page displayed, press the **FMS** Knob. The cursor is placed in the 'Intersection' Box.
- 2) Use the **FMS** Knobs to enter an identifier.
- 3) Press the **ENT** Key.
- 4) Press the **FMS** Knob to remove the flashing cursor.

Or:

- 1) With the 'NRST - Nearest Intersections' Page displayed, press the **FMS** Knob.
- 2) Turn the **FMS** Knob to select an identifier in the 'Nearest INT' Box, and press the **ENT** Key .
- 3) Press the **FMS** Knob to remove the flashing cursor.

NDB

The NDB Information Page displays information for the selected NDB and a map of the surrounding area. This page also provides the NDB Frequency and information for the airport nearest to the NDB.



Navigation Map Showing Selected NDB

Selected NDB

NDB Identifier/Type
- Facility Name
- Nearest City

NDB Information
- Type
- Region
- Lat/Long

NDB Frequency

Nearest Airport Info
- Identifier/Type (symbol)
- Bearing/Distance to Airport

Figure 5-32 NDB Information Page



NOTE: Compass locator (LOM, LMM): a low power, low or medium frequency radio beacon installed in conjunction with the instrument landing system. When LOM is used, the locator is at the Outer Marker; when LMM is used, the locator is at the Middle Marker.

The Nearest NDB Page can be used to quickly find an NDB close to the flight path. A white arrow before the NDB identifier indicates the selected NDB. In addition to displaying a map of the surrounding area, the page displays information for up to 25 nearest NDBs. The list only includes NDBs that are within 200nm. If there are no NDBs in the list, text indicating that there are no nearest NDBs is displayed, and the information and frequency fields are dashed.

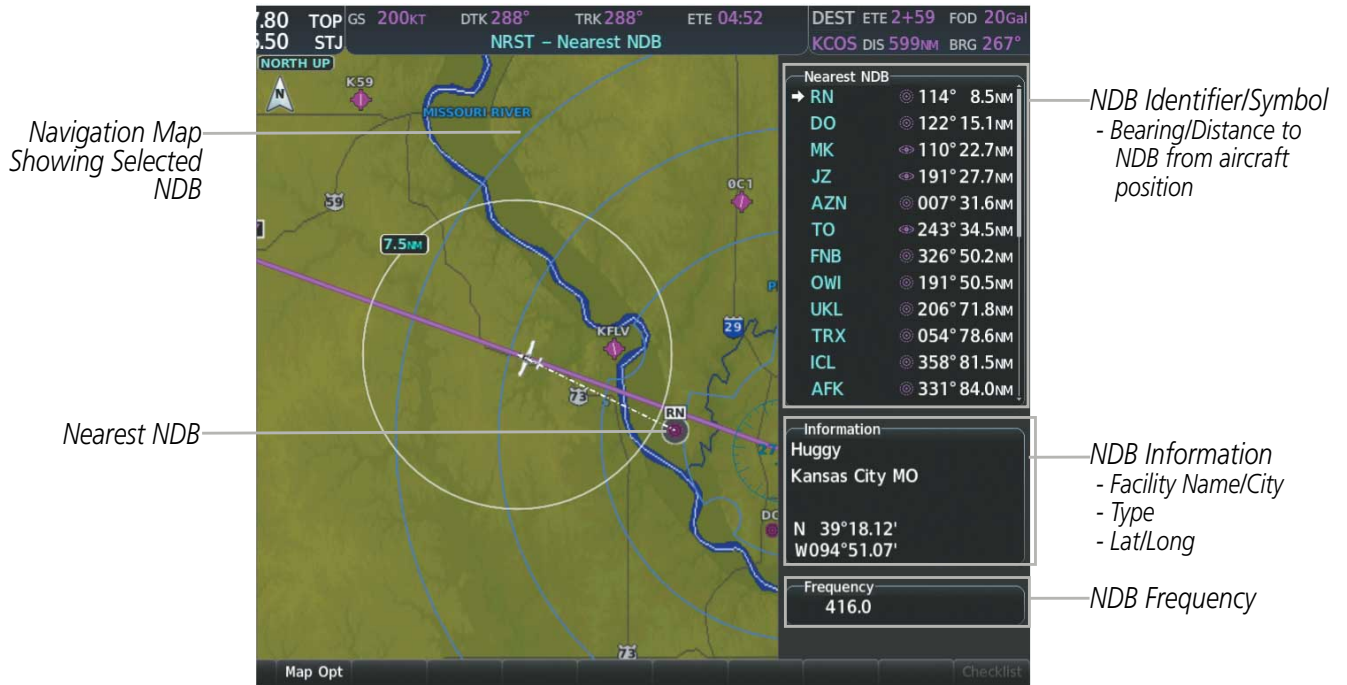


Figure 5-33 Nearest NDB Page

Selecting an NDB:

- 1) With the 'WPT - NDB Information' Page displayed, press the **FMS** Knob. The cursor is placed in the 'NDB' Box.
- 2) Use the **FMS** Knobs to enter the NDB identifier, name, or the city in which it's located.
- 3) Press the **ENT** Key.
- 4) Press the **FMS** Knob to remove the flashing cursor.

Or:

- 1) With the 'NRST - Nearest NDB' Page displayed, press the **FMS** Knob.
- 2) Turn the **FMS** Knob to select an identifier in the 'Nearest NDB' Box, and press the **ENT** Key.
- 3) Press the **FMS** Knob to remove the flashing cursor.

VOR

The VOR Information Page displays information for the selected VOR and a map of the surrounding area. This page can be used to view information about VOR and ILS navigation signals, or to quickly auto-tune a VOR or ILS frequency.

Localizer information cannot be viewed on the VOR Information Page. If a VOR station is combined with a TACAN station it is listed as a VORTAC on the VOR Information Page and if it includes only DME, it is displayed as VOR-DME.

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CNS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

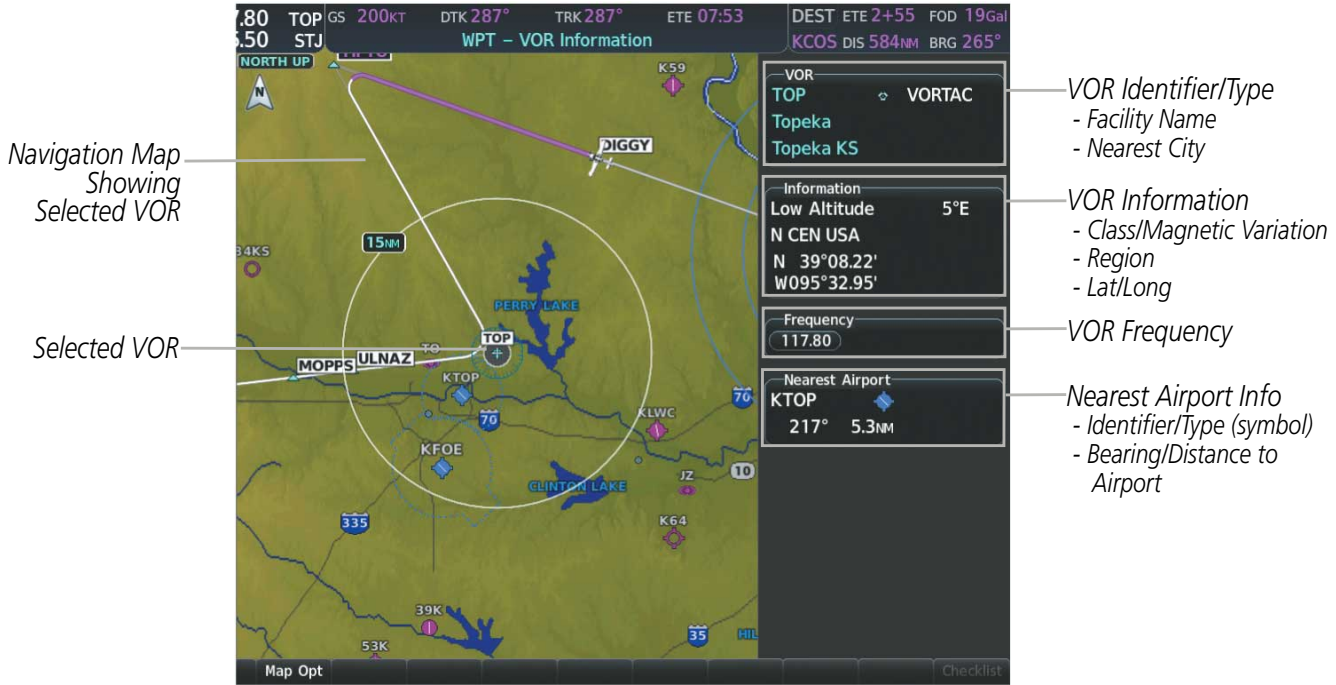


Figure 5-34 VOR Information Page

The Nearest VOR Page can be used to quickly find a VOR station close to the aircraft. A white arrow before the VOR identifier indicates the selected VOR. Also, a NAV frequency from a selected VOR station can be loaded from the Nearest VOR Page. In addition to displaying a map of the surrounding area, the Nearest VOR Page displays information for up to 25 nearest VOR stations. The list only includes VORs that are within 200 nm. If there are no nearest VORs in the list, the information is dashed.

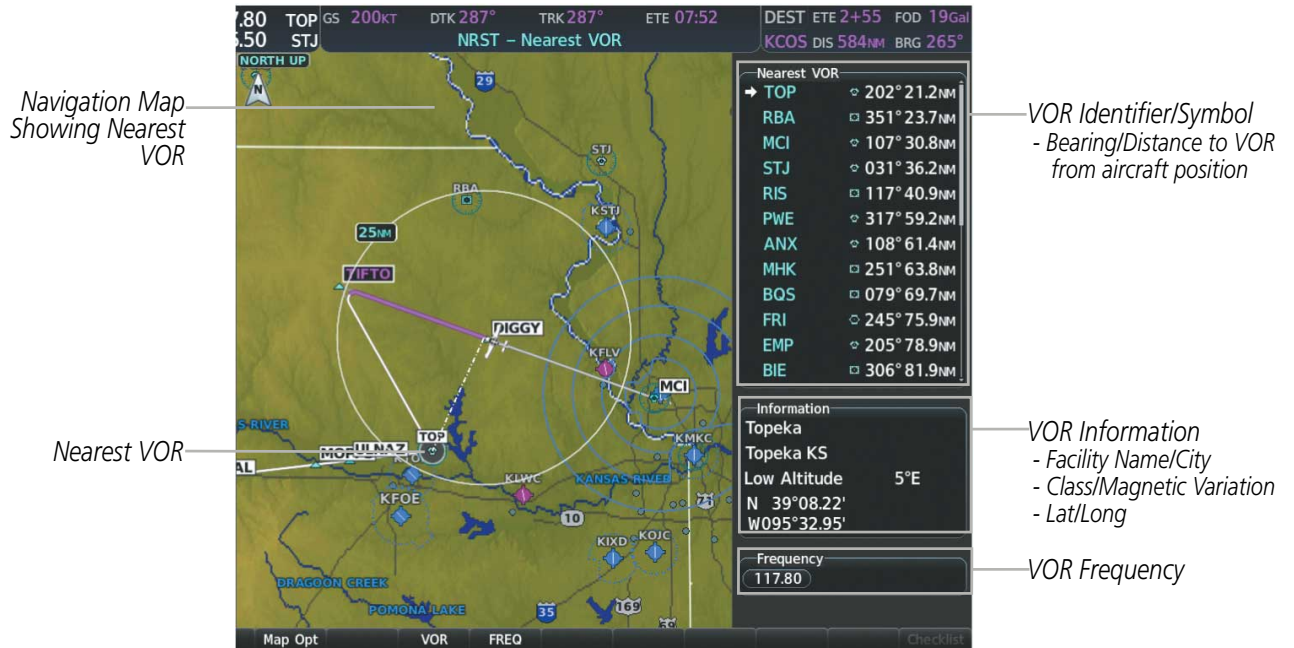


Figure 5-35 Nearest VOR Page

Selecting a VOR:

- 1) With the 'WPT - VOR Information' Page displayed, press the **FMS** Knob. The cursor is place in the 'VOR' Box.
- 2) Use the **FMS** Knobs to enter the VOR identifier, name, or the city in which it's located.
- 3) Press the **ENT** Key.
- 4) Press the **FMS** Knob to remove the flashing cursor.

Or:

- 1) With the 'NRST - Nearest VOR' Page displayed, press the **FMS** Knob; or press the **VOR** Softkey.
- 2) Turn the **FMS** Knob to select an identifier in the 'Nearest VOR' Box, and press the **ENT** Key.
- 3) Press the **FMS** Knob to remove the flashing cursor.

Or:

- 1) With the 'NRST - Nearest VOR' Page displayed, press the **MENU** Key.
- 2) Highlight 'Select VOR Window', and press the **ENT** Key.
- 3) Turn the **FMS** Knob to select an identifier in the 'Nearest VOR' Box, and press the **ENT** Key.
- 4) Press the **FMS** Knob to remove the flashing cursor.

VRP

The VRP Information Page displays information about the selected visual reporting point (VRPs) and a map of the surrounding area.

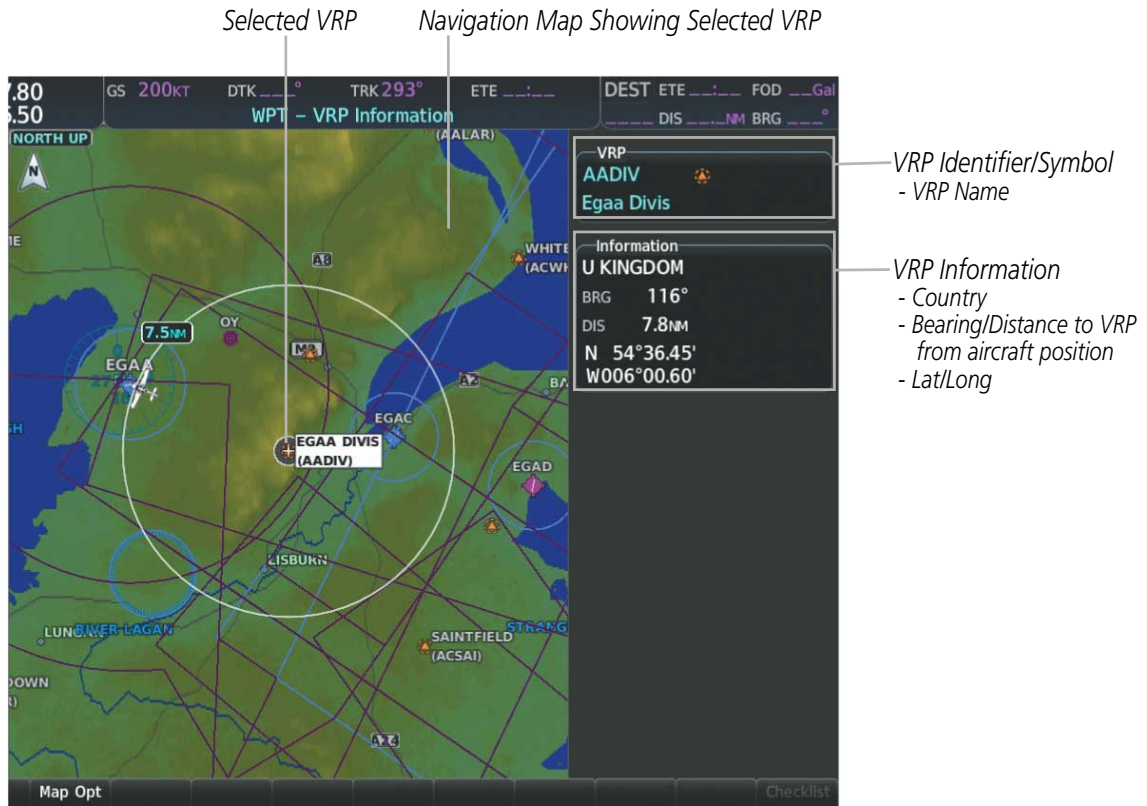


Figure 5-36 VRP Information Page

The Nearest VRP Page can be used to quickly find a VRP close to the aircraft. A white arrow before the VRP identifier indicates the selected VRP. In addition to displaying a map of the surrounding area, the Nearest VRP Page displays information for up to 25 nearest VRPs. The list only includes VRPs that are within 200 nm. If there are no nearest VRPs in the list, the information is dashed.

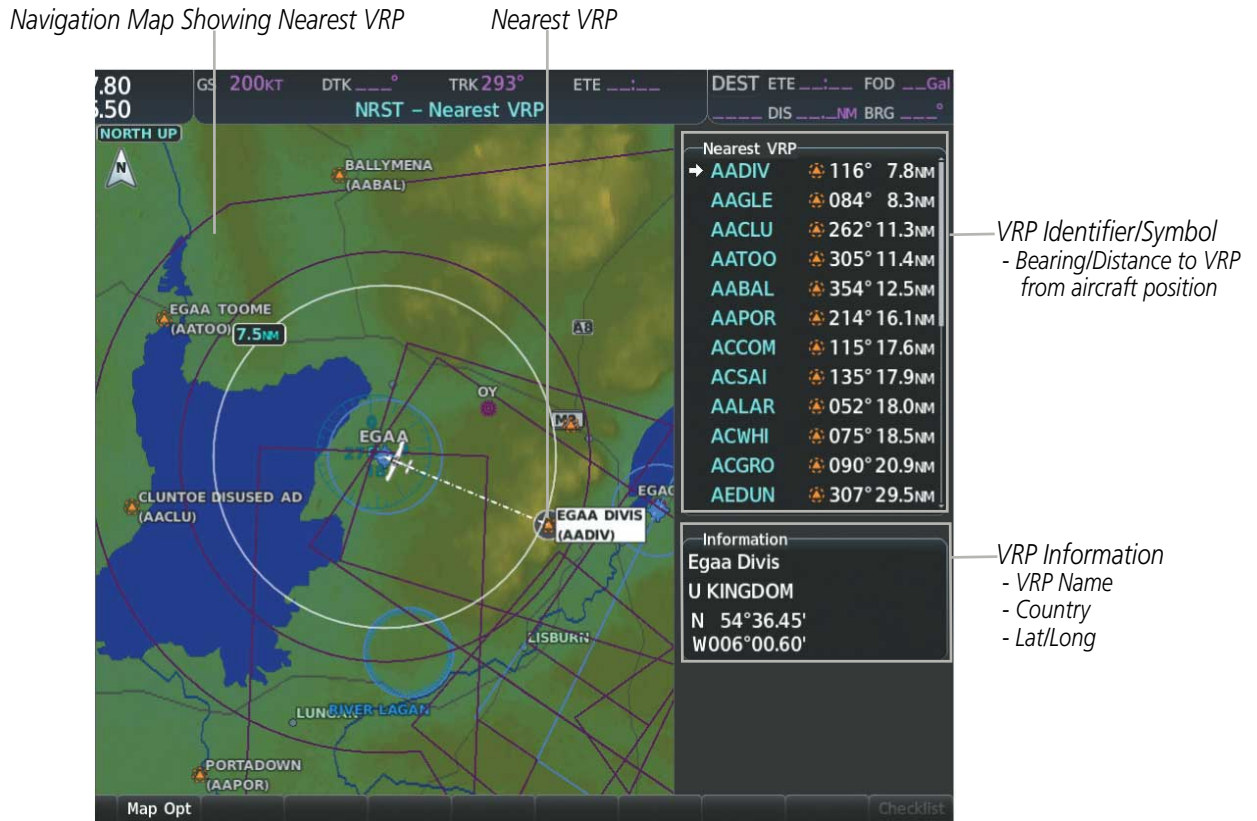


Figure 5-37 Nearest VRP Page

Selecting a VRP:

- 1) With the 'WPT - VRP Information' Page displayed, press the **FMS** Knob. The cursor is placed in the 'VRP' Box.
- 2) Use the **FMS** Knobs to enter the VRP identifier or name.
- 3) Press the **ENT** Key.
- 4) Press the **FMS** Knob to remove the flashing cursor.

Or:

- 1) With the 'NRST - Nearest VRP' Page displayed, press the **FMS** Knob.
- 2) Turn the **FMS** Knob to select an identifier in the 'Nearest VRP' Box, and press the **ENT** Key.
- 3) Press the **FMS** Knob to remove the flashing cursor.

USER WAYPOINTS

The system can create and store up to 1,000 user-defined waypoints. User waypoints can be created from any map page (except PFD Maps, Aux-Trip Planning Page, or Procedure Pages) by selecting a position on the map using the Joystick, or from the User Waypoint Information Page by referencing a

bearing/distance from an existing waypoint, bearings from two existing waypoints, or a latitude and longitude. Once a waypoint has been created, it can be renamed, deleted, or moved. Temporary user waypoints are erased upon system power down.

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CNS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

Navigation Map Showing Selected User Waypoint

User Wpt Comment

Selected User Waypoint

User Waypoint Info
- Identifier
- Temporary/Normal
- Waypoint Type

Reference Wpt/Info
- Identifier/Rad/Dist or
- Identifiers/Radials or
- Region/Lat/Long

User Waypoint List
- Identifier
- Comment

User Wpts Used

Figure 5-38 User Waypoint Information Page

Navigation Map Showing Selected User Waypoint

Selected User Waypoint

Nearest User Wpt List
- Identifier
- Bearing/Distance from aircraft position

User Waypoint Info
- Comment
- Lat/Long

Reference Wpt Info
- Identifier
- Radial/Distance

Figure 5-39 Nearest User Waypoint Page

Selecting a User Waypoint:

- 1) With the 'WPT - User WPT Information' Page displayed, press the **FMS** Knob. The cursor is placed in the 'User Waypoint' Box.
- 2) Use the **FMS** Knobs to enter the name of the User Waypoint; or use the large **FMS** Knob to scroll to the desired waypoint in the 'User Waypoint List' Box.
- 3) Press the **ENT** Key.
- 4) Press the **FMS** Knob to remove the flashing cursor.

Or:

- 1) With the 'NRST - Nearest User WPTS' Page displayed, press the **FMS** Knob.
- 2) Turn the **FMS** Knob to select an identifier in the 'Nearest User' Box, and press the **ENT** Key.
- 3) Press the **FMS** Knob to remove the flashing cursor.

Creating user waypoints from the User WPT Information Page:

- 1) Press the **New** Softkey, or press the **MENU** Key and select 'Create New User Waypoint'.
- 2) Enter a user waypoint name (up to six characters).
- 3) Press the **ENT** Key. The current aircraft position is the default location of the new waypoint.
- 4) If desired, define the type and location of the waypoint in one of the following ways:
 Select "RAD/RAD" using the small **FMS** Knob, press the **ENT** Key, and enter the two reference waypoint identifiers and radials into the 'Reference Waypoints' Box using the **FMS** Knobs.

Or:

Select "RAD/DIS" using the small **FMS** Knob, press the **ENT** Key, and enter the reference waypoint identifier, the radial, and the distance into the 'Reference Waypoints' Box using the **FMS** Knobs.

Or:

Select "LAT/LON" using the small **FMS** Knob, press the **ENT** Key, and enter the latitude and longitude into the 'Information' Box using the **FMS** Knobs.

- 5) Press the **ENT** Key to accept the new waypoint.
- 6) If desired, change the storage method of the waypoint to temporary by moving the cursor to 'Temporary' and selecting the **ENT** Key to check the box.
- 7) Press the **FMS** Knob to remove the flashing cursor.

Or:

- 1) Press the **FMS** Knob to activate the cursor.
- 2) Enter a user waypoint name (up to six characters).
- 3) Press the **ENT** Key. The message 'Are you sure you want to create the new user waypoint AAAAAA?' is displayed.
- 4) With 'YES' highlighted, press the **ENT** Key.
- 5) If desired, define the type and location of the waypoint in one of the following ways:
Select "RAD/RAD" using the small **FMS** Knob, press the **ENT** Key, and enter the two reference waypoint identifiers and radials into the 'Reference Waypoints' Box using the **FMS** Knobs.

Or:

Select "RAD/DIS" using the small **FMS** Knob, press the **ENT** Key, and enter the reference waypoint identifier, the radial, and the distance into the 'Reference Waypoints' Box using the **FMS** Knobs.

Or:

Select "LAT/LON" using the small **FMS** Knob, press the **ENT** Key, and enter the latitude and longitude into the 'Information' Box using the **FMS** Knobs.

- 6) Press the **ENT** Key to accept the new waypoint.
- 7) If desired, change the storage method of the waypoint to temporary by moving the cursor to 'Temporary' and selecting the **ENT** Key to check the box.
- 8) Press the **FMS** Knob to remove the flashing cursor.

Creating user waypoints from map pages:

- 1) Push the **Joystick** to activate the panning function and pan to the map location of the desired user waypoint.
- 2) Press the **ENT** Key. The 'WPT - User WPT Information' Page is displayed with the captured position.



NOTE: If the pointer has highlighted a map database feature, one of three things happens upon pressing the **ENT** Key: 1) information about the selected feature is displayed instead of initiating a new waypoint, 2) a menu pops up allowing a choice between 'Review Airspaces' or 'Create User Waypoint', or 3) a new waypoint is initiated with the default name being the selected map item.

- 3) Enter a user waypoint name (up to six characters).
- 4) Press the **ENT** Key to accept the selected name. The first reference waypoint box is highlighted.
- 5) If desired, define the type and location of the waypoint in one of the following ways:

Select “RAD/RAD” using the small **FMS** Knob, press the **ENT** Key, and enter the two reference waypoint identifiers and radials into the ‘Reference Waypoints’ Box using the **FMS** Knobs.

Or:

Select “RAD/DIS” using the small **FMS** Knob, press the **ENT** Key, and enter the reference waypoint identifier, the radial, and the distance into the ‘Reference Waypoints’ Box using the **FMS** Knobs.

Or:

Select “LAT/LON” using the small **FMS** Knob, press the **ENT** Key, and enter the latitude and longitude into the ‘Information’ Box using the **FMS** Knobs.

- 6) Press the **ENT** Key to accept the new waypoint.
- 7) If desired, change the storage method of the waypoint to temporary or normal by moving the cursor to ‘Temporary’ and selecting the **ENT** Key to check or uncheck the box.
- 8) Press the **FMS** Knob to remove the flashing cursor.
- 9) Press the **Go Back** Softkey to return to the map page.

EDITING USER WAYPOINTS

Once a user waypoint has been created, it may be edited, renamed, or deleted. A system generated comment for a user waypoint incorporates the reference waypoint identifier, bearing, and distance. If a system generated comment has been edited, a new comment can be generated.

The default type of user waypoint (normal or temporary) can be changed using the ‘WPT — User Waypoint Information’ Page Menu. Temporary user waypoints are automatically deleted upon the next power cycle.

Editing a user waypoint comment or location:

- 1) With the ‘WPT - User WPT Information’ Page displayed, press the **FMS** Knob to activate the cursor. The cursor is placed in the ‘User Waypoint’ Box.
- 2) Use the **FMS** Knobs to enter the name of the User Waypoint; or turn the large **FMS** Knob and scroll to the desired waypoint in the ‘User Waypoint List’ Box.
- 3) Press the **ENT** Key.
- 4) Turn the large **FMS** Knob to move the cursor to the desired field.
- 5) Use the **FMS** Knobs to make any changes.
- 6) Press the **ENT** Key to accept the changes.
- 7) Press the **FMS** Knob to remove the flashing cursor.

Renaming user waypoints:

- 1) With the 'WPTS - User WPT Information' Page displayed, press the **FMS** Knob. The cursor is placed in the 'User Waypoint' Box.
- 2) Use the **FMS** Knobs to enter the name of the User Waypoint; or turn the large **FMS** Knob and scroll to the desired waypoint in the 'User Waypoint List' Box.
- 3) Press the **Rename** Softkey; or press the **MENU** Key, select 'Rename User Waypoint', and press the **ENT** Key.
- 4) Enter a new name.
- 5) Press the **ENT** Key. The message 'Do you want to rename the user waypoint AAAAAA toBBBBBB?' is displayed.
- 6) With 'YES' highlighted, press the **ENT** Key.
- 7) Press the **FMS** Knob to remove the flashing cursor.

Changing the location of an existing waypoint to the aircraft present position:

- 1) With the 'WPT - User WPT Information' Page displayed, press the **FMS** Knob to activate the cursor. The cursor is placed in the 'User Waypoint' Box.
- 2) Use the **FMS** Knobs to enter the name of the User Waypoint; or turn the large **FMS** Knob and scroll to the desired waypoint in the 'User Waypoint List' Box.
- 3) Press the **MENU** Key.
- 4) Select 'Use Present Position'.
- 5) Press the **ENT** Key twice. The new waypoint's location is saved.
- 6) Press the **FMS** Knob to remove the flashing cursor.

Resetting the comment field to the system generated comment:

- 1) With the 'WPT - User WPT Information' Page displayed, press the **FMS** Knob to activate the cursor. The cursor is placed in the 'User Waypoint' Box.
- 2) Use the **FMS** Knobs to enter the name of the User Waypoint; or turn the large **FMS** Knob and scroll to the desired waypoint in the 'User Waypoint List' Box.
- 3) Press the **MENU** Key.
- 4) Select 'Auto Comment'.
- 5) Press the **ENT** Key. The generated comment is based on the reference point used to define the waypoint.

Changing the user waypoint storage duration default setting:

- 1) With the 'WPT - User WPT Information' Page displayed, press the **MENU** Key. The cursor is placed on 'Waypoint Setup' in the 'Options' Box.
- 2) Press the **ENT** Key.

- 3) Turn the **FMS** Knob to select 'Normal' or 'Temporary' as desired, and press the **ENT** Key.
- 4) Press the **FMS** Knob to remove the flashing cursor and return to the 'WPT - User WPT Information' Page.

Deleting a single user waypoint:

- 1) With the 'WPT - User WPT Information' Page displayed, press the **FMS** Knob to activate the cursor. The cursor is placed in the 'User Waypoint' Box.
- 2) Use the **FMS** Knobs to enter the name of the User Waypoint; or turn the large **FMS** Knob and scroll to the desired waypoint in the 'User Waypoint List' Box.
- 3) Press the **Delete** Softkey or press the **CLR** Key. 'YES' is highlighted in the confirmation window.
- 4) Press the **ENT** Key.
- 5) Press the **FMS** Knob to remove the flashing cursor.

Or:

- 1) With the 'WPT - User WPT Information' Page displayed, press the **FMS** Knob to activate the cursor. The cursor is placed in the 'User Waypoint' Box.
- 2) Use the **FMS** Knobs to enter the name of the User Waypoint; or turn the large **FMS** Knob and scroll to the desired waypoint in the 'User Waypoint List' Box.
- 3) Press the **MENU** Key.
- 4) Select 'Delete User Waypoint'.
- 5) Press the **ENT** Key twice to confirm the selection.
- 6) Press the **FMS** Knob to remove the flashing cursor.

Deleting all user waypoints:



NOTE: The option to 'Delete All User Waypoints' is not available while the aircraft is in flight.

- 1) With the 'WPT - User WPT Information' Page displayed, press the **FMS** Knob to activate the cursor. The cursor is placed in the 'User Waypoint' Box.
- 2) Use the **FMS** Knobs to enter the name of the User Waypoint; or turn the large **FMS** Knob and scroll to the desired waypoint in the 'User Waypoint List' Box.
- 3) Press the **MENU** Key.
- 4) Turn the **FMS** Knob to highlight 'Delete All User Waypoints'.
- 5) Press the **ENT** Key twice to confirm the selection.
- 6) Press the **FMS** Knob to remove the flashing cursor.

5.4 AIRSPACES

The system can display the following types of airspaces: Class B/TMA, Class C/TCA, Class D, Restricted, MOA (Military), Other Airspace, Air Defense Identification Zone (ADIZ), and Temporary Flight Restriction (TFR). For detailed information concerning TFRs, see the Hazard Avoidance Section. Display settings for airspace altitude labels and airspace boundaries are selected from the 'Airspace' Group in the 'Map Settings' Window.

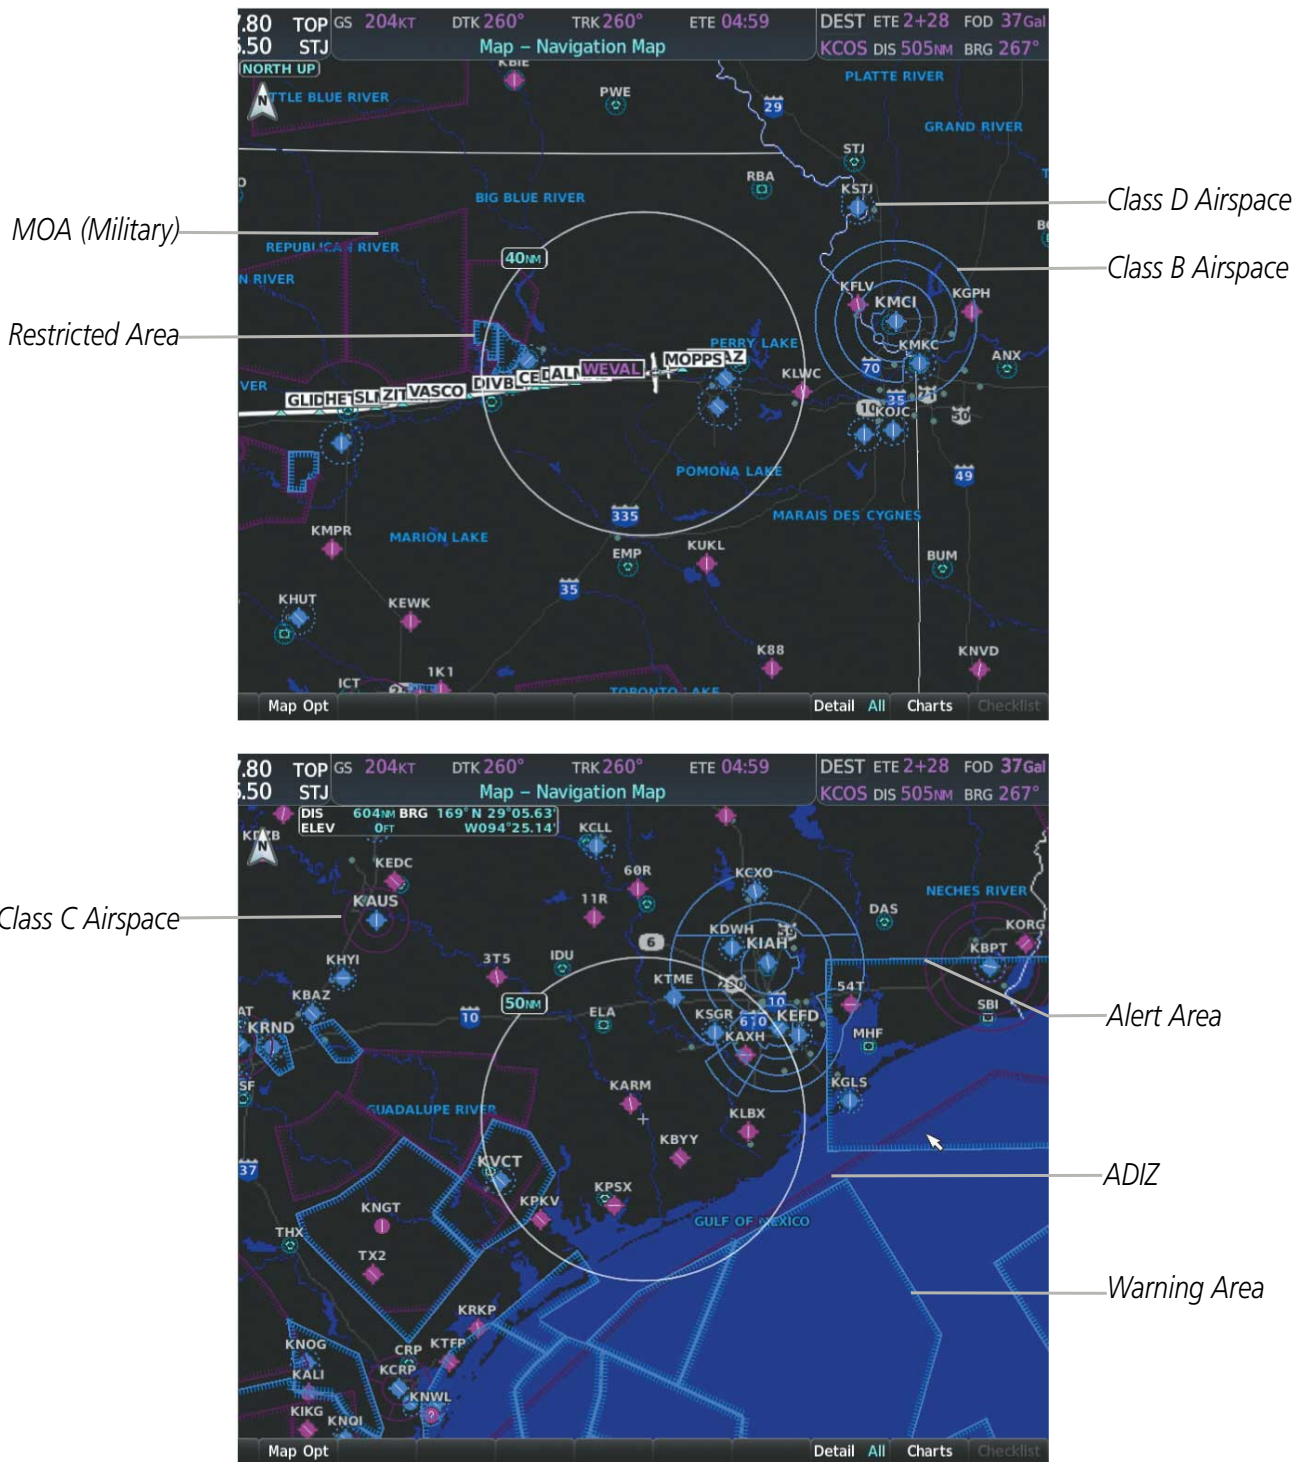


Figure 5-40 Airspace

A selected frequency associated with the airspace can be loaded from the 'Nearest Airspaces' Page. In addition to displaying a map of airspace boundaries and surrounding area, the 'Nearest Airspaces' Page displays airspace information in four boxes labelled Airspace Alerts, Airspace Agency, Vertical Limits, and Frequencies. Airspace alerts and associated frequencies are shown in scrollable lists on the 'Nearest

Airspaces' Page. The Alerts and FREQ Softkeys place the cursor in the respective list. The FREQ Softkey is enabled only if one or more frequencies exist for a selected airspace.

Airspace Alerts Info

- Name
- Proximity (Ahead, Inside, Ahead < 2nm, Within 2nm)
- Time till Intercept (only if Ahead or Ahead < 2nm)

Airspace/Agency Info

- Airspace Type
- Controlling Agency

Airspace Vertical Limits

- Ceiling
- Floor

Associated Frequencies

- Type
- Availability/Info
- Frequency

Figure 5-41 Nearest Airspace Page

The 'Airspace Alerts' Box (Aux - System Setup 1 Page) on the MFD allows the pilot to turn the controlled/special-use airspace message alerts on or off. This does not affect the alerts listed on the Nearest Airspaces Page or the airspace boundaries depicted on the Navigation Map Page. It simply turns on/off the message provided in the 'Alerts' Window on the PFD when the aircraft is approaching or near an airspace. An altitude buffer is also provided which "expands" the vertical range above or below an airspace. For example, if the buffer is set at 500 feet, and the aircraft is more than 500 feet above/below an airspace, an alert message is not generated, but if the aircraft is less than 500 feet above/below an airspace and projected to enter it, the pilot is notified with an alert message. The default setting for the altitude buffer is 200 feet.

Pressing the PFD Message/Alerts Softkey displays the 'Alerts' Window on the PFD. The following airspace alerts are displayed in the 'Alerts' Window:

Message	Comments
INSIDE ARSPC – Inside airspace.	The aircraft is inside the airspace.
ARSPC AHEAD – Airspace ahead – less than 10 minutes.	Special use airspace is ahead of aircraft. The aircraft penetrates the airspace within 10 minutes.

Message	Comments
ARSPC NEAR – Airspace near and ahead.	Special use airspace is within 2 NM and the aircraft will penetrate the airspace within 10 minutes.
ARSPC NEAR – Airspace near – less than 2 nm.	Special use airspace is within 2 nm of the aircraft position.

Table 5-9 PFD Airspace Messages

Displaying and removing airspace altitude labels:

- 1) Press the **MENU** Key with the 'Map - Navigation Map' Page displayed. The cursor flashes on the 'Map Settings' option.
- 2) Press the **ENT** Key. The 'Map Settings' Window is displayed.
- 3) Turn the small **FMS** Knob to select the 'Airspace' Group, if necessary, and press the **ENT** Key.
- 4) Turn the large **FMS** Knob to select the 'Airspace ALT LBL' Field.
- 5) Turn the small **FMS** Knob to select 'On' to display labels and 'Off' to remove labels.
- 6) Press the **FMS** Knob to return to the 'Map - Navigation Map' Page.

Changing the altitude buffer distance setting:

- 1) Use the **FMS** Knob to select the 'Aux - System Setup 1' Page (**Setup 1** Softkey).
- 2) Press the **FMS** Knob momentarily to activate the flashing cursor.
- 3) Turn the large **FMS** Knob to highlight the 'Altitude Buffer' Field in the 'Airspace Alerts' Box.
- 4) Use the **FMS** Knob or the alphanumeric keys to enter an altitude buffer value and press the **ENT** Key.
- 5) Press the **FMS** Knob to remove the flashing cursor.

Turning an airspace alert on or off:

- 1) Use the **FMS** Knob to select the 'Aux - System Setup 1' Page (**Setup 1** Softkey).
- 2) Press the **FMS** Knob momentarily to activate the flashing cursor.
- 3) Turn the large **FMS** Knob to highlight the desired field in the 'Airspace Alerts' Box.
- 4) Turn the small **FMS** Knob clockwise to turn the airspace alert On or counterclockwise to turn the alert Off.
- 5) Press the **FMS** Knob to remove the flashing cursor.

Selecting and viewing an airspace alert with its associated information:

- 1) Use the **FMS** Knob to select the 'NRST - Nearest Airspaces' Page.
- 2) Press the **Alerts** Softkey; or press the **FMS** Knob; or press the **MENU** Key, highlight 'Select Alerts' Window, and press the **ENT** Key. The cursor is placed in the 'Airspace Alerts' Box.
- 3) Select the desired airspace.
- 4) Press the **FMS** Knob to remove the flashing cursor.

The Smart Airspace function de-emphasizes airspaces above or below the current aircraft altitude. The function does not require the aircraft present position or flight path to enter the lateral boundaries of the airspace. If the current aircraft altitude is within 1100 feet of the vertical boundaries of the airspace, the airspace boundary is shown normally. If the current aircraft altitude is not within 1100 feet of the vertical boundaries of the airspace, the airspace boundary is shown subdued.



Smart Airspace Off

Smart Airspace On

Figure 5-42 Smart Airspace

Turning smart airspace on or off:

- 1) Use the **FMS** Knob to select the 'Map - Navigation Map' Page.
- 2) Press the **MENU** Key, and press the **ENT** Key. The cursor is placed in the 'Group' Box.
- 3) Turn the small **FMS** Knob to highlight the 'Airspace' and press the **ENT** Key.
- 4) Turn the large **FMS** Knob to highlight the 'Smart Airspace' Field.
- 5) Turn the small **FMS** Knob clockwise to turn smart airspace On or counterclockwise to turn smart airspace Off.
- 6) Press the **FMS** Knob to remove the flashing cursor.

5.5 DIRECT-TO NAVIGATION

The Direct-to method of navigation, initiated by pressing the Direct-to Key, is quicker to use than a flight plan when the desire is to navigate to a single point such as a nearby airport.

Once a direct-to is activated, the system establishes a point-to-point course line from the present position to the selected direct-to destination. Course guidance is provided until the direct-to is replaced with a new direct-to or flight plan, or cancelled.

A vertical navigation (VNV) direct-to creates a descent path (and provides guidance to stay on the path) from the current altitude to a selected altitude at the direct-to waypoint. Vertical navigation is based on barometric altitudes, not on GPS altitude, and is used for cruise and descent phases of flight.

The 'Direct-to' Window allows selection and activation of direct-to navigation. The 'Direct To' Window displays selected direct-to waypoint data on the PFD and the MFD.



Figure 5-43 Direct To Window - MFD

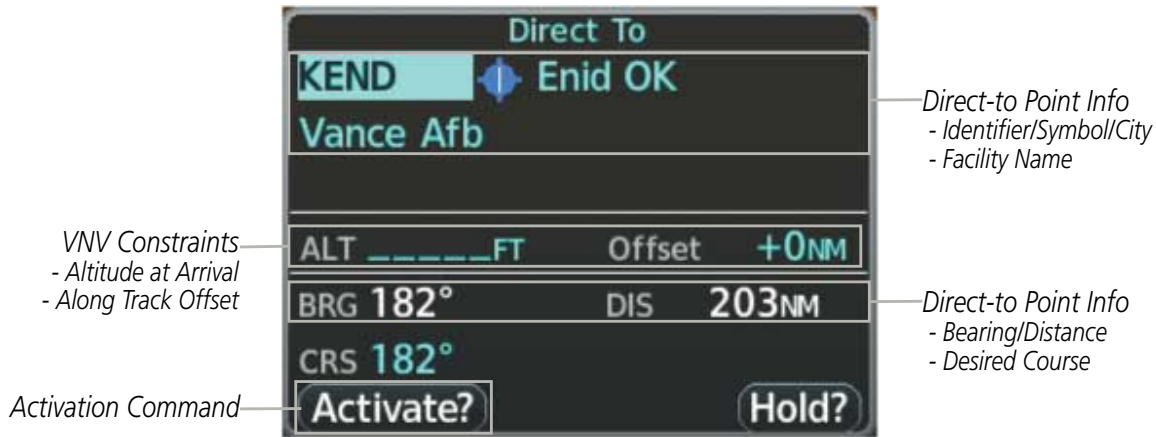


Figure 5-44 Direct To Window - PFD

Any waypoint can be entered as a direct-to destination from the 'Direct To' Window. Also, any waypoint contained in the active flight plan can be selected as a direct-to waypoint from the 'Direct To' Window, the Active Flight Plan Page, or the 'Flight Plan' Window.

NOTE: In some cases, Origin and Destination airports may not be displayed in the PFD "Flight Plan" or "Recent" submenu or the MFD "WPT - Airport Information" Page until the airport waypoint is loaded into the flight plan.



Figure 5-45 Waypoint Submenu

The 'Direct To' Window can be displayed from any page and allows selection and activation of direct-to navigation. If the direct-to is initiated from any page except the WPT pages, the default waypoint is the active flight plan waypoint (if a flight plan is active) or a blank waypoint field. Direct-to requests on any WPT page defaults to the displayed waypoint.

When navigating a direct-to, the system sets a direct great circle course to the selected destination. The course to a destination can also be manually selected using the 'CRS' or 'Course' Field on the 'Direct To' Window.

Entering a waypoint identifier, facility name, or city as a direct-to destination:

- 1) Press the **Direct-to** Key. The 'Direct To' Window is displayed.
- 2) Turn the small **FMS** Knob clockwise to begin entering a waypoint identifier (turning it counter-clockwise brings up the waypoint selection submenu - press the **CLR** Key to remove it), or turn the large **FMS** Knob to select the 'Ident, Facility, City' Field and use the FMS alphanumeric keys or turn the small **FMS** Knob to begin entering an identifier, facility, or city. If duplicate entries exist, additional entries can be viewed by turning the small **FMS** Knob during the selection process.
- 3) Press the **ENT** Key. 'Activate?' is highlighted.
- 4) Press the **ENT** Key to activate the direct-to.

Selecting an active flight plan waypoint as a direct-to destination:

- 1) While navigating an active flight plan, press the **Direct-to** Key. The 'Direct To' Window is displayed with the active flight plan waypoint as the default selection.
- 2) Turn the small **FMS** Knob counter-clockwise to display a list of flight plan waypoints (turning the knob counter-clockwise displays the waypoint submenu window).
- 3) Select the desired waypoint.
- 4) Press the **ENT** Key. The cursor is now displayed on 'Activate?'.
- 5) Press the **ENT** Key again to activate the direct-to.

Or:

- 1) Select the 'FPL - Active Flight Plan' Page on the MFD, or the 'Flight Plan' Window on the PFD.
- 2) Press the **FMS** Knob to activate the cursor (not required on PFD), and turn the large **FMS** Knob to highlight the desired waypoint.
- 3) Press the **Direct-to** Key.
- 4) Press the **ENT** Key. The cursor is now displayed on 'Activate?'.
- 5) Press the **ENT** Key again to activate the direct-to.

Selecting a Nearest, Recent or User waypoint as a direct-to destination:

- 1) Press the **Direct-to** Key. The 'Direct To' Window is displayed.
- 2) Turn the small **FMS** Knob counter-clockwise to display the waypoint submenu window.
- 3) Turn the small **FMS** Knob clockwise to display the Nearest, Recent or User waypoints.
- 4) Turn the large **FMS** Knob clockwise to select the desired waypoint.
- 5) Press the **ENT** Key. The cursor is now displayed on 'Activate?'.
- 6) Press the **ENT** Key again to activate the direct-to.

Selecting any waypoint as a direct-to destination:

- 1) Select the page or window containing the desired waypoint type and select the desired waypoint.
- 2) Press the **Direct-to** Key to display the 'Direct To' Window with the selected waypoint as the direct-to destination.
- 3) Press the **ENT** Key. The cursor is now displayed on 'Activate?'.
- 4) Press **ENT** again to activate the direct-to.

Selecting a nearby airport as a direct-to destination:

- 1) Press the **Nearest** Softkey on the PFD; or turn the **FMS** Knob to display the 'NRST - Nearest Airports' Page on the MFD and press the **FMS** Knob.
- 2) Use the **FMS** Knob to select the desired airport (the nearest one is already selected).
- 3) Press the **Direct-to** Key.
- 4) Press the **ENT** Key. The cursor is now displayed on 'Activate?'.
- 5) Press the **ENT** Key again to activate the direct-to.

Selecting a manual direct-to course:

- 1) Press the **Direct-to** Key. The 'Direct To' Window is displayed.
- 2) Turn the small **FMS** Knob clockwise to begin entering a waypoint identifier (turning it counter-clockwise brings up the waypoint selection submenu - press the **CLR** Key to remove it), or turn the large **FMS** Knob to select the 'Ident, Facility, City' Field and use the FMS alphanumeric keys or turn the small **FMS** Knob to begin entering an identifier, facility name, or city. Press the **ENT** Key.
- 3) Turn the large **FMS** Knob to highlight the 'CRS' or Course' Field.
- 4) Use the small **FMS** Knob or the FMS alphanumeric keys the desired course.
- 5) Press the **ENT** Key. The cursor is now displayed on 'Activate?'.
- 6) Press the **ENT** Key again to activate the direct-to.

Reselecting the direct course from the current position:

- 1) Press the **Direct-to** Key. The 'Direct To' Window is displayed with the cursor flashing in the 'Ident, Facility, City' Box.
- 2) Press the **ENT** Key. The cursor is now displayed on 'Activate?'.
- 3) Press the **ENT** Key again to activate the direct-to.

Direct-to destinations may also be selected by using the pointer on the navigation map pages. If no airport, NAVAID, or user waypoint exists at the desired location, a temporary waypoint named 'MAPWPT' is automatically created at the location of the map arrow.

Selecting a waypoint as a direct-to destination using the pointer:

- 1) From the Navigation Map Page, push the **Joystick** to display the pointer.
- 2) Move the **Joystick** to place the pointer at the desired destination location.
- 3) If the pointer is placed on an existing airport, NAVAID, VRP, or user waypoint, the waypoint name is highlighted.
- 4) Press the **Direct-to** Key to display the 'Direct To' Window with the selected point entered as the direct-to destination.
- 5) Press the **ENT** Key. The cursor is now displayed on 'Activate?'.
- 6) Press the **ENT** Key again to activate the direct-to.

Cancelling a Direct-to:

- 1) Press the **Direct-to** Key to display the 'Direct To' Window.
- 2) Press the **MENU** Key.
- 3) With 'Cancel Direct-To NAV' highlighted, press the **ENT** Key. If a flight plan is still active, the system resumes navigating the flight plan along the closest leg.

A direct-to with altitude constraints creates a descent path (and provides guidance to stay on the path) from the aircraft's current altitude to the altitude of the direct-to waypoint. The altitude is reached at the waypoint, or at the specified distance along the flight path if an offset distance has been entered. All VNV altitudes prior to the direct-to destination are removed from the active flight plan upon successful activation of a direct-to destination that is part of the active flight plan. All VNV altitudes following the direct-to waypoint are retained. See the section on Vertical Navigation for more information regarding the use and purpose of VNV altitudes and offset distances.

Entering a VNV altitude and along-track offset for the waypoint:










- 1) Press the **Direct-to** Key to display the 'Direct To' Window.
- 2) Turn the large **FMS** Knob to place the cursor over the 'VNV' altitude field.
- 3) Use the FMS knob or the FMS alphanumeric keys to enter the desired altitude.
- 4) Press the **ENT** Key to accept the altitude constraint; if the selected waypoint is an airport, an additional choice is displayed. Turn the small **FMS** Knob to choose 'MSL' or 'AGL', and press the **ENT** Key to accept the altitude.
- 5) The cursor is now flashing in the VNV offset distance field.
- 6) Use the **FMS** knob or FMS alphanumeric keys to enter the desired along-track distance ('-' indicates distance before the waypoint and '+' indicates distance after the waypoint).
- 7) Press the **ENT** Key. 'Activate?' is highlighted.
- 8) Press the **ENT** Key to activate.

Removing a VNV altitude constraint:

- 1) Press the **Direct-to** Key to display the 'Direct To' Window.
- 2) Press the **MENU** Key.
- 3) With 'Clear Vertical Constraints' highlighted, press the **ENT** Key.

5.6 FLIGHT PLANNING

Flight planning on the system consists of building a flight plan by entering waypoints one at a time, adding waypoints along airways, and inserting departures, airways, arrivals, or approaches as needed. The system allows flight planning information to be entered from either the MFD or PFD. The flight plan is displayed on maps using different line widths, colors, and types, based on the type of leg and the segment of the flight plan currently being flown (departure, enroute, arrival, approach, or missed approach).

Flight Plan Leg Type	Symbol
Active Course Leg*	
Active Heading Leg*	
Active Roll Steering Path*†	
Course Leg in the current flight segment	
Course Leg not in the current flight segment	
Heading Leg	
Roll Steering Path †	
Future Roll Steering Path ‡	
Turn Anticipation Arc	

* The active leg or path is the one currently being flown, and is shown in magenta.
 † A roll steering path is a computed transition between two disconnected legs.
 ‡ A roll steering path in the flight plan that is beyond the next leg appears as a future roll steering path. When a future roll steering path becomes the next leg in the flight plan, it appears as a roll steering path.

Table 5-10 Flight Plan Leg Symbols

Up to 99 flight plans with up to 100 waypoints each can be created and stored in memory. Upon power up, the previously active flight plan is retained and automatically repopulated if the aircraft position is at the origin airport and the aircraft is on the ground. If, however, the aircraft is not at the origin, on the ground, or if more than 12 hours have passed since the last active flight plan modification, the previously active flight plan is not retained. One flight plan can be activated at a time and becomes the active flight plan. The active flight plan is overwritten when another flight plan is activated. When storing flight plans with an approach, departure, or arrival, the system uses the waypoint information from the current database to define the waypoints. If the database is changed or updated, the system automatically updates the information if the procedure has not been modified. If an approach, departure, or arrival procedure is no longer available, the procedure is deleted from the affected stored flight plan(s), and an alert is displayed (see Miscellaneous Messages in Appendix A) advising that one or more stored flight plans need to be edited.

Whenever an approach, departure, or arrival procedure is loaded into the active flight plan, a set of approach, departure, or arrival waypoints is inserted into the flight plan along with a header line

describing the instrument procedure the pilot selected. The original enroute portion of the flight plan remains active (unless an instrument procedure is activated) when the procedure is loaded.

When the database is updated, the airways need to be reloaded also. Each airway segment is reloaded from the database given the entry waypoint, the airway identifier and the exit waypoint. This reloads the sequence of waypoints between the entry and exit waypoints (the sequence may change when the database is updated). The update of an airway can fail during this process. If that happens, the airway waypoints are changed to regular (non-airway) flight plan waypoints, and an alert is displayed (see Miscellaneous Messages in Appendix A).

The following could cause the airway update to fail:

- Airway identifier, entry waypoint or exit waypoint not found in the new database.
- Airway entry/exit waypoint is not an acceptable waypoint for the airway – either the waypoint is no longer on the airway, or there is a new directional restriction that prevents it being used.
- Loading the new airway sequence would exceed the capacity of the flight plan.

FLIGHT PLAN CREATION

There are three methods to create or modify a flight plan:

- Active Flight Plan Page on the MFD (create/modify the active flight plan)
- Flight Plan Window on the PFD (create/modify the active flight plan)
- Flight Plan Catalog Page on the MFD (create/modify a stored flight plan)



Figure 5-46 Active Flight Plan Page



Figure 5-47 Active Flight Plan Window on PFD

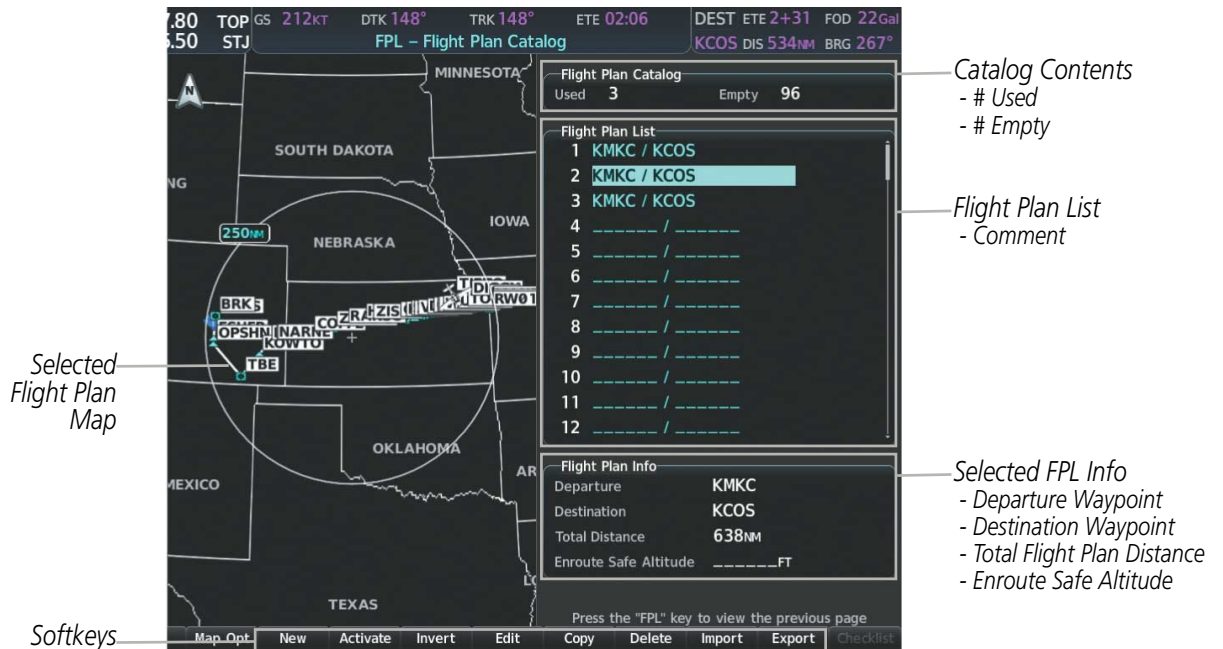


Figure 5-48 Flight Plan Catalog Page

The active flight plan is listed on the 'Active Flight Plan' Page on the MFD, and in the 'Flight Plan' Window on the PFD. It is the flight plan to which the system is currently providing guidance, and is shown on the navigation maps. Stored flight plans are listed on the Flight Plan Catalog Page on the MFD, and are available for activation (becomes the active flight plan).

NOTE: The system supports AFCS lateral guidance for all leg types (using NAV or GPS APR mode). The system does not support course deviation for any heading leg types (VA, VD, VI, VM, or VR).

Auto-designation will determine the most likely airport of origin and auto-populate the Active Flight Plan. Once determined, the airfield identifier automatically appears in the 'Origin' Field and the line

immediately below 'Origin' while keeping the runway ('RW') Field empty. The line below the Origin line serves as the first point in the flight plan.

Auto-designation occurs between 15 and 60 seconds after display power-up under the following conditions:

- Aircraft position is known
- Aircraft is on the ground
- Nearest airport is within 200NM
- Flight plan is empty

If the pilot manually enters the origin, or any other leg of the flight plan before auto-nomination occurs, nothing gets inserted automatically. The automatic insertion logic only runs once, so the pilot can edit the origin if the nearest airport is not the desired origin.

If the pilot enters a different airport into the first point of the flight plan, the Origin will change to this entry, and the pilot will be prompted to enter the departure runway.

Both the Origin airport/runway and the first point of the flight plan will be the same unless a departure is entered and a manual leg is inserted at the beginning of the loaded departure. Loading a departure locks in the origin information.

FLIGHT PLAN PROGRESS

Active flight plan progress can be displayed on the navigation map.



NOTE: ETE can be displayed as either HH+MM (ETE greater than 60 minutes) or MM:SS (ETE less than 60 minutes).



Figure 5-49 Flight Plan Progress displayed on Navigation Map

Displaying/removing the active flight plan progress on the navigation map:

- 1) Select the 'Map - Navigation Map' Page.
- 2) Press the **Map Opt** Softkey.
- 3) Press the **Inset** Softkey.
- 4) Press the **FPL PROG** Softkey to display the active flight plan progress.
- 5) To remove the active flight plan progress from the navigation map, press the **Off** softkey.

Creating an active flight plan:

- 1) Press the **FPL** Key. Press the **FMS** Knob to activate the cursor (only on MFD).
- 2) Select the origin airport and runway.
 - a) Highlight the field below the Origin header to enter the origin airport identifier using the **FMS** Knob, or by moving the Quick Select Box (MFD only) with the **Joystick** (the waypoint will be inserted at the insertion point indicator).
 - b) Use the **FMS** Knob, alphanumeric keypad, or the waypoint submenu to enter the identifier, facility, or city name of the origin waypoint.
 - c) Press the **ENT** Key. The 'Set Runway' Window is displayed with the 'Runway' Field highlighted.

- d) Turn the small **FMS** Knob to select the runway, and press the **ENT** Key.
 - e) Press the **ENT** Key again to add the origin airport/runway to the flight plan.
- 3) Repeat step number 2 for the destination airport and runway.
 - 4) Select the enroute waypoints.
 - a) Highlight the location to insert the waypoint using the **FMS** Knob, or by moving the Quick Select Box (MFD only) with the **Joystick** (the waypoint will be inserted at the insertion point indicator).
 - b) Use the **FMS** Knob, alphanumeric keypad, or the waypoint submenu to enter the identifier, facility, or city name of the waypoint. The active flight plan is modified as each waypoint is entered.
 - 5) Repeat step number 4 to enter each additional enroute waypoint.
 - 6) When all waypoints have been entered, press the **FMS** Knob to remove the cursor (if required).

Creating a stored flight plan:

- 1) Press the **FPL** Key for the MFD.
- 2) Turn the small **FMS** Knob clockwise to display the 'FPL - Flight Plan Catalog' Page.
- 3) Press the **New** Softkey; or press the **MENU** Key, highlight 'Create New Flight Plan', and press the **ENT** Key to display a blank flight plan for the first empty storage location.
- 4) Select the origin airport and runway.
 - a) Highlight the field below the Origin header to enter the origin airport identifier using the **FMS** Knob, or by moving the Quick Select Box (MFD only) with the **Joystick** (the waypoint will be inserted at the insertion point indicator).
 - b) Use the **FMS** Knob, alphanumeric keypad, or the waypoint submenu to enter the identifier, facility, or city name of the origin waypoint.
 - c) Press the **ENT** Key. The 'Set Runway' Window is displayed with the 'Runway' Field highlighted.
 - d) Turn the small **FMS** Knob to select the runway, and press the **ENT** Key.
 - e) Press the **ENT** Key again to add the origin airport/runway to the flight plan.
- 5) Repeat step number 4 for the destination airport and runway.
- 6) Select the enroute waypoints.
 - a) Highlight the location to insert the waypoint using the **FMS** Knob (If the enroute header is selected, the new waypoint is placed following the header. If an enroute

waypoint or the dashes are selected, the new waypoint will be placed ahead of the selected item.)

- b) Use the **FMS** Knob, alphanumeric keypad, or the waypoint submenu to enter the identifier, facility, or city name of the waypoint.
- c) Press the **ENT** Key. The stored flight plan is modified as each waypoint is entered.
- 7) Repeat step number 6 to enter each additional enroute waypoint.
- 8) When all waypoints have been entered, press the **FMS** Knob to remove the cursor.

FLIGHT PLAN IMPORT/EXPORT

Flight plans can be imported from an SD Card or exported to an SD Card from the Stored Flight Plan Page.

Under certain conditions, the following messages may appear when a flight plan is imported or exported from or to an SD card. Some messages may appear in conjunction with others.

Flight Plan Import/Export Results	Description
'Flight plan successfully imported.'	A flight plan file stored on the SD card was successfully imported as a stored flight plan.
'File contained user waypoints only. User waypoints imported successfully. No stored flight plan data was modified.'	The file stored on the SD card did not contain a flight plan, only user waypoints. These waypoints have been saved to the system user waypoints. No flight plans stored in the system have been modified.
'No flight plan files found to import.'	The SD card contains no flight plan data.
'Flight plan import failed.'	Flight plan data was not successfully imported from the SD card.
'Flight plan partially imported.'	Some flight plan waypoints were successfully imported from the SD card, however others had errors and were not imported. A partial stored flight plan now exists in the system.
'File contained user waypoints only.'	The file stored on the SD card did not contain a flight plan, only user waypoints. One or more of these waypoints did not import successfully.

Flight Plan Import/Export Results	Description
'Too many points. Flight plan truncated.'	The flight plan on the SD card contains more waypoints than the system can support. The flight plan was imported with as many waypoints as possible.
'Some waypoints not loaded. Waypoints locked.'	The flight plan on the SD card contains one or more waypoints that the system cannot find in the navigation database. The flight plan has been imported, but must be edited within the system before it can be activated for use.
'User waypoint database full. Not all loaded.'	The flight plan file on the SD card contains user waypoints. The quantity of stored user waypoints has exceeded system capacity, therefore not all the user waypoints on the SD card have been imported. Any flight plan user waypoints that were not imported are locked in the flight plan. The flight plan must be edited within the system before it can be activated for use.
'One or more user waypoints renamed.'	One or more imported user waypoints were renamed when imported due to naming conflicts with waypoints already existing in the system.
'Flight plan successfully exported.'	The stored flight plan was successfully exported to the SD card.
'Flight plan export failed.'	The stored flight plan was not successfully exported to the SD card. The SD card may not have sufficient available memory or the card may have been removed prematurely.

Table 5-11 Flight Plan Import/Export Messages

Importing a Flight Plan from an SD Card:

- 1) Insert the SD card containing the flight plan in the top card slot on the MFD.
- 2) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page on the MFD.
- 3) Turn the small **FMS** Knob to select the 'FPL - Flight Plan Catalog' Page.

- 4) Press the **FMS** Knob to activate the cursor.
- 5) Turn either **FMS** Knob to highlight an empty or existing flight plan.
- 6) Press the **Import** Softkey; or press the **MENU** Key, select "Import Flight Plan", and press the **ENT** Key.

If an empty slot is selected, a list of the available flight plans on the SD card will be displayed.

Or:

If an existing flight plan is selected, an 'Overwrite existing flight plan? OK or CANCEL' prompt is displayed. Press the **ENT** Key to choose to overwrite the selected flight plan and see the list of available flight plans on the SD card. If overwriting the existing flight plan is not desired, select 'CANCEL' using the **FMS** Knob, press the **ENT** Key, select another flight plan slot, and press the **Import** Softkey again.

- 7) Turn the small **FMS** Knob to highlight the desired flight plan for importing.
- 8) Press the **ENT** Key to initiate the import.
- 9) Press the **ENT** Key again to confirm the import.



NOTE: If the imported flight plan contains a waypoint with a name that duplicates the name of a waypoint already stored on the system, the system compares the coordinates of the imported waypoint with those of the existing waypoint. If the coordinates are different, the imported waypoint is automatically renamed by adding characters to the end of the name.

Exporting a Flight Plan to an SD Card:

- 1) Insert the SD card into the top card slot on the MFD.
- 2) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page on the MFD.
- 3) Turn the small **FMS** Knob to select the 'FPL - Flight Plan Catalog' Page.
- 4) Press the **FMS** Knob to activate the cursor.
- 5) Turn the large **FMS** Knob to highlight the flight plan to be exported.
- 6) Press the **Export** Softkey; or press the **MENU** Key, select 'Export Flight Plan'.
- 7) If desired, change the name for the exported file by turning the large **FMS** Knob to the left to highlight the name, then use the **FMS** knob or the FMS alphanumeric keys to enter the new name, and press the **ENT** Key.
- 8) Press the **ENT** Key to initiate the export.
- 9) Press the **ENT** Key to confirm the export.



NOTE: The exported flight plan will not contain any procedures or airways.

Flight plans can be transferred to or from a mobile device via the Flight Stream 510 Bluetooth wireless connection. Transfer of a flight plan to a mobile device is controlled by the mobile device.



Figure 5-50 Pending Flight Plan Transfer

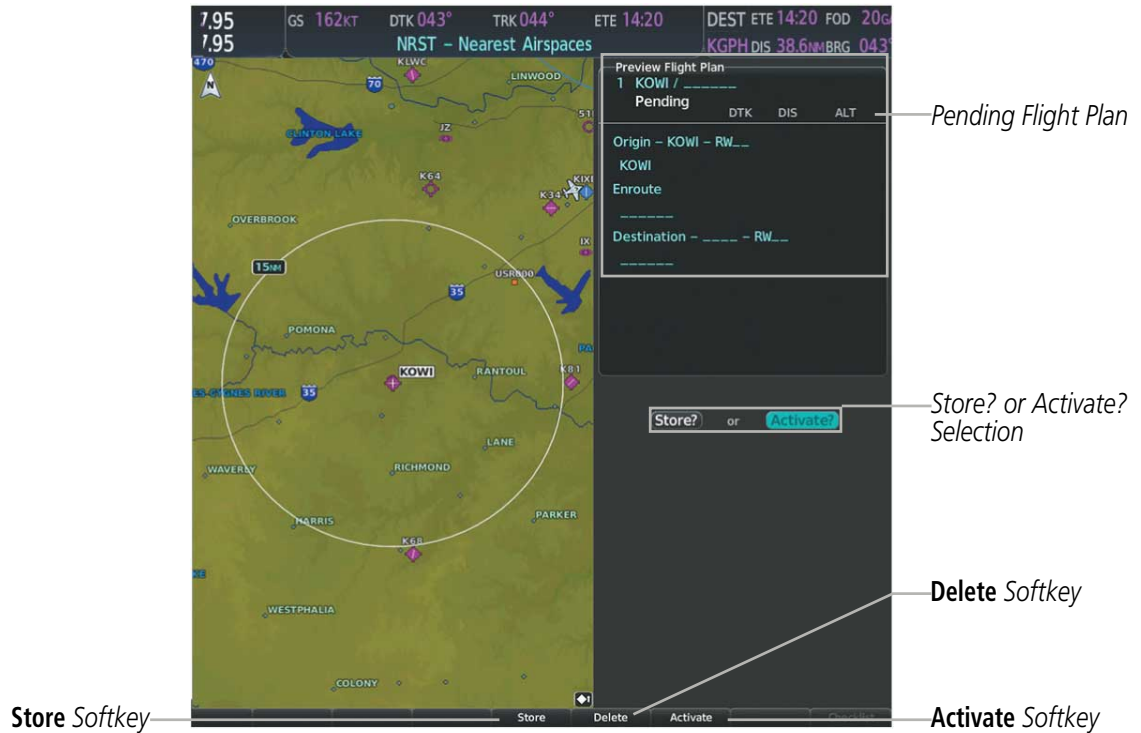


Figure 5-51 Preview Flight Plan Page

Previewing a pending flight plan transfer from a wireless connection:

- 1) When a flight plan transfer has been initiated from a mobile device, a Pending Flight Plan pop-up alert appears in the lower right corner of the MFD, and a Connex announcement appears to the right of the MFD page name.
- 2) Press the **ENT** Key to display the 'FPL - Preview Flight Plan' Page on the MFD.
 - Or:**
 - Press the **Preview** Softkey to display the 'FPL - Preview Flight Plan' Page on the MFD.
 - Or:**
 - a) Press the **MENU** Key,
 - b) Turn the **FMS** Knob to highlight 'Preview Flight Plan'.
 - c) Press the **ENT** Key to display the 'FPL - Preview Flight Plan' Page on the MFD.

Ignoring a pending flight plan transfer from a wireless connection:

- 1) When a flight plan transfer has been initiated from a mobile device, a Pending Flight Plan pop-up alert appears in the lower right corner of the MFD, and a Connex announcement appears to the right of the MFD page name.
- 2) Press the **CLR** Key to remove the pop-up alert and ignore the pending flight plan. The pending flight plan will still be available on the 'FPL - Flight Plan Catalog' Page.

Or:

Press the **Ignore** Softkey to remove the pop-up alert and ignore the pending flight plan. The pending flight plan will still be available on the 'FPL - Flight Plan Catalog' Page.

Storing a pending flight plan:

- 1) Press the **FPL** Key for the MFD.
- 2) Turn the small **FMS** Knob to display the 'FPL - Flight Plan Catalog' Page.
- 3) Press the **FMS** Knob to activate the cursor.
- 4) Turn the **FMS** Knob to highlight the pending flight plan.
- 5) Press the **ENT** Key to display the 'FPL - Preview Flight Plan' Page on the MFD.
- 6) Press the **Store** Softkey to store the flight plan. The pending flight plan is stored and the pending announcement is removed.

Or:

- a) Press the **FMS** Knob to activate the cursor.
- b) Turn the **FMS** Knob to highlight 'Store?'.
- c) Press the **ENT** Key to store the flight plan. The pending flight plan is stored and the pending announcement is removed.

Or:

- a) Press the **MENU** Key.
- b) Turn the **FMS** Knob to highlight 'Store Flight Plan'.
- c) Press the **ENT** Key to store the flight plan. The pending flight plan is stored and the pending announcement is removed.

Activating a pending flight plan:

- 1) Press the **FPL** Key on the MFD and turn the small **FMS** Knob to display the 'FPL - Flight Plan Catalog' Page.
- 2) Press the **FMS** Knob to activate the cursor, and turn the **FMS** Knob to highlight the pending flight plan.
- 3) Press the **ENT** Key to display the 'FPL - Preview Flight Plan' Page.

- 4) Press the **Activate** Softkey. The 'Activate Flight Plan?' Window is displayed.

Or:

 - a) Press the **FMS** Knob to activate the cursor.
 - b) Turn the **FMS** Knob to highlight 'Activate?'.
 - c) Press the **ENT** Key. The 'Activate Flight Plan?' Window is displayed.

Or:

 - a) Press the **MENU** Key.
 - b) Turn the **FMS** Knob to highlight 'Activate Flight Plan'.
 - c) Press the **ENT** Key. The 'Activate Flight Plan?' Window is displayed.
- 5) With 'OK' highlighted, press the **ENT** Key to activate the pending flight plan. The pending flight plan becomes the active flight plan and is removed from the Flight Plan Catalog Page. To cancel the request, press the **CLR** Key, or highlight 'CANCEL' and press the **ENT** Key.

Deleting a pending flight plan:

- 1) Press the **FPL** Key on the MFD.
- 2) Turn the small **FMS** Knob to display the 'FPL - Flight Plan Catalog' Page.
- 3) Press the **FMS** Knob to activate the cursor.
- 4) Turn the **FMS** Knob to highlight the desired pending flight plan.
- 5) Press the **Delete** Softkey. The 'Delete Flight Plan XX?' Window is displayed.

Or:

Press the **CLR** Key. The 'Delete Flight Plan XX?' Window is displayed.

Or:

 - a) Press the **MENU** Key.
 - b) Turn the **FMS** Knob to highlight 'Delete Flight Plan'.
 - c) Press the **ENT** Key. The 'Delete Flight Plan XX?' Window is displayed.
- 6) With 'OK' highlighted, press the **ENT** Key to delete the pending flight plan. The pending flight plan is removed from the Flight Plan Catalog Page. To cancel the request, press the **CLR** Key, or highlight 'CANCEL' and press the **ENT** Key.

Deleting all pending flight plans:

- 1) Press the **FPL** Key on the MFD.
- 2) Turn the small **FMS** Knob to display the 'FPL - Flight Plan Catalog' Page.
- 3) Press the **MENU** Key.

- 4) Turn the **FMS** Knob to highlight 'Delete All Pending'.
- 5) Press the **ENT** Key. A 'Delete all pending flight plans?' confirmation Window is displayed.
- 6) With 'OK' highlighted, press the **ENT** Key to delete all pending flight plans. To cancel the request, press the **CLR** Key, or highlight 'CANCEL' and press the **ENT** Key.

ADDING WAYPOINTS TO AN EXISTING FLIGHT PLAN

Waypoints can be added to the active flight plan or any stored flight plan. Choose the flight plan, select the desired point of insertion, enter the waypoint, and it is added in front of the selected waypoint. Flight plans are limited to 100 waypoints (including waypoints within airways and procedures). If the number of waypoints in the flight plan exceeds 100, the message "Flight plan is full. Remove unnecessary waypoints." appears and the new waypoint(s) are not added to the flight plan.



NOTE: Manually adding waypoints to a flight plan after a MANSEQ leg creates a lateral gap in the flight plan. Time, fuel, and distance values for legs beyond the gap do not include the distance across the gap.





Figure 5-52 Stored Flight Plan Page

Adding a waypoint to a stored flight plan:

- 1) On the 'FPL - Flight Plan Catalog' Page, press the **FMS** Knob to activate the cursor.
- 2) Use the **FMS** Knob to highlight the desired flight plan.
- 3) Press the **Edit** Softkey; or press the **ENT** Key, turn the large **FMS** Knob clockwise to select "EDIT" and press the **ENT** Key. The 'FPL — Stored Flight Plan' Page is displayed.

- 4) Turn the large **FMS** Knob to select the point in the flight plan to add the new waypoint . The new waypoint is placed directly in front of the highlighted waypoint.
- 5) Turn the small **FMS** Knob to display the 'Waypoint Information' Window. (Turning it clockwise displays a blank 'Waypoint Information' Window, turning it counter-clockwise displays the 'Waypoint Information Window' with a waypoint selection submenu allowing selection of active flight plan, nearest, recent, user, or airway waypoints).
- 6) Use the **FMS** Knob or the FMS alphanumeric keys to enter the identifier, facility, or city name of the waypoint or select a waypoint from the submenu of waypoints and press the **ENT** Key. The new waypoint now exists in the flight plan.

 **NOTE:** If the identifier entered in the 'Waypoint Information' Window has duplicates, a 'Duplicate Waypoint' Window is displayed. Use the **FMS** Knob to select the correct waypoint.

 **NOTE:** If the flight plan is successfully edited in the 'Flight Plan' Window from PFD while the MFD Active Flight Plan Page is in the process of being edited, the 'Flight Plan Modified By Other User' Window will appear on the MFD. Press the **ENT** key to return to the Active Flight Plan Page with the accepted changes.

Adding a waypoint to the active flight plan:

- 1) Press the **FPL** Key.
- 2) Press the **FMS** Knob to activate the cursor (not required on the PFD).
- 3) Highlight the location to insert the waypoint using the large **FMS** Knob, or by moving the Quick Select Box (MFD only) with the **Joystick** (the waypoint will be inserted at the insertion point indicator).
- 4) Use the **FMS** Knob, alphanumeric keypad, or the waypoint submenu to enter the identifier, facility, or city name of the waypoint.
- 5) Press the **ENT** Key. The active flight plan is modified as each waypoint is entered.

Creating and adding user waypoints to the active flight plan:

- 1) Press the **FPL** Key
- 2) Press the **FMS** Knob to activate the cursor (not required on the PFD).
- 3) Highlight the location to insert the waypoint using the large **FMS** Knob, or by moving the Quick Select Box (MFD only) with the **Joystick** (the waypoint will be inserted at the insertion point indicator).
- 4) Push the **Joystick** for the MFD to activate the panning function on the 'FPL - Active Flight Plan' Page and pan to the map location of the desired user waypoint.
- 5) Press the **LD WPT** Softkey; or press the **MENU** Key, select 'Load Waypoint', and press the **ENT** Key. The user waypoint is created with a name of USRxxx (using the next available in sequence) and is added to the active flight plan.

Waypoints entered in the enroute segment of the flight plan may be treated as fly-by waypoints, unless otherwise designated. A fly-by waypoint is a waypoint that marks the intersection of two straight paths, with the transition from one path to another being made by the aircraft using a precisely calculated turn that “flies by” but does not vertically cross the waypoint. A fly-over waypoint is a waypoint that must be crossed vertically by the aircraft.

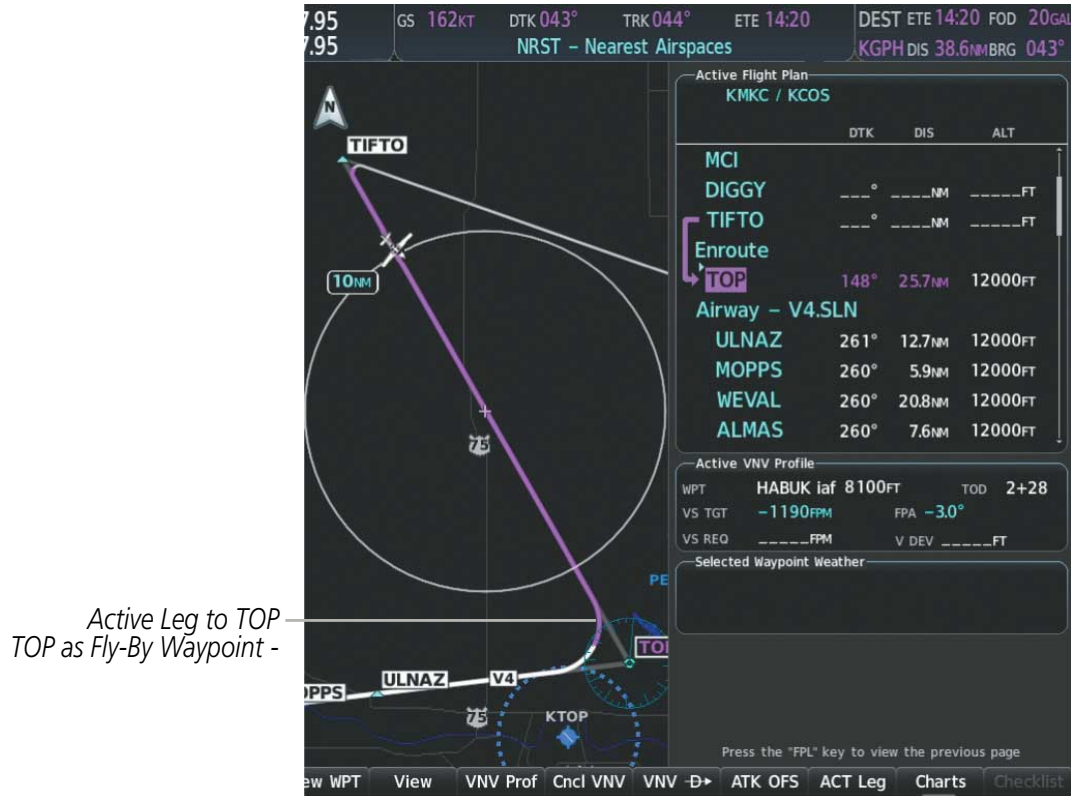


Figure 5-53 TOP Fly-By Waypoint

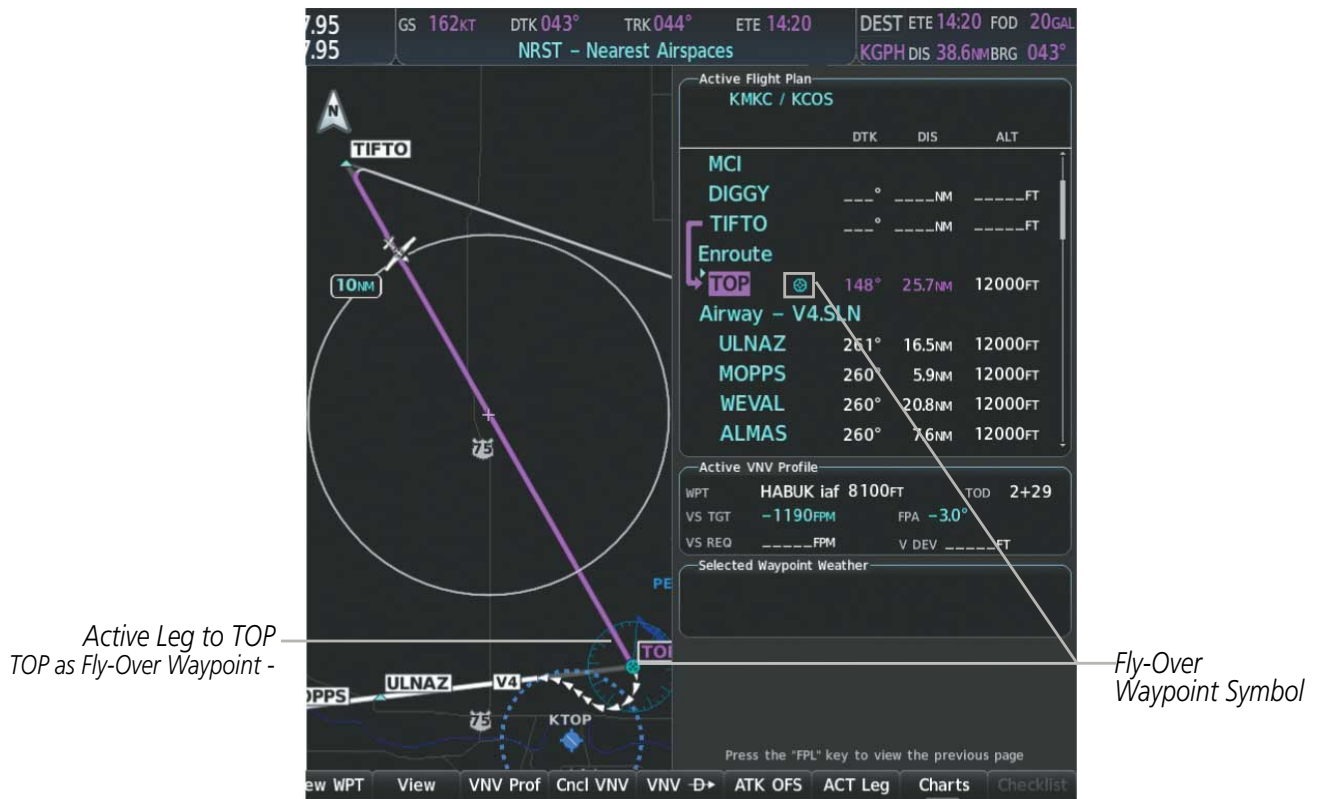


Figure 5-54 TOP Fly-Over Waypoint

Designating a fly-over waypoint:

- 1) For the active flight plan, press the **FPL** Key and press the **FMS** Knob to activate the cursor (not required on the PFD or when using the Quick Select Box).
- Or:
- For a stored flight plan, highlight the desired flight plan on the 'FPL - Flight Plan Catalog Page' and press the **Edit** Softkey.
- 2) Highlight the desired waypoint using the large **FMS** Knob, or by using the **Joystick** to move the Quick Select Box (not available for the stored flight plan).
- 3) Press the **MENU** Key, highlight 'Set Fly-Over Waypoint', and press the **ENT** Key. The 'Set [waypoint] to be a fly-over waypoint?' Window is displayed.
- 4) With 'OK' highlighted, press the **ENT** Key. To cancel the request, press the **CLR** Key, or highlight 'Cancel' and press the **ENT** Key.
- 5) To change the waypoint back to a fly-by waypoint, highlight the desired waypoint. Press the **MENU** Key, highlight 'Set Fly-By Waypoint', and press the **ENT** Key. The 'Set [waypoint] to be a fly-by waypoint?' Window is displayed. With 'OK' highlighted, press the **ENT** Key.

ADDING AIRWAYS TO A FLIGHT PLAN

Airways can be added to the active flight plan or any stored flight plan. Choose a flight plan (add the desired airway entry point if not already in the flight plan), select the waypoint after the desired airway entry point, select the airway, and it is added in front of the selected waypoint. An airway can only be loaded if there is a waypoint in the flight plan that is part of the desired airway and is not part of an arrival or approach procedure. The system also anticipates the desired airway and exit point based on loaded flight plan waypoints.

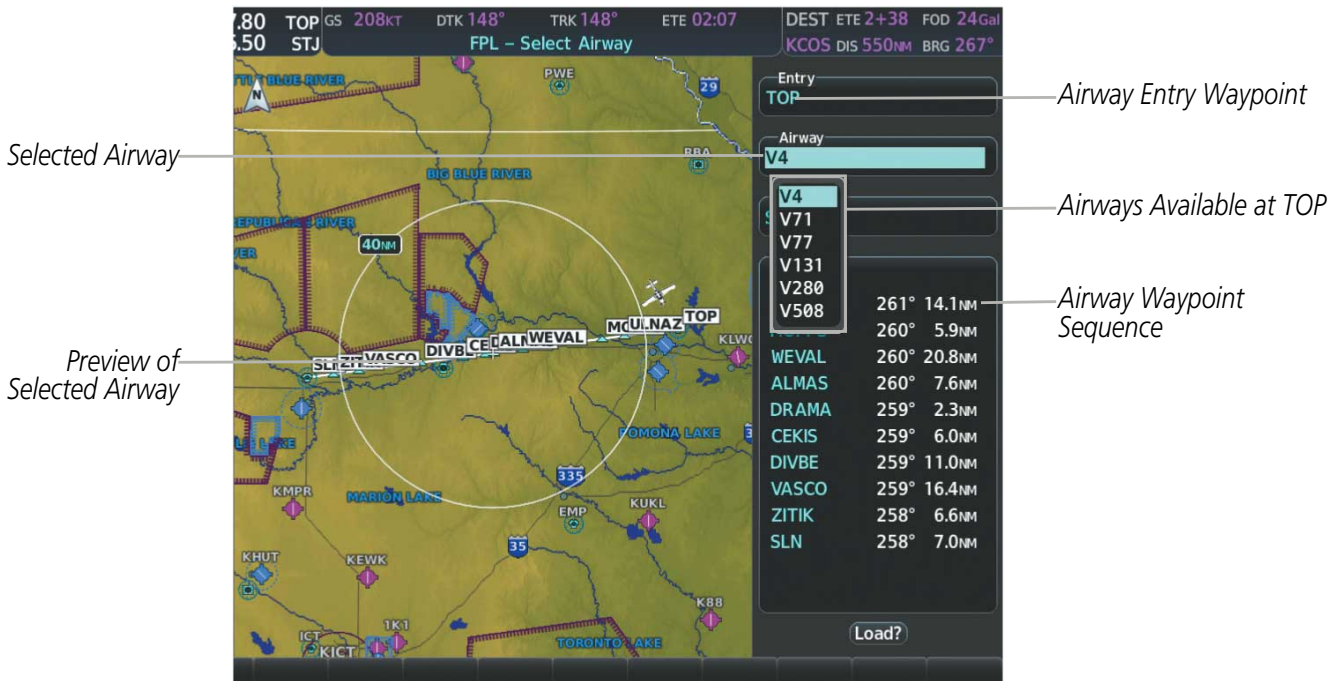


Figure 5-55 Select Airway Page - Selecting Airway

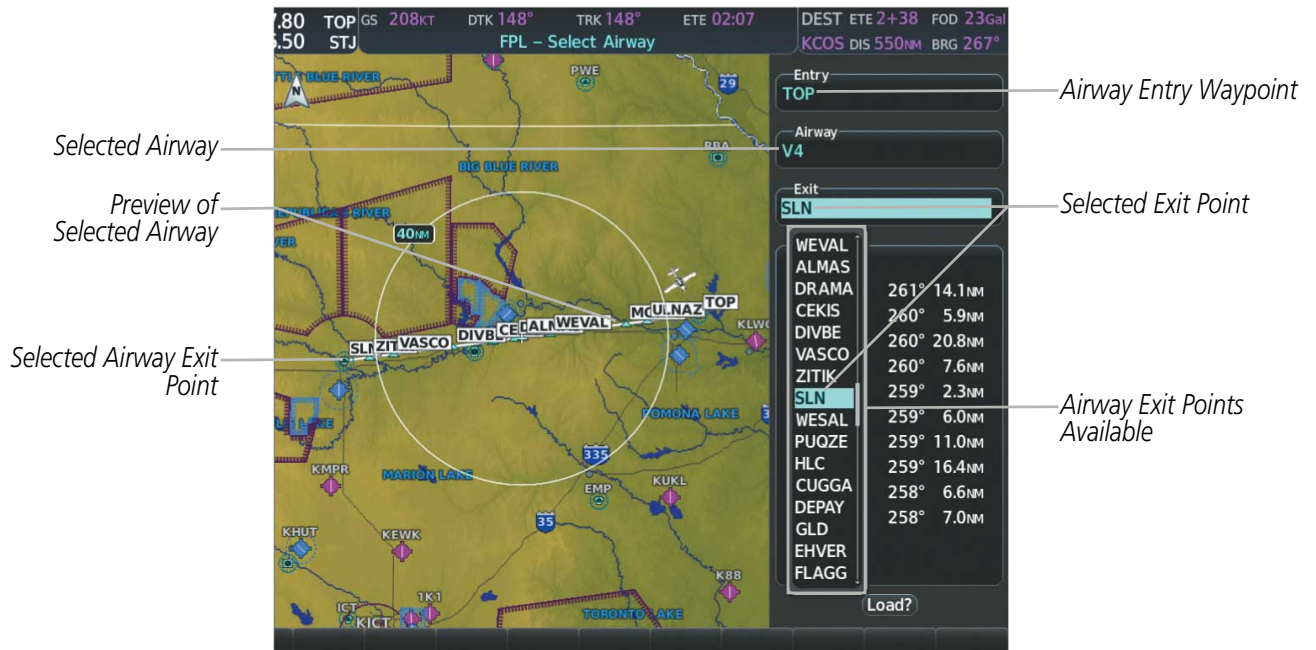


Figure 5-56 Select Airway Page - Selecting Exit Point

Some airways have directional restrictions on all or part of the route. For example, Airway A2 in Europe has a directional restriction over the whole route such that it can be flown only one direction.

For example, airway UR975 in North Africa has more complicated directional restrictions within the list of airway waypoints. That is, each waypoint may have its own conditional route in relation to another waypoint.

In the US, airways that are one-way for specified hours of operation are not uncommon. These airways are always bidirectional in the system database.

The system only allows correct airway sequences to be inserted. If the pilot subsequently inverts the flight plan, the system inverts the airway waypoint sequence and removes the airway header.

Adding an airway to a flight plan:

- 1) Press the **FPL** Key.
- 2) Press the **FMS** Knob to activate the cursor (not required on the PFD).
- 3) Turn the large **FMS** Knob to highlight the waypoint after the desired airway entry point. If this waypoint is not a valid airway entry point, a valid entry point should be entered at this time.
- 4) Turn the small **FMS** Knob one click clockwise and press the **LD AIRWY** Softkey, or press the **MENU** Key and select 'Load Airway'. The Select Airway Page/Window is displayed. The **LD AIRWY** Softkey or the 'Load Airway' menu item is available only when a valid airway entry waypoint has been chosen (the waypoint ahead of the cursor position).
- 5) Turn the **FMS** Knob to select the desired airway from the list, and press the **ENT** Key.

6) Turn the **FMS** Knob to select the desired airway exit point from the list, and press the **ENT** Key. 'Load?' is highlighted.

7) Press the **ENT** Key. The system returns to editing the flight plan with the new airway inserted.

Or:

1) Press the **FPL** Key.

2) Use the **Joystick** to place the QuickSelect Box on the waypoint after the desired airway entry point. If this waypoint is not a valid airway entry point, a valid entry point should be entered at this time.

3) Press the **MENU** Key and select "Load Airway". The Select Airway Page is displayed.

4) Turn the **FMS** Knob to select the desired airway from the list, and press the **ENT** Key.

5) Turn the **FMS** Knob to select the desired airway exit point from the list, and press the **ENT** Key. 'Load?' is highlighted.

6) Press the **ENT** Key. The system returns to editing the flight plan with the new airway inserted.

ADDING PROCEDURES TO A STORED FLIGHT PLAN

The system allows the pilot to insert pre-defined instrument procedures from the navigation database into a flight plan. The procedures are designed to facilitate routing of traffic leaving an airport (departure), arriving at an airport (arrival), and landing at an airport (approach). See the procedures section for more details.

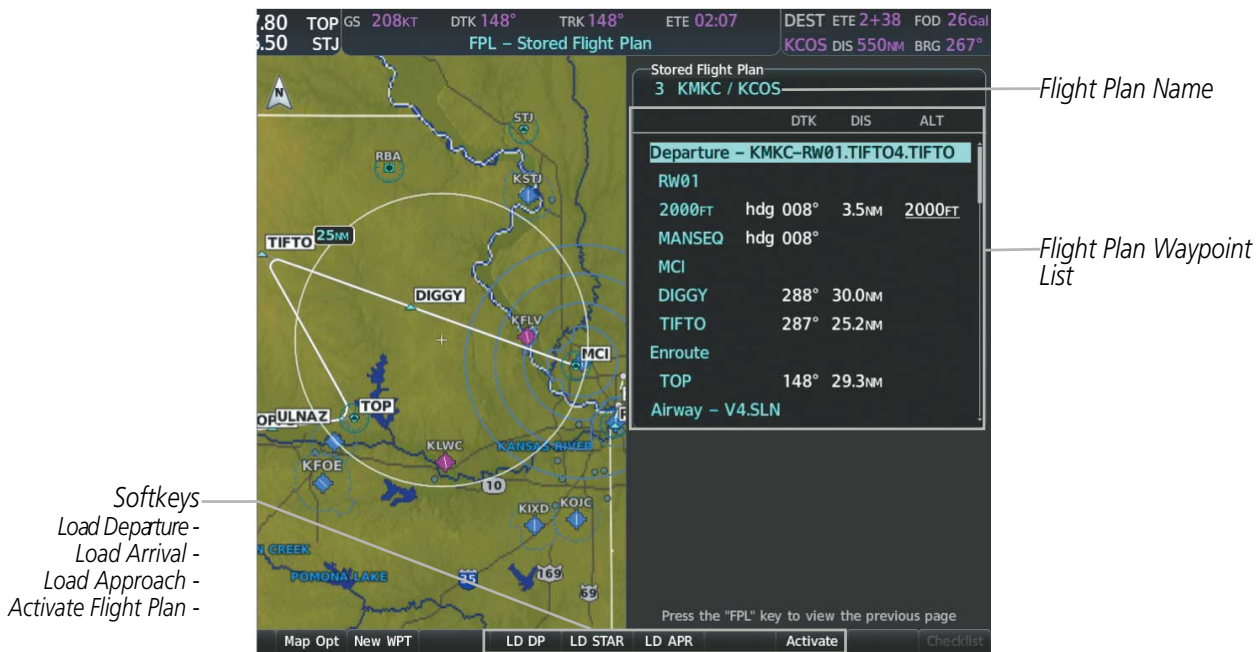


Figure 5-57 Stored Flight Plan Page

DEPARTURE

A Departure Procedure (DP) is loaded at the departure airport in the flight plan. Only one departure can be loaded at a time in a flight plan. The route is defined by selection of a departure, the transition waypoints, and a runway.

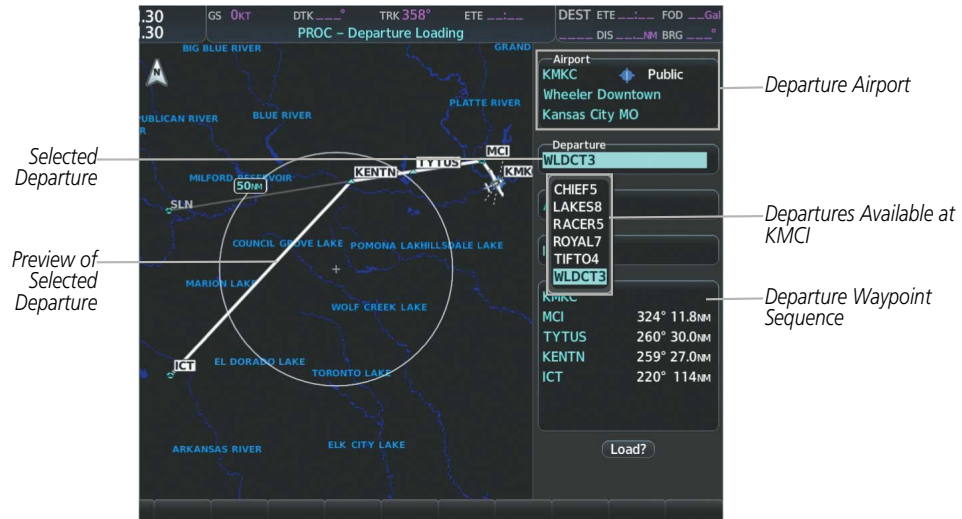


Figure 5-58 Departure Loading Page - Selecting the Departure

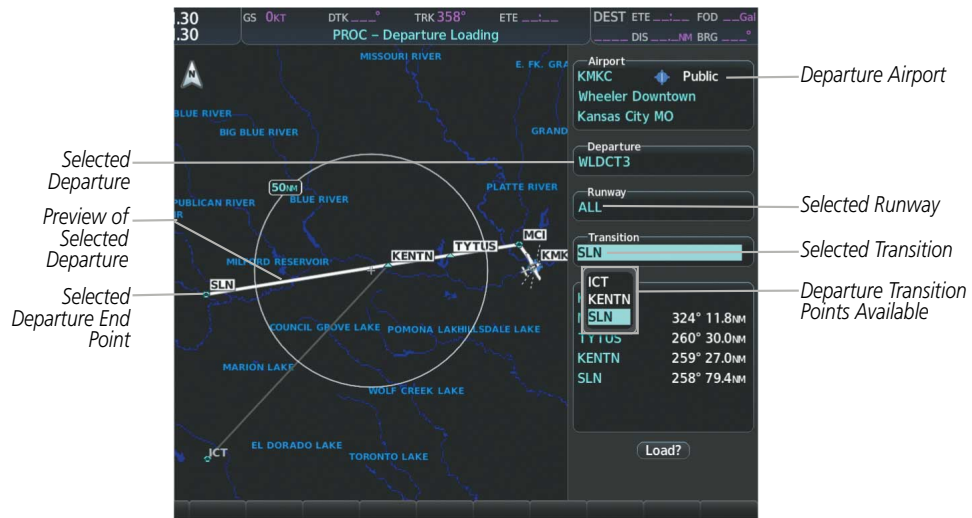


Figure 5-59 Departure Loading Page - Selecting the Transition

Loading a departure procedure into a stored flight plan:

- 1) Select a stored flight plan from the 'FPL - Flight Plan Catalog' Page.
- 2) Press the **Edit** Softkey; or press the **MENU** Key, select 'Edit Flight Plan', and press the **ENT** Key. The 'FPL - Stored Flight Plan' Page is displayed.
- 3) Press the **LD DP** Softkey; or press the **MENU** Key, select 'Load Departure', and press the **ENT** Key. The 'PROC - Departure Loading' Page is displayed.

- 4) Select a departure. Press the **ENT** Key.
- 5) Select a runway served by the selected departure, if required. Press the **ENT** Key.
- 6) Select a transition for the selected departure, if required. Press the **ENT** Key.
- 7) Press the **ENT** Key to load the selected departure procedure.

ARRIVAL

A Standard Terminal Arrival (STAR) is loaded at the destination airport in the flight plan. Only one arrival can be loaded at a time in a flight plan. The route is defined by selection of an arrival, the transition waypoints, and a runway.

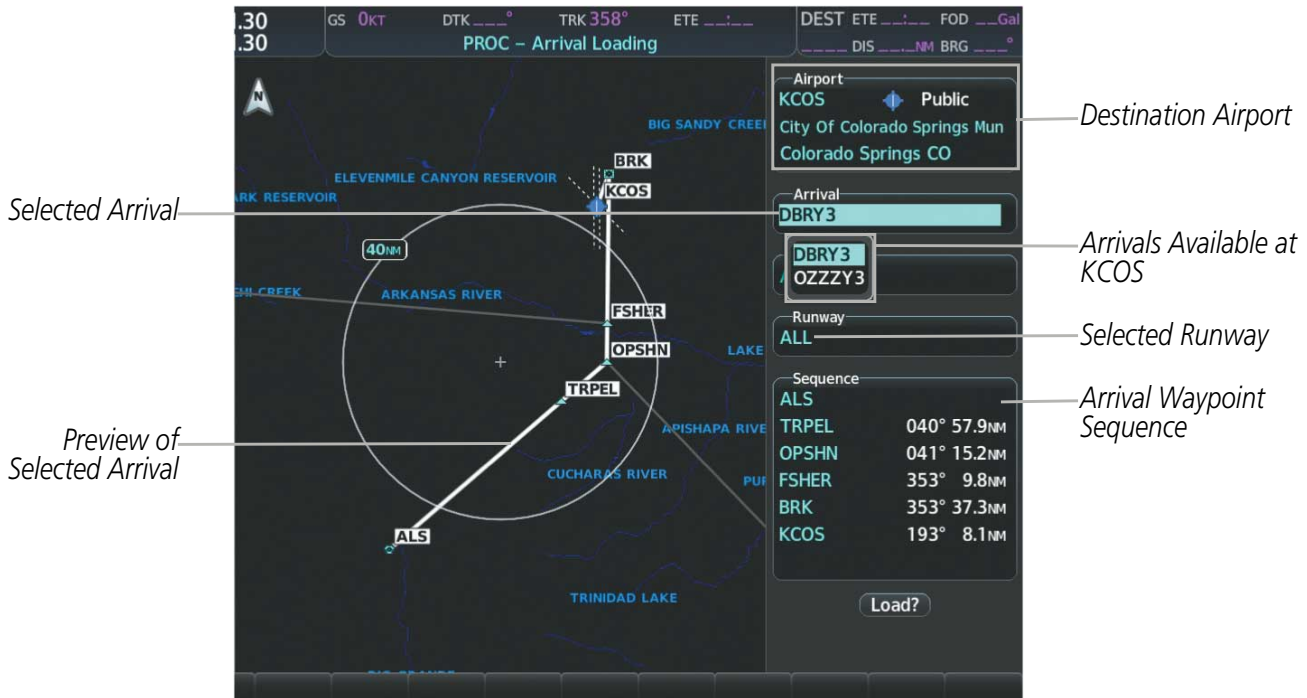


Figure 5-60 Arrival Loading Page - Selecting the Arrival

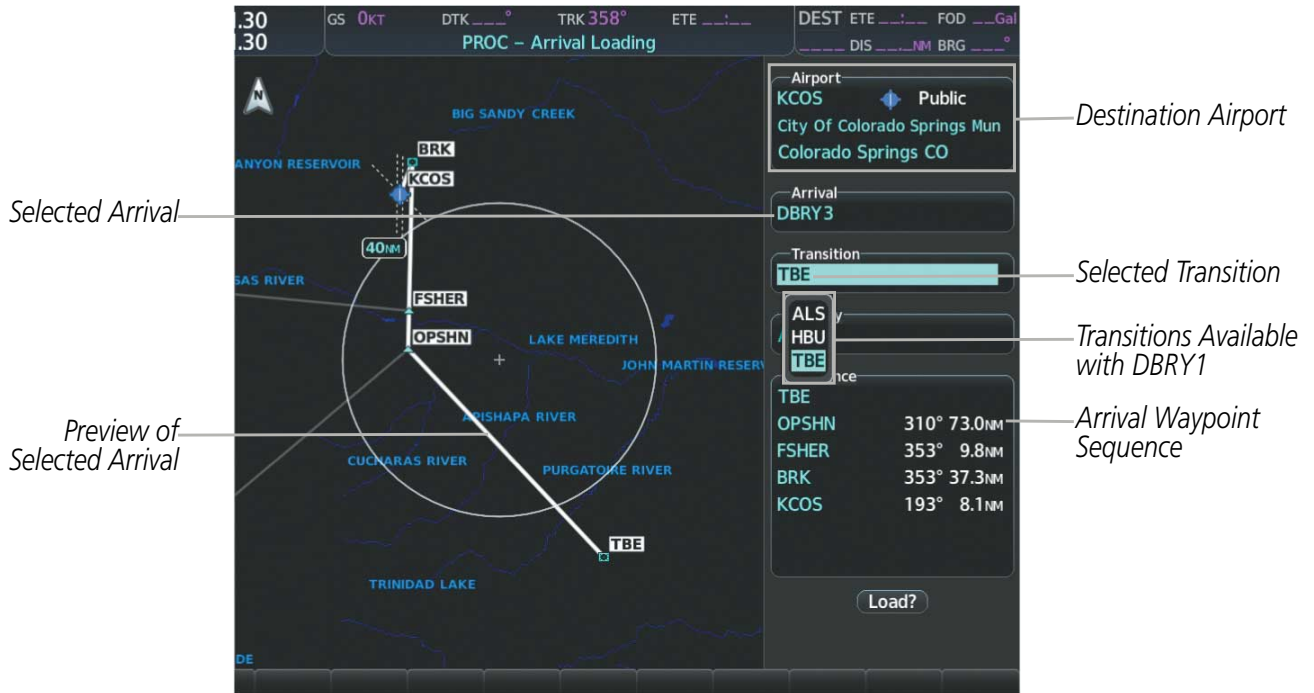


Figure 5-61 Arrival Loading Page - Selecting the Transition

Loading an arrival procedure into a stored flight plan:

- 1) Select a stored flight plan from the 'FPL - Flight Plan Catalog' Page.
- 2) Press the **Edit** Softkey; or press the **MENU** Key, select 'Edit Flight Plan', and press the **ENT** Key. The 'FPL - Stored Flight Plan' Page is displayed.
- 3) Press the **LD STAR** Softkey; or press the **MENU** Key, select "Load Arrival", and press the **ENT** Key. The 'PROC - Arrival Loading' Page is displayed.
- 4) Select an arrival. Press the **ENT** Key.
- 5) Select a transition for the selected arrival, if required. Press the **ENT** Key.
- 6) Select a runway served by the selected arrival, if required. Press the **ENT** Key.
- 7) Press the **ENT** Key to load the selected arrival procedure.

APPROACH

An Approach Procedure (APR) can be loaded at any airport that has an approach available. Only one approach can be loaded at a time in a flight plan. The route for a selected approach is defined by designating transition waypoints.

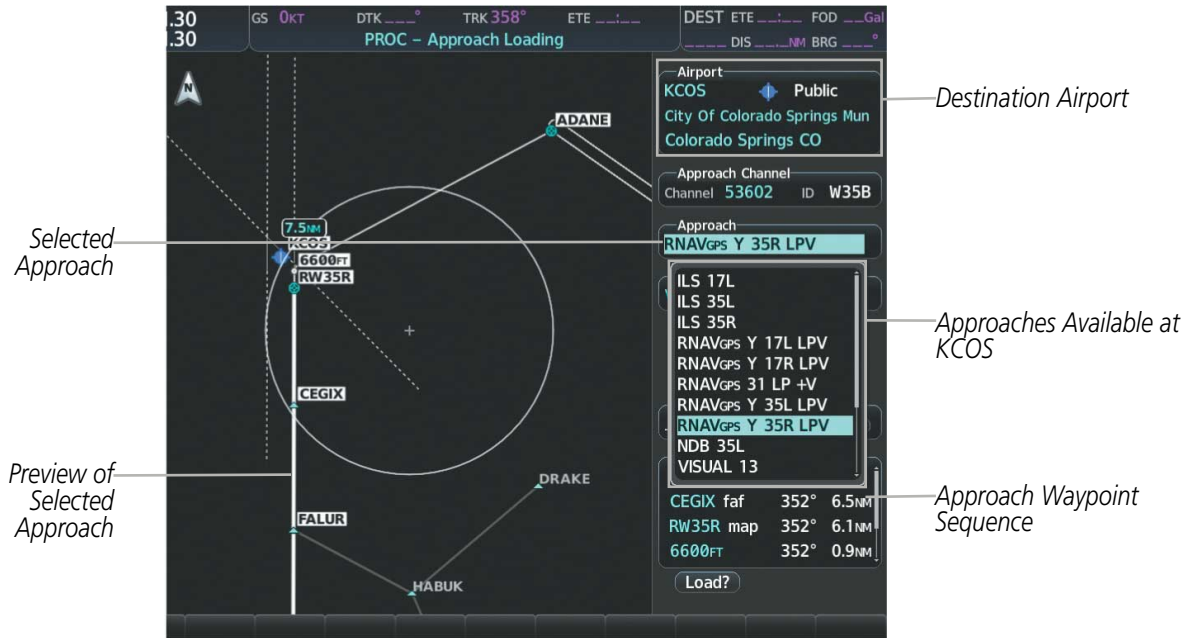


Figure 5-62 Approach Loading Page - Selecting the Approach

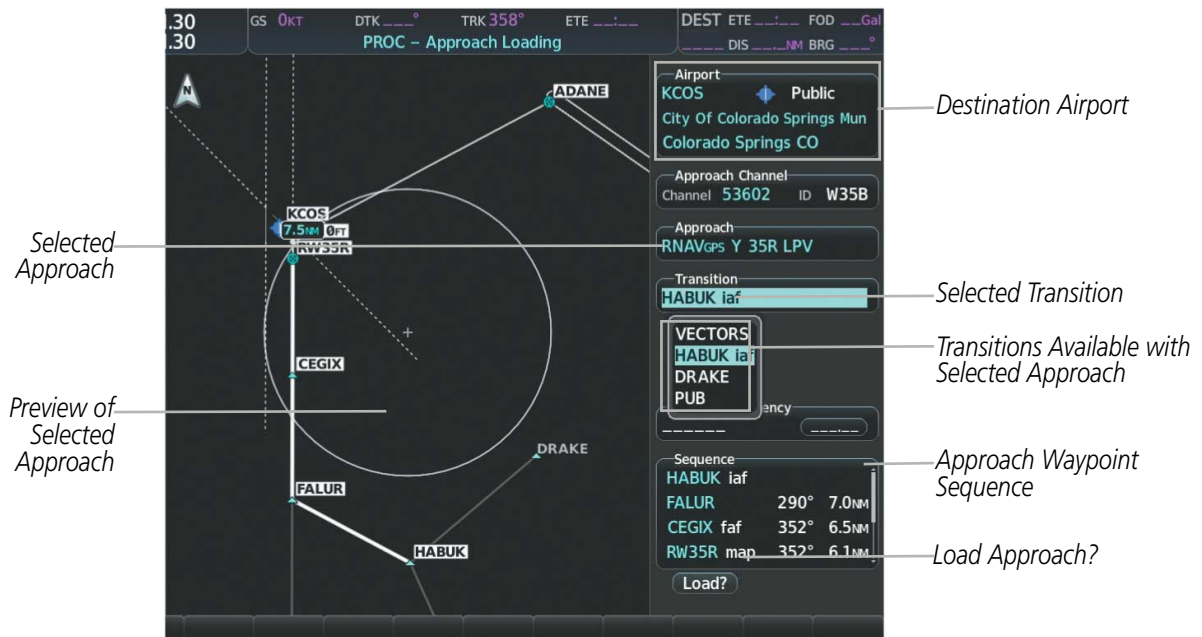


Figure 5-63 Approach Loading Page - Selecting the Transition

Loading an approach procedure into a stored flight plan:

- 1) Select a stored flight plan from the 'FPL - Flight Plan Catalog' Page.
- 2) Press the **Edit** Softkey; or press the **MENU** Key, select 'Edit Flight Plan', and press the **ENT** Key. The 'FPL - Stored Flight Plan' Page is displayed.

- 3) Press the **LD APR** Softkey; or press the **MENU** Key, select 'Load Approach', and press the **ENT** Key. The 'PROC - Approach Loading' Page is displayed.
- 4) Select the airport and approach:
 - a) Use the **FMS** Knob to select an airport and press the **ENT** Key.
 - b) Select an approach from the list and press the **ENT** Key.

Or:

 - a) If necessary, push the **FMS** Knob to exit the approach list, and use the large **FMS** Knob to move the cursor to the 'Approach Channel' Field.
 - b) Use the **FMS** Knob to enter the approach channel number, and press the **ENT** Key to accept the approach channel number. The airport and approach are selected.
- 5) Select a transition for the selected approach. Press the **ENT** Key.
- 6) Press the **ENT** Key to load the selected approach procedure.

STORED FLIGHT PLAN

The system can store up to 99 flight plans, numbered 1 through 99. The active flight plan is erased when the system is powered off or when another flight plan is activated. Details about each stored flight plan can be viewed on the Flight Plan Catalog Page and on the Stored Flight Plan Page.

A stored flight plan may be viewed or edited. The system also allows copying a flight plan into a new flight plan memory slot, allowing editing, etc., without affecting the original flight plan. This can be used to duplicate an existing stored flight plan for use in creating a modified version of the original stored flight plan.

Activating a stored flight plan erases the active flight plan and replaces it with the flight plan being activated. Inverting a stored flight plan reverses the waypoint order, erases the active flight plan, and replaces it with the flight plan being activated (the stored flight plan is not changed).

Lastly, individual or all stored flight plans can be deleted from the system memory.

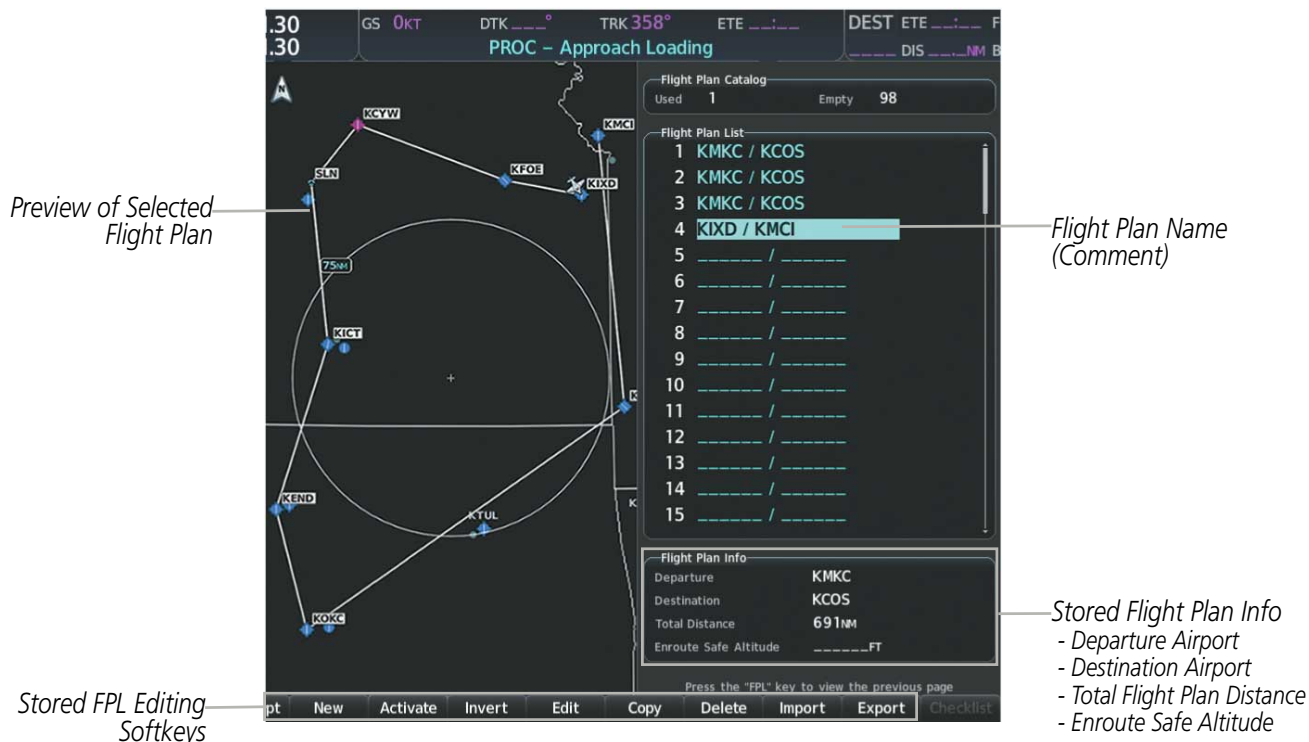


Figure 5-64 Stored Flight Plan Information

Storing an active flight plan from the Active Flight Plan Page or the 'Active Flight Plan' Window:

- 1) Press the **MENU** Key.
- 2) Turn the **FMS** Knob to highlight 'Store Flight Plan'.
- 3) Press the **ENT** Key.
- 4) With 'OK' highlighted, press the **ENT** Key. The flight plan is stored in the next available position in the flight plan list on the 'FPL - Flight Plan Catalog' Page.

Viewing information about a stored flight plan:

- 1) Press the **FPL** Key for the MFD to display the 'FPL - Active Flight Plan' Page.
- 2) Turn the small **FMS** Knob clockwise one click to display the 'FPL - Flight Plan Catalog' Page.
- 3) Press the **FMS** Knob to activate the cursor and turn the **FMS** Knob to highlight the desired flight plan.
- 4) The 'Flight Plan Info' Box displays departure, destination, total distance, and enroute safe altitude information for the selected flight plan.

- 5) Press the **Edit** Softkey to open the 'FPL - Stored Flight Plan' Page and view the waypoints in the flight plan.
- 6) Press the **FMS** Knob to exit the 'FPL - Stored Flight Plan' Page.

Activating a stored flight plan on the MFD:

- 1) Press the **FPL** Key and turn the small **FMS** Knob to display the 'FPL - Flight Plan Catalog' Page.
- 2) Press the **FMS** Knob to activate the cursor, and turn the **FMS** Knob to highlight the desired flight plan.
- 3) Press the **Activate** Softkey; or press the **ENT** Key twice; or press the **MENU** Key, highlight 'Activate Flight Plan', and press the **ENT** Key. The 'activate stored flight plan?' Window is displayed.
- 4) With 'OK' highlighted, press the **ENT** Key. To cancel the request, press the **CLR** Key, or highlight 'CANCEL' and press the **ENT** Key.

Inverting and activating a stored flight plan on the MFD:

- 1) Press the **FPL** Key and turn the small **FMS** Knob to display the 'FPL - Flight Plan Catalog' Page.
- 2) Press the **FMS** Knob to activate the cursor, and turn the **FMS** Knob to highlight the desired flight plan.
- 3) Press the **Invert** Softkey; or press the **MENU** Key, highlight 'Invert & Activate FPL?', and press the **ENT** Key. The 'Invert and activate stored flight plan?' Window is displayed.
- 4) With 'OK' highlighted, press the **ENT** Key. To cancel the request, press the **CLR** Key, or highlight 'CANCEL' and press the **ENT** Key.

Copying a stored flight plan on the MFD:

- 1) Press the **FPL** Key and turn the small **FMS** Knob to display the 'FPL - Flight Plan Catalog' Page.
- 2) Press the **FMS** Knob to activate the cursor, and turn the **FMS** Knob to highlight the desired flight plan.
- 3) Press the **Copy** Softkey; or press the **MENU** Key, highlight 'Copy Flight Plan', and press the **ENT** Key. The 'Copy to flight plan XX?' Window is displayed.
- 4) With 'OK' highlighted, press the **ENT** Key to copy the flight plan. The flight plan is stored in the next available position in the flight plan list on the 'FPL - Flight Plan Catalog' Page. To cancel the request, press the **CLR** Key, or highlight 'CANCEL' and press the **ENT** Key.

Deleting an individual waypoint from a stored flight plan:

- 1) Press the **FPL** Key for the MFD to display the 'FPL - Active Flight Plan' Page.
- 2) Turn the small **FMS** Knob clockwise one click to display the 'FPL - Flight Plan Catalog' Page.
- 3) Press the **FMS** Knob to activate the cursor and turn the **FMS** Knob to highlight the flight plan to be edited.
- 4) Press the **Edit** Softkey; or press the **MENU** Key, select 'Edit Flight Plan' and press the **ENT** Key. The 'FPL - Stored Flight Plan' Page is displayed.
- 5) Turn the large **FMS** Knob to highlight the waypoint to be deleted.
- 6) Press the **CLR** Key. The 'Remove XXXXX?' Window is displayed.
- 7) With 'OK' highlighted, press the **ENT** Key. To cancel the request, press the **CLR** Key, or highlight 'CANCEL' and press the **ENT** Key.
- 8) Press the **FMS** Knob to remove the flashing cursor.

Deleting an entire airway from a stored flight plan:

- 1) Press the **FPL** Key for the MFD to display the 'FPL - Active Flight Plan' Page.
- 2) Turn the small **FMS** Knob clockwise one click to display the 'FPL - Flight Plan Catalog' Page.
- 3) Press the **FMS** Knob to activate the cursor and turn the **FMS** Knob to highlight the flight plan to be edited.
- 4) Press the **Edit** Softkey; or press the **MENU** Key, select 'Edit Flight Plan' and press the **ENT** Key. The 'FPL - Stored Flight Plan' Page is displayed.
- 5) Turn the large **FMS** Knob to highlight the header of the airway to be deleted.
- 6) Press the **CLR** Key. The 'Remove [airway name] from flight plan?' Window is displayed.
- 7) With 'OK' highlighted, press the **ENT** Key. To cancel the request, press the **CLR** Key, or highlight 'CANCEL' and press the **ENT** Key.
- 8) Press the **FMS** Knob to remove the flashing cursor.

Deleting an entire procedure from a stored flight plan:

- 1) Press the **FPL** Key for the MFD to display the 'FPL - Active Flight Plan' Page.
- 2) Turn the small **FMS** Knob clockwise one click to display the 'FPL - Flight Plan Catalog' Page.
- 3) Press the **FMS** Knob to activate the cursor and turn the **FMS** Knob to highlight the flight plan to be edited.
- 4) Press the **EDIT** Softkey; or press the **MENU** Key, select 'Edit Flight Plan' and press the **ENT** Key. The 'FPL - Stored Flight Plan' Page is displayed.

- 5) Turn the large **FMS** Knob to highlight the header of the procedure to be deleted.
- 6) Press the **CLR** Key. The 'Remove [procedure name] from flight plan?' Window is displayed.
- 7) With 'OK' highlighted, press the **ENT** Key. To cancel the request, press the **CLR** Key, or highlight 'CANCEL' and press the **ENT** Key.
- 8) Press the **FMS** Knob to remove the flashing cursor.

Or:

- 1) Press the **FPL** Key for the MFD to display the 'FPL - Active Flight Plan' Page.
- 2) Turn the small **FMS** Knob clockwise one click to display the 'FPL - Flight Plan Catalog' Page.
- 3) Press the **FMS** Knob to activate the cursor and turn the **FMS** Knob to highlight the flight plan to be edited.
- 4) Press the **Edit** Softkey; or press the **MENU** Key, select 'Edit Flight Plan' and press the **ENT** Key. The 'FPL - Stored Flight Plan' Page is displayed.
- 5) Press the **MENU** Key to display the Page Menu and turn the **FMS** Knob to highlight 'Remove [procedure]'.
- 6) Press the **ENT** Key. The 'Remove [procedure name] from flight plan?' Window is displayed.
- 7) With 'OK' highlighted, press the **ENT** Key. To cancel the request, press the **CLR** Key, or highlight 'CANCEL' and press the **ENT** Key.
- 8) Press the **FMS** Knob to remove the flashing cursor.

Changing a stored flight plan comment:

- 1) Press the **FPL** Key for the MFD to display the 'FPL - Active Flight Plan' Page.
- 2) Turn the small **FMS** Knob to display the 'FPL - Flight Plan Catalog' Page.
- 3) Press the **FMS** Knob to activate the cursor and turn the **FMS** Knob to highlight the flight plan to be edited.
- 4) Press the **Edit** Softkey; or press the **MENU** Key, select 'Edit Flight Plan' and press the **ENT** Key. The 'FPL - Stored Flight Plan' Page is displayed.
- 5) Turn the large **FMS** Knob to highlight the comment field.
- 6) Use the **FMS** Knobs or the FMS alphanumeric keys to edit the comment.
- 7) Press the **ENT** Key to accept the changes.
- 8) Press the **FMS** Knob to remove the flashing cursor.

Deleting a stored flight plan:

- 1) Press the **FPL** Key and turn the small **FMS** Knob to display the 'FPL - Flight Plan Catalog' Page.
- 2) Press the **FMS** Knob to activate the cursor, and turn the **FMS** Knob to highlight the desired flight plan.
- 3) Press the **Delete** Softkey; press the **CLR** Key; or press the **MENU** Key, highlight 'Delete Flight Plan', and press the **ENT** Key. The 'Delete flight plan XX?' Window is displayed.
- 4) With 'OK' highlighted, press the **ENT** Key to delete the flight plan. To cancel the request, press the **CLR** Key, or highlight 'CANCEL' and press the **ENT** Key.



NOTE: The option to delete all stored flight plans is not available while the aircraft is in flight.

Deleting all stored flight plans:

- 1) Press the **FPL** Key and turn the small **FMS** Knob to display the 'FPL - Flight Plan Catalog' Page.
- 2) Press the **MENU** Key.
- 3) Turn the **FMS** Knob to highlight 'Delete All' and press the **ENT** Key. A 'Delete all flight plans?' confirmation window is displayed.
- 4) With 'OK' highlighted, press the **ENT** Key to delete all flight plans. To cancel the request, press the **CLR** Key, or highlight 'CANCEL' and press the **ENT** Key.

ACTIVE FLIGHT PLAN

The active flight plan can be edited by adding or removing flight plan items. The edits made to the active flight plan affect navigation as soon as they are entered. The system allows deleting an active flight plan. Deleting the active flight plan suspends navigation by the system. Individual waypoints, entire airways, and entire procedures can be deleted from a flight plan. Some waypoints in the final approach segment (such as the FAF or MAP) can not be deleted individually. Attempting to delete a waypoint that is not allowed results in a window displaying 'Invalid flight plan modification'.

The comment field (or name) of each flight plan can be changed to something that is useful for identification and sorting.

The flight plan leg which is currently being used for navigation guidance is referred to as the 'active leg'. The system automatically sequences from one active leg to the next as defined by the active flight plan. Any leg in the active flight plan successive to the leg currently being flown may be selected to become the new active leg.

Lastly, the active flight plan may be inverted (reversed) for navigation back to the original departure point.

Activating a flight plan leg:

- 1) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page (MFD) or the 'Flight Plan' Window (PFD).
- 2) Press the **FMS** Knob to activate the cursor (not required on the PFD) and turn the large **FMS** Knob to highlight the destination waypoint for the desired leg, or use the **Joystick** to place the Quick Select Box on the destination waypoint for the desired leg.
- 3) Press the **ACT Leg** Softkey (MFD only); or press the **MENU** Key, highlight 'Activate Leg', and press the **ENT** Key. A confirmation window is displayed with 'Activate' highlighted.
- 4) Press the **ENT** Key to activate the flight plan leg. To cancel, press the **CLR** Key, or highlight 'Cancel' and press the **ENT** Key.
- 5) Press the **FMS** Knob to remove the flashing cursor.

Inverting the active flight plan:

- 1) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page (MFD) or the 'Flight Plan' Window (PFD).
- 2) Press the **MENU** Key, highlight 'Invert Flight Plan', and press the **ENT** Key. An 'Invert active flight plan?' confirmation window is displayed.
- 3) Select 'OK'.
- 4) Press the **ENT** Key to invert and activate the active flight plan. To cancel, press the **CLR** Key, or highlight 'CANCEL' and press the **ENT** Key.

Deleting the active flight plan:

- 1) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page (MFD) or the 'Flight Plan' Window (PFD).
- 2) Press the **MENU** Key, highlight 'Delete Flight Plan', and press the **ENT** Key. The 'Delete all waypoints in flight plan?' Window is displayed.
- 3) With 'OK' highlighted, press the **ENT** Key to delete the active flight plan. To cancel the request, press the **CLR** Key, or highlight 'CANCEL' and press the **ENT** Key.

Deleting an individual waypoint from the active flight plan:

- 1) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page (MFD) or the 'Flight Plan' Window (PFD).
- 2) Press the **FMS** Knob to activate the cursor (not required on the PFD) and turn the large **FMS** Knob to highlight the waypoint to be deleted, or use the **Joystick** to place the Quick Select Box on the waypoint to be deleted (MFD only).
- 3) Press the **CLR** Key. The 'Remove XXXXX?' Window is displayed.

- 4) With 'OK' highlighted, press the **ENT** Key. To cancel the request, press the **CLR** Key, or highlight 'CANCEL' and press the **ENT** Key.
- 5) Press the **FMS** Knob to remove the flashing cursor.



NOTE: If removal of a flight plan item (waypoint, procedure, etc.) results in deletion of the end waypoint of the active leg, an off-route direct-to to the deleted waypoint is created and activated.

Deleting an entire airway from the active flight plan:

- 1) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page (MFD) or the 'Flight Plan' Window (PFD).
- 2) Press the **FMS** Knob to activate the cursor (not required on the PFD) and turn the large **FMS** Knob to highlight the header of the airway to be deleted; or use the **Joystick** to place the Quick Select Box on the header of the airway to be deleted (MFD only).
- 3) Press the **CLR** Key. The 'Remove [airway name] from flight plan?' Window is displayed.
- 4) With 'OK' highlighted, press the **ENT** Key. To cancel the request, press the **CLR** Key, or highlight 'CANCEL' and press the **ENT** Key.
- 5) Press the **FMS** Knob to remove the flashing cursor.

Deleting an entire procedure from the active flight plan:

- 1) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page (MFD) or the 'Flight Plan' Window (PFD).
- 2) Press the **FMS** Knob to activate the cursor (not required on the PFD) and turn the large **FMS** Knob to highlight the header of the airway to be deleted; or use the **Joystick** to place the Quick Select Box on the header of the airway to be deleted (MFD only).
- 3) Press the **CLR** Key. The 'Remove [procedure name] from flight plan?' Window is displayed.
- 4) With 'OK' highlighted, press the **ENT** Key. To cancel the request, press the **CLR** Key, or highlight 'CANCEL' and press the **ENT** Key.
- 5) Press the **FMS** Knob to remove the flashing cursor.

Or:

- 1) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page (MFD) or the 'Flight Plan' Window (PFD).
- 2) Press the **MENU** Key to display the Page Menu and turn the **FMS** Knob to highlight 'Remove [procedure]'.

- 3) Press the **ENT** Key. The 'Remove [procedure name] from flight plan?' Window is displayed.
- 4) With 'OK' highlighted, press the **ENT** Key. To cancel the request, press the **CLR** Key, or highlight 'CANCEL' and press the **ENT** Key.

Changing the active flight plan comment:

- 1) Press the **FPL** Key for the MFD to display the 'FPL - Active Flight Plan' Page.
- 2) Press the **FMS** Knob to activate the cursor and turn the large **FMS** Knob to highlight the comment field.
- 3) Use the **FMS** Knob, or the FMS alphanumeric keys to edit the comment.
- 4) Press the **ENT** Key to accept the changes.
- 5) Press the **FMS** Knob to remove the flashing cursor.

Or:

- 1) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page.
- 2) Use the **Joystick** to place the Quick Select Box on the Comment field.
- 3) Use the alphanumeric keys on the Display Controller to edit the comment.
- 4) Press the **ENT** Key to accept the changes.

ALONG TRACK OFFSETS

A waypoint having an "along track offset" distance from an existing waypoint can be entered into a flight plan. Along track offset waypoints lie along the path of the existing flight plan, and can be used to make the system reach a specified altitude before or after reaching the specified flight plan waypoint. Offset distances can be entered from 1 to 999 nm in increments of 1 nm. Entering a negative offset distance results in an along track offset waypoint inserted before the selected waypoint, whereas entering a positive offset distance results in an along track offset waypoint inserted after the selected waypoint. Multiple offset waypoints are allowed.

A waypoint must be adjacent to its parent waypoint in the flight plan, so the system limits the along-track distance to less than the length of the leg before or after the selected waypoint. If the selected waypoint is the active waypoint, the distance is limited to less than the distance to go to the active waypoint. Assigning an along track offset to a leg with indeterminate length is not permitted. An along track offset is not allowed after the final approach fix of an approach.

An along track offset distance cannot be modified once entered. If the along track offset distance must be changed, the existing along track offset waypoint must be deleted and a new one created with the new offset distance.

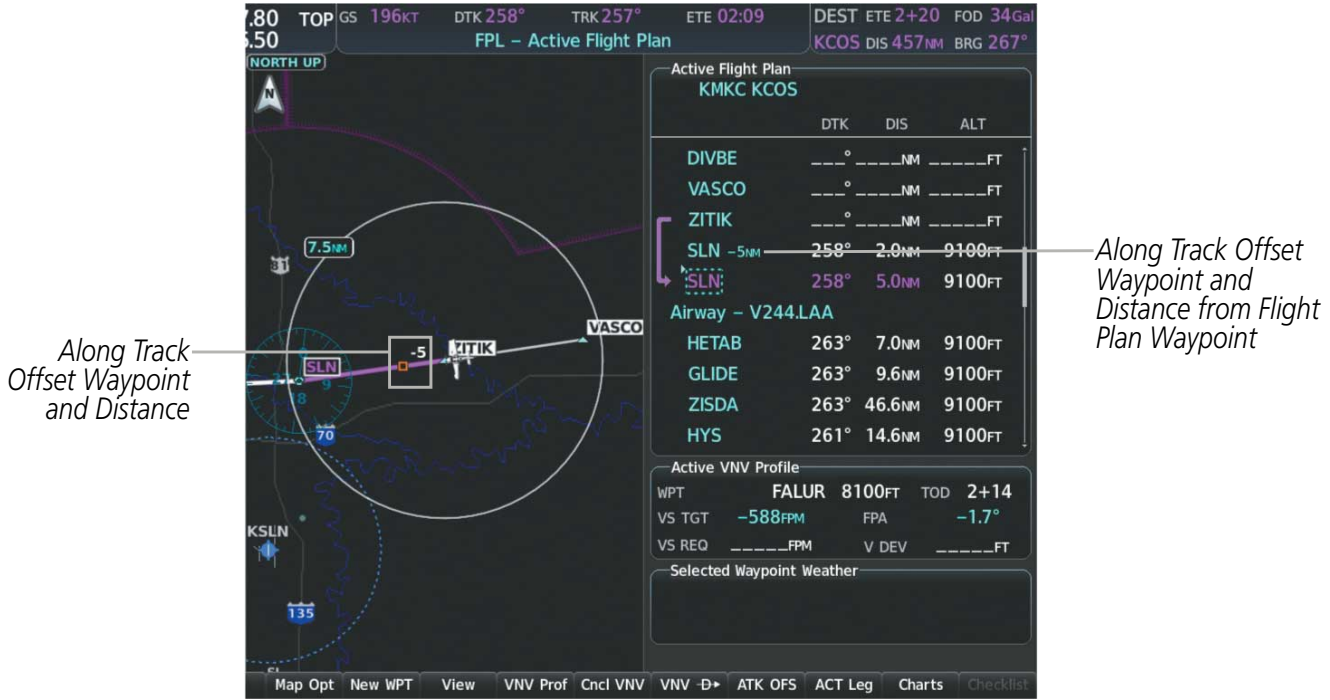


Figure 5-65 Along Track Offset

Entering an along track offset distance:

- 1) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page (MFD) or the 'Flight Plan' Window (PFD).
- 2) Press the **FMS** Knob to activate the cursor (not required on the PFD) and turn the large **FMS** Knob to highlight the waypoint for the along track offset.
- 3) Press the **ATK OFS** Softkey (MFD only); or press the **MENU** Key, highlight 'Create ATK Offset Waypoint', and press the **ENT** Key.
- 4) Turn the small **FMS** Knob to enter a positive or negative offset distance in the range of +/- 1 to 999 nm (limited by leg distances).
- 5) Press the **ENT** Key to create the offset waypoint.
- 6) Press the **FMS** Knob to remove the flashing cursor.

PARALLEL TRACK

The Parallel Track (PTK) feature allows creation of a parallel course offset of 1 to 50 nm left or right of the current flight plan. When Parallel Track is activated, the course line drawn on the map pages shows the parallel course, and waypoint names have a lower case "p" placed after the identifier. Activation of parallel track will apply from the current position along the flight plan until a leg that does not meet the criteria for parallel track. Guidance will be computed to return to the original track at the beginning of that leg.

If the parallel track proposed by the offset direction and distance is not allowed by the system, the activation prompt is displayed, but disabled.

The following will inhibit activation of a parallel track:

- Initiating a direct-to, to the selected waypoint.
- If an approach leg is active, the status indicates that the system is unable to activate the parallel track with the message ‘Parallel Track Unavailable Approach Leg Active’.
- If the offset direction and distance results in an unreasonable route geometry (e.g., there is a sharp turn of more than 120 degrees), the status indicates that the system is unable to activate the parallel track because of invalid geometry (‘Parallel Track Unavailable Invalid Route Geometry’).
- If the active leg is not a track between two fixes (TF) or a course to a fix (DF) leg, the status indicates that the system is unable to activate the parallel track because parallel track is not available for the active leg type (‘Parallel Track Unavailable Not Allowed for Active Leg’).
- If there are no legs remaining in the flight plan after the given leg, or OBS mode is active.

The following will cancel the parallel track:

- Initiating a direct-to, to a waypoint.
- Initiating a hold at the present position.
- If a course change occurs greater than 120° or the parallel tracks overlap as a result of the course change.
- No legs are remaining in the flight plan after the given leg, or OBS mode is active.

Initiating a hold at a waypoint will result in the aircraft flying the parallel track until a turn is required to fly to the hold waypoint. If the hold is removed prior to reaching the hold waypoint, the parallel track will be resumed. Once the holding pattern is active, the parallel track will not be resumed upon exiting the hold.



NOTE: Vertical navigation is unavailable while the Parallel Track feature is active.

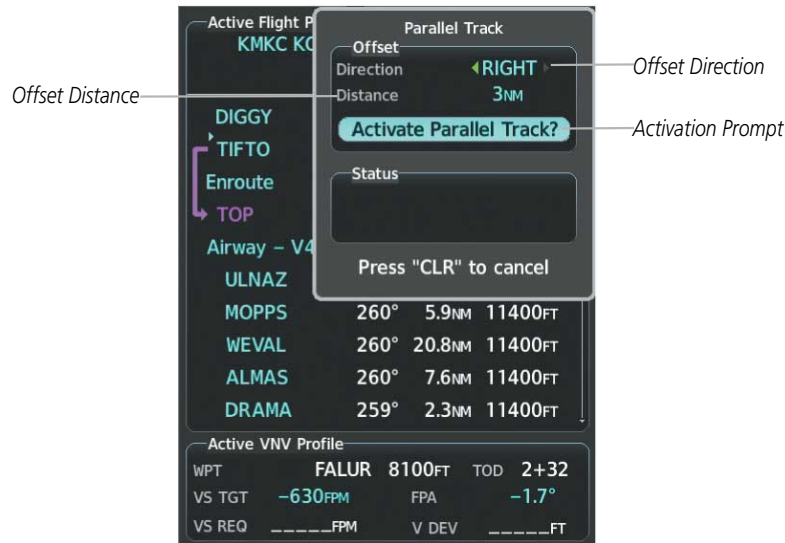


Figure 5-66 Parallel Track Window



Figure 5-67 Parallel Track Active

Activating parallel track:

- 1) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page (MFD) or the 'Flight Plan' Window (PFD).
- 2) Press the **MENU** Key, highlight 'Parallel Track', and press the **ENT** Key. The 'Parallel Track' Window is displayed with the 'Direction' Field highlighted.

- 3) Turn the small **FMS** Knob to select 'LEFT' or 'RIGHT' and press the **ENT** Key. The 'Distance' Field is highlighted.
- 4) Turn the small **FMS** Knob to enter a distance from 1-99 nm and press the **ENT** Key. 'Activate Parallel Track' is highlighted.
- 5) Press the **ENT** Key to activate parallel track. Press the **FMS** Knob or the **CLR** Key to cancel the parallel track activation.

Cancelling parallel track:

- 1) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page (MFD) or the 'Flight Plan' Window (PFD).
- 2) Press the **MENU** Key, highlight 'Parallel Track', and press the **ENT** Key. The 'Parallel Track' Window is displayed with 'Cancel Parallel Track?' highlighted.
- 3) Press the **ENT** Key.

FLIGHT PLAN VIEWS

Information about flight plans can be viewed in more than one way. The active flight plan can be configured to show cumulative distance over the length of the flight plan or the distance for each leg of the flight plan, and the active flight plan can be viewed in a narrow or wide view. In the wide view, additional information is displayed: Fuel Remaining (FUEL REM), Estimated Time Enroute (ETE), Estimated Time of Arrival (ETA), and Bearing to the waypoint (BRG).


Changing the flight plan view:

- 1) Press the **FPL** Key for the MFD to display the 'FPL - Active Flight Plan' Page.
- 2) Press the **View** Softkey to display the **Wide**, **Narrow**, **Leg-Leg**, and **CUM** Softkeys.
- 3) Press the **CUM** Softkey to view cumulative waypoint distance, or press the **Leg-Leg** Softkey to view leg-to-leg waypoint distance.
- 4) Press the **Wide** Softkey to display the wide view, or select the **Narrow** Softkey to display the narrow view.
- 5) Press the **Back** Softkey to return to the top level active flight plan softkeys.


Charts may also be viewed alongside the active flight plan in split screen mode. With an active flight plan loaded into the system, the Charts Page can be set to automatically display a chart depending on the active flight plan leg. For more information on Charts, see the Additional Features Section.

Activating split screen mode from the active flight plan displays the Charts Page which removes the Flight Plan Map. The Flight Plan Map can be re-displayed on the active flight plan page. However, replacing the Flight Plan Map on the active flight plan page in split screen mode limits the flight plan content which can be displayed. For example, displaying the Flight Plan Map while in split screen narrow view removes the 'Active VNV Profile' Box. See the following figures below depicting the different split screen displays with the active flight plan.

Display Title shows 'Chart + Active Flight Plan'
 - AUTO indicates the chart shown automatically corresponds to the phase of flight

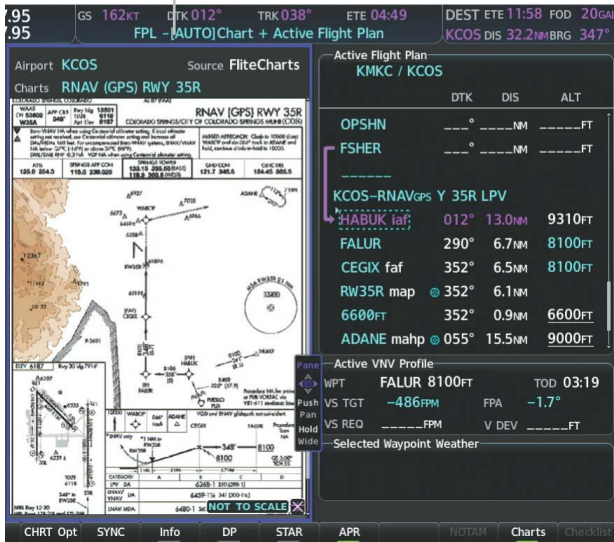


Split Screen Narrow View

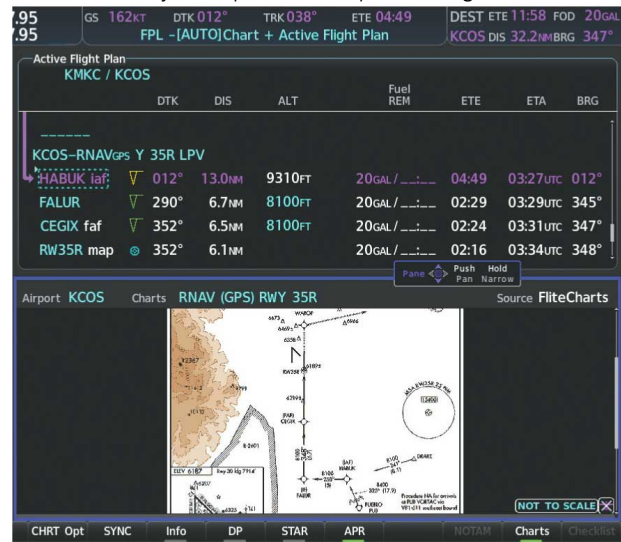


Split Screen Wide View

Figure 5-68 Split Screen Narrow and Wide View

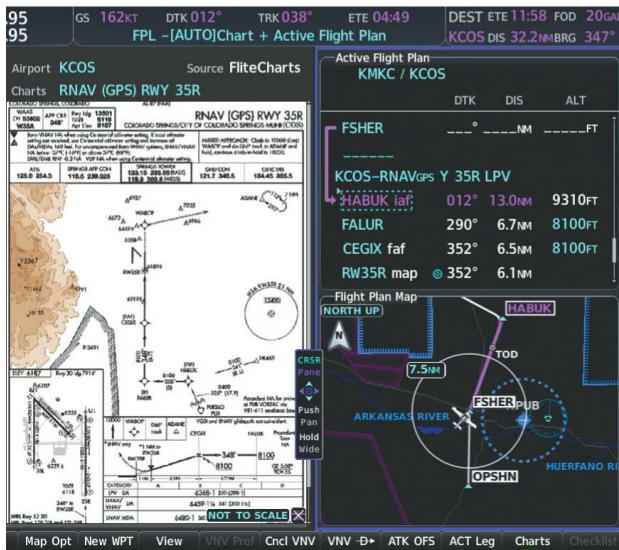

Split Screen Narrow View with Flight Plan Map

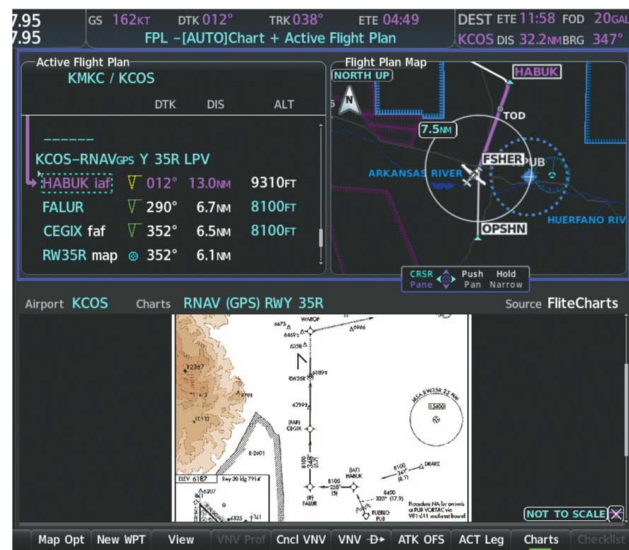

Split Screen Wide View with Flight Plan Map

Figure 5-69 Split Screen Mode with Flight Plan Map

Viewing charts and active flight plan page in split screen mode:

- 1) Press the **FPL** Key for the **MFD** to display the 'FPL - Active Flight Plan' Page.
- 2) Press the **Charts** Softkey. Split screen mode is now enabled showing the Charts Page alongside the Active Flight Plan Page, and Charts Page is bordered by a dark purple box indicating it is the active display pane.
- 3) To quickly view the chart corresponding to the active flight plan leg, press the **AUTO** Softkey.

Displaying the flight plan map on the active flight plan page in split mode:

- 1) Press the **FPL** Key for the MFD to display the 'FPL - Active Flight Plan' Page.
- 2) Press the **Charts** Softkey. Split screen mode is now enabled showing the Charts Page alongside the active flight plan, and the Charts Page is bordered by a dark purple box indicating it is the active display pane.
- 3) Move the **Joystick** to select the Active Flight Plan page as the active display pane.
- 4) Press the **MENU** Key. 'Show Flight Plan Map' is highlighted. Press the **ENT** Key.
- 5) To remove the Flight Plan Map, press the **MENU** Key and select 'Hide Flight Plan Map'. Press the **ENT** Key.

COLLAPSING AIRWAYS

The system allows airways on the active flight plan to be collapsed or expanded from the Stored or Active Flight Plan Page/Window. When airways have been collapsed, it is indicated on the airway heading.

When airways are collapsed, leg-to-leg computed values such as DIS or ETE shown for the exit waypoint reflect the total of all the legs on the airway that have been hidden in the collapsed display. The DTK value is inhibited because it is not usable in this context.

The Active Flight Plan Page always keeps the following three waypoints visible: "From" waypoint, "To" waypoint, and "Next" waypoint. To prevent one or more of these waypoints from being hidden in a collapsed airway segment, the airway segment that contains either the "To" or the "Next" waypoint is automatically expanded. When an airway is loaded, airways are automatically expanded to facilitate flight plan review.

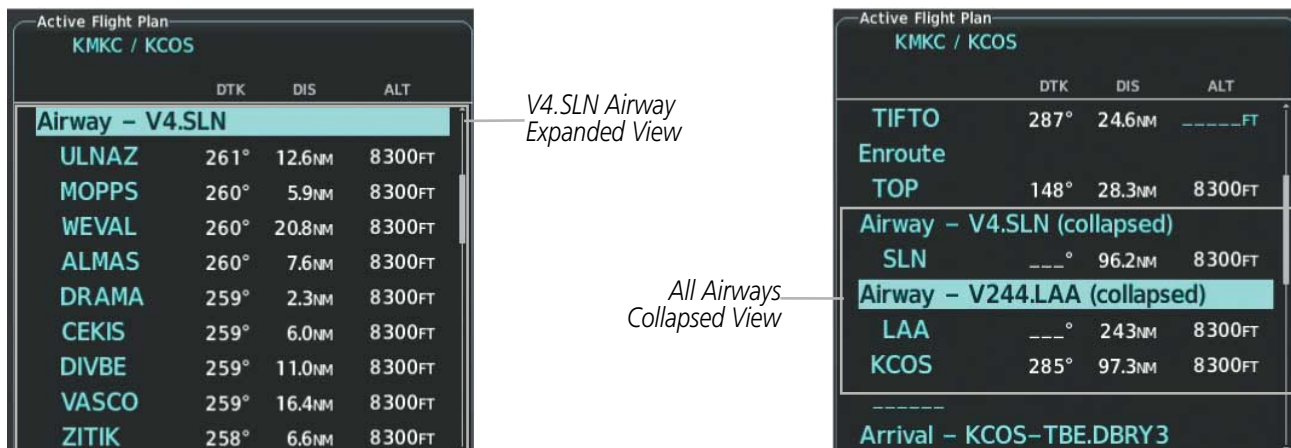


Figure 5-70 Expanded/Collapsed Airways

Collapsing/expanding the airways in the active flight plan:

- 1) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page (MFD) or the 'Flight Plan' Window (PFD).
- 2) Press the **MENU** Key, highlight 'Collapse Airways' or 'Expand Airways', and press the **ENT** Key. The airways are collapsed/expanded.

CLOSEST POINT OF FPL

'Closest Point of FPL' calculates the bearing and closest distance at which a flight plan passes a reference waypoint, and creates a new user waypoint along the flight plan at the location closest to a chosen reference waypoint.

Determining the closest point along the active flight plan to a selected waypoint:

- 1) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page (MFD) or the 'Flight Plan' Window (PFD).
- 2) Press the **MENU** Key, highlight 'Closest Point Of FPL', and press the **ENT** Key. A window appears with the reference waypoint field highlighted.
- 3) Enter the identifier of the reference waypoint. The system displays the bearing (BRG) and distance (DIS) to the closest point along the flight plan to the selected reference waypoint and creates a user waypoint at this location. Press the **ENT** Key. The name for the new user waypoint is derived from the identifier of the reference waypoint.

USER-DEFINED HOLDING PATTERNS

A holding pattern can be defined at any active flight plan waypoint, at the aircraft present position, or at a direct-to waypoint.

Active Flight Plan
KMKC / KCOS

	DTK	DIS	ALT
RW01			
2000FT	hdg	---°	---NM ---FT
MANSEQ	hdg	---°	
MCI			
DIGGY	288°	29.8NM	---FT
TIFTO	287°	25.7NM	---FT
Enroute			
TOP	148°	30.4NM	---FT
Airway - V4.SLN			
ULNAZ	261°	13.6NM	---FT

Waypoint Selected

Page Menu

- Options
- Activate Leg
- Show Flight Plan Map
- Load Airway
- Expand Airways
- Hold At Waypoint**
- Hold At Present Position
- Create ATK Offset Waypoint
- VNV ->
- Select VNV Profile Window
- Cancel VNV
- Delete Flight Plan
- Store Flight Plan
- Invert Flight Plan
- Temperature Compensation
- Create New User Waypoint

Hold At Waypoint Menu Selection

Press the FMS CRSR knob to return to base page

Hold at

Direction, Course

Hold East of **TIFTO** *Location of Hold*

Course **287°** **Inbound** *Course Direction Inbound or Outbound*

Leg Time, Distance

Leg **Time** **1:00** *Leg Length (Time in nm or Distance in minutes)*

Turns

Turn Direction **Right** *Turn Direction (Right or Left)*

Map

Map of Hold Location

1.5NM

TIFTO

Expect Further Clearance

EFC Time **---:---UTC** *Expect Further Clearance Time*

Load? *Load Hold in Active Flight Plan*

Figure 5-71 Creating a User Defined Holding Pattern at an Active Flight Plan Waypoint

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CNS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

Active Flight Plan
KMKC / KCOS

	DTK	DIS	ALT
RW01			
2000FT	hdg ___°	___NM	___FT
MANSEQ	hdg ___°		
MCI			
DIGGY	288°	29.8NM	___FT
TIFTO	287°	25.7NM	___FT
Enroute			
TOP	148°	30.4NM	___FT
Airway - V4.SLN			
ULNAZ	261°	13.6NM	___FT

Waypoint Selected

Direct To

Ident, Facility, City
TIFTO ▲ N CEN USA

VNV
___FT +0NM

Map
NORTH UP
7.5NM
TIFTO
52K KK57E K9

Location
BRG 288° DIS 56.8NM

Course
287°

Activate? Hold?

Hold at

Direction, Course
Hold East of TIFTO
Course 287° Inbound

Leg Time, Distance
Leg Time 1:00

Turns
Turn Direction Right

Map
1.5NM
TIFTO

Expect Further Clearance
EFC Time ___:___UTC

Activate?

Hold Entry Course

Location of Hold

Course Direction (Inbound or Outbound)

Leg Length (Time in nm or Distance in minutes)

Turn Direction (Right or Left)

Leg Length Mode Button (Time or Distance)

Map of Hold Location

Expect Further Clearance Time

Load Hold and Activate Direct To

Hold At Direct To Waypoint Selection

Figure 5-72 Creating a User Defined Holding Pattern at a Direct To Waypoint

Creating a user-defined hold at an active flight plan waypoint:

- 1) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page (MFD) or the 'Flight Plan' Window (PFD).
- 2) Press the **FMS** Knob to activate the cursor (not required on the PFD) and turn the large **FMS** Knob to highlight the waypoint for the hold.
- 3) Press the **MENU** Key, highlight 'Hold At Waypoint', and press the **ENT** Key. The 'Hold at' Window appears with the 'Course' Field highlighted.
- 4) Use the **FMS** Knobs to edit the course, and press the **ENT** Key.
- 5) Use the small **FMS** Knob to select 'Inbound' or 'Outbound' course direction, and press the **ENT** Key.
- 6) Use the small **FMS** Knob to select 'Time' or 'Distance' length mode, and press the **ENT** Key.
- 7) Use the **FMS** Knobs to edit the length, and press the **ENT** Key.
- 8) Use the small **FMS** Knob to select 'Right' or 'Left' turn direction, and press the **ENT** Key.
- 9) Use the **FMS** Knobs to edit the Expect Further Clearance Time (EFC Time), and press the **ENT** Key.
- 10) Press the **ENT** Key while 'Load?' is highlighted to insert the hold into the flight plan.

Creating a user-defined hold at the aircraft present position:

- 1) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page (MFD) or the 'Flight Plan' Window (PFD).
- 2) Press the **MENU** Key, highlight 'Hold At Present Position', and press the **ENT** Key. The 'Hold at' Window appears with the 'Course' Field highlighted.
- 3) If desired, use the **FMS** Knobs to edit the course, and press the **ENT** Key.
- 4) Use the small **FMS** Knob to select 'Inbound' or 'Outbound' course direction, and press the **ENT** Key.
- 5) Use the small **FMS** Knob to select 'Time' or 'Distance' length mode, and press the **ENT** Key.
- 6) Use the **FMS** Knobs to edit the length, and press the **ENT** Key.
- 7) Use the small **FMS** Knob to select 'Right' or 'Left' turn direction, and press the **ENT** Key.
- 8) Use the **FMS** Knobs to edit the Expect Further Clearance Time (EFC Time), and press the **ENT** Key.
- 9) Press the **ENT** Key while 'Activate?' is highlighted to create an Offroute Direct-to hold waypoint at the aircraft present position and activate the hold.

Creating a user-defined hold at a direct-to waypoint:

- 1) Press a **Direct-to** Key and set up the direct-to waypoint as desired, but select 'Hold?' instead of 'Activate?' when finished.
- 2) Use the **FMS** Knobs to edit the course, and press the **ENT** Key.
- 3) Use the small **FMS** Knob to select 'Inbound' or 'Outbound' course direction, and press the **ENT** Key.
- 4) Use the small **FMS** Knob to select 'Time' or 'Distance' length mode, and press the **ENT** Key.
- 5) Use the **FMS** Knobs to edit the length, and press the **ENT** Key.
- 6) Use the small **FMS** Knob to select 'Right' or 'Left' turn direction, and press the **ENT** Key.
- 7) Use the **FMS** Knobs to edit the Expect Further Clearance Time (EFC Time), and press the **ENT** Key.
- 8) Press the **ENT** Key while 'Activate?' is highlighted to activate the direct-to with the user-defined hold defined at the direct-to waypoint. (If the direct-to waypoint is part of the active flight plan, the hold is inserted into the active flight plan. If the direct-to waypoint is not part of the active flight plan, an off-route direct-to hold is created.)

Editing a user-defined hold:

- 1) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page (MFD) or the 'Flight Plan' Window (PFD).
- 2) Press the **FMS** Knob to activate the cursor (not required on the PFD) and turn the large **FMS** Knob to highlight the waypoint for the hold.
- 3) Press the **MENU** Key, highlight 'Edit Hold', and press the **ENT** Key. The 'Hold at' Window appears with the 'Course' Field highlighted.
- 4) Use the **FMS** Knobs to edit the course, and press the **ENT** Key.
- 5) Use the small **FMS** Knob to select 'Inbound' or 'Outbound' course direction, and press the **ENT** Key.
- 6) Use the small **FMS** Knob to select 'Time' or 'Distance' length mode, and press the **ENT** Key.
- 7) Use the **FMS** Knobs to edit the length, and press the **ENT** Key.
- 8) Use the small **FMS** Knob to select 'Right' or 'Left' turn direction, and press the **ENT** Key.
- 9) Use the **FMS** Knobs to edit the Expect Further Clearance Time (EFC Time), and press the **ENT** Key.
- 10) Press the **ENT** Key while 'Update?' is highlighted to update the hold.

Exiting a user-defined hold inserted into the active flight plan:

Press the **SUSP** Softkey. The system will provide guidance to follow the holding pattern to the inbound course and resume automatic waypoint sequencing.


Removing a user-defined hold inserted into the active flight plan:

- 1) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page (MFD) or the 'Flight Plan' Window (PFD).
- 2) Press the **FMS** Knob to activate the cursor (not required on the PFD) and turn the large **FMS** Knob to highlight the 'HOLD' waypoint.
- 3) Press the **CLR** Key. A 'Remove Holding Pattern?' confirmation window is displayed.
- 4) Select 'OK' and press the **ENT** Key. The holding pattern is removed from the active flight plan. Select 'CANCEL' and press the **ENT** Key to cancel the removal of the holding pattern.

Removing a user-defined hold at an off-route direct-to:

- 1) Press a **Direct To** Key to display the 'Direct To' Window (PFD or MFD).
- 2) Press the **MENU** Key to display the Page Menu with the cursor on the 'Cancel Direct-To NAV' selection.
- 3) Press the **ENT** Key. The holding pattern is removed.

5.7 VERTICAL NAVIGATION

 **NOTE:** The system supports vertical path guidance and altitude constraints for the following leg types: AF, CD, CF, CI, CR, DF, FC, FD, PI, RF, and TF. Altitude constraints are not retained in stored flight plans.

The system Vertical Navigation (VNV) feature provides vertical profile guidance during the enroute and terminal phases of flight. Guidance based on specified altitudes at waypoints in the active flight plan or to a direct-to waypoint is provided. It includes vertical path guidance to a descending path, which is provided as a linear deviation from the desired path. The desired path is defined by a line joining two waypoints with specified altitudes or as a vertical angle from a specified waypoint/altitude. The vertical waypoints are integrated into the active flight plan. Both manual and autopilot-coupled guidance are supported.

Canceling vertical navigation results in vertical deviation (V DEV), vertical speed required (VS REQ), and time to top of descent/bottom of descent (TOD/BOD) going invalid. The Vertical Deviation Indicator (VDI) and Required Vertical Speed Indicator (RVSI) on the PFD are removed, and the V DEV, VS REQ, and TOD items displayed in the 'Active VNV Profile' Box are dashed. VNV remains disabled until manually enabled. Vertical guidance in reversionary mode can only be enabled for a direct-to waypoint.

The system allows a vertical navigation direct-to for any waypoint in the active flight plan with an altitude constraint "designated" for vertical guidance. Pressing the **VNV Direct-to** Softkey on the Active Flight Plan Page allows the flight plan to be flown, while vertical guidance based on the altitude constraint at the VNV direct-to waypoint is provided. The altitude change begins immediately and is spread along the flight plan from current position to the vertical direct-to waypoint, not just along the leg for the direct-to waypoint. A direct-to with altitude constraint activated by pressing the **Direct-to** Key also provides vertical guidance, but would bypass flight plan waypoints between the current position in the flight plan and the direct-to waypoint. A top of descent (TOD) point is computed based on the default flight path angle; descent begins once the TOD is reached.

The vertical navigation profile can be modified by directly entering a vertical speed target (VS TGT) and/or flight path angle (FPA) in the 'Active VNV Profile' Box.

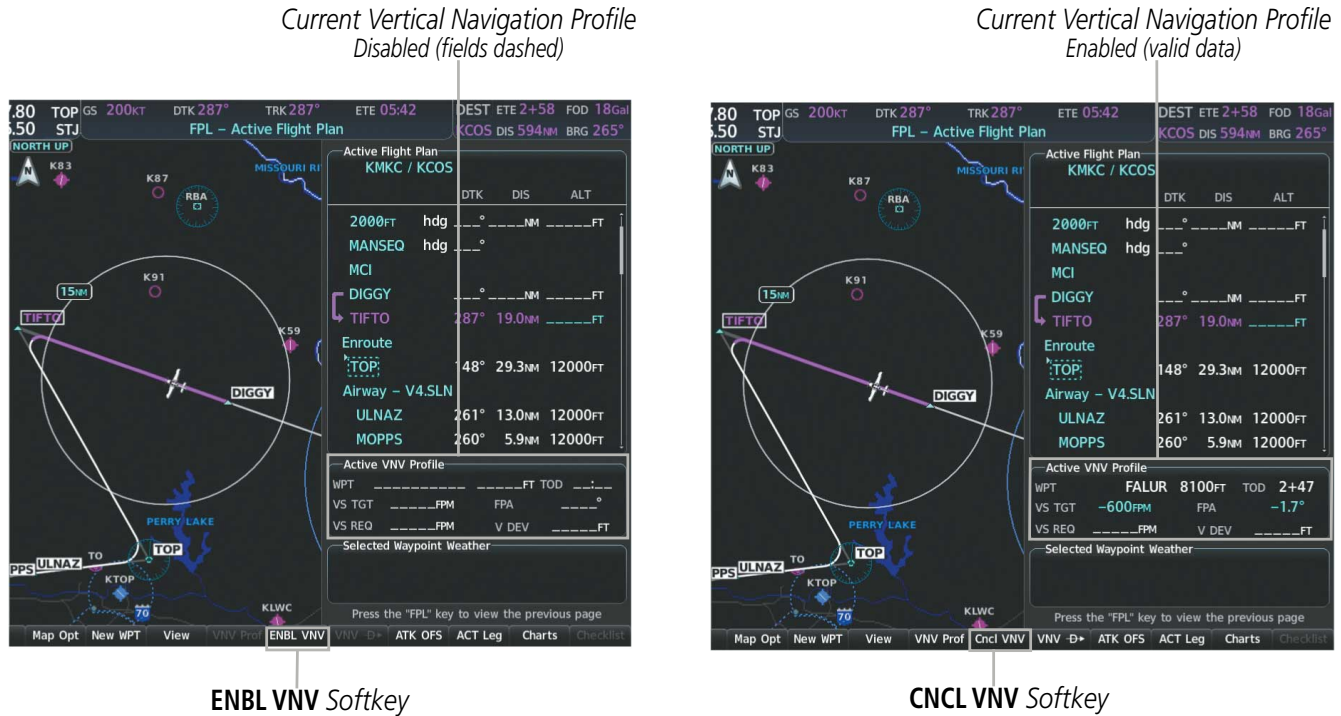


Figure 5-73 Enabling/Disabling Vertical Navigation

Enabling and Disabling VNV guidance:

- 1) Press the **FPL** Key for the MFD to display the 'FPL- Active Flight Plan' Page.
- 2) Press the **ENBL VNV** Softkey; or press the **MENU** Key, highlight 'Enable VNV', and press the **ENT** Key. Vertical navigation is enabled, and vertical guidance begins with the waypoint shown in the 'Active VNV Profile' Box (defaults first waypoint in the active flight plan with an altitude enabled for vertical navigation).
- 3) To Disable VNV guidance, press the **Cncl VNV** Softkey; or press the **MENU** Key, highlight 'Cancel VNV', and press the **ENT** Key. Vertical navigation is disabled.

Activating a vertical navigation direct-to:

- 1) Press the **FPL** Key for the MFD to display the 'FPL - Active Flight Plan' Page.
- 2) Press the **FMS** Knob to activate the cursor and turn the **FMS** Knob to highlight the desired waypoint.



NOTE: The selected waypoint must have a designated altitude constraint (cyan number) to be used. If not, the first waypoint in the flight plan with a designated altitude constraint is selected.

- 3) Press the **VNV Direct-To** Softkey; or press the **MENU** Key, highlight 'VNV Direct-To', and press the **ENT** Key. An 'Activate vertical Direct-to to: NNNNNFT at XXXXXX?' confirmation window is displayed.

- 4) Press the **ENT** Key. Vertical guidance begins to the altitude constraint for the selected waypoint.
- 5) Press the **FMS** Knob to remove the flashing cursor.

Modifying the VS TGT and FPA:

- 1) Press the **FPL** Key for the MFD to display the 'FPL - Active Flight Plan' Page.
- 2) Press the **VNV Prof** Softkey; or press the **MENU** Key, highlight 'Select VNV Profile Window', and press the **ENT** Key. The cursor is now located in the 'Active VNV Profile' Box.
- 3) Turn the **FMS** Knobs as needed to edit the values.
- 4) Press the **FMS** Knob to remove the flashing cursor.

ALTITUDE CONSTRAINTS

The system can use altitude constraints associated with lateral waypoints to give guidance for vertical navigation. These altitudes are, depending on the specific instance, manually entered or retrieved from the published altitudes in the navigation database.

Altitudes associated with arrival and approach procedures are “auto-designated”. This means the system automatically provides descending vertical speed and deviation guidance to an altitude(s) chosen by the system for any waypoint prior to the FAF. These altitudes are displayed as cyan text. Additionally, altitudes can be manually designated up to and including the FAF. Manually designated altitudes are displayed as cyan text with the pencil icon. For all designated altitudes, the system will automatically calculate altitude constraints prior to the designated altitude, which are displayed as white text.

Altitudes that have been designated for use in vertical guidance can be “un-designated” using the **CLR** Key. The altitude is now displayed only as a reference (white text). It is not used to give vertical guidance. Other displayed altitudes may change due to re-calculations or be rendered invalid as a result of manually changing an altitude to a non-designated altitude.

Altitude constraints are displayed and entered in feet mean sea level (MSL) values to the nearest hundred. An altitude constraint in feet above ground level (AGL) format is supported for airports. When a database altitude restriction is displayed, the system allows entry of a different altitude when creating a waypoint, effectively overriding the database restriction (only before the FAF). When a database altitude restriction of type “AT or ABOVE” or “AT or BELOW” is activated, the system uses the “AT” portion of the restriction to define the vertical profile.



Figure 5-74 Waypoint Altitude Constraints

White Text	Cyan Text
<p>5000FT</p> <p>Altitude calculated by the system estimating the altitude of the aircraft as it passes over the navigation point. No white line above or below to indicate a potential constraint.</p>	<p>8100FT /</p> <p>Altitude is designated for use in determining vertical guidance. A pencil icon indicates manual designation or manually edited data entry.</p>
<p>5000FT</p> <p>Altitude retrieved from the navigation database. White line above or below indicates the type of constraint, as shown in the preceding figure. These altitudes are provided as a reference, and are not designated to be used in determining vertical guidance.</p>	<p>8100FT</p> <p>The system cannot use this altitude in determining vertical guidance because of an invalid constraint condition.</p>

Table 5-12 Altitude Constraint Color Coding

NOTE: All designated altitudes (cyan text) will be displayed in the Active Flight Plan Page and Flight Plan Window without restriction bars regardless of what is shown on the published procedure.

Manually designating a waypoint altitude to be used for vertical guidance:

- 1) Press the **FPL** Key for the MFD to display the 'FPL - Active Flight Plan' Page.
- 2) Press the **FMS** Knob, and turn the large **FMS** Knob to highlight the desired waypoint altitude field.
- 3) Use the **FMS** Knobs to enter the desired altitude.

- 4) Press the **ENT** Key. The altitude is now shown in cyan, indicating it is usable for vertical guidance.
- 5) Press the **FMS** Knob to remove the flashing cursor.

Manually designating a procedure waypoint altitude to be used for vertical guidance:

- 1) Press the **FPL** Key for the MFD to display the 'FPL - Active Flight Plan' Page.
- 2) Press the **FMS** Knob, and turn the large **FMS** Knob to highlight the desired waypoint altitude field.
- 3) Use the **FMS** Knobs to enter the desired altitude
- 4) Press the **ENT** Key. The altitude is now shown in cyan, indicating it is usable for vertical guidance.
- 5) Press the **FMS** Knob to remove the flashing cursor.

An altitude constraint is invalid if:

- Meeting the constraint requires the aircraft to climb
- Meeting the constraint requires the maximum flight path angle or maximum vertical speed to be exceeded
- The constraint is within a leg type for which altitude constraints are not supported
- The altitude constraint is added to the FAF of an approach that provides vertical guidance (i.e., ILS or GPS SBAS approach)
- The altitude constraint is added to a waypoint past the FAF

Altitude constraints can be modified or deleted after having been added to the flight plan. In the event an altitude constraint is deleted and the navigation database contains an altitude restriction for the lateral waypoint, the system displays the altitude restriction from the database provided no predicted altitude can be provided. The system also provides a way to reinstate a published altitude constraint that has been edited.

Entering/modifying an altitude constraint:

- 1) Press the **FPL** Key for the MFD to display the 'FPL - Active Flight Plan' Page.
- 2) Press the **FMS** Knob, and turn the large **FMS** Knob to highlight the desired waypoint altitude constraint.
- 3) Enter an altitude constraint value using the **FMS** Knobs, or the FMS alphanumeric keys. To enter altitudes as a flight level, turn the small **FMS** Knob counter-clockwise past zero or clockwise past 9 on the first character, and the system automatically changes to show units of Flight Level. Turn the large **FMS** Knob clockwise to highlight the first zero and enter the three digit flight level.
- 4) Press the **ENT** Key to accept the altitude constraint; if the selected waypoint is an airport, an additional choice is displayed. Turn the small **FMS** Knob to choose 'MSL' or 'AGL', and press the **ENT** Key to accept the altitude.

Or:

- 1) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page on the MFD.
- 2) Use the **Joystick** to place the Quick Select Box on the desired waypoint altitude constraint.
- 3) Enter an altitude constraint value using the alphanumeric keys on the Display Controller. To enter altitudes as a flight level, enter F as the first character.
- 4) Press the **ENT** Key to accept the altitude constraint; if the selected waypoint is an airport, an additional choice is displayed. Turn the small **FMS** Knob to choose 'MSL' or 'AGL', and press the **ENT** Key to accept the altitude.

Deleting an altitude constraint provided by the navigation database:

- 1) Press the **FPL** Key for the MFD to display the 'FPL - Active Flight Plan' Page.
- 2) Press the **FMS** Knob, and turn the large **FMS** Knob highlight the desired waypoint altitude constraint; or use the **Joystick** to place the Quick Select Box on the desired waypoint altitude constraint (MFD only), and press the **FMS** Knob.
- 3) Press the **CLR** Key. A 'Remove VNV altitude?' confirmation window is displayed.
- 4) Select 'OK' and press the **ENT** Key.

Deleting an altitude constraint that has been manually entered:

- 1) Press the **FPL** Key for the MFD to display the 'FPL - Active Flight Plan' Page.
- 2) Press the **FMS** Knob, and turn to highlight the desired waypoint altitude constraint; or use the **Joystick** to place the Quick Select Box on the desired waypoint altitude constraint (MFD only), and press the **FMS** Knob.
- 3) Press the **CLR** Key. A 'Remove or Revert to published VNV altitude of nnnnnFT?' confirmation window is displayed.
- 4) Select 'REMOVE' and press the **ENT** Key. The manually entered altitude is deleted (it is replaced by a system calculated altitude, if available).

Reverting a manually entered altitude constraint back to the navigation database value:

- 1) Press the **FPL** Key for the MFD to display the 'FPL - Active Flight Plan' Page.
- 2) Press the **FMS** Knob, and turn to highlight the desired waypoint altitude constraint; or use the **Joystick** to place the Quick Select Box on the desired waypoint altitude constraint (MFD only), and press the **FMS** Knob.
- 3) Press the **CLR** Key. A 'Remove or Revert to published VNV altitude of nnnnnFT?' confirmation window is displayed.

- 4) Select 'REVERT' and press the **ENT** Key. The altitude is changed to the navigation database value.
- 5) Press the **FMS** Knob to remove the flashing cursor.

Modifying a system calculated altitude constraint:

- 1) Press the **FPL** Key for the MFD to display the 'FPL - Active Flight Plan' Page.
- 2) Press the **FMS** Knob, and turn the large **FMS** Knob to highlight the desired waypoint altitude constraint; or use the **Joystick** to place the Quick Select Box on the desired waypoint altitude constraint (MFD only), and press the **FMS** Knob.
- 3) Press the **CLR** Key. An 'Edit or Revert to published VNV altitude of nnnnnFT?' confirmation window is displayed.
- 4) Select 'EDIT' and press the **ENT** Key.
- 5) Edit the value using the **FMS** Knobs or the FMS alphanumeric keys, and press the **ENT** Key.
- 6) Press the **FMS** Knob to remove the flashing cursor.

VERTICAL SITUATION DISPLAY (VSD)

A Vertical Situation Display (VSD) can be shown on the bottom of the Navigation Map Page. The terrain, obstacles, vertical track vector, selected altitude, and active flight plan information (active flight plan information consists of waypoints, associated altitude constraints, current VNAV profile, TOD/BOD, and destination runway) can be displayed on the VSD, depending on the selected mode. See the Hazard Avoidance section for information about winds aloft, obstacles, and relative terrain on the VSD.



NOTE: Certain leg types (e.g. holds, heading legs) do not support VNAV PATH descents because the lateral distance of those legs is unknown. The VSD will not show a VNAV profile for any legs that have no vertical path guidance.

The VSD horizontal range is equal to the navigation map indicated range when the VSD is in Track mode. When the VSD is in Flight Plan mode, the horizontal range is the lower of twice the navigation map indicated range or the lowest range the displays all of the remaining active flight plan. The VSD altitude range automatically changes when the navigation map range is changed to keep a constant ratio of altitude range to horizontal range, until both minimum and maximum display limits have been met. At ranges above the maximum, the altitude range remains constant at the maximum.

The aircraft symbol is displayed on the left side of the VSD. The position of the aircraft symbol on the vertical scale is close to the top for a descent phase and in the middle for a cruise phase or if the phase is unknown.

If two waypoints are close together, and their labels or constraint values overlap enough to obscure any text, one waypoint label/constraint value is removed and the vertical dashed line for that waypoint is displayed as darker gray. The priority for which waypoint remains displayed is: (1) the current TO waypoint, (2) waypoint with an altitude constraint, and (3) waypoint closer to the aircraft.

Terrain/obstacles are available on the VSD, and will be shown if the aircraft altitude is low enough for the terrain/obstacles to be in view (terrain will be shown in gray if the terrain is selected Off on the Navigation Map). The depicted terrain profile represents an approximate forward-looking contour of the terrain based upon the highest reported terrain elevations, measured at intervals defined by the terrain database resolution, within a predefined width along the active flight plan between the aircraft present position and the end of the map range or active flight plan. The predefined width is determined by the flight phase.

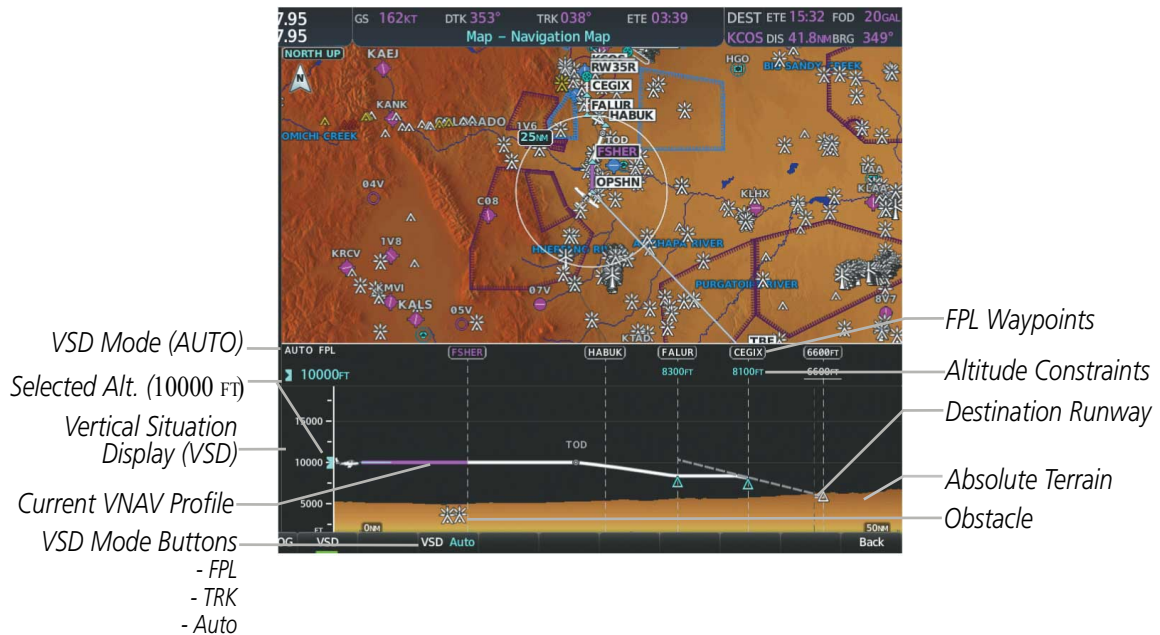


Figure 5-75 Vertical Situation Display (VSD)

VSD Mode Button	Displayed Mode	FPL Criteria	Items available on VSD
Auto	AUTO FPL	Available active FPL & aircraft within FPL swath	Terrain/obstacles along the active flight plan route, vertical track vector, selected altitude, and active flight plan information
	AUTO TRK	(1) Active FPL available & aircraft not within FPL swath, or (2) Active FPL not available	Terrain/obstacles along the current track, vertical track vector, and selected altitude
Flight Plan	FPL	Active FPL available	Terrain/obstacles along the active flight plan route, vertical track vector, selected altitude, and active flight plan information
		Active FPL not available	Only shows message 'Flight Plan Not Available'

VSD Mode Button	Displayed Mode	FPL Criteria	Items available on VSD
Track	TRK	NA	Terrain/obstacles along the current track, vertical track vector, and selected altitude
Active flight plan information consists of waypoints, associated altitude constraints, current VNAV profile, TOD/BOD, and destination runway			

Table 5-13 VSD Modes

Flight Phase	Width of Swath
Approach, Departure	0.6 nm
Terminal	2.0 nm
En Route, Oceanic	4.0 nm

Table 5-14 VSD Width of Swath

VSD MESSAGES

Under certain conditions, some messages may appear in conjunction with others.

Message	Description
'Loading...'	VSD is loading data due to a range change, full/half switch, or first being selected for display
'Flight Plan Not Available'	Flight Plan mode is selected and there is not a flight plan loaded with at least one leg.
'Flight Plan mode unavailable because aircraft off course and active leg over 200 NM'	All of the following are true: <ul style="list-style-type: none"> • Flight Plan mode is selected • The active leg is greater than 200 NM • The aircraft is outside the swath
'Aircraft Beyond Active Leg'	Flight Plan mode is selected and the aircraft's position, as projected on the flight plan, is past the end of the active leg.
'Active Leg Begins Beyond Aircraft Position'	Flight Plan mode is selected and the aircraft's position, as projected on the flight plan, is prior to the beginning of the active leg.

Message	Description
'VSD Not Available'	At least one of the following is true: <ul style="list-style-type: none"> • Valid terrain database not available • GPS MSL altitude not available • Current barometric altitude not available • Neither current track nor current heading available • GPS position not available • Map range setting is less than 1 nm
'VSD Data Old. Deselect and Reselect VSD'	VSD data has failed to update for 2 seconds or more.

Table 5-15 VSD System Messages

Enabling the Vertical Situation Display:

- 1) Select the 'Map - Navigation Map' Page.
- 2) Press the **Map Opt** Softkey.
- 3) Press the **Inset** Softkey.
- 4) Press the **VSD** Softkey to enable the Vertical Situation Display.
- 5) Press the **VSD [Mode]** Softkey to choose between **Auto**, **FPL**, or **TRK**.

Or:

- 1) Select the 'Map - Navigation Map' Page.
- 2) Press the **MENU** Key.
- 3) Turn the **FMS** Knob to highlight 'Show VSD' and press the **ENT** Key.
- 4) Press the **Map Opt** Softkey.
- 5) Press the **Inset** Softkey.
- 6) Press the **VSD [Mode]** Softkey to choose between **Auto**, **FPL**, or **TRK**.

Disabling the Vertical Situation Display:

- 1) Select the 'Map - Navigation Map' Page.
- 2) Press the **Map Opt** Softkey.
- 3) Press the **Inset** Softkey
- 4) Press the **Off** Softkey.

Or:

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CAS
- Flight Management**
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

- 1) Select the 'Map - Navigation Map' Page.
- 2) Press the **MENU** Key.
- 3) Turn the **FMS** Knob to highlight 'Hide VSD' and press the **ENT** Key.

5.8 PROCEDURES

The system can access the whole range of instrument procedures available. Departures (DPs), arrivals (STARs), and non-precision and precision approaches (APRs) are stored within the database and can be loaded using any Procedures (PROC) Key.

The selected procedure for the departure or arrival airport is added to the active flight plan. No waypoints are required to be in the active flight plan to load procedures; however, if the origin and destination airport are already loaded, the procedure loading window defaults to the appropriate airport, saving some time selecting the correct airport on the Procedure Loading Page.

The system adds terminal procedures to the flight plan based on leg types coded within that procedure in the navigation database. If the terminal procedure in the flight plan contains an identifier like '6368ft', that indicates a leg that terminates when the specified altitude (6368 feet) has been exceeded. A heading leg in the flight plan displays 'hdg' preceding the DTK (e.g. 'hdg 008°'). A flight plan leg requiring the pilot to manually initiate sequencing to the next leg displays 'MANSEQ' as the identifier.



Figure 5-76 Procedure Leg Identifiers

Viewing available procedures at an airport:

- 1) From the 'WPT - Airport Information' Page:

Press the **DP** Softkey. The 'WPT - Departure Information' Page is displayed, defaulting to the airport displayed on the Airport information Page.

Or:

Press the **STAR** Softkey. The 'WPT - Arrival Information' Page is displayed, defaulting to the airport displayed on the Airport information Page.

Or:

Press the **APR** Softkey. The 'WPT - Approach Information' Page is displayed, defaulting to the airport displayed on the Airport information Page.

- 2) Press the **FMS** Knob to activate the cursor. To select another airport, enter an identifier/facility name/city, and press the **ENT** Key.
- 3) Turn the large **FMS** Knob to highlight the procedure in its respective box. The procedure is previewed on the map.
- 4) Turn the small **FMS** Knob to view the list of available procedures. Press the **ENT** Key to select the procedure. The cursor moves to the next box (runway or transition). The procedure is previewed on the map.
- 5) Turn the **FMS** Knobs, as required, to highlight a runway or transition. Press the **ENT** Key to select the runway or transition. The cursor moves to the next box. The procedure is previewed on the map.
- 6) Repeat Step 5, until desired information has been viewed for the chosen procedure.
- 7) Press the **Info 1** Softkey or the **Info 2** Softkey to return to the 'WPT - Airport Information' Page.

Loading a procedure into the active flight plan from the [Procedure] Information Page:

1) From the 'WPT - Airport Information' Page:

Press the **DP** Softkey. The 'WPT - Departure Information' Page is displayed, defaulting to the airport displayed on the Airport information Page.

Or:

Press the **STAR** Softkey. The 'WPT - Arrival Information' Page is displayed, defaulting to the airport displayed on the Airport information Page.

Or:

Press the **APR** Softkey. The 'WPT - Approach Information' Page is displayed, defaulting to the airport displayed on the Airport information Page.

- 2) Press the **FMS** Knob to activate the cursor. To select another airport, enter an identifier/facility name/city, and press the **ENT** Key.
- 3) Turn the large **FMS** Knob to highlight the procedure in its respective box. The procedure is previewed on the map.
- 4) Turn the small **FMS** Knob to view the list of available procedures, and turn the **FMS** Knob to move the cursor. Press the **ENT** Key to select the procedure. The cursor moves to the next box (runway or transition). The procedure is previewed on the map.
- 5) Turn the small **FMS** Knob to view the list of available runways or transitions, and turn the **FMS** Knob to move the cursor. Press the **ENT** Key to select the runway or transition. The cursor moves to the next box
- 6) Repeat Step 5, until the cursor moves to the 'Sequence' Box or the 'Minimums' Box.
- 7) Press the **MENU** Key to display the [Procedure] Information Page Menu.
- 8) Turn the **FMS** Knob to highlight 'Load [procedure]'.
- 9) Press the **ENT** Key to load the procedure into the active flight plan.

DEPARTURES

A Departure Procedure (DP) is loaded at the departure airport in the flight plan. Only one departure can be loaded at a time in a flight plan. If a departure is loaded when another departure is already in the active flight plan, the new departure replaces the previous departure. The route is defined by selection of a departure, the transition waypoints, and a runway.

System Overview
Flight Instruments
Engine Indication System
Audio Panel and CNS
Flight Management
Hazard Avoidance
Automatic Flight Control System
Additional Features
Appendices
Index

Figure 5-77 Departure Selection

Figure 5-78 Departure Loading

Loading a departure into the active flight plan using the PROC Key:

- 1) Press the **PROC** Key. The 'Procedures' Window is displayed.
- 2) Turn the large **FMS** Knob to highlight 'Select Departure'.
- 3) Press the **ENT** Key. The Departure Loading Page/Window is displayed.
- 4) Use the **FMS** Knob to select an airport, if necessary, and press the **ENT** Key.
- 5) Select a departure from the list and press the **ENT** Key.
- 6) Select a runway (if required) and press the **ENT** Key.
- 7) Select a transition (if required) and press the **ENT** Key. 'Load?' is highlighted.
- 8) Press the **ENT** Key to load the departure procedure.

Removing a departure procedure from the active flight plan:

- 1) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page (MFD) or the 'Flight Plan' Window (PFD).
- 2) Press the **MENU** Key, and highlight 'Remove Departure'.
- 3) Press the **ENT** Key. The 'Remove [procedure name] from flight plan?' Window is displayed.
- 4) With 'OK' highlighted, press the **ENT** Key. To cancel the removal request, highlight 'CANCEL' and press the **ENT** Key.

Or:

- 1) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page (MFD) or the 'Flight Plan' Window (PFD).
- 2) Press the **FMS** Knob, and turn to highlight the departure header in the active flight plan; or use the **Joystick** to place the Quick Select Box on the departure header.
- 3) Press the **CLR** Key. The 'Remove [procedure name] from flight plan?' Window is displayed.
- 4) With 'OK' highlighted, press the **ENT** Key. To cancel the removal request, highlight 'CANCEL' and press the **ENT** Key.
- 5) Press the **FMS** Knob to remove the flashing cursor.

ARRIVALS

A Standard Terminal Arrival (STAR) can be loaded at any airport that has one available. Only one arrival can be loaded at a time in a flight plan. If an arrival is loaded when another arrival is already in the active flight plan, the new arrival replaces the previous arrival. The route is defined by selection of an arrival, the transition waypoints, and a runway.

System Overview
 Flight Instruments
 Engine Indication System
 Audio Panel and CNS
 Flight Management
 Hazard Avoidance
 Automatic Flight Control System
 Additional Features
 Appendices
 Index

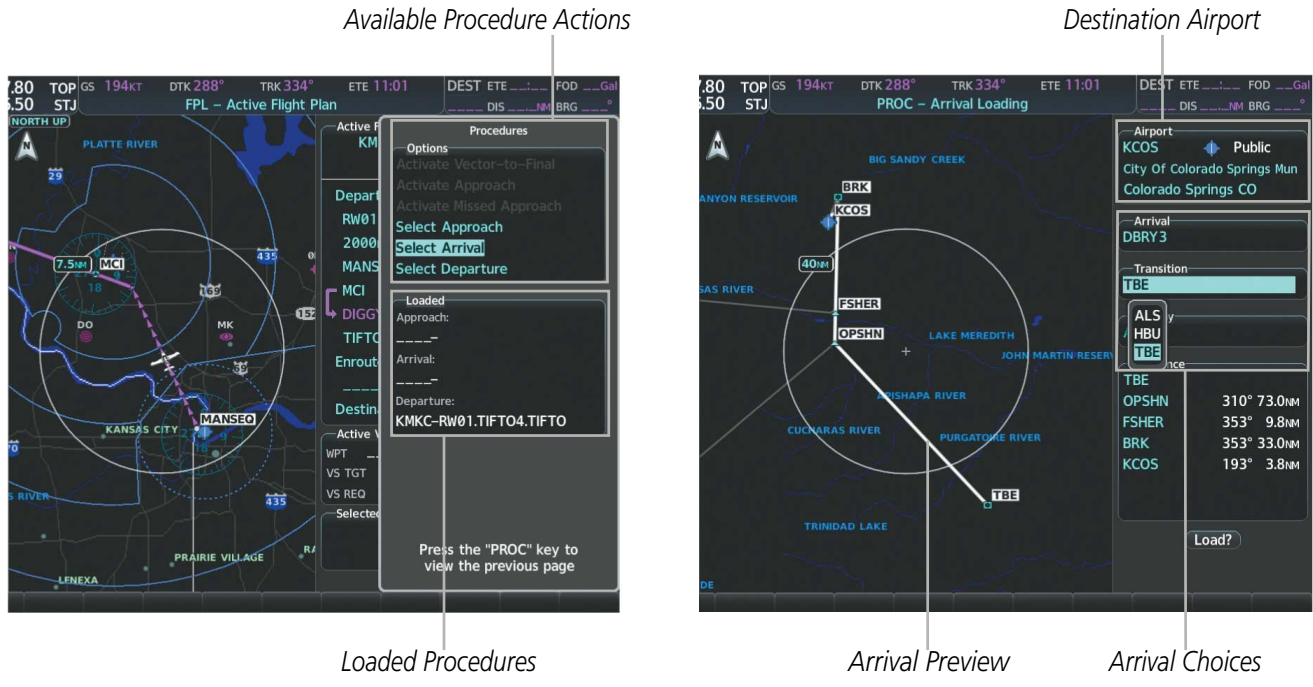


Figure 5-79 Arrival Selection



Procedure Loading Page Selection Softkeys

Figure 5-80 Arrival Loading

Loading an arrival into the active flight plan using the PROC Key:

- 1) Press the **PROC** Key. The 'Procedures' Window is displayed.
- 2) Turn the large **FMS** Knob to highlight 'Select Arrival'.
- 3) Press the **ENT** Key. The Arrival Loading Page/Window is displayed.
- 4) Use the **FMS** Knob to select an airport, if necessary, and press the **ENT** Key.
- 5) Select an arrival from the list and press the **ENT** Key.
- 6) Select a transition (if required) and press the **ENT** Key.
- 7) Select a runway (if required) and press the **ENT** Key. 'Load?' is highlighted.
- 8) Press the **ENT** Key to load the arrival procedure.

Removing an arrival from the active flight plan:

- 1) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page (MFD) or the 'Flight Plan' Window (PFD).
- 2) Press the **MENU** Key, and highlight 'Remove Arrival'.
- 3) Press the **ENT** Key. The 'Remove [procedure name] from flight plan?' Window is displayed.
- 4) With 'OK' highlighted, press the **ENT** Key. To cancel the removal request, highlight 'CANCEL' and press the **ENT** Key.

Or:

- 1) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page (MFD) or the 'Flight Plan' Window (PFD).
- 2) Press the **FMS** Knob, and turn to highlight the arrival header in the active flight plan; or use the **Joystick** to place the Quick Select Box on the arrival header.
- 3) Press the **CLR** Key. The 'Remove [procedure name] from flight plan?' Window is displayed.
- 4) With 'OK' highlighted, press the **ENT** Key. To cancel the removal request, highlight 'CANCEL' and press the **ENT** Key.
- 5) Press the **FMS** Knob to remove the flashing cursor.

APPROACHES



NOTE: If certain GPS parameters (SBAS, RAIM, etc.) are not available, some published approach procedures for the desired airport may not be displayed in the list of available approaches.

An Approach Procedure (APR) can be loaded at any airport that has one available, and provides guidance for non-precision and precision approaches to airports with published instrument approach

procedures. Only one approach can be loaded at a time in a flight plan. If an approach is loaded when another approach is already in the active flight plan, the new approach replaces the previous approach. The route is defined by selection of an approach and the transition waypoints.

When selecting an approach, a “GPS” designation to the right of the procedure name indicates the procedure can be flown using the GPS receiver. Some procedures do not have this designation, meaning the GPS receiver can be used for supplemental navigation guidance only. If the GPS receiver cannot be used for primary guidance, the appropriate navigation receiver must be used for the selected approach (e.g., VOR or ILS). The final course segment of ILS approaches, for example, must be flown by tuning the NAV receiver to the proper frequency and selecting that NAV receiver on the CDI.

The SBAS GPS allows for flying LNAV, LNAV+V, LNAV/VNAV, LP, LP+V, and LPV approach service levels according to the published chart. LNAV+V is an LNAV with advisory vertical guidance provided for assistance in maintaining a constant vertical glidepath similar to an ILS glideslope on approach. This guidance is displayed on the system PFD in the same location as the ILS glideslope using a magenta diamond. In all cases where LNAV+V is indicated by the system during an approach, LNAV minima are used. The active approach service level is annunciated on the HSI as shown in the following table:

HSI Annunciation	Description	Example on HSI
LNAV	RNAV GPS approach using published LNAV minima	
LNAV+V	RNAV GPS approach using published LNAV minima. Advisory vertical guidance is provided	
L/VNAV (available only if SBAS available)	RNAV GPS approach using published LNAV/VNAV minima (downgrades to LNAV if SBAS unavailable)	
LP (available only if SBAS available)	RNAV GPS approach using published LP minima (downgrades to LNAV if SBAS unavailable)	
LP+V (available only if SBAS available)	RNAV GPS approach using published LP minima. Advisory vertical guidance is provided (downgrades to LNAV if SBAS unavailable)	
LPV (available only if SBAS available)	RNAV GPS approach using published LPV minima (downgrades to LNAV if SBAS unavailable)	

Table 5-16 Approach Service Levels

LNAV/VNAV Downgrade

If SBAS becomes unavailable prior to one minute to the FAF on an RNAV LNAV/VNAV approach, L/VNAV will be shown in amber, the system will switch to LNAV/VNAV (Baro VNAV) service level (L/VNAV shown in magenta), and an APR ADVISORY system message will be generated (the VDI will be flagged NO GP until the 'APR ADVISORY' system message has been acknowledged). If the 'APR ADVISORY' system message is not acknowledged prior to the FAF, the system will downgrade to LNAV service level (LNAV shown in magenta), the VDI will remain flagged 'NO GP', and no additional downgrade system message will be generated.

If SBAS becomes unavailable after one minute to the FAF, the system will downgrade to LNAV service level, with no downgrade system message generated. If SBAS becomes unavailable after one minute to the FAF, and there is no LNAV minima, the approach will abort when past the FAF waypoint.

LNAV+V Switching

If SBAS becomes unavailable prior to one minute to the FAF on an RNAV LNAV+V approach, LNAV+V will be shown in amber, the system will switch to LNAV+V (Baro VNAV) service level (LNAV+V shown in magenta), and an 'APR ADVISORY' system message will be generated (the vertical deviation will be flagged NO GP until the 'APR ADVISORY' system message has been acknowledged).

If SBAS becomes unavailable after one minute to the FAF, the system will downgrade to LNAV service level, with no downgrade system message generated.

LP Downgrade

If SBAS becomes unavailable prior to one minute to the FAF on an RNAV LP approach, LP will be shown in amber, but the CDI will continue to be shown. At one minute to the FAF, the system will downgrade to LNAV service level (LNAV shown in magenta), and an 'APR DWNGRADE' system message will be generated (the CDI will be removed until the 'APR DWNGRADE' system message has been acknowledged).

If SBAS becomes unavailable after one minute to the FAF, the approach will abort.

LP+V Downgrade

If SBAS becomes unavailable prior to one minute to the FAF on an RNAV LP+V approach, LP+V will be shown in amber and the VDI will be flagged NO GP, but the CDI will continue to be shown. At one minute to the FAF, the system will downgrade to LNAV service level (LNAV shown in magenta), and an 'APR DWNGRADE' system message will be generated (the CDI will be removed until the 'APR DWNGRADE' system message has been acknowledged).

If SBAS becomes unavailable after one minute to the FAF, the approach will abort.

LPV Downgrade

If SBAS becomes unavailable prior to one minute to the FAF on an RNAV LPV approach, LPV will be shown in amber, but the VDI will continue to be shown. At one minute to the FAF, the system will downgrade to:

- 1) LNAV/VNAV service level (Baro VNAV) (L/VNAV shown in magenta), and an APR DWNGRADE system message will be generated (the VDI will be flagged 'NO GP' until the APR DWNGRADE system message has been acknowledged);

or

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CAS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

2) LNAV service level (LNAV shown in magenta), the VDI will be flagged 'NO GP', and an APR DWNGRADE system message will be generated.

If SBAS becomes unavailable after one minute to the FAF, the system will downgrade to LNAV service level when past the FAF, with no downgrade system message generated.

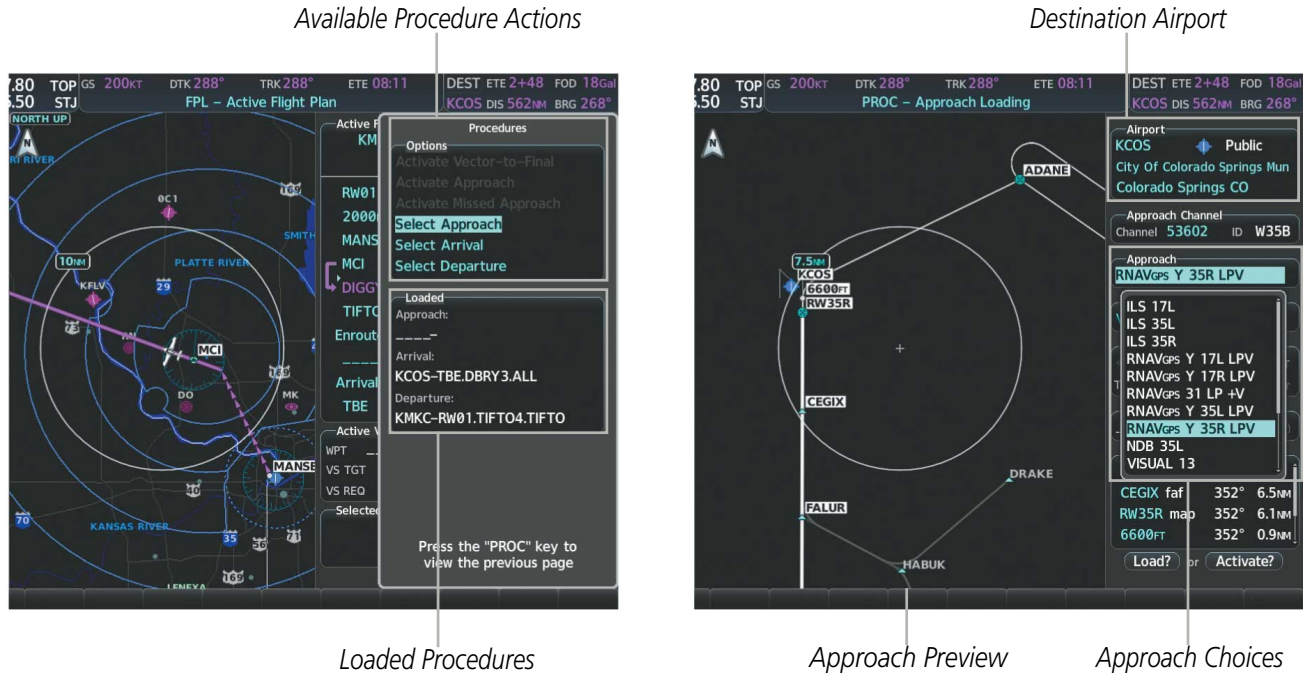


Figure 5-81 Approach Selection

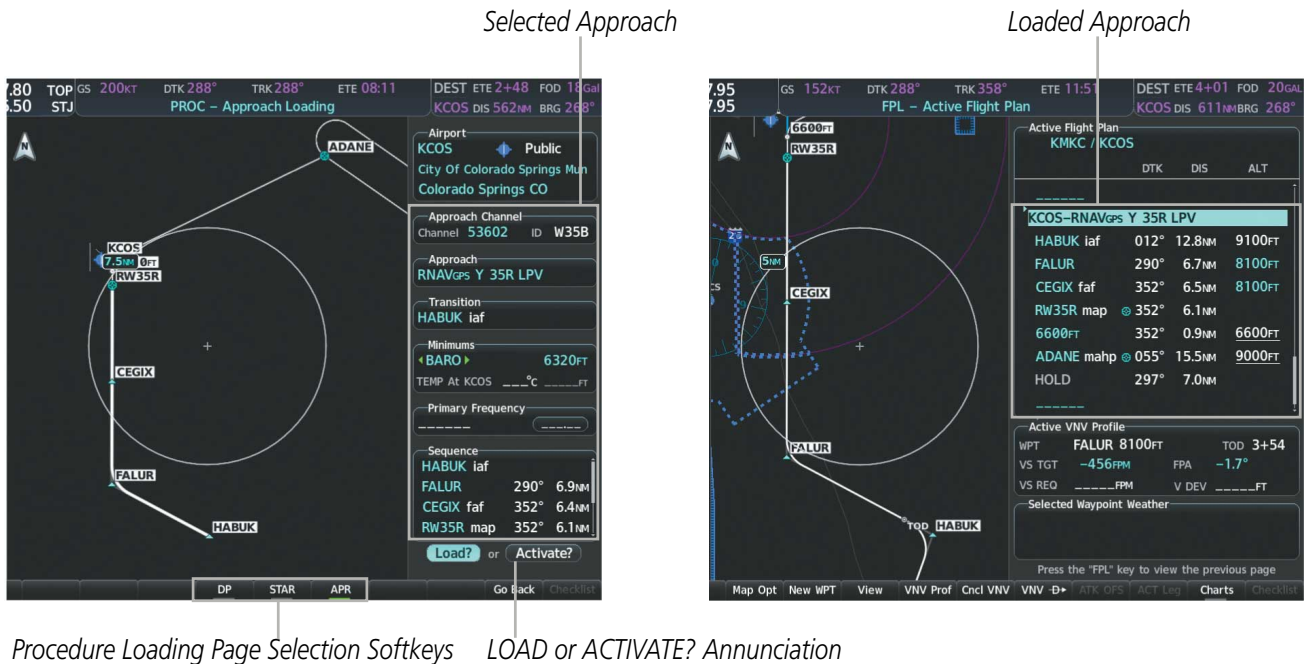


Figure 5-82 Approach Loading

Loading an approach into the active flight plan using the PROC Key:


- 1) Press the **PROC** Key. The 'Procedures' Window is displayed.
- 2) Use the **FMS** Knob to highlight 'Select Approach', and press the **ENT** Key. The Approach Loading Page/Window is displayed.
- 3) Select the airport and approach:
 - a) Use the **FMS** Knob to select an airport, if necessary, and press the **ENT** Key.
 - b) Select an approach from the list and press the **ENT** Key.


Or:

 - a) If necessary, push the **FMS** Knob to exit the approach list, and use the large **FMS** Knob to move the cursor to the Approach Channel Field.
 - b) Use the **FMS** Knob or the FMS alphanumeric keys to enter the approach channel number, and press the **ENT** Key to accept the approach channel number. The airport and approach are selected.
- 4) Select a transition (if required) and press the **ENT** Key.
- 5) Minimums
 - a) To set 'Minimums', turn the small **FMS** Knob to select 'BARO' or 'TEMP COMP', and press the **ENT** Key. Turn the small **FMS** Knob or use the FMS alphanumeric keys to select the altitude, and press the **ENT** Key.
 - b) If 'TEMP COMP' was selected, the cursor moves to the 'TEMP At' [airport] Field. Turn the small **FMS** Knob or use the FMS alphanumeric keys to enter the temperature, and press the **ENT** Key.

Or:

To skip setting minimums, press the **ENT** Key.
- 6) Press the **ENT** Key with 'Load?' highlighted to load the approach procedure; or turn the large **FMS** Knob to highlight 'Activate' and press the **ENT** Key to load and activate the approach procedure.

 **NOTE:** When GPS is not approved for the selected final approach course, the message 'NOT APPROVED FOR GPS' is displayed. GPS provides guidance to the approach, but the HSI must be switched to a NAV receiver to fly the final course of the approach.

 **NOTE:** If there is no arrival procedure in the active flight plan, loading an approach after a destination airport has already been entered will result in a duplicate destination airport waypoint being added to the end of the enroute segment.

Loading an approach into the active flight plan from the Nearest Airport Page:

- 1) Select the 'NRST - Nearest Airports' Page.
- 2) Press the **FMS** Knob, then turn the large **FMS** Knob to highlight the desired nearest airport. The airport is previewed on the map.
- 3) Press the **APR** Softkey; or press the **MENU** Key, highlight 'Select Approach Window', and press the **ENT** Key.
- 4) Turn the **FMS** Knob to highlight the desired approach.
- 5) Press the **LD APR** Softkey; or press the **MENU** Key, highlight 'Load Approach', and press the **ENT** Key. The 'PROC - Approach Loading' Page is displayed with the 'Transition' Field highlighted.
- 6) Turn the **FMS** Knob to highlight the desired transition, and press the **ENT** Key.
- 7) Minimums
 - a) To set 'Minimums', turn the small **FMS** Knob to select 'BARO' or 'TEMP COMP', and press the **ENT** Key. Turn the small **FMS** Knob or use the FMS alphanumeric keys to enter the altitude, and press the **ENT** Key.
 - b) If 'TEMP COMP' was selected, the cursor moves to the 'TEMP At' [airport] Field. Turn the small **FMS** Knob or use the FMS alphanumeric keys to enter the temperature, and press the **ENT** Key.

Or:

To skip setting minimums, press the **ENT** Key. 'Load?' is highlighted.

- 8) Press the **ENT** Key with 'Load?' highlighted to load the approach procedure; or turn the large **FMS** Knob to highlight 'Activate' and press the **ENT** Key to load and activate the approach procedure. The system continues navigating the current flight plan until the approach is activated. When GPS is not approved for the selected final approach course, the message 'NOT APPROVED FOR GPS' is displayed. GPS provides guidance to the approach, but the HSI must to be switched to a NAV receiver to fly the final course of the approach.

Removing an approach from the active flight plan:

- 1) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page (MFD) or the 'Flight Plan' Window (PFD).
- 2) Press the **MENU** Key, and highlight 'Remove Approach'.
- 3) Press the **ENT** Key. The 'Remove [procedure name] from flight plan?' Window is displayed.
- 4) With 'OK' highlighted, press the **ENT** Key. To cancel the removal, highlight 'CANCEL' and press the **ENT** Key.

Or:

- 1) Press the **FPL** Key to display the 'FPL - Active Flight Plan' Page (MFD) or the 'Flight Plan' Window (PFD).
- 2) Press the **FMS** Knob, and turn to highlight the approach header in the active flight plan; or use the **Joystick** to place the Quick Select Box on the approach header.
- 3) Press the **CLR** Key. The 'Remove [procedure name] from flight plan?' Window is displayed.
- 4) With 'OK' highlighted, press the **ENT** Key. To cancel the removal, highlight 'CANCEL' and press the **ENT** Key.
- 5) Press the **FMS** Knob to remove the flashing cursor.

ACTIVATING AN APPROACH

Whenever an approach is selected, the choice to either 'Load' or 'Activate' is given. 'Load' adds the approach to the end of the flight plan without immediately using it for navigation guidance. This allows continued navigation via the intermediate waypoints in the original flight plan, but keeps the procedure available for quick activation when needed. 'Activate' also adds the procedure to the end of the flight plan but immediately begins to provide guidance to the first waypoint in the approach.

In many cases, it may be easiest to 'load' the full approach while still some distance away, enroute to the destination airport. Later, if vectored to final, use the steps below to select 'Activate Vector-To-Final' — which makes the inbound course to the FAF waypoint active.

Activating a previously loaded approach:

- 1) Press the **PROC** Key. The 'Procedures' Window is displayed with 'Activate Approach' highlighted.
- 2) Press the **ENT** Key to activate the approach.

Activating a previously loaded approach with vectors to final:

- 1) Press the **PROC** Key to display the 'Procedures' Window.
- 2) Use the **FMS** Knob to highlight 'Activate Vector-to-Final' and press the **ENT** Key.

Loading and activating an approach using the MENU Key:

- 1) From the 'WPT - Approach Information' Page, press the **MENU** Key on the MFD. The page menu is displayed with 'Load & Activate Approach' highlighted.
- 2) Press the **ENT** Key. When GPS is not approved for the selected final approach course, the message 'NOT APPROVED FOR GPS' is displayed. GPS provides guidance to the approach, but the HSI must be switched to a NAV receiver to fly the final course of the approach.


Or:

- 1) Press the **PROC** Key.
- 2) Use the large **FMS** Knob to highlight 'Select Approach' and press the **ENT** Key.

- 3) From the 'PROC - Approach Loading' Page, press the **MENU** Key on the MFD. The page menu is displayed with 'Load & Activate Approach' highlighted.
- 4) Press the **ENT** Key. When GPS is not approved for the selected final approach course, the message 'NOT APPROVED FOR GPS' is displayed. GPS provides guidance to the approach, but the HSI must be switched to a NAV receiver to fly the final course of the approach.

MISSED APPROACH

In this missed approach procedure (see figure below), the altitude immediately following the MAP (in this case '6600ft') is not part of the published procedure. It is simply a Course to Altitude (CA) leg which guides the aircraft along the runway centerline until the altitude required to safely make the first turn toward the MAHP is exceeded. This altitude is provided by the navigation database, and may be below, equal to, or above the published minimums for this approach. In this case, if the aircraft altitude is below the specified altitude (6,600 feet) after crossing the MAP, a direct-to is established to provide a course on runway heading until an altitude of 6,600 feet is reached. After reaching 6,600 feet, a direct-to is established to the published MAHP (in this case ADANE). If the aircraft altitude is above the specified altitude after crossing the MAP, a direct-to is established to the published fix (ADANE) to begin the missed approach procedure.



Active Flight Plan
KMKC / KCOS

	DTK	DIS	ALT
BRK	353°	21.6NM	12000FT
KCOS-RNAV_{GPS} Y 35R LPV			
HABUK iaf	164°	8.0NM	9790FT
FALUR	290°	5.3NM	8100FT
CEGIX faf	352°	6.4NM	8100FT
RW35R map	352°	6.1NM	
<i>Course to Altitude Leg</i> → 6600FT	352°	0.9NM	6600FT
ADANE mahp	056°	15.6NM	9000FT
HOLD	297°	7.0NM	
Destination – KCOS – RW35R			

Figure 5-83 Course to Altitude

In some missed approach procedures this Course to Altitude leg may be part of the published procedure. For example, a procedure may dictate a climb to 5,500 feet, then turn left and proceed to the Missed Approach Hold Point (MAHP). In either case, the Course to Altitude leg is portrayed by the system in the list of waypoints. Again, if the aircraft altitude is lower than the prescribed altitude, a direct-to is established on a Course to Altitude leg when the missed approach procedure is activated.

Activating a missed approach in the active flight plan:

- 1) Press the **PROC** Key.
- 2) Turn the large **FMS** Knob to highlight 'Activate Missed Approach'.
- 3) Press the **ENT** Key.

Or:

Press the **Go-Around** Button. Prior to the MAP, the aircraft will continue to laterally navigate to the MAP before executing the missed approach. Otherwise, the aircraft automatically sequences to the MAHP.

Or:

Fly past the MAP, and press the **SUSP** Softkey on the PFD.

VISUAL APPROACH

The system provides a visual approach feature. Unlike instrument approaches, visual approaches are not defined in the navigation database and do not follow a precise prescribed path. Instead, the system calculates the lateral and vertical path for the chosen runway and creates visual approach waypoints based on runway position and course as specified in the navigation database.

Each visual approach will have two transitions, the straight in transition (STRAIGHT) and the Vectors-to-Final transition (VECTORS). The visual approach waypoints (fixes) consist of the initial fix (STRGHT), the final approach fix (FINAL), and the missed approach point (RWxx). A 3 degree glide path is calculated from the missed approach point up to each waypoint along the extended straight-in path.

For visual approaches, the pilot is responsible for avoiding terrain, obstacles and traffic. Therefore, when a visual approach is selected, the message "Obstacle clearance is not provided for visual approaches" is displayed on the approach selection page and must be acknowledged before the visual approach is loaded into the flight plan.

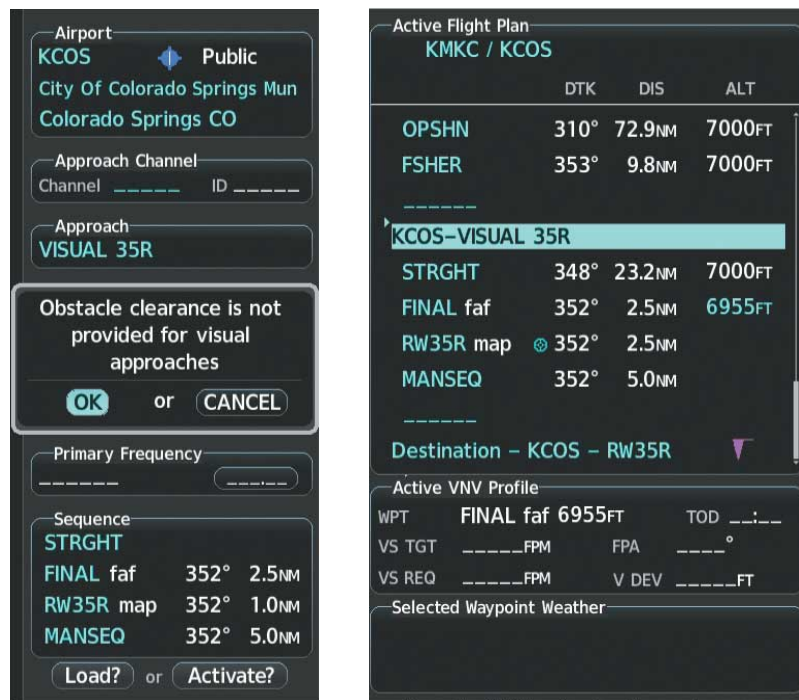


Figure 5-84 Loading Visual Approach

Loading and activating a visual approach using the PROC Key:

- 1) Press the **PROC** Key. The 'Procedures' Window is displayed.
- 2) Turn the large **FMS** Knob to highlight 'Select Approach', and press the **ENT** Key. The 'PROC - Approach Loading' Page is displayed.
- 3) Select the airport and approach:
 - a) Use the **FMS** Knob to select an airport, if necessary, and press the **ENT** Key.
 - b) Select a visual approach from the 'Approach' list and press the **ENT** Key.
- 4) Select a transition and press the **ENT** Key.
- 5) Minimums
 - a) To set 'Minimums', turn the small **FMS** Knob to select 'BARO' or 'TEMP COMP' and press the **ENT** Key. Turn the small **FMS** Knob or use the FMS alphanumeric keys to enter the altitude, and press the **ENT** Key.
 - b) If 'TEMP COMP' was selected, the cursor moves to the temperature field. Turn the small **FMS** Knob or use the FMS alphanumeric keys to enter the temperature, and press the **ENT** Key.

Or:



To skip setting minimums, press the **ENT** Key.

- 6) Press the **ENT** Key with 'Load?' highlighted to load the approach procedure or turn the large **FMS** Knob to highlight 'Activate?' and press the **ENT** Key to load and activate the approach procedure.
- 7) The message 'Obstacle clearance is not provided for visual approaches' is displayed. Press **ENT** to continue.

TEMPERATURE COMPENSATED ALTITUDE

If desired, the system can compensate the loaded approach altitudes based on a pilot-supplied temperature at the destination. For example, if the pilot enters a destination temperature of -40°C , the system increases the approach altitudes accordingly. A temperature compensated altitude is displayed in white text with a snowflake icon next to it.

Manually inputting the temperature for compensation is explained in the following procedures. However, the system already automatically offsets the lateral position of the baro-VNAV bottom of descent without manual input. Once calculated, the VNAV function seamlessly applies the lateral adjustment to the baro-VNAV descent path so that a smooth transition onto the approach vertical path occurs. For example, on a day with temperatures colder than ISA, the baro-VNAV path will typically be below the actual approach descent path. The system will automatically adjust for this by calculating a lateral distance prior to the FAF which is applied to ensure the baro-VNAV path intersects the approach descent path.

-
-  **NOTE:** Manually specifying temperature compensation for an approach will disrupt the system from automatically creating a lateral offset of the VNAV function in use.
-
-  **NOTE:** Initiating the VNAV direct-to function or manually specifying an FPA at the FAF will disrupt the VNAV function from creating a lateral offset. Thus, temperature is not compensated for and the baro-VNAV path and may not intersect the approach descent path.
-

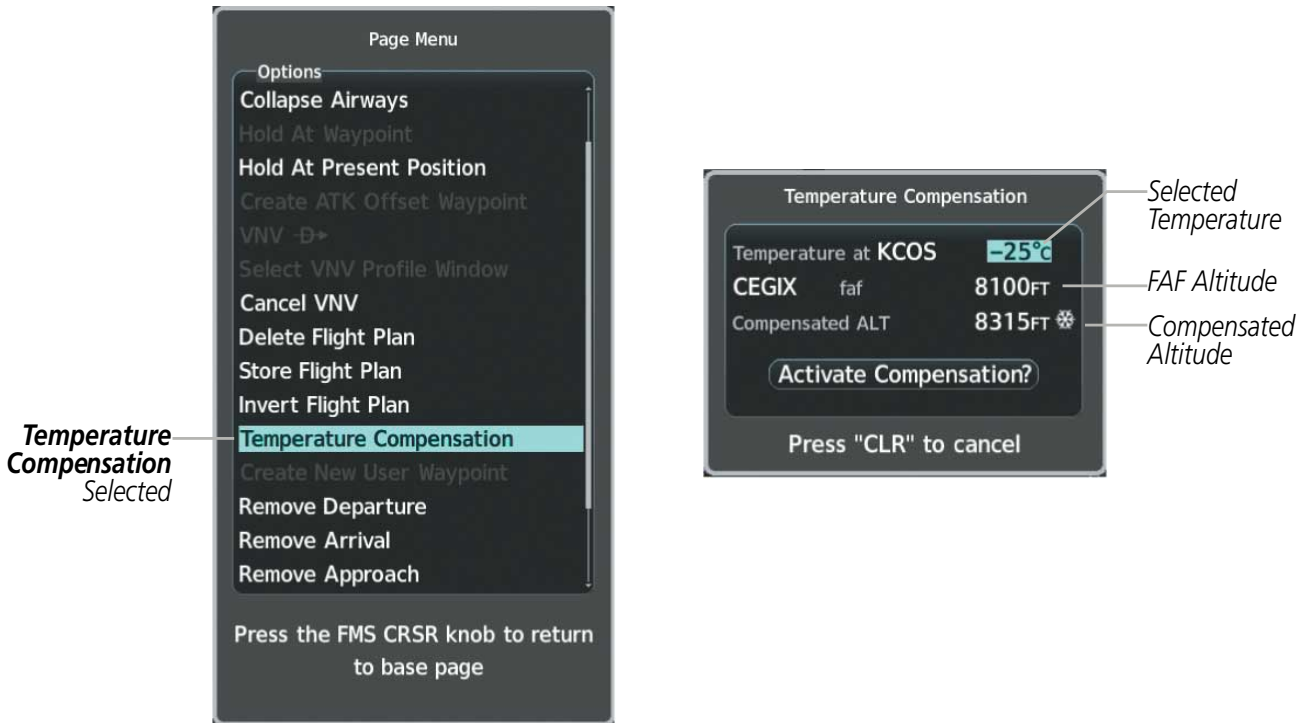



Figure 5-85 Temperature Compensation



Figure 5-86 Temperature Compensation in the Active Flight Plan

Manually activating temperature compensated altitude:


- 1) From the 'FPL - Active Flight Plan' Page, press the **MENU** Key on the MFD. The 'Page Menu' Window is displayed.
- 2) Turn the **FMS** Knob to highlight 'Temperature Compensation'.
- 3) Press the **ENT** Key. The 'Temperature Compensation' Window is displayed.
- 4) Use the small **FMS** Knob or use the FMS alphanumeric keys to enter the temperature. The compensated altitude is computed as the temperature is selected.

 **NOTE:** The temperature at the destination can be entered in the 'Temperature Compensation' Window on the MFD, or in the 'References' Window on the PFD. There is only one compensation temperature for the system, therefore, changing the temperature will affect both the loaded approach altitudes and the minimums. Refer to the Flight Instruments section for information about applying temperature compensation to the MDA/DH.

- 5) Press the **ENT** Key. 'Activate Compensation?' is highlighted.
- 6) Press the **ENT** Key. The compensated altitudes for the approach are shown in the flight plan.

Cancelling temperature compensated altitude:

- 1) From the Active Flight Plan Page, press the **MENU** Key. The 'Page Menu' Window is displayed.
- 2) Turn the **FMS** Knob to highlight 'Temperature Compensation'.
- 3) Press the **ENT** Key. The Temperature Compensation Window is displayed.
- 4) Press the **ENT** Key. 'Cancel Compensation?' is highlighted.
- 5) Press the **ENT** Key. The temperature compensated altitude at the FAF is cancelled.

 **NOTE:** Activating/cancelling temperature compensation for the loaded approach altitudes does not select/deselect temperature compensated minimums (MDA/DH), nor does selecting/deselecting temperature compensated minimums activate/cancel temperature compensated approach altitudes.

5.9 WEIGHT PLANNING

The 'Aux - Weight and Balance' Page is available to manage actual weight, estimated weight, center of gravity (CG), and fuel quantity throughout an entire flight.

The 'Station vs Weight' Box displays a visual representation of the aircraft's center of gravity from takeoff to landing for a given flight plan, plus the remaining fuel burn. The takeoff CG icon is represented as a triangle, current CG as a diamond, landing CG as a square, and fuel burn as a line. All that lie within the white bordered polygon, are considered to be within the weight balance parameters and, therefore, are colored green.

Pressing the **Graph** Softkey reveals a Zoom Softkey which enlarges the graph representation.

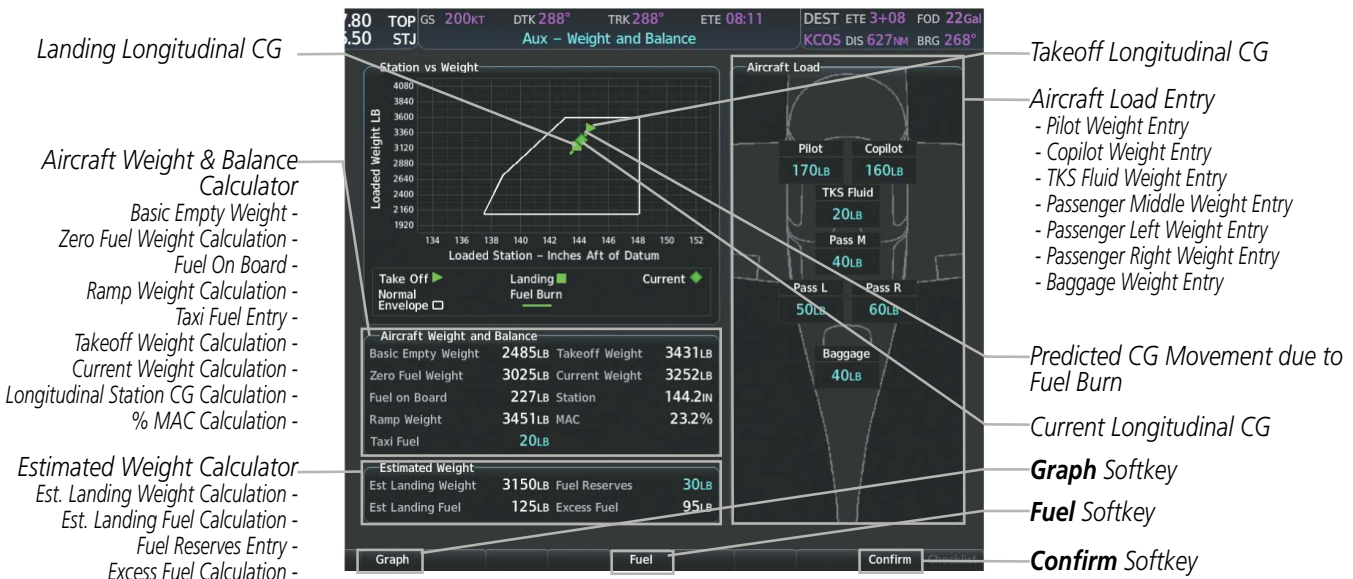


Figure 5-87 Weight and Balance Page



Figure 5-88 Weight & Balance Graph Zoomed

The ‘Aircraft Weight and Balance’ and ‘Estimated Weight’ Boxes contain entry fields for fuel, preflight, and inflight weight calculations which use the following formulas:

- ‘Basic Empty Weight’ is calculated by summing the weights of the airframe/engine, fixed equipment, unusable fuel, full oil and other items necessary for flight.
- ‘Zero Fuel Weight’ = Basic Empty Weight + Aircraft Load
- ‘Fuel on Board’ = Weight in pounds equal to set gallons on the Initial Usable Fuel Page (via the Fuel Softkey)
- ‘Ramp Weight’ = Zero fuel weight + the confirmed Fuel on Board weight (static value confirmed by the pilot)
- ‘Takeoff Weight’ = Ramp Weight - fuel burned for start, taxi, and run-up
- ‘Current Weight’ = Zero Fuel Weight + current Fuel on Board
- ‘Est Landing Weight’ = Zero Fuel Weight + Estimated Landing Fuel Weight
- ‘Est Landing Fuel’ weight = Fuel on Board weight - (fuel flow x ETE)
- ‘Excess Fuel’ weight = Estimated Landing Fuel Weight - Fuel Reserves Weight

When the aircraft is in the air and a destination waypoint has been entered, the fuel calculations can be completed. If the aircraft is on the ground or a destination waypoint has not been entered, the following fields display invalid values consisting of four dashes:

- ‘Est Landing Weight’
- ‘Est Landing Fuel’ weight
- ‘Excess Fuel’ weight

WEIGHT WARNING CONDITIONS

If the zero fuel weight is greater than the maximum allowable zero fuel weight, then the zero fuel weight is displayed in amber.

If the ramp weight is greater than the maximum allowable ramp weight, then the ramp weight is displayed in amber.

If the takeoff weight is greater than the maximum allowable takeoff weight, then the aircraft weight is displayed in amber.

If the current weight is outside the envelope, then the current weight is displayed in amber.

If the estimated landing weight is greater than the maximum allowable landing weight, then the estimated landing weight is displayed in amber.

If the estimated landing fuel weight is positive, but less than or equal to the fuel reserves weight, the following values are displayed in amber:

- ‘Est Landing Fuel’ weight
- ‘Excess Fuel’ weight

If the estimated landing fuel weight is zero or negative, then the following values are displayed in amber:

- ‘Est Landing Fuel’ weight
- ‘Excess Fuel’ weight

If the aircraft CG will lie outside the specified CG envelope at any time (to include remaining fuel burn calculated after landing), the respective Take Off triangle, Current diamond, Fuel Burn line, and/or Landing square will be displayed in amber.

If the value for the ‘Station’ Field is outside of the specified CG envelope, the data in the ‘Station’ Field and ‘MAC’ Field will be displayed in amber.

When any portion of the Current CG diamond lies outside the visible chart area, the following amber text will appear on the chart, “THE CURRENT CG EXCEEDS THE CHART LIMITS.”

Viewing the zoomed CG Graph:

- 1) From the ‘Aux - Weight Planning’ Page, press the **Graph** Softkey.
- 2) Press the **Zoom** Softkey to switch between the zoomed and normal view.

Entering aircraft load:

- 1) Press the **FMS** Knob to activate the cursor.
- 2) Turn the large **FMS** Knob to highlight the desired field within the ‘Aircraft Load’ Box.
- 3) Turn the small **FMS** Knob or use the FMS alphanumeric keys to enter the weight.
- 4) Press the **ENT** Key to confirm the entry.
- 5) Repeat steps 2 through 4 until all seat and baggage weight values are accurate.
- 6) Press the **FMS** Knob to remove the flashing cursor.

Entering the fuel on board weight on the Initial Usable Fuel Page:

- 1) From the 'Aux - Weight Planning' Page, press the **Fuel** Softkey to display the 'Initial Usable Fuel' Page.
- 2) Add or subtract fuel by using the **FMS** Knobs.
- 3) Press the **ENT** Key or the **W&B** Softkey to return to the 'Aux - Weight and Balance' Page.
- 4) Press the **ENT** Key or the **Confirm** Softkey to confirm the Weight and Balance Page entries.

Entering taxi fuel weight:

- 1) Press the **FMS** Knob to activate the cursor and highlight the 'Taxi Fuel' Field.
- 2) Turn the small **FMS** Knob or use the alphanumeric keys to enter the taxi fuel weight.
- 3) Press the **ENT** Key to confirm the entry.
- 4) Press the **FMS** Knob to remove the flashing cursor

Entering fuel reserves weight:

- 1) Press the **FMS** Knob to activate the cursor and highlight the 'Fuel Reserves' Field.
- 2) Turn the small **FMS** Knob to enter the fuel reserves amount.
- 3) Press the **ENT** Key to confirm the entry.
- 4) Press the **FMS** Knob to remove the flashing cursor.

5.10 TRIP PLANNING

The system allows the pilot to view trip planning information, fuel information, and other information for a specified flight plan or flight plan leg based on automatic data, or based on manually entered data.

TRIP PLANNING

All of the input of data needed for calculation and viewing of the statistics is done on the Trip Planning Page located in the Aux Page Group.

Selected Flight Plan Segment
 - FPL Number/Cumulative Legs (CUM or REM) or Leg Number (NN)
 - Waypoints Defining Selected Flight Plan/Flight Plan Leg

The screenshot shows the Trip Planning Page with the following data and callouts:

- Page Mode:** Automatic
- Input Data:** FPL 00, LEG REM, P.POS → KCOS
- Trip Stats:**
 - Desired Track: _____°
 - Distance: 681NM
 - ETE: 3+24
 - ETA: 10:00UTC
 - ESA: 16300FT
 - Sunrise: 12:27UTC
 - Sunset: 01:29UTC
- Fuel Stats:**
 - Efficiency: 39.941NM/GAL
 - Total Endurance: 7+40
 - Remaining Fuel: 21GAL
 - Remaining Endurance: 4+15
 - Fuel Required: 17.1GAL
 - Total Range: 1532NM
- Other Stats:**
 - Density Altitude: _____FT
 - True Airspeed: 203KT
- Other Data:**
 - Calibrated Airspeed: 170KT
 - Indicated Altitude: 11999FT
 - Barometric Pressure: 29.92IN
 - Total Air Temperature: -9°C
 - Departure Time: 06:35UTC
 - Ground Speed: 200KT
 - Fuel Flow: 5.0GAL/HR
 - Fuel on Board: 38GAL

Callouts:

- Trip Planning Page Mode:** - Automatic/Manual
- Trip Input Data (sensor/pilot):** - Departure Time (local), - Ground Speed, - Fuel Flow, - Fuel On Board Aircraft, - Calibrated Airspeed, - Indicated Altitude, - Barometric Pressure, - Total Air Temperature
- Trip Statistics:** - Desired Track - Distance - Est. Time Enroute - Est. Time of Arrival - Enroute Safe Altitude - Sunrise Time (local) - Sunset Time (local)
- Fuel Statistics:** - Efficiency - Total Endurance - Remaining Fuel - Remaining Endurance - Fuel Required - Total Range
- Other Statistics:** - Density Altitude - True Airspeed (TAS)
- Softkeys:** - Automatic/Manual Page Mode - Flight Plan/Waypoint Mode

Figure 5-89 Trip Planning Page

The trip planning inputs are based on sensor inputs (automatic page mode) or on pilot inputs (manual page mode). Some additional explanation of the sources for some of the inputs is as follows:

- Departure Time - In automatic page mode, this defaults to the current time in and the computations are from the aircraft present position, so the aircraft is always just departing.
- Calibrated Airspeed - The primary source is from the air data system, and the secondary source of information is GPS ground speed.
- Indicated Altitude - The primary source is the barometric altitude, and the secondary source of information is GPS altitude.

TRIP STATISTICS

The trip statistics are calculated based on the selected starting and ending waypoints and the trip planning inputs, derived from the flight plan. The system calculates these values depending on the specified mode, flight plan mode (FPL Softkey enabled) or waypoint mode (WPTs Softkey enabled). Stored Flight Plans may be used by selecting its corresponding number from the Flight Plan Catalog ('01'-'99'). '00' is the default number for the Active Flight Plan.

In flight plan mode, with a stored flight plan selected, and the entire flight plan ('CUM') selected, the waypoints are the starting and ending waypoints of the selected flight plan.

In flight plan mode, with a stored flight plan selected, and the desired leg selected (flight plan legs are numbered in increasing order starting from '01'), the waypoints are the endpoints of the selected leg.

In flight plan mode, with the active flight plan selected, and the remaining flight plan (REM) selected, the 'from' waypoint is the present position of the aircraft and the 'to' waypoint is the endpoint of the active flight plan.

In flight plan mode, with the active flight plan selected, and a specific leg selected, the 'from' waypoint is the current aircraft position and the 'to' waypoint is the endpoint of the selected leg.

In waypoint mode, these are manually selected waypoints (if there is an active flight plan, these default to the endpoints of the active leg).

Some of the calculated trip statistics are dashed when the selected leg of the active flight plan has already been flown.

- Desired Track - Desired Track is shown as nnn° and is the desired track between the selected waypoints. It is dashed unless only a single leg is selected.
- Distance - The distance is shown in tenths of units up to 99.9, and in whole units up to 9999.
- Estimated time enroute (ETE) - ETE is shown as hours:minutes until less than an hour, then it is shown as minutes:seconds.
- Estimated time of arrival (ETA) - ETA is shown as hours:minutes and is the local time at the destination.
 - If in waypoint mode then the ETA is the ETE added to the departure time.
 - If a flight plan other than the active flight plan is selected it shows the ETA by adding to the departure time all of the ETEs of the legs up to and including the selected leg. If the entire flight plan is selected, then the ETA is calculated as if the last leg of the flight plan was selected.
 - If the active flight plan is selected the ETA reflects the current position of the aircraft and the current leg being flown. The ETA is calculated by adding to the current time the ETEs of the current leg up to and including the selected leg. If the entire flight plan is selected, then the ETA is calculated as if the last leg of the flight plan was selected.
- Enroute safe altitude (ESA) - The ESA is shown as nnnnnFT
- Destination sunrise and sunset times (SUNRISE, SUNSET) - These times are shown as hours:minutes of the time at the destination.

FUEL STATISTICS

The fuel statistics are calculated based on the selected starting and ending waypoints and the trip planning inputs. Some of the calculated trip statistics are dashed when the selected leg of the active flight plan has already been flown.

- Fuel efficiency (Efficiency) - This value is calculated by dividing the current ground speed by the current fuel flow.
- Time of fuel endurance (Total Endurance) - This time is shown as hours:minutes. This value is obtained by dividing the amount of fuel on board by the current fuel flow.
- Fuel on board upon reaching end of selected leg (Remaining Fuel) - This value is calculated by taking the amount of fuel onboard and subtracting the fuel required to reach the end of the selected leg.
- Fuel endurance remaining at end of selected leg (Remaining Endurance) - This value is calculated by taking the time of fuel endurance and subtracting the estimated time enroute to the end of the selected leg.
- Fuel required for trip (Fuel Required) - This value is calculated by multiplying the ETE by the fuel flow.
- Total range at entered fuel flow (Total Range) - This value is calculated by multiplying the time of fuel endurance by the ground speed.

OTHER STATISTICS

These statistics are calculated based on the system sensor inputs or the manual trip planning inputs.

- Density Altitude
- True Airspeed

The pilot may select Automatic or Manual page mode, and flight plan or waypoint mode. In automatic page mode, only the FPL, LEG, or waypoint IDs are editable (based on FPL/WPTs selection). In manual page mode, the other eight trip input data fields must be entered by the pilot, in addition to flight plan and leg selection.



Figure 5-90 Trip Planning Page - Flight Plan Mode

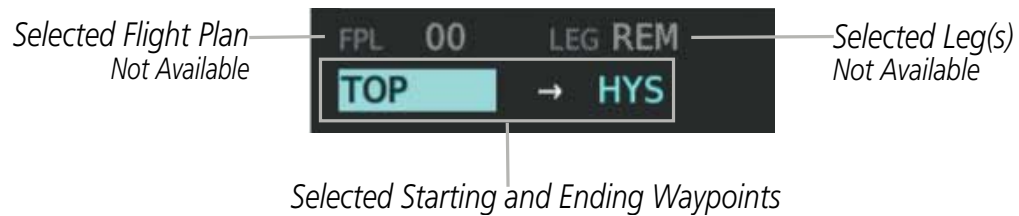


Figure 5-91 Trip Planning Page - Waypoint Mode

Selecting automatic or manual page mode:

From the 'Aux - Trip Planning' Page, press the **Auto** Softkey or the **Manual** Softkey; or press the **MENU** Key, highlight 'Auto Mode' or 'Manual Mode', and press the **ENT** Key.

Selecting flight plan or waypoint mode:

From the 'Aux - Trip Planning' Page, press the **FPL** Softkey or the **WPTs** Softkey; or press the **MENU** Key, highlight 'Flight Plan Mode' or 'Waypoints Mode', and press the **ENT** Key.

Selecting a flight plan and leg for trip statistics:

- 1) From the 'Aux - Trip Planning' Page, press the **FMS** Knob to activate the cursor in the 'FPL' Field.
- 2) Turn the small **FMS** Knob to select the desired flight plan number.
- 3) Turn the large **FMS** Knob to highlight 'CUM' or 'REM'. The statistics for each leg can be viewed by turning the small **FMS** Knob to select the desired leg. The Trip Planning Map also displays the selected data.

Selecting waypoints for waypoint mode:

- 1) From the 'Aux - Trip Planning' Page, press the **WPTs** Softkey; or press the **MENU** Key, highlight 'Waypoints Mode', and press the **ENT** Key. The cursor is positioned in the waypoint field directly below the FPL Field.
- 2) Turn the **FMS** Knobs to select the desired waypoint (or select from the Page Menu 'Set WPT to Present Position' if that is what is desired), and press the **ENT** Key. The cursor moves to the second waypoint field.
- 3) Turn the **FMS** Knobs to select the desired waypoint, and press the **ENT** Key. The statistics for the selected leg are displayed.


Entering manual data for trip statistics calculations:

- 1) From the 'Aux - Trip Planning' Page, press the **Manual** Softkey or select 'Manual Mode' from the Page Menu, and press the **ENT** Key. The cursor may now be positioned in any field within the Input Data Box.
- 2) Turn the **FMS** Knobs to move the cursor onto the 'Departure Time' Field and enter the desired value. Press the **ENT** Key. The statistics are calculated using the new value and

the cursor moves to the next entry field. Repeat until all desired values have been entered.

5.11 ABNORMAL OPERATION

This section discusses the Dead Reckoning mode of operation and the subsequent indications.

 **NOTE:** *Dead Reckoning Mode only functions in Enroute (ENR) or Oceanic (OCN) phase of flight. In all other phases, an invalid GPS solution produces a “NO GPS POSITION” annunciation on the map and the system stops using GPS.*


While in Enroute or Oceanic phase of flight, if the system detects an invalid GPS solution or is unable to calculate a GPS position, the system automatically reverts to Dead Reckoning (DR) Mode. In DR Mode, the system uses its last-known position combined with continuously updated airspeed and heading data (when available) to calculate and display the aircraft’s current estimated position.

It is important to note that estimated navigation data supplied by the system in DR Mode may become increasingly unreliable and must not be used as a sole means of navigation. If while in DR Mode airspeed and/or heading data is also lost or not available, the DR function may not be capable of accurately tracking estimated position and, consequently, the system may display a path that is different than the actual movement of the aircraft. Estimated position information displayed by the system through DR while there is no heading and/or airspeed data available should not be used for navigation.

DR Mode is inherently less accurate than the standard GPS/SBAS Mode due to the lack of satellite measurements needed to determine a position. Changes in wind speed and/or wind direction compound the relative inaccuracy of DR Mode. Because of this degraded accuracy, other navigation equipment must be relied upon for position awareness until GPS-derived position data is restored.

DR Mode is indicated on the system by the appearance of the letters ‘DR’ superimposed in amber over the ‘own aircraft’ symbol. In addition, ‘DR’ is prominently displayed in amber on the HSI slightly below and to the left of the aircraft symbol on the CDI. The CDI deviation bar remains, but is shown in amber and then removed from the display after 20 minutes in DR Mode. The autopilot will remain coupled in DR mode as long as the deviation info is available (20 min). Furthermore, a ‘GPS NAV LOST’ alert message appears on the PFD. Normal navigation using GPS/SBAS source data resumes automatically once a valid GPS solution is restored.

As a result of operating in DR Mode, all GPS-derived data is computed based upon an estimated position and is displayed as amber text on the display to denote degraded navigation source information as shown in the following figure. If the VSD Inset is selected on the MFD, ‘VSD Not Available’ will be displayed.

 **NOTE:** *GPS derived information will remain displayed in magenta (not amber) on the Flight Plan Progress inset when operating in Dead Reckoning mode. However, this information shall still be considered as degraded navigation source information.*

Also, while the system is in DR Mode, some terrain functions are not available. Additionally, the accuracy of all nearest information (airports, airspaces, and waypoints) is questionable. Finally, airspace alerts continue to function, but with degraded accuracy.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CNS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

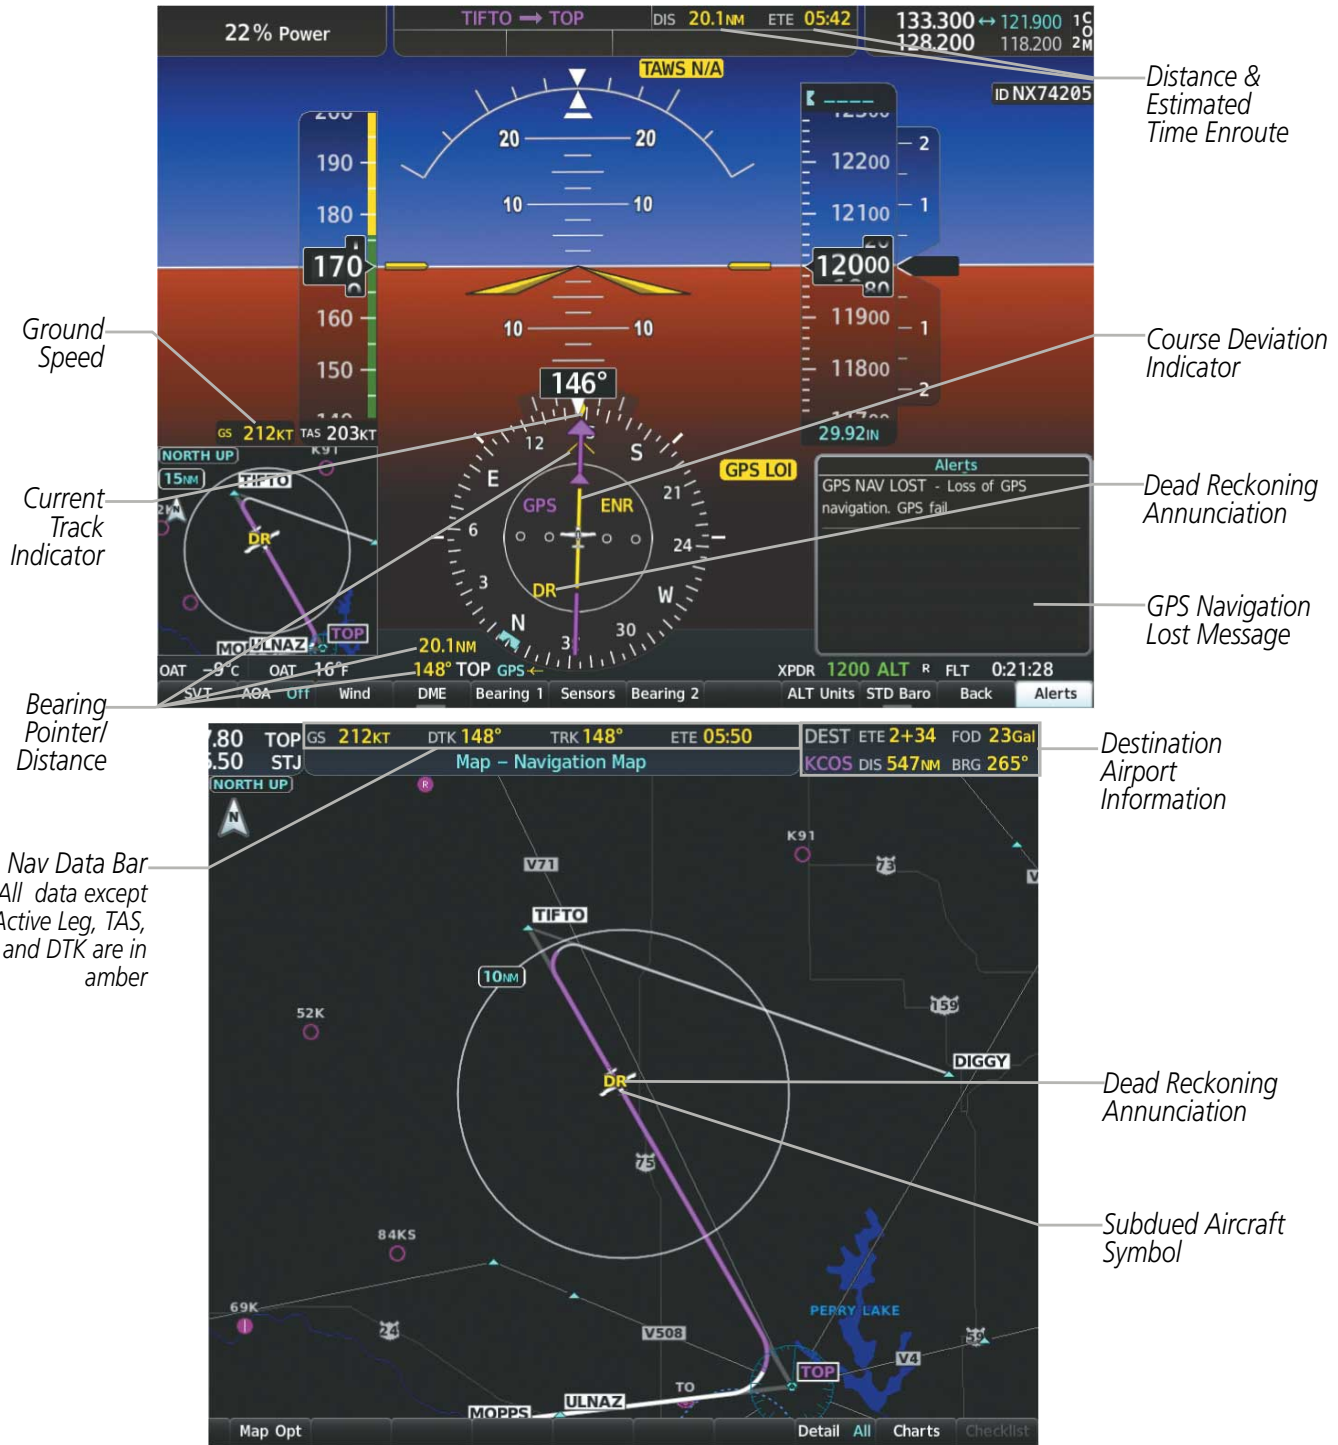


Figure 5-92 Dead Reckoning Mode - GPS Derived Data Shown in Amber

SECTION 6 HAZARD AVOIDANCE

6.1 OVERVIEW

Hazard avoidance features available for the system are designed to aid situational awareness and provide advisory information with regard to potential hazards to flight safety associated with weather, terrain, and air traffic.

Weather

- 69/69A SXM SiriusXM Weather (Service Requires Subscription)
- GSR 56 Garmin Connex Weather (Optional)
- Flight Information Services-Broadcast (FIS-B) Weather (Optional)
- L-3 Stormscope® WX-500 Lightning Detection System (Optional)


Terrain Avoidance


- Terrain Proximity
- Terrain SVT (included with the Garmin SVT option)
- Terrain Awareness and Warning System Class B (TAWS-B) (Optional)

Traffic

- GTS 800 Traffic Advisory System (TAS) (Optional)
- Automatic Dependent Surveillance-Broadcast (ADS-B) Traffic (Optional)

6.2 DATA LINK WEATHER

 **WARNING:** Do not use data link weather information for maneuvering in, near, or around areas of hazardous weather. Information contained within data link weather products may not accurately depict current weather conditions.

 **WARNING:** Do not use the indicated data link weather product age to determine the age of the weather information shown by the data link weather product. Due to time delays inherent in gathering and processing weather data for data link transmission, the weather information shown by the data link weather product may be older than the indicated weather product age.

The Data Link Weather feature enables the system to receive weather information from a variety of weather sources, depending on the equipment installed in the aircraft. These sources may include SiriusXM Weather and Garmin Connex Weather. For each source, a ground-based system processes the weather information collected from a network of sensors and weather data providers.

The SiriusXM Weather service, available with the Garmin 69A SXM data link receiver and an active service subscription, updates its weather data periodically and automatically, and transmits this information to the aircraft's receiver via satellite on the S-Band frequency. This service provides continuous reception capabilities at any altitude throughout North America.

The FIS-B Weather service, available when equipped with a capable transponder or data link receiver which can receive 978 MHz Universal Access Transceiver (UAT) data, delivers subscription-free weather information periodically and automatically to the aircraft. FIS-B uses a network of FAA-operated Ground-Based Transceivers (GBTs) to transmit the information to the aircraft's receiver. Reception is limited to line-of-sight, and is available below 24,000 feet MSL in the United States. FIS-B broadcasts provide weather data in a repeating cycle which may take approximately ten minutes to transmit all available weather data. Therefore, not all weather data may be present immediately upon initial FIS-B signal acquisition. FIS-B is a component of the Automatic Dependent Surveillance (ADS-B) system, which offers both weather and traffic data; refer to the ADS-B Traffic discussion later in this section for a more detailed discussion of the ADS-B system and its capabilities.

The Garmin Connex Weather service, available when equipped with the Garmin GSR 56 Iridium Satellite Transceiver and an active service subscription, provides data link weather information to the aircraft after the pilot defines a geographic area and subsequently selects a manual or automatically recurring Connex Data Request. The transceiver then contacts the Garmin Connex Weather service using the Iridium Satellite telephone system and retrieves the weather data for the specified area. The Garmin Connex Weather service offers worldwide weather coverage, but the availability of individual weather products, such as radar precipitation, varies by region.

 **NOTE:** To check the availability of Garmin Connex weather products offered in a particular region, visit www.flygarmin.com.

ACTIVATING DATA LINK WEATHER SERVICES

ACTIVATING THE SIRIUSXM WEATHER SERVICE

NOTE: Not all weather products offered by SiriusXM are supported for display on this system. This pilot's guide only discusses supported weather products.

Before SiriusXM Weather can be used, the service must be activated by providing SiriusXM's customer service the coded ID(s) unique to the installed data link receiver. The Data Radio ID must be provided to activate the weather service. A separate Audio Radio ID, if present, enables the receiver to provide SiriusXM Radio entertainment. To view this information, refer to the following locations:

- The 'Aux - XM' Information Page on the MFD
- The SiriusXM Activation Instructions included with the Data Link Receiver
- The label on the back of the Data Link Receiver

After SiriusXM has been contacted, it may take approximately 15 minutes until the activation occurs.



Figure 6-1 'Aux — XM Information' Page

NOTE: Not all weather products offered by SiriusXM are supported for display on this system. This pilot's guide only discusses supported weather products.

Establishing an account for SiriusXM services:

- 1) Select the XM Radio Page in the Auxiliary Page Group.
- 2) If necessary, press the **Info** Softkey to display the 'Aux - XM Information' Page.
- 3) Note the Data Radio ID (for SiriusXM Weather data) and/or the Audio Radio ID (for SiriusXM Satellite Radio).
- 4) Contact SiriusXM customer service through the phone number listed on its website, www.siriusxm.com.
- 5) Provide SiriusXM customer service the Data Radio ID and/or Audio Radio ID, in addition to payment information, and the desired weather product subscription package.

Verifying the SiriusXM Weather service activation:

- 1) Once a SiriusXM Weather account has been established, select the XM Radio Page in the Auxiliary Page Group.
- 2) If necessary, press the **Info** Softkey to display the 'Aux - XM Information' Page.
- 3) View the list of supported Weather Products. A white empty box appears next to an unavailable weather product; a green filled box appears next to an available weather product. During activation, it may take several minutes for weather products in the selected subscription package to become available.

ACTIVATING GARMIN CONNEXT WEATHER

Garmin Connex weather requires an active Iridium satellite network account and an active subscription to the Garmin Connex Weather service.

A subscriber account must be established for the Iridium transceiver prior to using the Iridium Satellite System for telephone services. Before setting up an Iridium account, obtain the serial number of the Iridium Transceiver (GSR1) and the System ID by selecting the 'Aux - System Status' Page. Then Contact Garmin through the phone number listed at its website, www.flygarmin.com.

When an account is established, Garmin provides an Access Code which must be entered on the system in order to complete the registration process.



Figure 6-2 Identification Needed for Iridium Registration

When an account is established, Garmin provides an Access Code which must be entered on the system in order to complete the registration process.

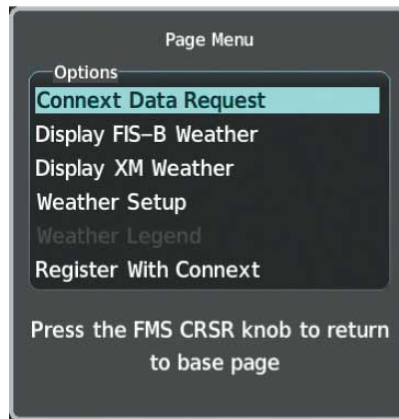


Figure 6-3 Select 'Register With Connex'



Figure 6-4 Enter Access Code

Registering the system to receive Garmin Connex Weather:

- 1) With the aircraft outside and having a clear view of the sky, turn the large **FMS** Knob to select the Map page group.
- 2) Turn the small **FMS** Knob to select the 'Map - Weather Data Link (CNXT)' Page. If another data link weather source such as 'XM' or 'FIS-B' is displayed in the page title, it will be necessary to change the data link weather source to CNXT before continuing. Refer to 'Viewing the Weather Data Link (CNXT) Page' procedure to change the data link source to prior to registration.
- 3) If the system displays the Connex Registration Window, proceed to step 6. Otherwise, press the **MENU** Key. The page menu window is now displayed.
- 4) Turn the large **FMS** Knob to select 'Register With Connex' in the menu list.
- 5) Press the **ENT** Key. The Connex Registration Window appears.
- 6) Enter the access code provided by Garmin in the 'Access Code' field.
- 7) Press the **ENT** Key. 'Register' is highlighted.
- 8) Press the **ENT** Key. The system contacts Garmin through the Iridium network. System registration is complete when the Current Registration Window displays the correct information for the Airframe, Tail Number, Airframe Serial Number, and Iridium Serial Number.
- 9) When finished, push the **FMS** Knob to remove the Connex Registration Window.

WEATHER PRODUCT AGE

Unlike real-time weather information collected directly from weather sensors on-board an aircraft, data link weather by contrast relies on service providers to collect, process, and transmit weather information to the aircraft. This information can come from a variety of sources such as government agencies. Due to the time it takes to collect, process, and distribute data link weather information, it is imperative for pilots to understand that data link weather information is not real-time information and may not accurately depict the current conditions.

For each data link weather product which can be displayed as a map overlay, such as radar precipitation, the system can also show a weather product age. This age represents the elapsed time, in minutes, since the weather service provider compiled the weather product and the current time. It does not represent the age of the information contained within the weather product itself. For example, a single mosaic of radar precipitation is comprised data from multiple radar sites providing data at differing scan rates or intervals. The weather service provider periodically compiles this data to create a single composite image, and assigns one time to this image which becomes the basis of the product age. The service provider then makes this weather product available for data link transmission at the next scheduled update time. The actual age of the weather data contained within the mosaic is therefore older than its weather product age and should never be considered current.

SiriusXM and FIS-B weather products are broadcast automatically on a repeating cycle without pilot intervention.


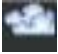
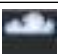





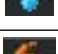
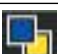

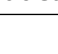

Each data link weather product age has an expiration time. The weather product age is shown in white if it is less than half of this expiration time, otherwise it is shown in amber until reaching its expiration time. After a weather product has expired, the system removes the expired weather product from the displays, and shows white dashes instead of the age. If the data link receiver has not yet received a weather product 'N/A' appears instead of the age to show the product is currently not available for display. This may occur, for example, after powering on the system but before the data link receiver has received a complete weather data transmission. It could also indicate a possible outage of a weather product.

The weather product age is shown automatically for weather products displayed on MFD maps. For PFD maps, the pilot can manually enable/disable the age information.

Viewing legends for displayed weather products on the Weather Data Link Page:

- 1) Select the Weather Data Link Page.
- 2) Press the **Legend** Softkey to display the legends for the displayed weather products.
Or:
 - a) Press the **MENU** Key.
 - b) Select 'Weather Legend' and press the **ENT** Key.
- 3) Turn the **FMS** Knob to scroll through the legends if more are available than fit in the window.
- 4) To remove the Weather Legends Window, press the **Legend** Softkey, the **ENT** or the **CLR** Key, or press the FMS Knob.

The following tables show the weather product symbols, the expiration times and the broadcast rates for SiriusXM Weather and FIS-B Weather, respectively. The broadcast rate represents the interval at which the SiriusXM Weather service transmits new signals that may or may not contain updated weather product information. It does not represent the rate at which the weather information is updated or when the Data Link Receiver receives new data. The service provider and its weather data suppliers define and control the data update intervals, which are subject to change.

SiriusXM Weather Product	Symbol	Expiration Time (Minutes)	Broadcast Rate (Minutes)
NEXRAD		30	5 (U.S.) 10 (Canada)
Cloud Top (CLD TOP)		60	15 (69/69A) 30 (69/69A SXM)
Echo Top (ECHO TOP)		30	7.5
SiriusXM Lightning (LTNG)		30	5
Cell Movement		30	1.25
SIGMETs/AIRMETs		60	12
METARs		90	12
City Forecast		90	12
Surface Analysis		60	12
Freezing Levels		120	12
Winds Aloft		90	12
County Warnings		60	5
Cyclone Warnings		60	12
Icing Potential (CIP and SLD)		90	22
Pilot Weather Report (PIREP)		90	12
Air Report(AIREP)		90	12
Turbulence		180	12
Radar Coverage Not Available	No product image	30	5

SiriusXM Weather Product	Symbol	Expiration Time (Minutes)	Broadcast Rate (Minutes)
Temporary Flight Restriction (TFR)	No product image	60	12
Terminal Aerodrome Forecast (TAF)	No product image	60	12

Table 6-1 SiriusXM Weather Product Symbols and Data Timing








FIS-B Weather Product	Symbol	Expiration Time (Minutes)	Broadcast Rate (Minutes)
NEXRAD Composite (US)		30	15
NEXRAD Composite (Regional)		30	2.5
METARs		90	5
Pilot Weather Report (PIREP)		90	10
Winds Aloft		90	10
SIGMETs/AIRMETs		60	5
No Radar Coverage	no product image	30	2.5
Terminal Aerodrome Forecast (TAF)	no product image	60	10
Temporary Flight Restriction (TFR)	no product image	60	10

Table 6-2 FIS-B Weather Product Symbols and Data Timing

The following table shows the Garmin Connex Weather product symbols, the expiration times and the refresh rates. The refresh rate represents the interval at which Garmin Connex weather service makes available the most current known weather data. It does not necessarily represent the rate at which the service receives new data from various weather sources. The pilot chooses how often to contact the Garmin Connex weather service in order to retrieve weather data through the Connex Data Request.

Garmin Connex Weather Product	Symbol	Expiration Time (Minutes)	Refresh Rate (Minutes)
Radar Precipitation		30	U.S.: 3*
			Canada: 3*†
			Europe: 15
			Australia: 15^

Garmin Connex Weather Product	Symbol	Expiration Time (Minutes)	Refresh Rate (Minutes)
Infrared Satellite		60	30
Datalink Lightning		30	Continuous
SIGMETs/ AIRMETS		60	Continuous
METARs		90	Continuous
Winds Aloft		90	Continuous
Pilot Weather Report (PIREPs)		90	Continuous
Temporary Flight Restrictions (TFRs)	no product image	60	Continuous
Terminal Aerodrome Reports (TAFs)	no product image	60	Continuous
<p>* The composite precipitation image is updated every 3 minutes, but individual radar sites may take between 3 and 10 minutes to provide new data. † Canadian radar precipitation data provided by Environment Canada. ^ Australian radar precipitation data provided by the Australian Bureau of Meteorology.</p>			

Table 6-3 Garmin Connex Weather Product Symbols and Data Timing

DISPLAYING DATA LINK WEATHER PRODUCTS

WEATHER DATA LINK PAGE

The 'Map - Weather Data Link (XM/FIS-B/CNXT)' Page is the principal map page for viewing data link weather information. This page provides the capability for displaying the most data link weather products of any map on the system. The 'Map - Weather Data Link' Page also provides system-wide controls for selecting the data link weather source, if more than one source has been installed. The page title indicates the selected data link weather source (e.g., "XM", "FIS-B", "CNXT").

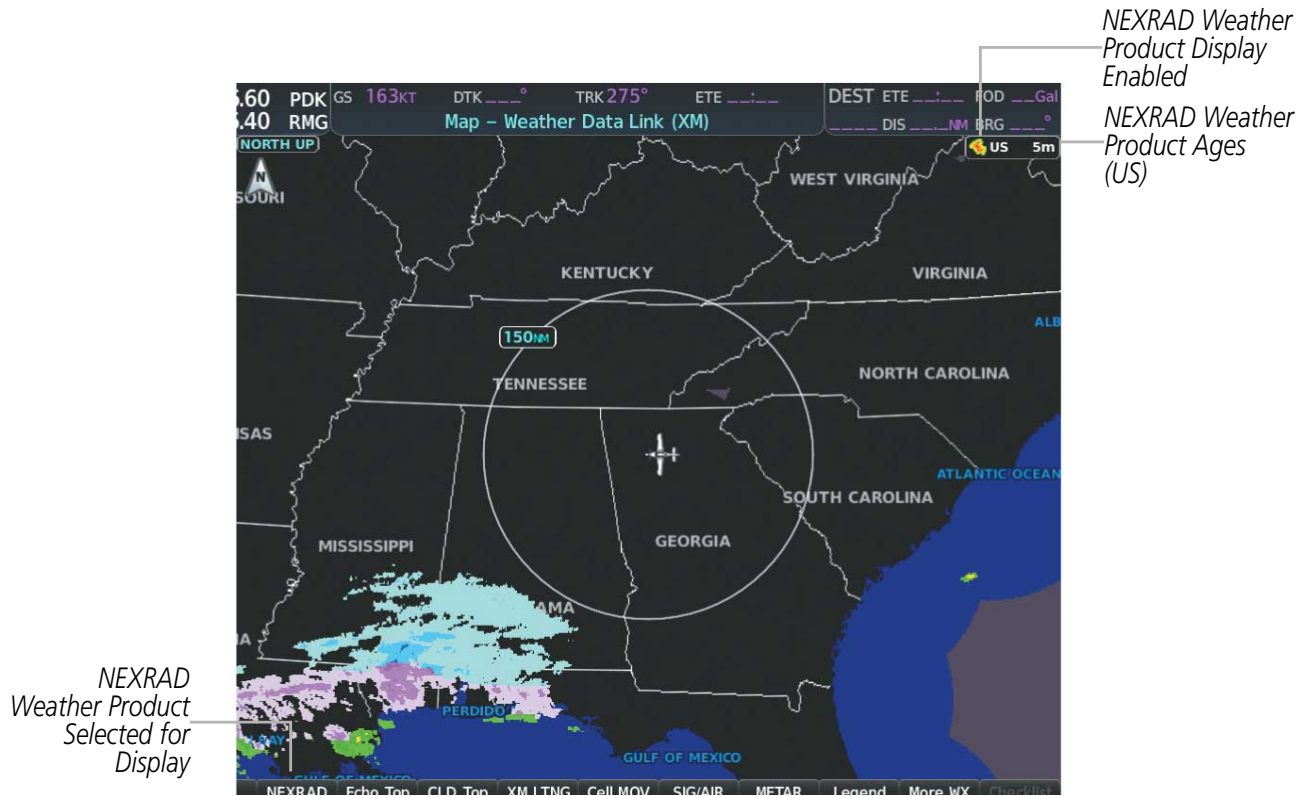


Figure 6-5 Weather Data Link (XM) Page

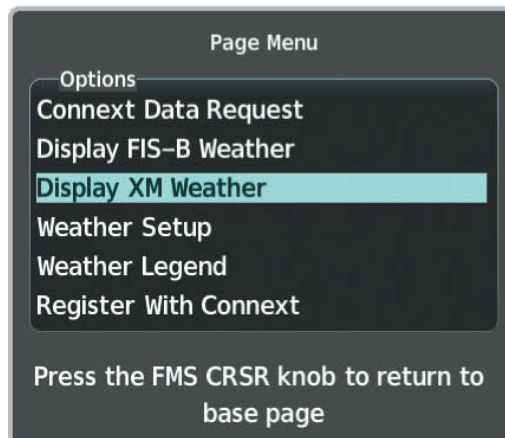


Figure 6-6 Changing the Data Link Weather Source

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CWS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

Viewing the Weather Data Link Page and changing the data link weather source, if applicable:

- 1) Turn the large **FMS** Knob to select the Map Page Group.
- 2) Turn the small **FMS** Knob to select the Weather Data Link (XM or CNXT or FIS-B) Page. The currently selected data link weather source appears in the page title.
- 3) If the page title does not contain the desired weather source, press the **MENU** Key.
 - a) Turn the **FMS** Knob to highlight 'Display XM Weather', or 'Display Connex Weather' or 'Display FIS-B Weather' (choices may vary depending on the installed equipment).
 - b) Press the **ENT** Key.

WEATHER DATA LINK (XM) PAGE SOFTKEYS



NOTE: Only softkeys pertaining to data link weather features are shown in the following tables.

The system presents the softkeys for the selected source on the Weather Data Link Page, and for map overlays used throughout the system. The following figures show the softkeys for the Weather Data Link Page based on the selected source.

Level 1	Level 2	Level 3	Description
NEXRAD			Enables/disables the NEXRAD weather product overlay.
Echo Top			Enables/disables the Echo Tops weather product overlay.
CLD Top			Enables/disables the Cloud Tops weather product overlay.
XM LTNG			Enables/disables the SiriusXM Lightning weather product overlay.
Cell MOV			Enables/disables the Cell Movement weather product overlay.
SIG/AIR			Enables/disables the SIGMET/AIRMET weather product overlay.
METAR			Enables/disables the graphical METAR weather product overlay.

Level 1	Level 2	Level 3	Description
Legend			Enables/disables the SiriusXM Weather Legends Window. Softkey available for selection when at least one SiriusXM Weather product is enabled.
More WX			Displays second-level SiriusXM Weather product softkeys.
	Cyclone		Enables/disables the Cyclone weather product overlay.
	SFC		Displays third level softkey for enabling/disabling the Surface Analysis and City Forecast weather product and selecting a forecast period.
		Off	Disables the Surface Analysis and City Forecast weather product overlay.
		Current	Displays the Surface Analysis for the current time period overlay.
		12 HR, 24 HR, 36 HR, 48 HR	These softkeys display a Surface Analysis and City Forecast overlay for the selected future time period.
		Legend	Enables/disables the SiriusXM Weather Legends Window. Softkey available for selection when at least one SiriusXM Weather product is enabled.
		Back	Returns to the second-level softkeys.
	FRZ LVL		Enables/disables the Freezing Level weather product overlay.

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CDS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

Level 1	Level 2	Level 3	Description
	Wind		Displays third level softkeys for enabling/disabling the Winds Aloft weather product and selecting a winds aloft altitude.
		PREV	Shows the previous level of winds aloft altitude softkeys.
		Off	Disables the Winds Aloft weather product overlay.
		Softkeys available for selecting winds from the Surface to 42,000 feet	Enables/disables the Winds Aloft weather product for the surface (SFC) through 42,000 feet. Softkeys available for 3,000 foot increments of altitude.
		Next	Shows the next level of winds aloft altitude softkeys.
		Legend	Enables/disables the SiriusXM Weather Legends Window. Softkey available for selection when at least one SiriusXM Weather product is enabled.
		Back	Returns to the second-level softkeys.
	ICNG		Displays altitude softkeys for the Icing weather product overlay.
		PREV	Shows the previous level of Icing altitude softkeys.
		Off	Disables the Icing weather product.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CNS
- Flight Management
- Hazard Avoidance**
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

Level 1	Level 2	Level 3	Description
		Softkeys available for selecting winds from the Icing altitude from to 1,000 to 30,000 feet	Enables/disables the Icing weather product overlay from 1,000 feet to 30,000 feet. Softkeys available for 3,000 foot increments of altitude.
		Next	Shows the next level of Icing weather product softkeys.
		Legend	Enables/disables the SiriusXM Weather Legends Window. Softkey available for selection when at least one SiriusXM Weather product is enabled.
	TURB		Displays softkeys for enabling/disabling the Turbulence weather product overlay.
		PREV	Shows the previous level of Turbulence altitude softkeys.
		Off	Disables the Turbulence weather product overlay.
		Softkeys available for selecting Turbulence altitude from 21,000 feet to 45,000 feet	Enables/disables the Icing weather product overlay from 21,000 feet to 45,000 feet. Softkeys available for 3,000 foot increments of altitude.

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CDS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

Level 1	Level 2	Level 3	Description
		Next	Shows the next level of Icing weather product softkeys.
		Legend	Enables/disables the SiriusXM Weather Legends Window. Softkey available for selection when at least one SiriusXM Weather product is enabled.
		Back	Returns to the second-level softkeys.
	AIREPS		Enables/disables the AIREPs weather product overlay.
	PIREPS		Enables/disables the PIREPs weather product overlay.
	County		Enables/disables the County Warnings weather product overlay.
	Back		Returns to the first level softkeys.

Table 6-4 SiriusXM Weather Softkeys

Level 1	Level 2	Level 3	Description
PRECIP			Enables/disables the Precipitation weather product overlay.
IR SAT			Enables/disables the infrared Satellite weather product overlay.
SIG/AIR			Enables/disables the SIGMET/AIRMET weather product overlay.
METAR			Enables/disables the graphical METAR weather product overlay.
Legend			Enables/disables the Connex Weather Legends Window. Softkey available for selection when at least one Connex Weather product is enabled.
More WX			Displays second-level Connex Weather product softkeys.

Level 1	Level 2	Level 3	Description
	Wind		Displays third level softkeys for enabling/disabling the Winds Aloft weather product and selecting a winds aloft altitude.
		PREV	Shows the previous level of winds aloft altitude softkeys.
		Off	Disables the Winds Aloft weather product overlay.
		Softkeys available for selecting winds from the Surface to 42,000 feet	Enables/disables the Winds Aloft weather product for the surface (SFC) through 42,000 feet. Softkeys available for 3,000 foot increments of altitude.
		Next	Shows the next level of winds aloft altitude softkeys.
		Legend	Enables/disables the Connex Weather Legends Window. Softkey available for selection when at least one Connex Weather product is enabled.
		Back	Returns to the second-level softkeys.
	PIREPs		Enables/disables the PIREPs weather product overlay.
	Back		Returns to the first level softkeys.

Table 6-5 Garmin Connex Weather Softkeys

Level 1	Level 2	Level 3	Description
NEXRAD or US or RGNL or US/RGNL			Cycles through NEXRAD display modes: NEXRAD (annunciator disabled): No NEXRAD shown. US: Displays NEXRAD for Continental US (CONUS). RGNL: Displays regional NEXRAD data. US/RGNL: Displays regional NEXRAD data where available, and CONUS NEXRAD data in other coverage areas.
IR SAT			Enables/disables the Infrared Satellite weather product overlay.
SIG/AIR			Enables/disables the SIGMET/AIRMET weather product overlay.
METAR			Enables/disables the METAR weather product overlay.

Level 1	Level 2	Level 3	Description
Legend			Enables/disables the Connex Weather Legends Window. Softkey available for selection when at least one Connex Weather product is enabled.
More WX			Displays second-level Connex Weather product softkeys.
	Wind		Displays third level softkeys for enabling/disabling the Winds Aloft weather product and selecting a winds aloft altitude.
		PREV	Shows the previous level of winds aloft altitude softkeys.
		Off	Disables the Winds Aloft weather product overlay.
		Softkeys available for selecting winds from the Surface to 42,000 feet	Enables/disables the Winds Aloft weather product for the surface (SFC) through 42,000 feet. Softkeys available for 3,000 foot increments of altitude.
		Next	Shows the next level of winds aloft altitude softkeys.
		Legend	Enables/disables the Connex Weather Legends Window. Softkey available for selection when at least one Connex Weather product is enabled.
		Back	Returns to the second-level softkeys.
	PIREPs		Enables/disables the PIREPs weather product overlay.
	Back		Returns to the first level softkeys.

Table 6-6 FIS-B Weather Softkeys

The Weather Data Link Page can display a legend for each enabled weather product.

Viewing legends for displayed weather products on the Weather Data Link Page:

- 1) Select the Weather Data Link Page.
- 2) Press the **Legend** Softkey to display the legends for the displayed weather products.

Or:

- a) Press the **MENU** Key.
- b) Select 'Weather Legend' and press the **ENT** Key.

- 3) Turn the **FMS** Knob to scroll through the legends if more are available than fit in the window.
- 4) To remove the Weather Legends Window, press the **Legend** Softkey, the **ENT** or the **CLR** Key, or press the FMS Knob.

Setting up and customizing the Weather Data Link Page:

- 1) Select the Weather Data Link Page.
- 2) Press the **MENU** Key.
- 3) Turn the **FMS** Knob to highlight 'Weather Setup', then press the **ENT** Key.
- 4) Turn the small **FMS** Knob to select 'Product Group 1' or 'Product Group 2', and press the **ENT** Key.
- 5) Turn the large **FMS** Knob or press the **ENT** Key to scroll through product selections.
- 6) Turn the small **FMS** Knob to scroll through options for each product (ON/OFF, range settings, etc.).
- 7) Press the **ENT** Key to select an option.
- 8) Press the **FMS** Knob or **CLR** Key to return to the Weather Data Link (XM) Page with the changed settings.

The pilot can select a map orientation for the Weather Data Link Page, or choose to synchronize the map orientation to the same orientation used on the Navigation Map Page.

Selecting a map orientation for the Weather Data Link Page:

- 1) Select the Weather Data Link Page.
- 2) Press the **MENU** Key.
- 3) Turn the **FMS** Knob to highlight 'Weather Setup'.
- 4) Turn the small **FMS** Knob to display the Group options.
- 5) If SiriusXM is the selected data link weather source, turn the small **FMS** Knob to highlight the 'Map' Group and press the **ENT** Key.

Or:

If FIS-B or Garmin Connex is the selected data link weather source, turn the large **FMS** Knob to highlight the 'Orientation' field at the bottom of the Product Group 1 list.

- 6) Turn the small **FMS** Knob to highlight the desired map orientation: North up, Track up, HDG up, or SYNC, then press the **ENT** Key.

Restoring default Weather Data Link Page settings:

- 1) Select the Weather Data Link Page.
- 2) Press the **MENU** Key.

- 3) Turn the **FMS** Knob to highlight 'Weather Setup', then press the **ENT** Key.
- 4) Press the **MENU** Key.
- 5) Highlight the desired default(s) to restore (all or for selection) and press **ENT** Key.
- 6) When finished, press the **FMS** Knob or press the **CLR** Key.

WEATHER PRODUCTS MAP OVERLAYS

Other PFD and MFD maps and pages can display a smaller set of data link weather products. The following table shows which data link weather products can be displayed on specific maps, indicated with a '+' symbol.

Data Link Weather Product	PFD MAPS	Navigation Map Page	Weather Data Link Page	Weather Information Page	Aux - Trip Planning Page	Nearest Page Group	Flight Plan Pages
NEXRAD/Radar Precipitation	+	+	+		+	+	+
Cloud Top			+				
Echo Top			+				
Infrared Satellite			+				
Data Link Lightning	+	+	+		+	+	+
Cell Movement		+	+		+		
SIGMETs/AIRMETs			+				
METARs	+	+	+	+	+	+	+
Surface Analysis & City Forecast			+				
Freezing Levels			+				
Winds Aloft		+*	+				
County Warnings			+				
Cyclone Warnings			+				

Data Link Weather Product	PFD MAPS	Navigation Map Page	Weather Data Link Page	Weather Information Page	Aux - Trip Planning Page	Nearest Page Group	Flight Plan Pages
Icing Potential			+				
PIREPs			+	+			
AIREPs			+	+			
Turbulence (TURB)			+				
No Radar Coverage	+	+	+		+	+	+
TFRs	+	+	+	+	+	+	+
TAFs			+	+			

* Winds Aloft data is available inside the VSD when VSD is enabled on the Navigation Map Page.

Table 6-7 Weather Product Display Maps

Displaying Data Link Weather Products on the Navigation Map Page:

- 1) Select the 'Map - Navigation Map' Page.
- 2) Press the **Map Opt** Softkey.
- 3) Press the softkey to enable/disable the desired weather product.

Showing/removing the weather legend on the Navigation Map Page:

- 1) Select the 'Map - Navigation Map' Page.
- 2) Press the **Map Opt** Softkey.
- 3) Press the **Legend** Softkey to show the weather legends window.
- 4) When finished, press the **Legend** Softkey again, or press the **FMS** Knob or the **CLR** Key to remove the window.

The 'Map - Navigation Map' Page also allows the pilot to select the maximum map range to display weather products. If the pilot increases the map range beyond this selected maximum range, the system removes the weather product from the map. The system uses this setting for all navigation maps, including those displayed on the PFD.

Setting up and customizing weather data for the navigation maps:

- 1) Select the 'Map - Navigation Map' Page.
- 2) Press the **MENU** Key.
- 3) With 'Map Settings' highlighted, press the **ENT** Key.
- 4) Turn the small **FMS** Knob to select the 'Weather' Group and press the **ENT** Key.
- 5) Turn the large **FMS** Knob or press the **ENT** Key to scroll through product selections.

- 6) Turn the small **FMS** Knob to scroll through options for each product (On/Off, range settings).
- 7) Press the **ENT** Key to select an option.
- 8) Press the **FMS** Knob or **CLR** Key to return to the Navigation Map Page with the changed settings.

The system can also display data link weather information on the PFD navigation maps.

Displaying Data Link Weather products on the PFD:

- 1) On the PFD, press the **Map/HSI** Softkey.
- 2) Press the desired weather product softkey(s) to enable/disable the display of data link products on the PFD map.

On the MFD maps, the weather product icon and age appear automatically when a weather is enabled and the range is within the maximum display limits. On PFD maps, this information is available using the **PFD** softkeys.

Enabling/disabling the weather product icon and age display (PFD maps):

- 1) On the PFD, press the **Map/HSI** Softkey.
- 2) Press the **Layout** Softkey.
- 3) Press the **WX LGND** Softkey to enable/disable the weather product age, source, and icon box display on PFD Maps.

The setup menus for the 'Map - Navigation Map' Page and the Weather Data Link Page control the map range settings above which weather products data are decluttered from the display. If a map range larger than the weather product map range setting is selected, the weather product data is removed from the map. The page menus also provide an alternative to using the softkeys to enable/disable data link weather product overlays on maps.

CONNEXT DATA REQUESTS



NOTE: Data requests are not applicable to the SiriusXM Weather or FIS-B Weather services.

The Connext Data Request Menu provides the pilot with the options to define the requested weather coverage area(s), choose automatic weather update intervals (if desired), and the ability to send or cancel weather data requests. A Request Status Window inside the menu shows the status of the Connext Data Request.

Before a Connext Data Request can occur, a valid request coverage area must be defined from which all currently available Garmin Connext Weather products will be retrieved. At a minimum, either the aircraft's present position or a waypoint (as part of a flight plan or entered directly in the 'WAYPOINT' coverage field) must be part of the request coverage area, otherwise the request status window indicates 'INVALID COVERAGE AREA' and the system will not allow a request to occur.

It is not necessary for a destination (based on an active flight plan), a flight plan, or waypoint to be specified prior to enabling these coverage areas; however no weather data will be retrieved for these option(s) until a flight plan or waypoint is provided, respectively.



Figure 6-7 Weather Data Link Page Menu

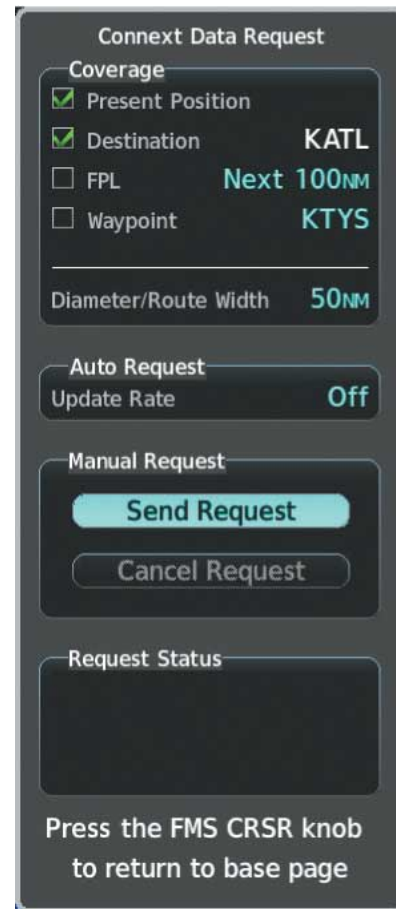


Figure 6-8 Connext Data Request Menu

Manually Requesting Garmin Connext Weather information:

- 1) Select the 'Map - Weather Data Link (CNXT)' Page.
- 2) Press the MENU Key.
- 3) With 'Connext Data Request' highlighted, press the ENT Key.
- 4) Turn the large **FMS** Knob to highlight the desired coverage option(s) and press the **ENT** Key to show or hide a green check mark to select one or more of the following coverage selections:
 - Present Position – Requests data based on current location.
 - Destination – Requests data based on the active flight plan destination (Direct-To destinations excluded). See the Flight Management section for more information about entering and activating flight plans.

- FPL – Requests data along an active flight plan, if one currently exists. Turn the small **FMS** Knob to select the desired flight plan look-ahead distance option (or choose ‘Remaining FPL’ to request weather data for the remainder of the flight plan), then press the **ENT** Key.
 - Waypoint – Requests data based on a waypoint (which may be off-route). Turn the large and small **FMS** Knobs to enter a waypoint, then press the **ENT** Key.
- 5) Turn the large **FMS** Knob highlight to the ‘Diameter / Route Width’ distance field and turn the small **FMS** Knob to select the desired diameter and route width of the request, then press the **ENT** Key.
 - 6) Turn the large **FMS** Knob until the ‘Send Request’ field is highlighted. Press the **ENT** Key to initiate the request immediately or press the **FMS** Knob to return to the Weather Data Link (CNXT) Page without requesting weather data.

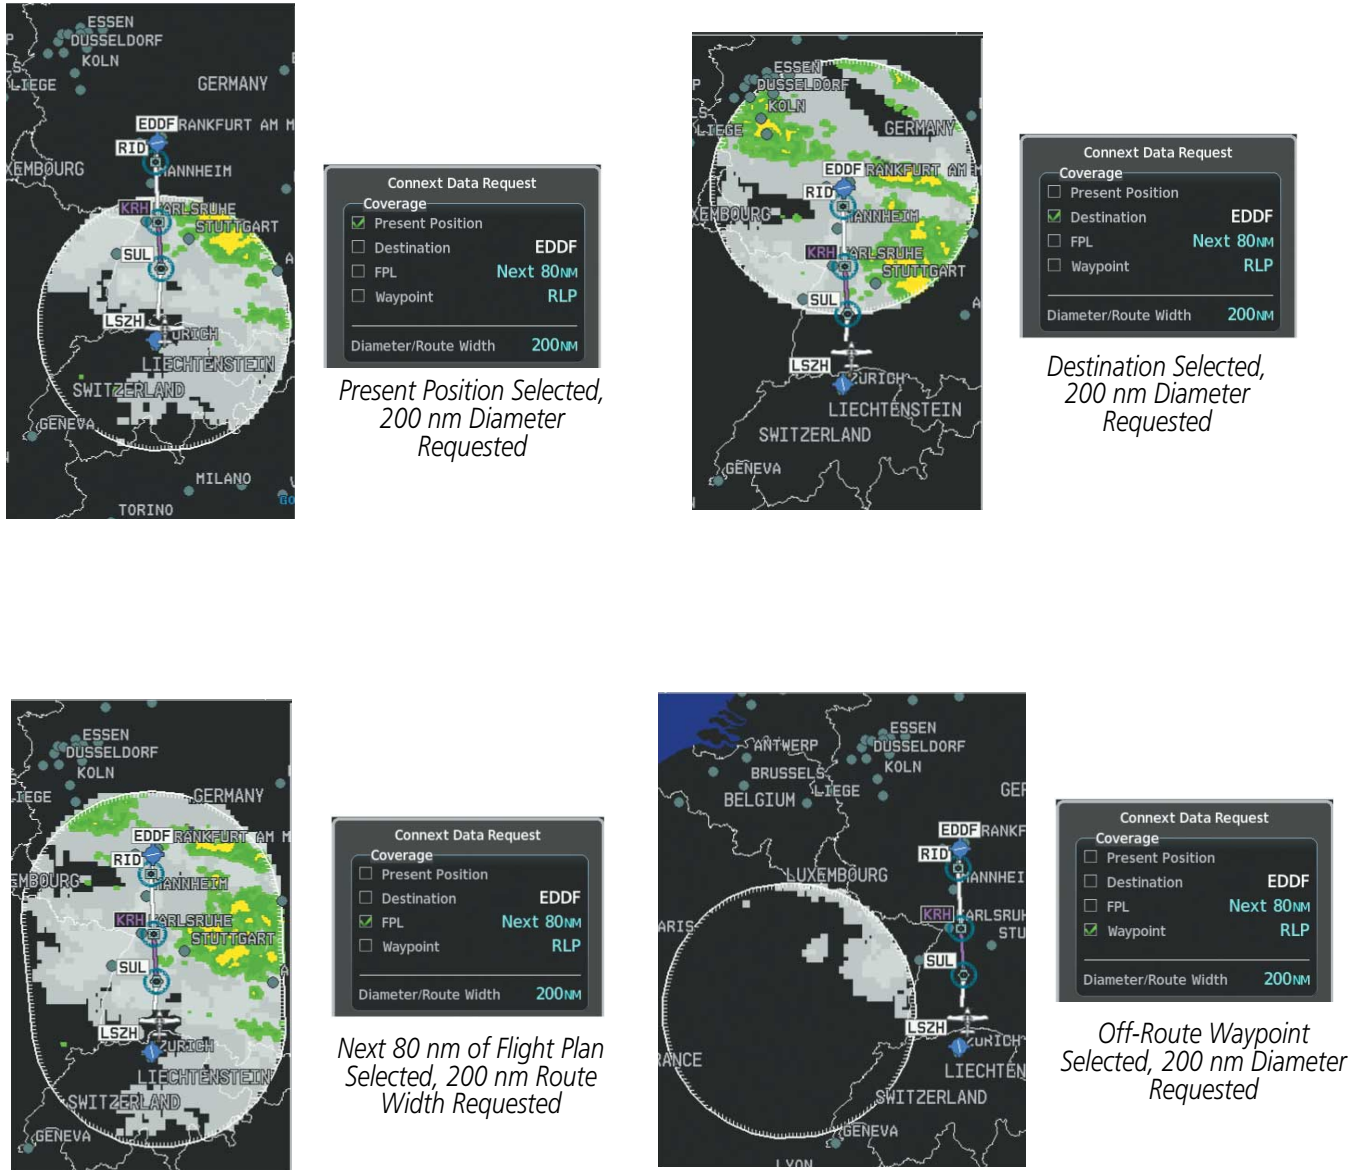


Figure 6-9 Garmin Connex Weather Data Request Results with Precipitation Data Displayed

During a Connex Data Request, the Request Status Window initially displays “Contacting Connex...”. Once a connection is established, the Request Status Window displays “Receiving Wx Data... Time Remaining:” with an estimated data transfer time (either minutes or seconds). If desired, the Connex Data Request Menu may be removed while the data request is processing by pressing the FMS Knob; the data request will continue to process in the background. Connex Data Requests typically take between 1 to 4 minutes to complete depending on the size of the selected weather coverage area, the amounts of weather activity present, and the Iridium signal strength.

The system retrieves all available Garmin Connex Weather products within the selected coverage area during an initial Connex Data Request, regardless of which products (if any) are currently enabled for display. On subsequent requests, the system retains previously retrieved textual data (such as METARs

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CNS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

and TAFs) if it has not expired, while new textual weather data matching the current coverage area and all graphical weather data is transferred to the aircraft during every data request.

At the completion of a successful weather data request, the Request Status Window indicates 'OK' if the Connex Data Request menu is still within view.

Cancelling a Connex Data Request in Progress:

- 1) Select the 'Map - Weather Data Link (CNXT)' Page.
- 2) Press the **MENU** Key.
- 3) With 'Connex Data Request' highlighted, press the **ENT** Key.
- 4) Turn the large **FMS** Knob to select the 'Cancel Request' field and press the **ENT** Key. The request status box indicates 'Request Cancelled'.
- 5) Press the **FMS** Knob to return to the Weather Data Link (CNXT) Page.

The flight crew can schedule Connex Data Requests to recur automatically. Automatic requests remain enabled until the flight crew disables them, or an avionics power cycle occurs. The Request Status Window indicates the number of minutes or seconds until the next automatic data request occurs.



NOTE: *If automatic Connex Data Requests were enabled prior to the system entering Reversionary Mode, the automatic weather data requests will continue in Reversionary Mode, however the Connex Data Request Window and its associated options will not be available in Reversionary Mode.*

Enabling/disabling automatic Connex Data Requests:

- 1) Select the 'Map - Weather Data Link (CNXT)' Page.
- 2) Press the **MENU** Key.
- 3) With 'Connex Data Request' highlighted, press the **ENT** Key.
- 4) Choose the desired weather coverage options.
- 5) Turn the large **FMS** Knob to select the 'Update Rate' field. Then turn the small **FMS** Knob to highlight the desired automatic update frequency (Off, 5 Min, 10 Min, 15 Min, 20 Min, 30 Min, 45 Min, or 60 Min), then press the **ENT** Key.
- 6) The 'Send Request' field is highlighted and a countdown timer is displayed in the 'Request Status' Window based on the currently selected update rate. Press the **ENT** Key to send an immediate Connex Data Request.

Or:

Press the **FMS** Knob to return to the Weather Data Link (CNXT) Page.

WEATHER PRODUCT OVERVIEW

The following is an overview of data link weather products the system can display.

NEXRAD (SIRIUSXM)

NOTE: Data link weather radar information cannot be displayed at the same time as relative terrain, echo tops, icing, or turbulence data.

The National Weather Service (NWS) operates the WSR-88D, or NEXRAD (NEXt-generation RADar) system, an extensive network of 156 high-resolution Doppler radar systems. The NEXRAD network provides centralized meteorological information for the continental United States and selected overseas locations. The maximum range of a single NEXRAD site is 250 nm.

Individual NEXRAD sites supply the network with radar images, and the images from each radar site may arrive at the network at different rates and times. Periodically, the weather data provider compiles the available individual site images from the network to form a composite image, and assigns a single time to indicate when it created the image. This image becomes the NEXRAD weather product. Individual images--gathered from each NEXRAD site--differ in age, and are always older than the displayed NEXRAD weather product age. The data provider then sends the NEXRAD data to the SiriusXM Weather service, whose satellites transmit this information during the next designated broadcast time for the NEXRAD weather product.

Because of the time required to detect, assemble, and distribute the NEXRAD weather product, the displayed weather information contained within the product may be significantly older than the current radar synopsis and may not depict the current weather conditions. The NEXRAD weather product should never be used as a basis for maneuvering in, near, or around areas of hazardous weather regardless of the information it contains.

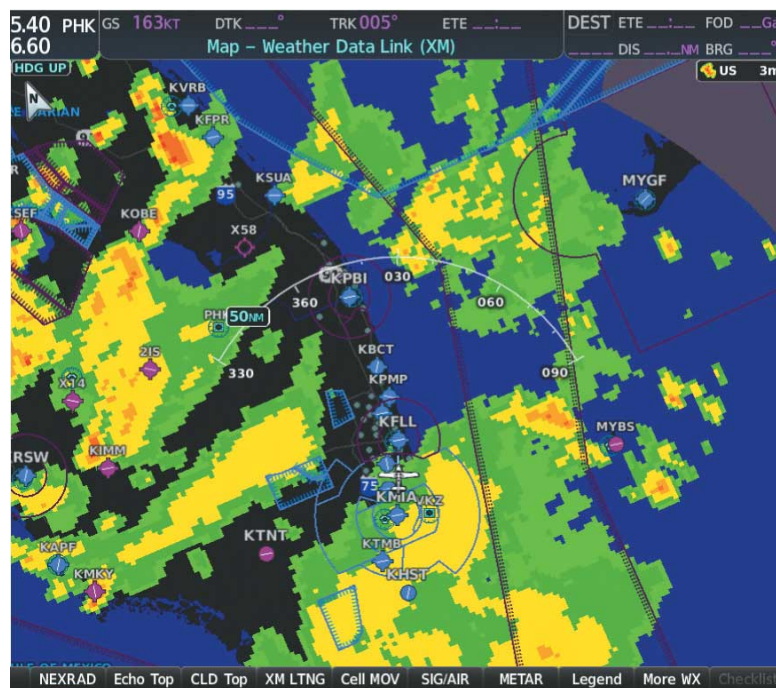


Figure 6-10 Weather Data Link (XM) Page

For radar sites in the United States, the NEXRAD weather product shows a composite reflectivity image. This shows the highest radar energy received from multiple antenna tilt angles at various

altitudes. For radar sites based in Canada, the NEXRAD weather product shows radar returns from the lowest antenna tilt angle, known as base reflectivity. The display of the information is color-coded to indicate the intensity of the echoes and the type of precipitation, if known.

Enabling/disabling NEXRAD weather information on the Weather Data Link (XM) Page:

- 1) Select the 'Map - Weather Data Link (XM)' Page.
- 2) Press the **NEXRAD** Softkey.

Enabling/disabling NEXRAD weather information on MFD navigation maps:

- 1) Press the **Map Opt** Softkey.
- 2) Press the **NEXRAD** Softkey.

Enabling/disabling NEXRAD weather information on PFD maps:

- 1) Press the **Map/HSI** Softkey.
- 2) Press the **NEXRAD** Softkey.

A mosaic of data from all the available NEXRAD radar sites is shown for the selected region (US or Canada). The pilot can change the region on the Weather Data Link (XM) Page.

Changing the NEXRAD coverage region:

- 1) Select the 'Map - Weather Data Link (XM)' Page.
- 2) Press the **MENU** Key.
- 3) Turn the large **FMS** Knob to highlight 'Weather Setup' and press the **ENT** Key.
- 4) Turn the large **FMS** Knob to highlight the NEXRAD Region datafield.
- 5) Turn the small **FMS** Knob to highlight 'US' or 'CNDA' (Canada) and press the **ENT** Key.

The display of No Radar Coverage is always active when either NEXRAD or Echo Tops is selected. Areas where NEXRAD radar coverage and Echo Tops information is not currently available or is not being collected are indicated in gray shade of purple.

The system can animate a loop of NEXRAD information. The animated view is available on the Weather Data Link (XM) Page, and on navigation maps with the exception of the HSI Map. Animation begins after the system has received at least two recent NEXRAD images since the avionics power cycle. When NEXRAD animation is enabled, a timeline appears in the upper-right corner of the map, except for the PFD Inset Map. A pointer on the timeline indicates the relative position of the displayed frame of animation, from oldest to newest. The NEXRAD weather product age corresponds to the displayed frame. The system can show up to six frames of NEXRAD animation when the USA coverage option is selected, and up to three frames of animation when Canada is selected.

Enabling/disabling animated SiriusXM NEXRAD on the Weather Data Link (XM) Page:

- 1) Press the **Menu** Key.
- 2) Turn the **FMS** Knob to select 'Weather Setup' and press the **ENT** Key.

- 3) With 'Product Group 1' Selected, turn the large **FMS** Knob to highlight the NEXRAD Animation On/Off field.
- 4) Turn the small **FMS** Knob to select 'On' or 'Off', then press the **ENT** Key.
- 5) To remove the menu, push the **FMS** Knob or the **CLR** Key.

Displaying Time-Lapse NEXRAD Animation on navigation maps:

- 1) Select the 'Map — Navigation Map' Page.
- 2) Press the **MENU** Key.
- 3) With 'Map Settings' highlighted, press the **ENT** Key.
- 4) Turn the small **FMS** Knob to select the 'Weather' group and press the **ENT** Key.
- 5) Turn the large **FMS** Knob to highlight the NEXRAD Animation On/Off field.
- 6) Turn the small **FMS** Knob to highlight 'On' or 'Off' and press the **ENT** Key.
- 7) To remove the menu, push the **FMS** Knob or the **CLR** Key.

REFLECTIVITY

Reflectivity is the amount of transmitted power returned to the radar receiver. Colors on the NEXRAD display are directly correlative to the level of detected reflectivity. Reflectivity as it relates to hazardous weather can be very complex.

The role of radar is essentially to detect moisture in the atmosphere. Simply put, certain types of weather reflect radar better than others. The intensity of a radar reflection is not necessarily an indication of the weather hazard level. For instance, wet hail returns a strong radar reflection, while dry hail does not. Both wet and dry hail can be extremely hazardous.

The different NEXRAD echo intensities are measured in decibels (dB) relative to reflectivity (Z). NEXRAD measures the radar reflectivity ratio, or the energy reflected back to the radar receiver (designated by the letter Z). The value of Z increases as the returned signal strength increases.

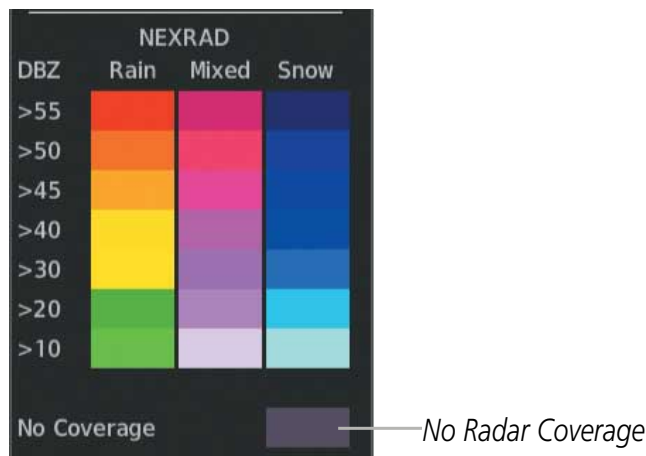


Figure 6-11 SiriusXM NEXRAD Legend

NEXRAD (FIS-B)

NOTE: The NEXRAD weather product cannot be displayed at the same time as terrain.

The National Weather Service (NWS) operates the WSR-88D, or NEXRAD (NEXT-generation RADar) system, an extensive network of 156 high-resolution Doppler radar systems. The NEXRAD network provides centralized meteorological information for the continental United States and select overseas locations. The maximum range of a single NEXRAD site is 250 nm.

Individual NEXRAD sites supply the network with radar images, and the images from each radar site may arrive at the network at different rates and times. Periodically, the weather data provider to FIS-B compiles the available individual site images from the network to form a composite image, and assigns a single time to indicate when it created the image. This image becomes the NEXRAD weather product. Individual images--gathered from each NEXRAD site--differ in age, and are always older than the displayed NEXRAD weather product age. The data provider then sends the NEXRAD data to the FIS-B GBTs, which transmit this information during the next designated broadcast time for the NEXRAD weather product.

Because of the time required to detect, assemble, and distribute the NEXRAD weather product, the displayed weather information contained within the product may be older than the current radar synopsis and may not depict the current weather conditions. NEXRAD information should never be used as a basis for maneuvering in, near, or around areas of hazardous weather regardless of the information it contains.

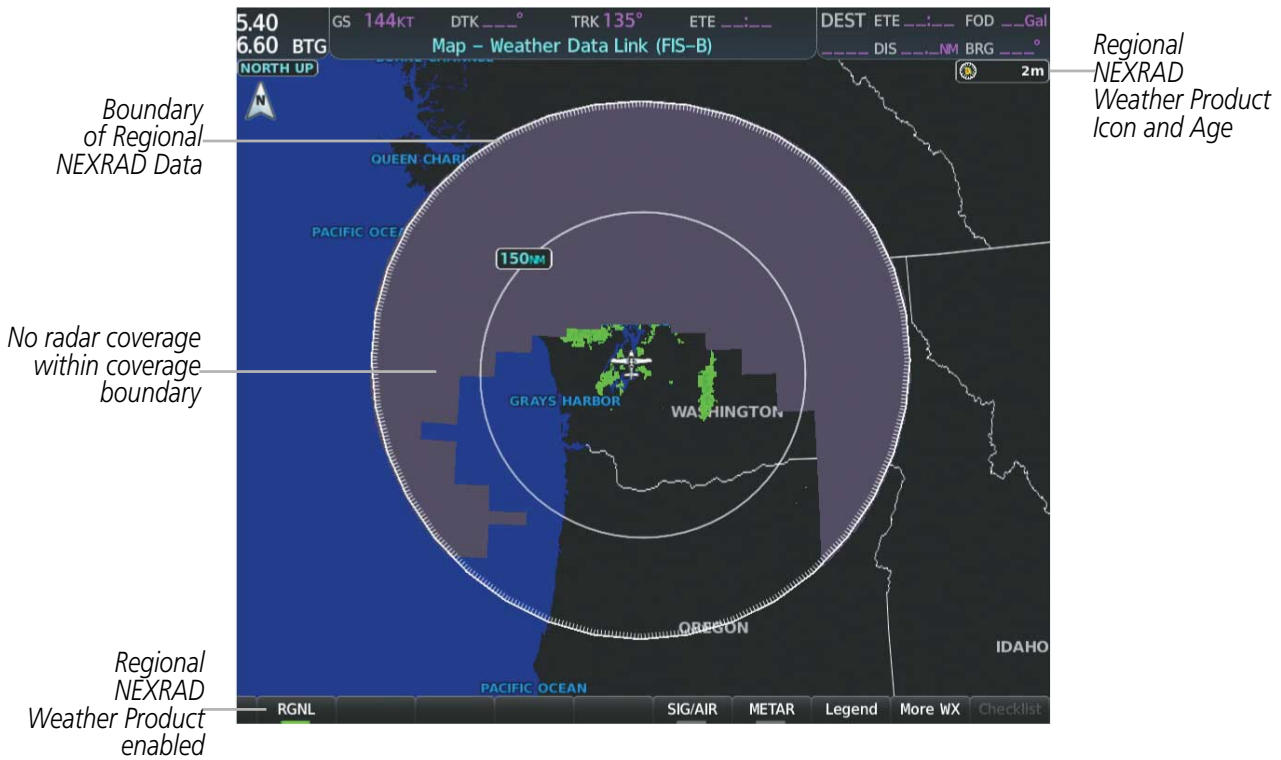


Figure 6-12 Regional NEXRAD Weather Product on the Weather Data Link (FIS-B) Page

The FIS-B NEXRAD weather product may be displayed for a region around the GBT (higher resolution, updated more frequently) or for across the continental United States (lower resolution, updated less frequently). A combined version of both weather products is also available for display on the same map. When the combined NEXRAD is selected, regional NEXRAD takes display precedence where data is available, and continental US NEXRAD is displayed outside of the regional NEXRAD coverage area.

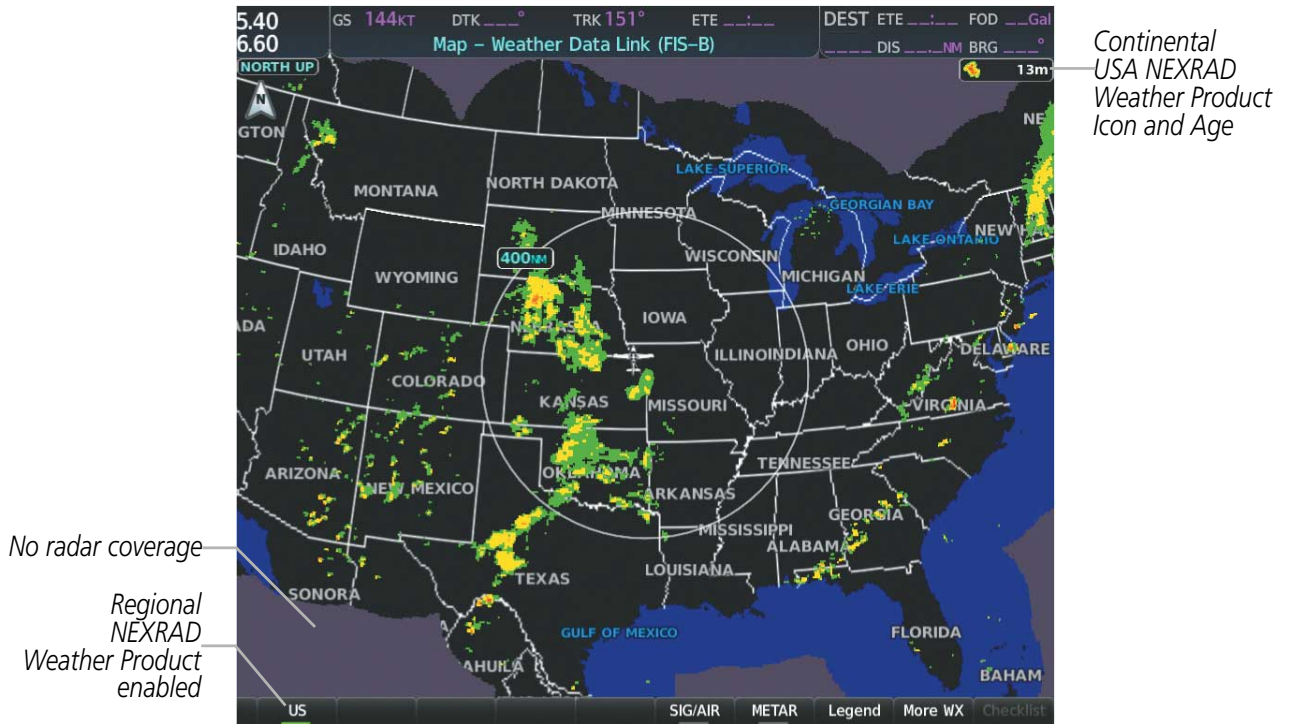


Figure 6-13

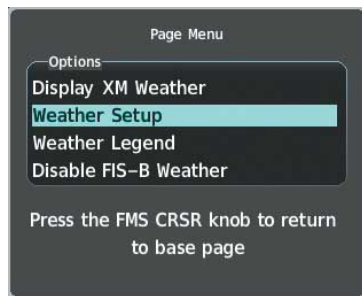


Figure 6-14 Weather Data Link (FIS-B) Page Menu



Figure 6-15 Weather Data Link (FIS-B) Page Setup Menu

Displaying the NEXRAD weather product on the Weather Data Link (FIS-B) Page:

- 1) Select the 'Map - Weather Data Link (FIS-B)' Page.
- 2) Press the **NXR** Softkey. Each selection cycles through a coverage option displayed on the softkey in cyan ('Off', 'US', 'REG', or 'All').
Or:
 - 1) Press the **MENU** Key.
 - 2) Turn the **FMS** Knob to highlight 'Weather Setup' and press the **ENT** Key.
 - 3) To enable/disable the display of NEXRAD informations, turn the small **FMS** Knob to highlight the NEXRAD On/Off field.
 - a) Turn the small **FMS** Knob to highlight 'On' to enable the display of NEXRAD or 'Off' to disable.
 - b) Press the **ENT** Key.
 - 4) Turn the large **FMS** Knob to highlight the 'Region' field..
 - a) Turn the small **FMS** Knob to select one of the following options: 'CONUS' for the continental United States, 'Regional' for regional NEXRAD, or 'Combined' to show regional NEXRAD where data is available, and continental NEXRAD outside of the regional coverage area.
 - b) Press the **ENT** Key.
 - 5) When finished, push the **FMS** Knob.

Displaying the FIS-B NEXRAD weather product on the Navigation Map Page:

- 1) Select the **Map Opt** Softkey.
- 2) Select the **NEXRAD** Softkey.
- 3) To change the type of NEXRAD displayed, press the **MENU** Key.
- 4) With 'Map Settings' highlighted, press the **ENT** Key.
- 5) Turn the small **FMS** Knob to select the 'Weather' Group, then press the **ENT** Key.
- 6) Turn the large **FMS** Knob to highlight the NEXRAD Data Region field.
- 7) Turn the small **FMS** Knob to highlight 'CONUS' (continental United States), 'RGNL' (regional), or 'Combined', then press the **ENT** Key. This selection also affects display of NEXRAD on the PFD Maps.
- 8) When finished, press the **FMS** Knob or press the **CLR** Key.

Displaying the FIS-B NEXRAD weather product on PFD maps:

- 1) Press the **Map/HSI** Softkey.
- 2) Press the **NEXRAD** Softkey to enable/disable the display of NEXRAD information.

The regional NEXRAD weather product coverage area varies, as it is determined by the data received from ground-based sources. When the regional NEXRAD weather product is enabled, a white spiked boundary encloses this area to indicate the geographic limits of the regional NEXRAD coverage being displayed. The system shows composite radar data from all available NEXRAD sites inside of this boundary area.

If the continental United States version of the NEXRAD weather product is shown (US Softkey enabled), the coverage boundary is not shown on the map.

This data is composed of the maximum reflectivity from the individual radar sweeps. The display of the information is color-coded to indicate the weather severity level. All weather product legends can be viewed on the Weather Data Link (FIS-B) Page. For the NEXRAD legend, select the Legend Softkey when the NEXRAD weather product is enabled.

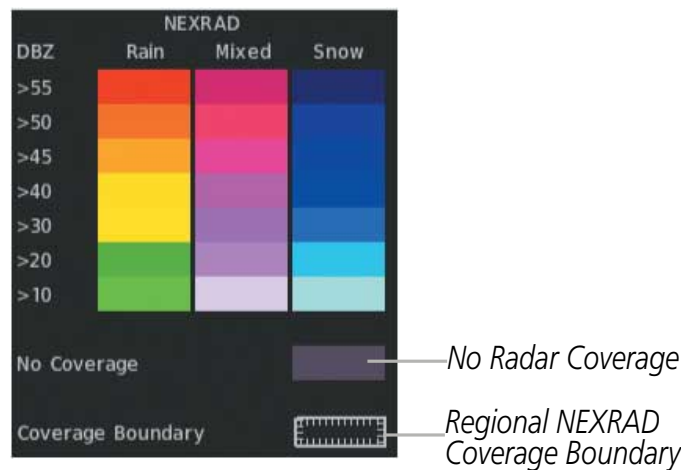


Figure 6-16 NEXRAD Weather Product Legend (FIS-B)

The display of no radar coverage is enabled when NEXRAD is selected for display. Areas where radar data is not currently available, has not yet been received, or is not being collected are indicated in gray shade of purple.

NOTE: If the system has not received all available NEXRAD weather data (such as during initial FIS-B signal acquisition or in areas of marginal or poor signal reception), the system may display areas of no radar coverage which are subsequently removed as radar data is received. It may take up to approximately ten minutes to receive all FIS-B data, when adequate reception is available.

PRECIPITATION (GARMIN CONNEXT)

NOTE: Precipitation data cannot be displayed at the same time as terrain data.

The Precipitation weather product provides radar precipitation information in selected radar coverage areas. This information comes from individual weather radar sites and weather data sources such as government agencies. Each radar site or source may provide weather data at differing rates and times. Periodically, the Garmin Connex Weather service compiles the available information to form a composite image, and assigns a single time to indicate when it created the image. This image

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CMS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

becomes the Precipitation weather product. Individual images--gathered from each radar site--differ in age, and are always older than the displayed Precipitation weather product age.

Because of the time required to detect, assemble, and distribute the Precipitation weather product, the displayed weather information contained within the product may be significantly older than the current radar synopsis and may not depict the current weather conditions. The Precipitation weather product should never be used as a basis for maneuvering in, near, or around areas of hazardous weather regardless of the information it contains.

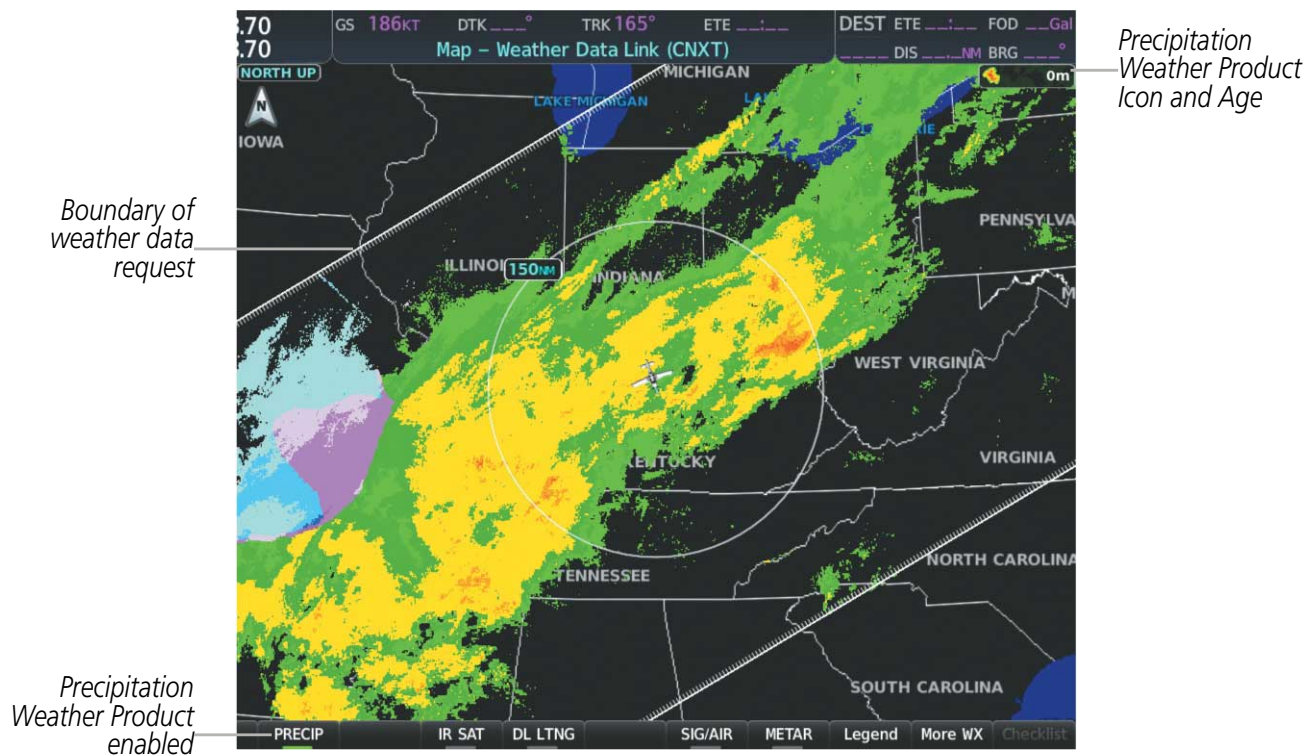


Figure 6-17 Precipitation Weather Product on the Weather Data Link (CNXT) Page

Displaying Precipitation weather information:

- 1) Press the **Map Opt** Softkey (for PFD maps, press the **Map/HSI** or **Map Opt** Softkey). This step is not necessary on the Weather Data Link (CNXT) Page.
- 2) Press the **PRECIP** Softkey.

The system displays either base or composite radar imagery, depending on the region.

Region	Radar Reflectivity Type
United States	Composite Reflectivity
Canada, Europe, Australia	Base Reflectivity

The base reflectivity precipitation weather product shows the radar returns from the perspective of a single antenna tilt angle. The composite reflectivity precipitation weather product shows the highest

radar energy received from multiple antenna tilt angles. The display of the information is color-coded to indicate the intensity of the echoes and the type of precipitation.

All weather product legends can be viewed on the Weather Data Link (CNXT) Page. For the Precipitation legend, press the **Legend** Softkey when Precipitation is selected for display.

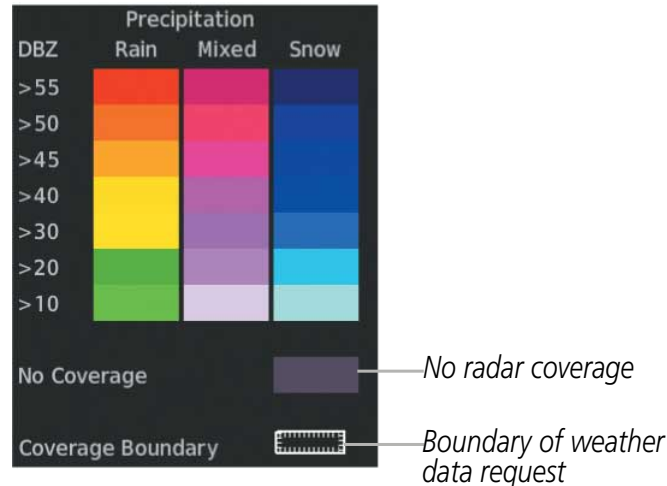


Figure 6-18 Precipitation Weather Product Legend (Garmin Connxt)

The display of radar coverage is enabled active when Precipitation is selected for display. Areas where precipitation radar coverage is not currently available or is not being collected are indicated in gray shade of purple. A white boundary line depicting the selected coverage area of the Connxt Data Request encloses the precipitation data when this weather product is displayed.

REFLECTIVITY

Reflectivity is the amount of transmitted power returned to the radar receiver. Colors on the Precipitation display directly correlate to the level of detected reflectivity. Reflectivity as it relates to hazardous weather can be very complex.

The role of radar is essentially to detect moisture in the atmosphere. Simply put, certain types of weather reflect radar better than others. The intensity of a radar reflection is not necessarily an indication of the weather hazard level. For instance, wet hail returns a strong radar reflection, while dry hail does not. Both wet and dry hail can be extremely hazardous.

The different radar echo intensities are measured in decibels (dB) relative to reflectivity (Z). Weather radars measure the reflectivity ratio, or the energy reflected back to the radar receiver (designated by the letter Z). The value of Z increases as the returned signal strength increases.

PRECIPITATION LIMITATIONS

Radar images may have certain limitations:

System Overview
 Flight Instruments
 Engine Indication System
 Audio Panel and CMS
 Flight Management
 Hazard Avoidance
 Automatic Flight Control System
 Additional Features
 Appendices
 Index

- Radar composite reflectivity does not provide sufficient information to determine precipitation characteristics (wet hail vs. rain). For example, it is not possible to distinguish between wet snow, wet hail, and rain.
- An individual radar site cannot depict high altitude storms at close ranges. It has no information about storms directly over the site.
- At smaller map ranges, individual blocks of radar data are viewable. Each block of radar information represents approximately four square kilometers and depicts the highest level of reflectivity detected within that area.

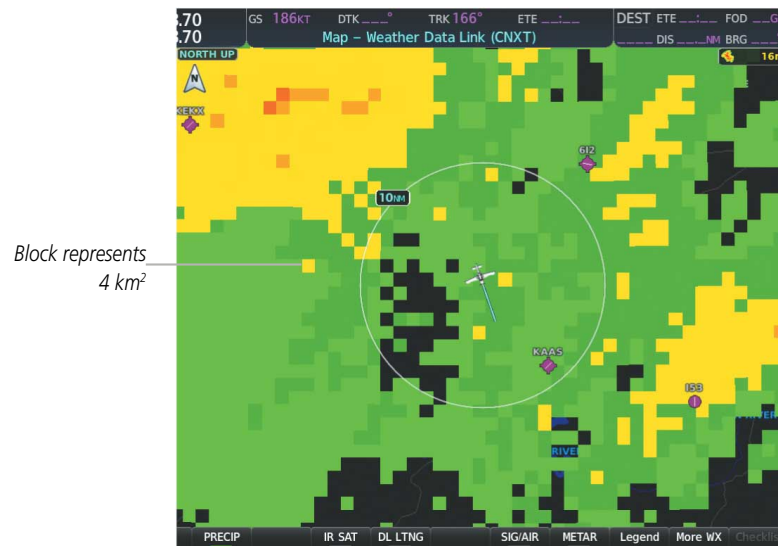


Figure 6-19 Garmin Connex Precipitation with a 10 NM Map Range

The following may cause abnormalities in displayed radar images:

- Ground clutter
- Spurious radar data
- Sun strobes (when the radar antenna points directly at the sun)
- Interference from buildings or mountains, which may cause shadows
- Metallic dust (chaff) from military aircraft, which can cause alterations in radar scans

ECHO TOPS (SIRIUSXM)



NOTE: *Echo Tops cannot be displayed at the same time as Cloud Tops or NEXRAD data is displayed.*

The Echo Tops weather product shows the location, elevation, and direction of the highest radar echo. The highest radar echo does not indicate the top of a storm or clouds; rather it indicates the highest altitude at which precipitation is detected. Information is derived from NEXRAD data.



Figure 6-20 Echo Tops Weather Product

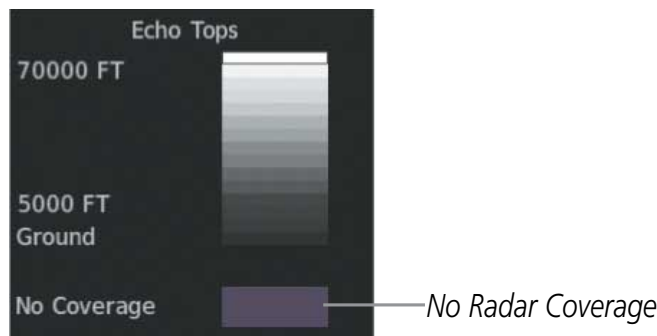


Figure 6-21 Echo Tops Legend

Displaying Echo Tops information:

- 1) Select the 'Map - Weather Data Link (XM)' Page.
- 2) Press the **Echo Top** Softkey.

CLOUD TOPS (SIRIUSXM)

NOTE: *Cloud Tops and Echo Tops cannot be displayed at the same time.*

NOTE: *The broadcast rate for Cloud Tops is 30 minutes. As with all SiriusXM Weather products, the product age becomes amber when it reaches half of the expiration time, which is 60 minutes for Cloud Tops. Therefore, this weather product age may be amber during routine operation.*

The Cloud Tops weather product depicts cloud top altitudes as determined from satellite imagery.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CNS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

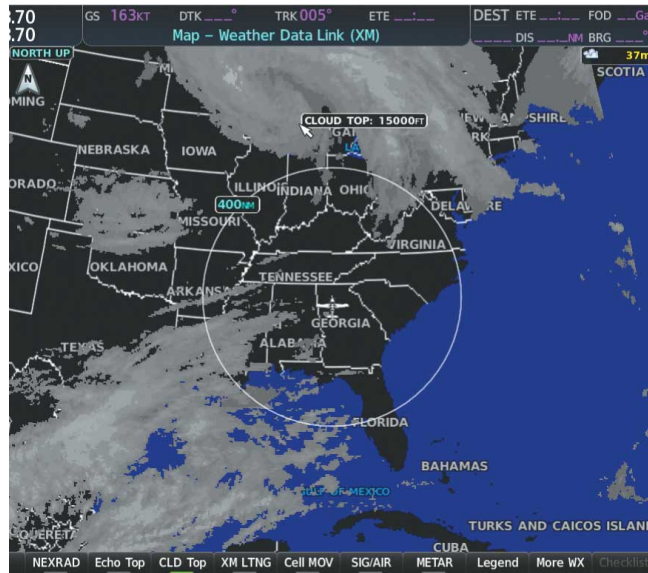


Figure 6-22 Cloud Tops Weather Product

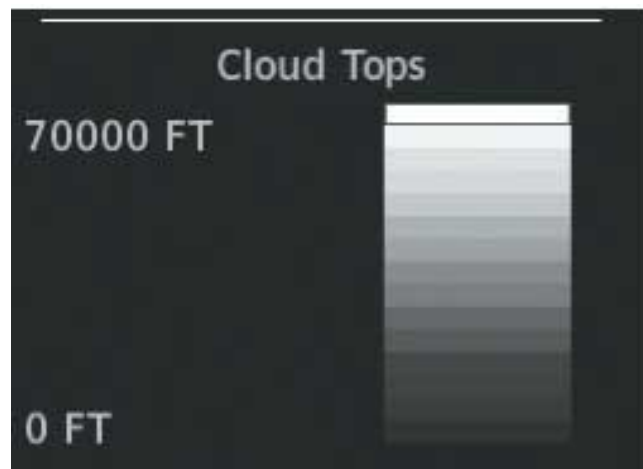


Figure 6-23 Cloud Tops Legend

Displaying Cloud Tops information:

- 1) Select the 'Map - Weather Data Link (XM)' Page with the **FMS** Knob.
- 2) Select the **CLD Top** Softkey.

DATA LINK LIGHTNING (SIRIUSXM, GARMIN CONNEXT)



NOTE: Lightning from a data link source cannot be displayed simultaneously on the same map as information from an optional on-board lightning detection system.

The Data Link Light weather product shows the approximate location of cloud-to-ground lightning strikes. A strike icon represents a strike that has occurred within a two-kilometer region. The exact location of the lightning strike is not displayed.

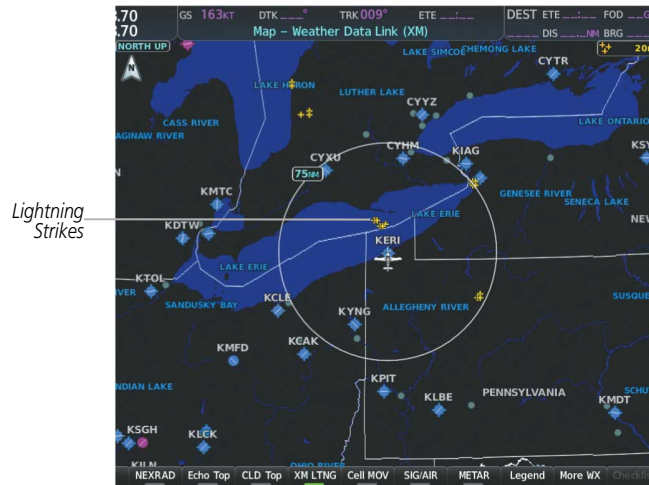


Figure 6-24 SiriusXM Lightning Weather Product

To display the Lightning legend on the Weather Data Link Page, select the Legend Softkey when Data Link Lightning is selected for display.

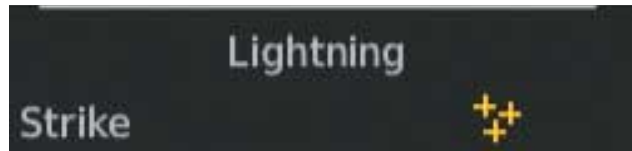


Figure 6-25 SiriusXM Lightning Legend

Displaying Data Link Lightning information on Weather Data Link Page:

- 1) Turn the **FMS** Knob to select the 'Map - Weather Data Link (XM or CNXT)' Page.
- 2) Press the **XM LTNG** or **DL LTNG** Softkey.

Displaying Data Link Lightning information on the Navigation Map Page:

- 1) Turn the **FMS** Knob to select the Navigation Map Page.
- 2) Press the **Map Opt** Softkey.
- 3) Press the **XM LTNG** or **DL LTNG** Softkey.

Displaying Data Link Lightning on PFD Maps:

- 1) On the PFD, press the **Map/HSI** Softkey.
- 2) Press the **Lightning** Softkey.
- 3) Press the **Datalink** Softkey.
- 4) When finished, press the **Back** Softkey.

CELL MOVEMENT (SIRIUSXM)

The Cell Movement weather product shows the location and movement of storm cells as identified by the ground-based system. Cells are represented by yellow squares, with direction of movement indicated with short, orange arrows.

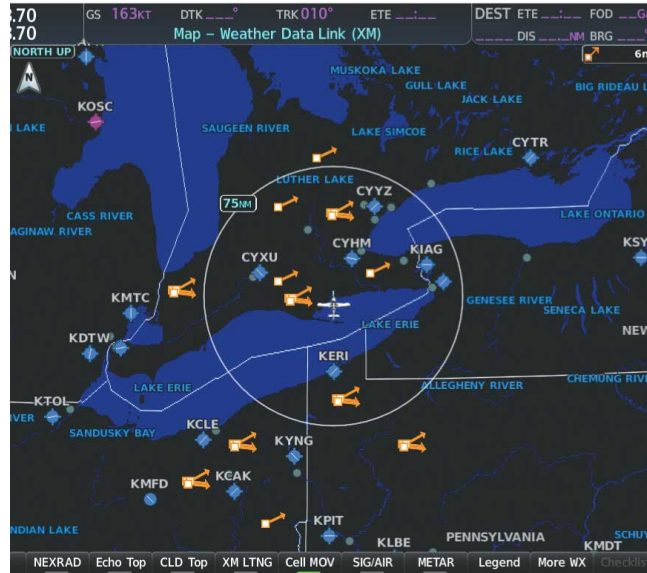


Figure 6-26 Cell Movement Weather Product on the Weather Data Link (XM) Page

On the Weather Data Link (XM) Page, the Cell Movement weather product has a dedicated **CEL MOV** softkey for enabling/disabling this weather product on this page.



NOTE: The Storm Cell base height is not available with the installed data link receiver. The Storm Cell base height is displayed as 0 feet when the Map Pointer selects a storm cell.

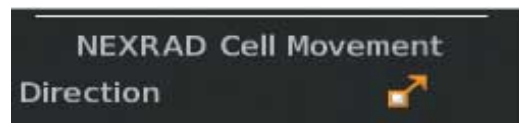


Figure 6-27 Cell Movement Legend

Displaying Cell Movement information on the Weather Data Link (XM) Page:

- 1) Select the 'Map - Weather Data Link (XM)' Page using the **FMS** Knob.
- 2) Select the **Cell MOV** Softkey.

For navigation maps, the pilot can enable/disable the Cell Movement weather product using the NEXRAD Softkey. For this to occur, the pilot must first enable the 'Cell Movement' option in the Map Settings menu of the Navigation Map Page.

After the 'Cell Movement' option is set to 'On', refer to the previous procedures for enabling/disabling the NEXRAD weather product to control both products simultaneously on navigation maps using the NEXRAD Softkey.

Setting up the system to display Cell Movement with NEXRAD on navigation maps:

- 1) Use the **FMS** Knob to select the 'Map - Navigation Map' Page.
- 2) Press the **MENU** Key.
- 3) With 'Map Settings' highlighted, press the **ENT** Key.
- 4) Turn the small **FMS** Knob to highlight 'Weather' and press the **ENT** Key.
- 5) Turn the large **FMS** Knob to 'On' or 'Off' for the Cell Movement menu option. When set to 'On', Cell Movement is enabled/disabled with the NEXRAD weather product on navigation maps. When set to 'Off', Cell Movement is not displayed on navigation maps.
- 6) When finished, push the **FMS** Knob or **CLR** Key to remove the menu.

INFRARED SATELLITE (GARMIN CONNEXT)

The Infrared Satellite (IR SAT) weather product depicts cloud top temperatures from satellite imagery. Brighter cloud top colors indicate cooler temperatures occurring at higher altitudes.

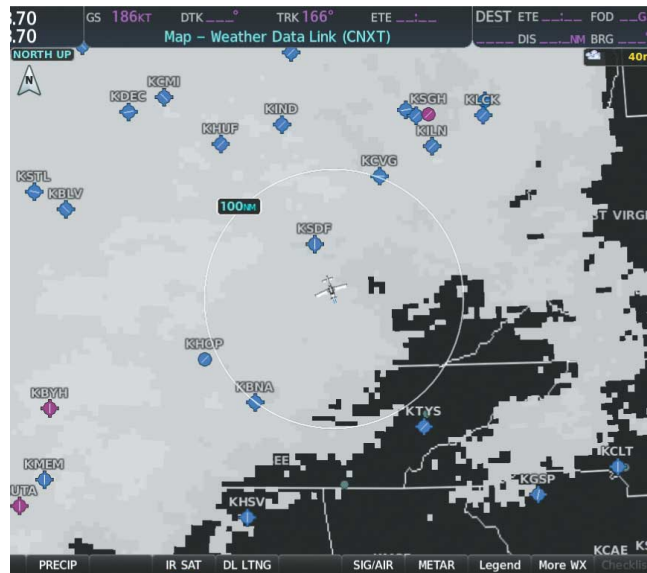


Figure 6-28 Infrared Satellite on the Weather Data Link (XM) Page

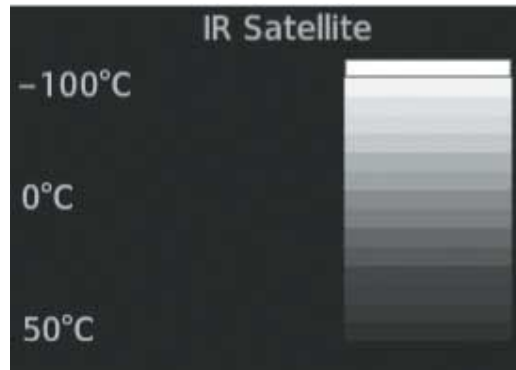


Figure 6-29 Infrared Satellite Legend

Displaying Infrared Satellite Information:

- 1) Select the 'Map — Weather Data Link (CNXT)' Page.
- 2) Press the **IR SAT** Softkey.

SIGMETS AND AIRMETS

SIGMET (SIGnificant METeorological Information) and AIRMET (AIRmen's METeorological Information) are issued for potentially hazardous weather. A Convective SIGMET is issued for hazardous convective weather such as severe or widespread thunderstorms. A localized SIGMET is a significant weather condition occurring at a localized geographical position.



NOTE: If SiriusXM Weather is the active data link weather source and a GDL 69A SXM receiver installed, the SIGMET and AIRMET weather products are not available unless at least one SIGMET or AIRMET has been received. The weather product age indicates 'N/A' when no SIGMET or AIRMET is available.



NOTE: For Garmin Connex Weather only, the entire SIGMET or AIRMET is shown on the map as long as any portion of it is issued within the selected coverage area of the Connex Data Request.

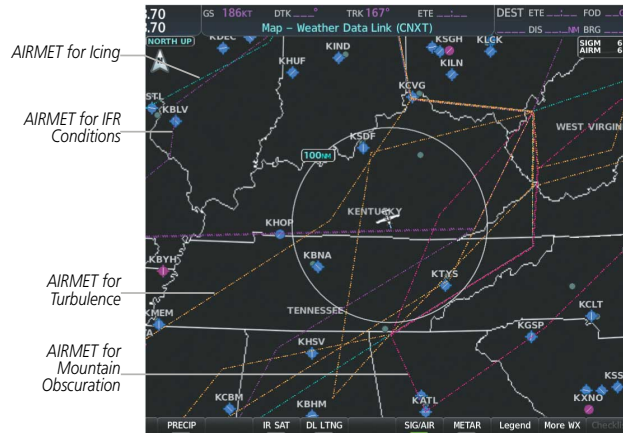


Figure 6-30 SIGMET/AIRMET Weather Product



Figure 6-31 SIGMET/AIRMET Full Text and Legend

Displaying SIGMETs and AIRMETs:

- 1) Select the 'Map- Weather Data Link (XM or CNXT or FIS-B)' Page.
- 2) Press the **SIG/AIR** Softkey.
- 3) To view the text of the SIGMET or AIRMET, press the **Joystick** and move the Map Pointer over the icon.
- 4) Press the **ENT** key.

METARS AND TAFS



NOTE: Atmospheric pressure as reported for METARs is given in hectopascals (hPa), except for in the United States, where it is reported in inches of mercury (in Hg). Temperatures are reported in Celsius.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CDS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index



NOTE: METAR information is only displayed within the installed navigation database service area.

METARs (METeorological Aerodrome Reports) typically contain information about the temperature, dewpoint, wind, precipitation, cloud cover, cloud heights, visibility, and barometric pressure at an airport or observation station. They can also contain information on precipitation amounts, lightning, and other critical data. METARs reflect hourly observations; non-routine updates include the code “SPECI” in the report. METARs are shown as colored flags at airports that provide them.

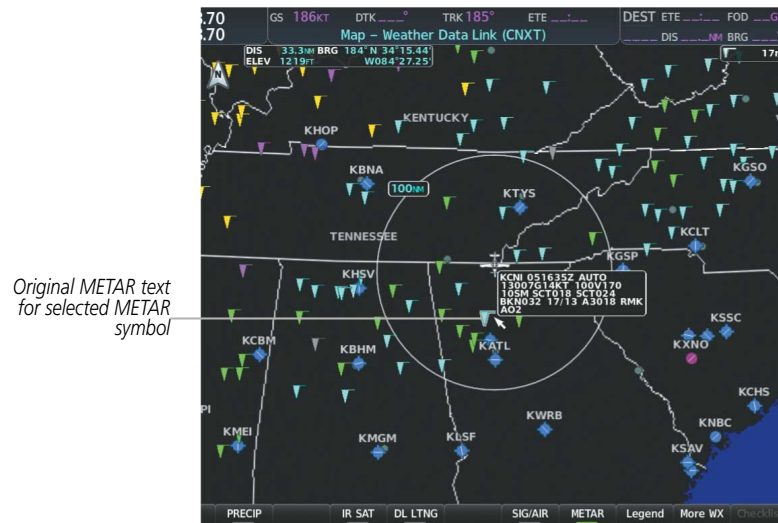


Figure 6-32 METAR Information on the Weather Data Link (CNXT) Page

TAFs (Terminal Aerodrome Forecasts) are weather predictions for specific airports within a 24-hour period, and may span up to 36 hours. TAFs typically include forecast wind, visibility, weather phenomena, and sky conditions using METAR codes.

METAR and TAF text are displayed on the Weather Information Page. METAR and TAF data is displayed first in a decoded fashion, followed by the original text. Note the original text may contain additional information not found in the decoded version.

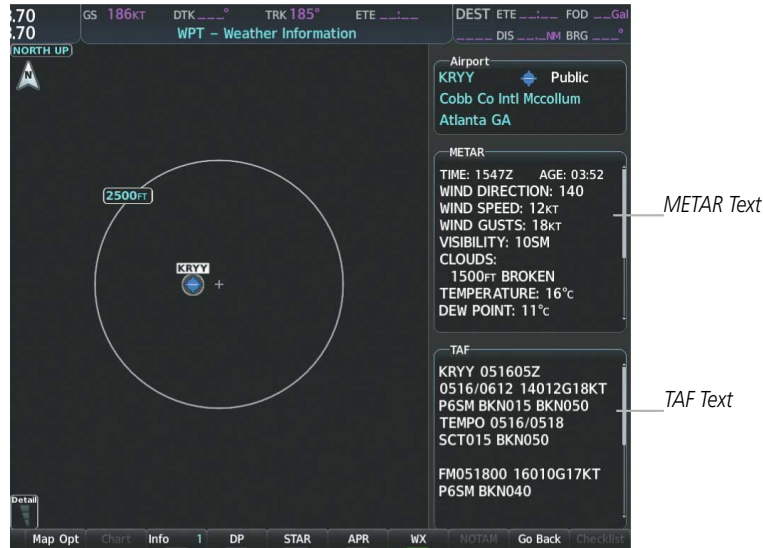


Figure 6-33 METAR and TAF Information on the Weather Information Page

To display the METAR legend on the Weather Data Link (XM) Page, select the Legend Softkey when METARs are enabled for display. The METAR flag color is determined by the information in the METAR text. The system displays a gray METAR flag when the system cannot determine the METAR category based on the information available.

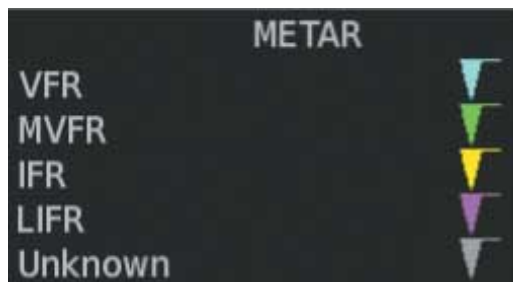


Figure 6-34 METAR Flag Legend

The system also shows METAR flags and their associated text on the Active Flight Plan Page on the MFD. The system shows a METAR flag next to waypoints in the flight plan with an available METAR.

Displaying METAR and TAF text on the MFD:

- 1) On the 'Map - Weather Data Link (XM or FIS-B or CNXT)' Page, press the **METAR** Softkey.
- 2) Press the **Joystick** and pan to the desired airport.
- 3) Press the **ENT** Key. The Weather Information Page is shown with METAR and TAF text.

- 4) Use the **FMS** Knob or the **ENT** Key to scroll through the METAR and TAF text. METAR text must be completely scrolled through before scrolling through the TAF text.
- 5) Press the **FMS** Knob or the **CLR** Key to return to the Weather Data Link Page.

Or:

- 1) Select the Weather Information Page.
 - a) Turn the large **FMS** Knob to select the Waypoint Page Group.
 - b) Select the **WX** Softkey to select the Weather Information Page.
- 2) Press the **FMS** Knob to display the cursor.
- 3) Use the **FMS** Knob to enter the desired airport and press the **ENT** Key.
- 4) Use the **FMS** Knob or the **ENT** Key to scroll through the METAR and TAF text. Note that the METAR text must be completely scrolled through before scrolling through the TAF text.

Displaying original METAR text on the Active Flight Plan Page:

- 1) Select the 'FPL - Active Flight Plan' Page on the MFD.
- 2) Press the **FMS** Knob to activate the cursor.
- 3) Turn the large **FMS** Knob to highlight a waypoint with an available METAR (indicated with a METAR flag next to it). The METAR text will appear in the 'Selected Waypoint Weather' Window below.
- 4) When finished, press the **FMS** Knob to remove the cursor or press the **FPL** Key to exit the Active Flight Plan Page.

Original METAR text is also accessible on navigation maps displaying METAR flags. When the map pointer is panned over a METAR flag, the METAR text is shown in a box near the flag.

Displaying original METAR text information on the PFD Inset Map:

- 1) On the PFD, press the **Map/HSI** Softkey.
- 2) Press the **METAR** Softkey.
- 3) Press the **Joystick** and pan to the desired METAR flag. Original METAR text appears on the map.
- 4) When finished, press the **Joystick** to remove the Map Pointer.

SURFACE ANALYSIS AND CITY FORECAST (SIRIUSXM)

Surface Analysis and City Forecast information is available for current and forecast weather conditions. Forecasts are available for intervals of 12, 24, 36, and 48 hours.

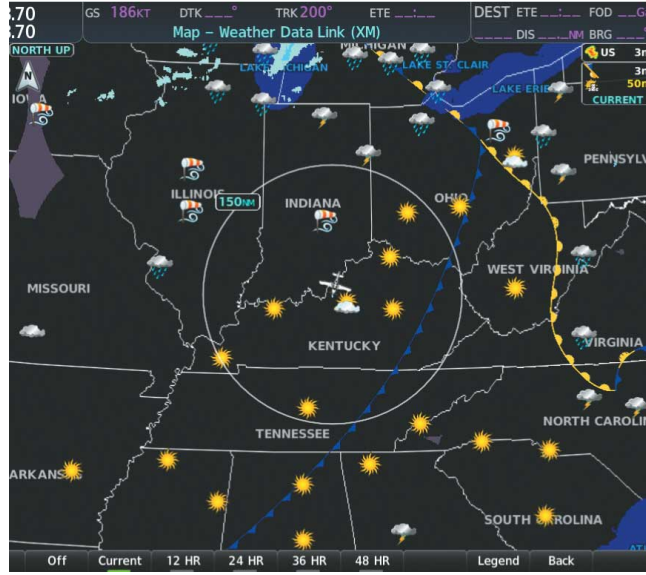


Figure 6-35 Surface Analysis and City Forecast Weather Product



Figure 6-36 Surface Analysis and City Forecast Legend

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CDS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

Displaying Surface Analysis and City Forecast information:

- 1) Select the 'Map - Weather Data Link (XM)' Page.
- 2) Press the **More WX** Softkey.
- 3) Press the **SFC** Softkey.
- 4) Press the softkey for the desired forecast time: **Current, 12 HR, 24 HR, 36 HR, or 48 HR**. The **SFC** Softkey label changes to show the forecast time selected.

Or:

Press the **Off** Softkey to disable the display of the weather product.

FREEZING LEVEL (SIRIUSXM)

The Freezing Level weather product shows the color-coded contour lines for the altitude and location at which the first isotherm is found. When no data is displayed for a given altitude, the data for that altitude has not been received, or is out of date and has been removed from the display. New data appears when it becomes available.

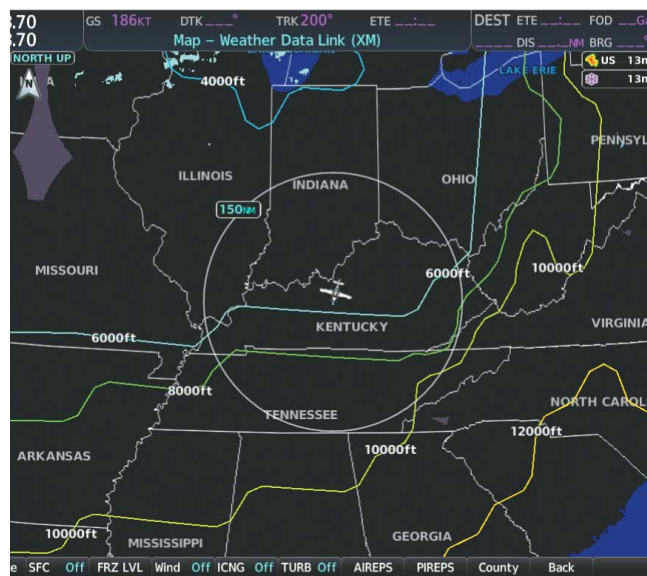


Figure 6-37 Freezing Level Weather Product



Figure 6-38 Freezing Level Legend

Displaying Freezing Level information:

- 1) Select the 'Map - Weather Data Link (XM)' Page.
- 2) Press the **More WX** Softkey.
- 3) Press the **FRZ LVL** Softkey.

WINDS ALOFT

The Winds Aloft weather product shows the forecast wind speed and direction at the surface and at selected altitudes. Altitude can be displayed in 3000-foot increments beginning at the surface up to 42,000 feet MSL.

If the FIS-B option is installed and FIS-B is the active data link weather source, the Winds Aloft weather product also displays temperatures aloft next to the winds aloft arrows on the Weather Data Link (FIS-B) Page.

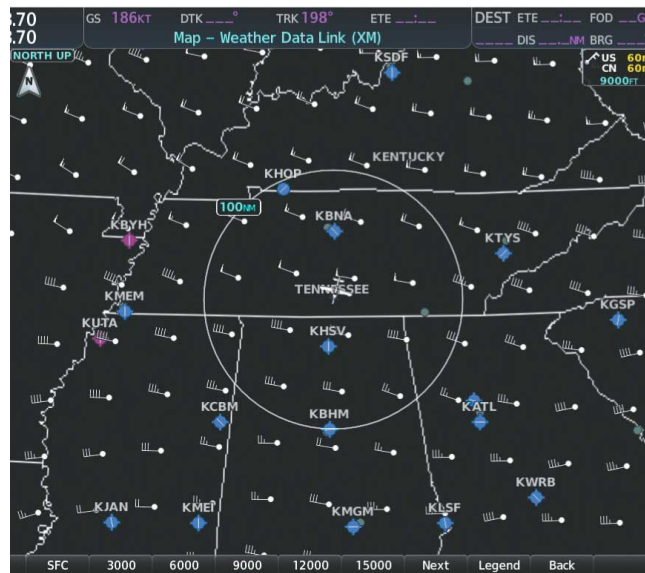


Figure 6-39 Winds Aloft Weather Product

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CWS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

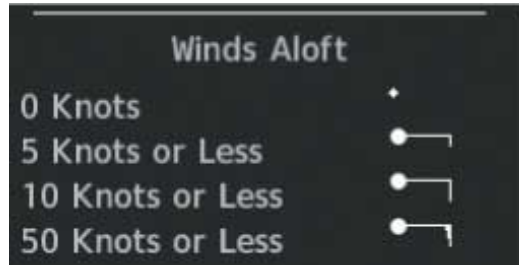


Figure 6-40 Winds Aloft Legend

Headwind and tailwind components aloft are available inside the Vertical Situation Display (VSD) on the Navigation Map Page when the SiriusXM or Garmin ConnexT Weather service is the active data link weather source. The displayed components are relative to current aircraft altitude and track, but not to aircraft speed.



Figure 6-41 Navigation Map Page with Winds Aloft Information on the VSD

Arrows pointing to the left indicate headwind components; tailwind component arrows point to the right, as shown in the table.

Headwind Symbol	Tailwind Symbol	Headwind/Tailwind Component
None	None	Less than 5 knots
		5 knots
		10 knots
		50 knots

Table 6-8 VSD Headwind/Tailwind Component Symbols

Displaying the Winds Aloft weather product:

- 1) Select the 'Map - Weather Data Link (XM)' Page.
- 2) Press the **More WX** Softkey.
- 3) Press the **Wind** Softkey.
- 4) Press a softkey for the desired altitude level: **SFC** (surface) up to 42,000 feet. Press the **Next** or **Prev** Softkey to cycle through the altitude softkeys. The **Wind** Softkey label changes to reflect the altitude selected.

Enabling/disabling the Vertical Situation Display (containing winds aloft data):

- 1) Select the 'Map - Navigation Map' Page.
- 2) Press the **Map Opt** Softkey.
- 3) Press the **Inset** Softkey.
- 4) Press the VSD Softkey to enable/disable the Vertical Situation Display.

Or:

- a) Select the Navigation Map Page.
- b) Press the **MENU** Key.
- c) Turn the **FMS** Knob to highlight 'Show VSD' or 'Hide VSD' and press the **ENT** Key.

Enabling/disabling winds aloft data display for the VSD:

- 1) Select the 'Map - Navigation Map' Page.
- 2) Press the **MENU** Key.
- 3) With 'Map Settings' highlighted, press the **ENT** Key.
- 4) Turn the small **FMS** Knob to select 'VSD' and press the **ENT** Key.
- 5) Turn the large **FMS** Knob to highlight the Winds on/off field.
- 6) Turn the small **FMS** Knob to select 'On' or 'Off'.
- 7) Press the **FMS** Knob or **CLR** Key to return to the Navigation Map Page with the changed settings.

COUNTY WARNINGS (SIRIUSXM)

The County warning weather product provides specific public awareness and protection weather warnings from the National Weather Service (NWS). This can include information on tornadoes, severe thunderstorms, and flood conditions.



Figure 6-42 County Flood Warning



Figure 6-43 County Warning Legend

Displaying County Warning information:

- 1) Select the 'Map - Weather Data Link (XM)' Page.
- 2) Press the **More WX** Softkey.
- 3) Press the **County** Softkey.

CYCLONE (SIRIUSXM)

The Cyclone weather product shows the current location of cyclones (hurricanes), tropical storms, and their projected tracks. The system displays the projected track information in the form of DD/HH:MM.



NOTE: The Cyclone weather product is not available unless at least one cyclone or tropical storm has been received. The weather product age indicates 'N/A' when no cyclone or tropical storm has been received.

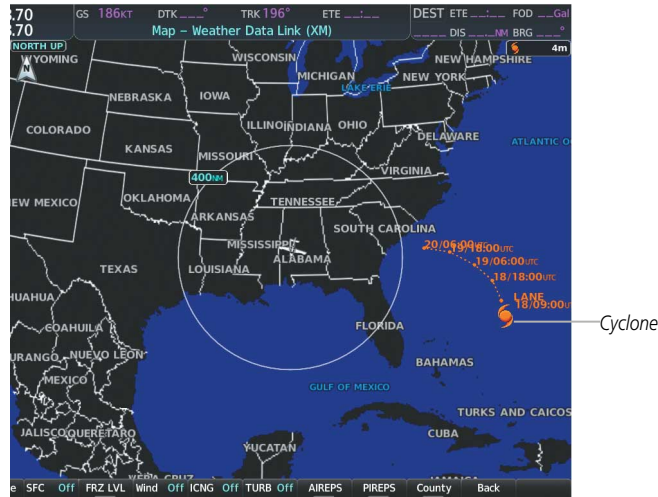


Figure 6-44 Cyclone (Hurricane) Weather Link Product on the Weather Data Link (XM) Page

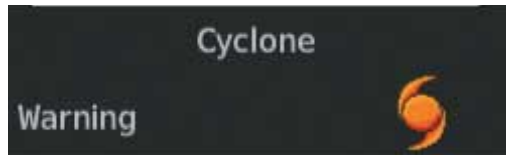


Figure 6-45 Cyclone Legend

Displaying cyclone (hurricane) track information:

- 1) Select the 'Map — Weather Data Link (XM) Page.
- 2) Press the **More WX** Softkey.
- 3) Press the **Cyclone** Softkey.

ICING (CIP & SLD) (SIRIUSXM)

The Current Icing Product (CIP) weather product shows a graphical view of the current icing environment. Icing severity is displayed in four categories: light, moderate, severe, and extreme (not specific to aircraft type). The CIP product is not a forecast, but a presentation of the current conditions at the time of the analysis.

Supercooled Large Droplet (SLD) icing conditions are characterized by the presence of relatively large, super cooled water droplets indicative of freezing drizzle and freezing rain aloft. SLD threat areas are depicted as magenta dots over the CIP colors.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CNS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

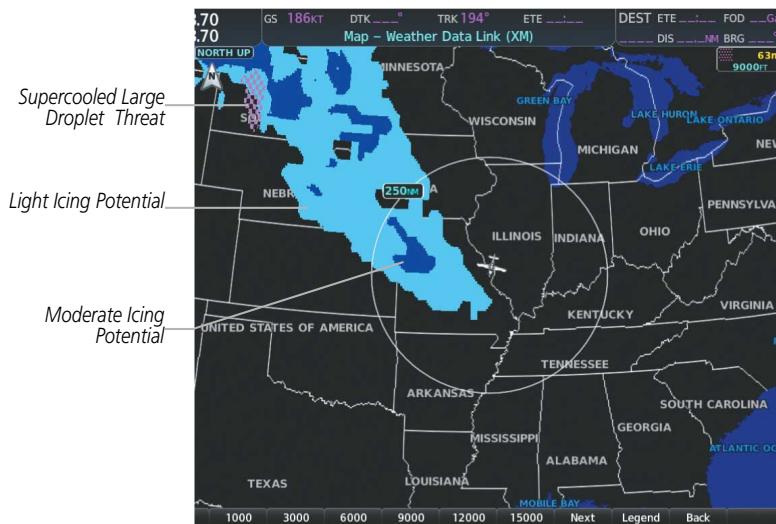


Figure 6-46 Icing Weather Product on the Weather Data Link (XM) Page



Figure 6-47 Icing Potential Weather Product

Displaying icing data:

- 1) Select the 'Map — Weather Data Link (XM)' Page.
- 2) Press the **More WX** Softkey.
- 3) Press the **ICNG** Softkey.
- 4) Press a softkey for the altitude level: 1,000 feet up to 30,000 feet. Press the **Next** or **PREV** Softkey to cycle through the available altitude softkeys. The **ICNG** Softkey label changes to indicate the icing altitude which was selected.

TURBULENCE (SIRIUSXM)

The Turbulence weather product identifies the potential for erratic movement of high-altitude air mass associated winds. Turbulence is classified as light, moderate, severe or extreme, at altitudes between 21,000 and 45,000 feet. Turbulence information is intended to supplement AIRMETs, SIGMETs, and PIREPs.

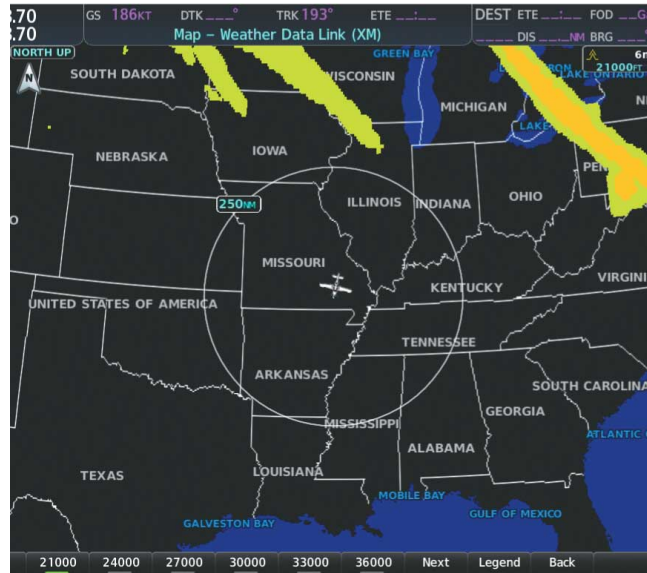


Figure 6-48 Turbulence Weather Product on the Weather Data Link (XM) Page




Figure 6-49 Turbulence Legend

Displaying turbulence information:

- 1) Select the 'Map — Weather Data Link (XM) Page.
- 2) Press the **More WX** Softkey.
- 3) Press the **TURB** Softkey.
- 4) Press a softkey for the desired altitude: 21,000 up to 45,000 feet. Press the **Next** or **PREV** Softkey to cycle through the available softkeys. The **TURB** Softkey label changes to indicate the turbulence altitude selection.

PIREPS AND AIREPS

 **NOTE:** AIREPs are only available with the SiriusXM Weather service.

Pilot Weather Reports (PIREPs) are in-flight weather observations collected from pilots. When significant weather conditions are reported or forecast, Air Traffic Control (ATC) facilities are required to solicit PIREPs. A PIREP may contain adverse weather conditions, such as low in-flight

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CNS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

visibility, icing conditions, wind shear, and turbulence. PIREPs are issued as either Routine (UA) or Urgent (UUA).

Another type of PIREP is an Air Report (AIREP). Commercial airlines typically generate AIREPs.

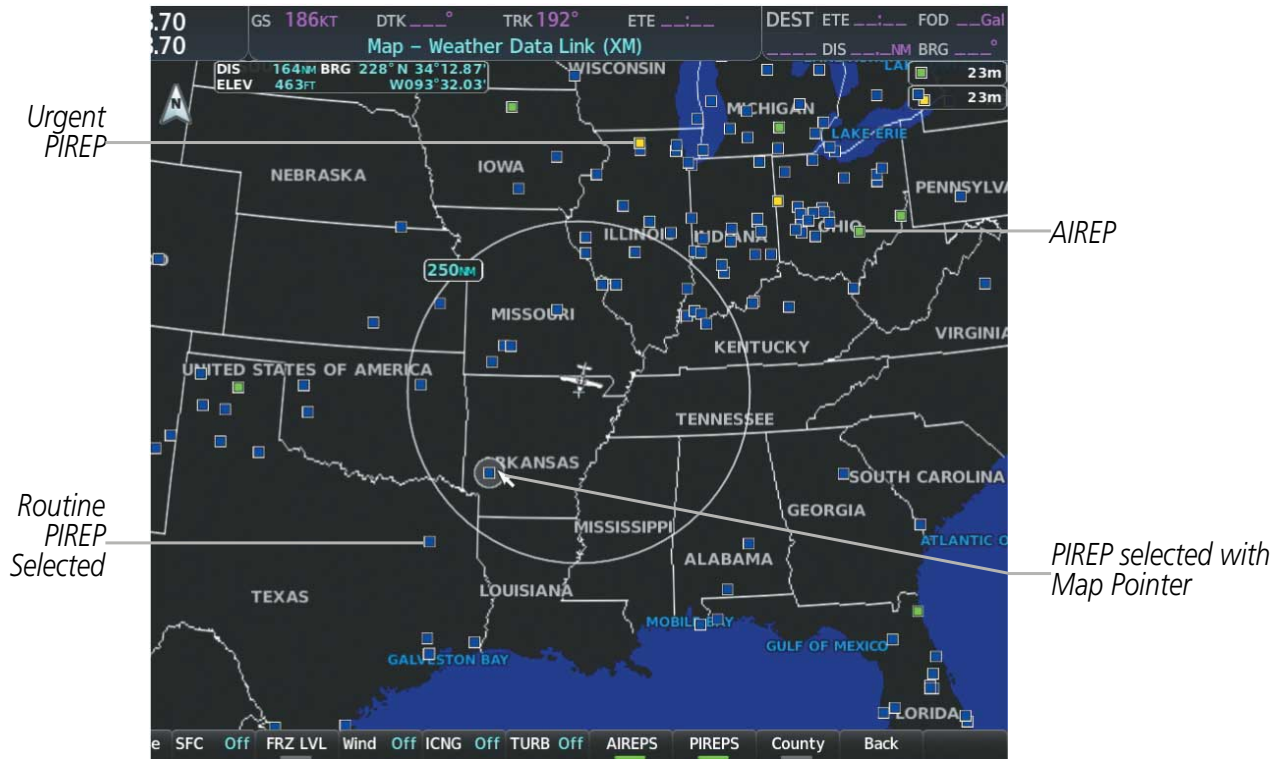


Figure 6-50 PIREPs and AIREPs on the Weather Data Link (XM) Page

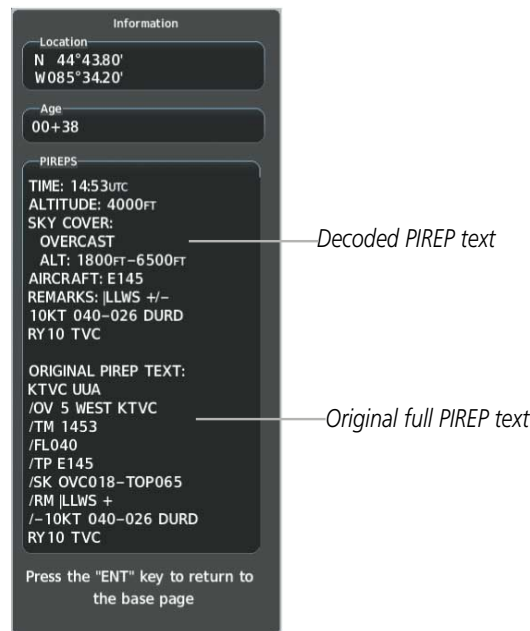


Figure 6-51

The PIREP color is determined by the type (routine or urgent).




Figure 6-52 PIREPs and AIREPs Legend

Displaying PIREP and AIREP text:

- 1) Select the 'Map - Weather Data Link (XM or FIS-B or CNXT)' Page.
- 2) Press the **More WX** Softkey.
- 3) Press the **PIREPS** or **AIREPS** Softkey. (Note the AIREPS Softkey is only available with the SiriusXM Weather service.)
- 4) Press the **Joystick** and pan to the desired weather report. A gray circle will appear around the weather report when it is selected.
- 5) Press the **ENT** Key. The Weather Information Page is shown with PIREP or AIREP text. The data is first displayed in a decoded fashion, followed by the original text. Note the original text may contain additional information not present in the decoded version.
- 6) Turn the **FMS** Knob or the **ENT** Key to scroll through the PIREP or AIREP text.
- 7) Press the **FMS** Knob or the **CLR** Key to return to the Weather Data Link (XM) Page.

TFRS

 **NOTE:** Do not rely solely upon data link services to provide Temporary Flight Restriction (TFR) information. Always confirm TFR information through official sources such as Flight Service Stations or Air Traffic Control.

In the United States, the FAA issues Temporary Flight Restrictions (TFRs) to designate areas where flight is restricted. TFRs are issued to restrict flight for a variety of reasons including national security, law enforcement, natural disasters, and large sporting events. TFRs may be issued at any time, and TFR data displayed on the system is only intended to supplement official TFR information obtained from Flight Service Stations (FSS), and air traffic control.

The age of TFR data is not shown; however, if TFR data is not available or has expired, the system displays 'TFR N/A' in the upper-left corner of maps on which TFRs can be displayed.



Figure 6-53 TFR Information on the Weather Data Link (XM) Page

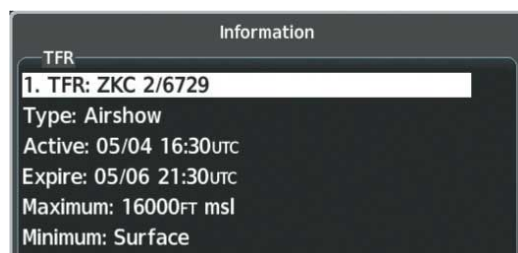


Figure 6-54 Full TFR Text for a Selected TFR

Displaying TFR Data:

- 1) Select the 'Map - Weather Data Link (XM or FIS-B or CNXT)' Page or Navigation Map Page.
- 2) Press the **Joystick** and pan the map pointer over a TFR to highlight it. The system displays TFR summary information above the map.
- 3) Press the **ENT** Key. The system displays a pop-up menu.
- 4) If necessary, turn the **FMS** Knob to select 'Review Airspaces' and press the **ENT** Key. The system displays the TFR Information window.
- 5) Press the **FMS** Knob or the **CLR** Key to remove the TFR Information window.

The setup menus for the Navigation Map Page control the map range settings above which TFR data is decluttered from the display. If a map range larger than the TFR product map range setting is selected, the TFR product data is removed from the map.

Maps other than the Navigation Map Page use settings based on those selected for the Navigation Map Page.

Setting up and customizing TFR data for maps on which TFR data can be displayed:

- 1) Select the 'Map - Navigation Map' Page.
- 2) Press the **MENU** Key.
- 3) With 'Map Settings' highlighted, press the **ENT** Key.
- 4) Turn the small **FMS** Knob to select the 'Aviation' Group and press the **ENT** Key.
- 5) Turn the large **FMS** Knob to scroll to the TFR product range settings.
- 6) Turn the small **FMS** Knob to scroll through options (Off, range settings).
- 7) Press the **ENT** Key to select an option.
- 8) Press the **FMS** Knob or **CLR** Key to return to the Navigation Map Page with the changed settings.

FIS-B WEATHER STATUS

Additional information about the status of FIS-B weather products is available on the 'Aux - ADS-B Status Page'.

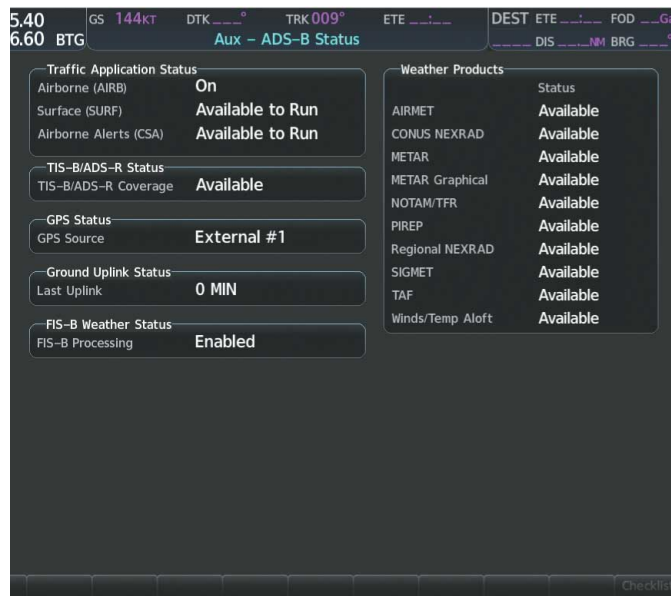


Figure 6-55 Viewing FIS-B Weather Status on the 'Aux — ADS-B Status' Page

ADS-B Status Page Item	Status Message	Description
FIS-B Weather Status: FIS-B Processing	Enabled	The FIS-B weather feature is enabled to process and display FIS-B weather products.
	Disabled	The FIS-B weather feature is disabled
	-----	No FIS-B weather data received from the transponder.

ADS-B Status Page Item	Status Message	Description
Weather Products: AIRMET CONUS NEXRAD METAR METAR GRAPHICAL NOTAM/TFR PIREP REGIONAL NEXRAD SIGMET TAF WINDS/ TEMPS ALOFT	Available	FIS-B weather data is available for display for the weather product.
	Not Available	FIS-B weather data is not available for the weather product, and/or the system is not receiving the FIS-B weather service.
	Awaiting Data	The system is receiving the FIS-B weather service, and is waiting to receive the weather product from the FIS-B data broadcast.

Table 6-9 Aux-ADS-B Status Page Messages for FIS-B Weather

On the Weather Data Link (FIS-B) page, the pilot can enable/disable the FIS-B weather feature, which includes all FIS-B weather products and related softkeys on various maps.

Viewing FIS-B status:

- 1) Turn the large **FMS** Knob to select the Aux Page Group.
- 2) Turn the small **FMS** Knob to select the 'Aux - ADS-B Status' Page.

Enabling/disabling the FIS-B weather feature:

- 1) Select the 'Map - Weather Data Link (FIS-B)' Page.
- 2) Press the **MENU** Key.
- 3) Turn the small **FMS** Knob to highlight 'Enable FIS-B Weather' or 'Disable FIS-B Weather', and press the **ENT** Key. The system will not receive FIS-B weather information when FIS-B Weather is disabled.

ABNORMAL OPERATIONS FOR GARMIN CONNEXT WEATHER

If the system cannot complete a Connex Data Request, one or more messages will appear in the Request Status Window.


Weather Request Status Message	Description
Auto requests inhibited Send manual request to reset.	The system has disabled automatic weather data requests due to excessive errors. Automatic weather data requests have stopped. Send a manual weather data request to resume automatic updates.
Auto update retry: ## Seconds	The system will attempt another automatic weather data request after an error occurred during the previous request. Timer counts down until the next automatic request occurs.
Connex Comm Error [1]	A general error has occurred. If the error persists, the system should be serviced.


Weather Request Status Message	Description
Connex Comm Error [2]	A communications error has occurred. The system should be serviced if this error persists.
Connex Comm Error [3]	A general error has occurred. If the error persists, the system should be serviced.
Connex Comm Error [4]	This occurs if multiple automatic weather data requests have recently failed, or an LRU is off-line.
Connex Comm Error [5]	This can occur if an LRU is off-line or not configured, or the Iridium or Garmin Connex services are not accessible. Check Iridium signal strength. If this error persists, the system should be serviced.
Connex Comm Error [6]	A communications error has occurred. If this error persists, the system should be serviced.
Connex Comm Error [7]	A weather data transfer has timed out. Check Iridium signal strength and re-send the data request.
Connex Comm Error [8]	A server error has occurred or invalid data received.
Connex Comm Error [9]	An error occurred while reading or writing data. If the error persists, the system should be serviced.
Connex Login Invalid	There is a problem with the Garmin Connex registration. Contact Garmin through the phone number listed at its website, www.flygarmin.com .
Connex Server Temp Inop	The Garmin Connex Weather data server is temporarily out of service, but is expected to return to service in less than 30 minutes.
Connex Server Inop	The Garmin Connex Weather data server will be out of service for at least 30 minutes.
Invalid Coverage Area	The weather data request coverage area does not contain at least one of the following: a waypoint, a flight plan, or a flight plan destination. Verify at least one of the coverage options is enabled (checked) and contains required criteria, then re-send the data request.
No Connex Subscription	The system is not currently subscribed to Garmin Connex services or the access code is incorrect. Verify the access code. Contact Garmin via the phone number listed on its website at www.flygarmin.com .
Reduce Request Area	The size of the received weather data has exceeded system memory limits. Reduce the size of the coverage area and issue another Connex Data Request to ensure all available weather data has been received.
Request Canceled	The user has cancelled a Connex Data Request.
Request Failed - Try Again	The weather data request timed-out. Re-send data request.

Table 6-10 Abnormal Garmin Connex Data Request Status Messages

When the system is operating in Reversionary Mode, only those weather products which can be displayed on the PFD maps will be available for display. If manual Connex Data Requests were enabled prior to entering Reversionary Mode, no new weather data will be retrieved while operating in Reversionary Mode. If automatic Connex Data Requests were enabled prior to Reversionary Mode operation, the system will continue the automatic data requests in Reversionary Mode (provided automatic requests have not been inhibited due to a system error).

6.3 STORMSCOPE

 **WARNING:** Do not rely on information from the lightning detection system display as the sole basis for hazardous weather avoidance. Range limitations and interference may cause the system to display inaccurate or incomplete information. Refer to documentation from the lightning detection system manufacturer for detailed information about the system.

 **NOTE:** Stormscope lightning information cannot be displayed simultaneously on the same map as lightning information from data link lightning sources.

The system can display L-3 WX-500 Stormscope lightning detection system information on the Stormscope Page, and as an overlay on navigation maps. The system uses the symbols shown in the following table to depict lightning strikes and cells based on the age of the information.





Lightning Age	Symbol
Strike is less than 6 seconds old	
Strike is between 6 and 60 seconds old	
Strike is between 1 and 2 minutes old	
Strike is between 2 and 3 minutes old	

Table 6-11 Lightning Age and Symbols

USING THE STORMSCOPE PAGE

On the Stormscope Page, lightning information can be displayed at the ranges of 25 NM, 50 NM, 100 NM, and 200 NM.

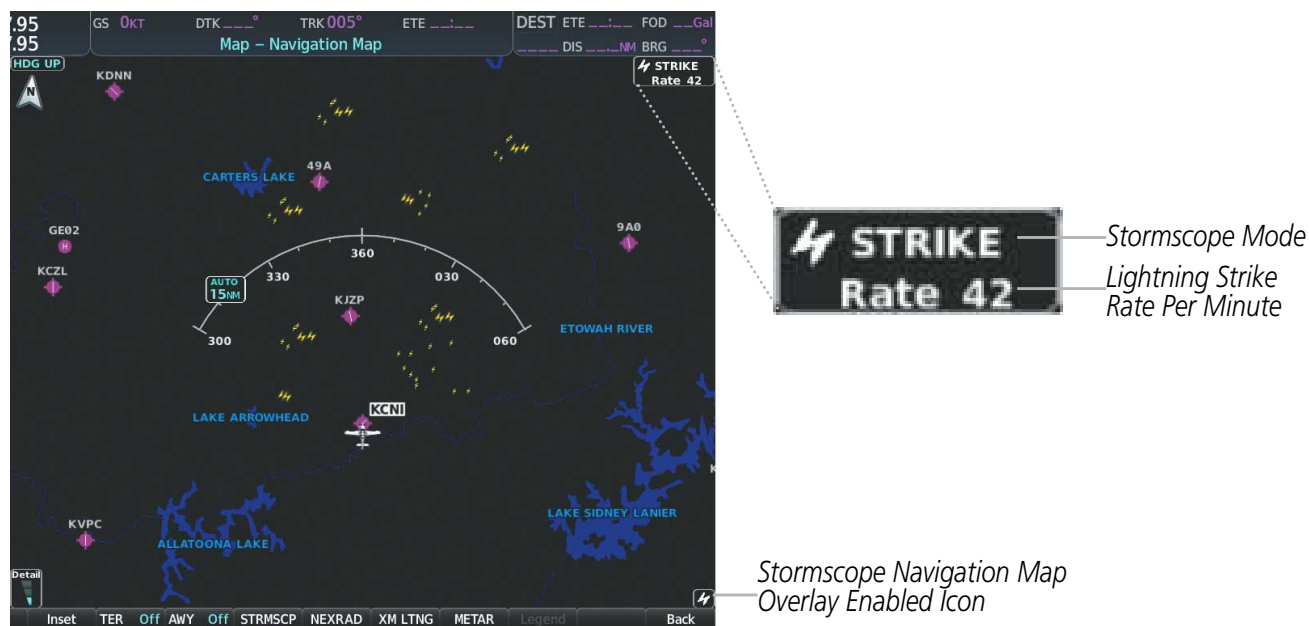


Figure 6-56 Stormscope Page with Lightning Information

Adjusting the Stormscope Map Range:

- 1) Turn the large **FMS** Knob to select the Map Page Group.
- 2) Turn the small **FMS** Knob to select the Stormscope Page.
- 3) Turn the **Joystick** clockwise to increase the map range or counter-clockwise to decrease the map range.

Selecting 'cell' or 'strike' mode on the Stormscope Page:

- 1) Select the Stormscope Page.
- 2) Select the **Mode** Softkey. The **Cell** and **Strike** Softkeys are displayed.
- 3) Press the **Cell** Softkey to display cell data or press the **Strike** softkey to display strike data. 'Cell' or 'Strike' is annunciated in the mode box in the top-right corner of the Stormscope Page.
- 4) Press the **Back** Softkey to return to the top level softkeys for the Stormscope Page.

Or:

- 1) Select the Stormscope Page.
- 2) Press the **MENU** Key to display the Stormscope Page Menu. Either 'Cell Mode' or 'Strike Mode' is highlighted in cyan to indicate the mode to be selected.
- 3) Press the **ENT** Key to select the highlighted mode and remove the menu. To remove the menu without changing the modes, press the **MENU** Key or the **CLR** Key, or push the **FMS** Knob.

ADDITIONAL STORMSCOPE DISPLAYS

The pilot can overlay Stormscope lightning information on navigation maps. When the overlay is enabled, and the map range is within the maximum map range setting limits to display Stormscope lightning, a Stormscope icon appears on the map. On the Navigation Map Page, the selected Stormscope mode and strike rate appear in the upper-right corner of the map. The Navigation Map Page also has menus for selecting the Stormscope mode, and for selecting the maximum map range to display lightning symbols for navigation maps.

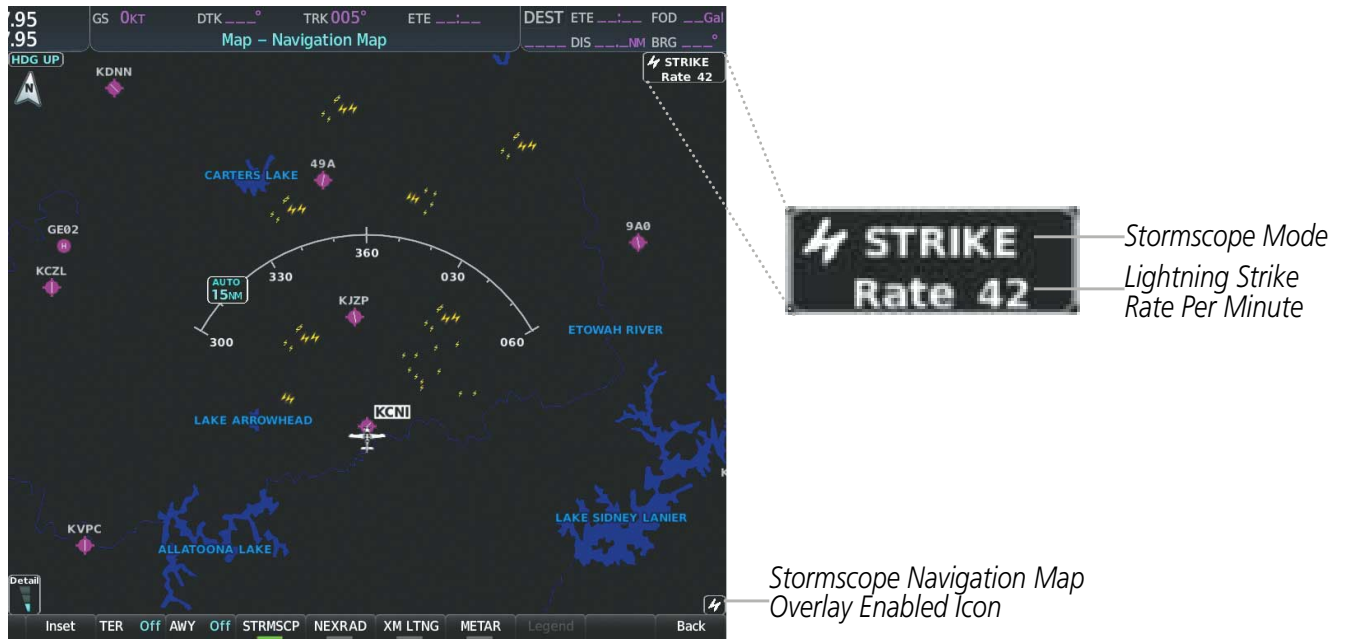


Figure 6-57 Navigation Map Page with Stormscope Overlay Enabled

Displaying Stormscope information on MFD navigation maps:

- 1) Press the **Map Opt** Softkey.
- 2) Press the **STRMSCP** Softkey.

Setting up Stormscope options on the Navigation Map Page:

- 1) On the Navigation Map Page, press the **MENU** Key.
- 2) With 'Map Settings' highlighted, press the **ENT** Key.
- 3) Turn the small **FMS** Knob to display the group selection window. Turn the small **FMS** Knob to select 'Weather', then press the **ENT** Key.
- 4) Turn the large **FMS** Knob to highlight and move among the following selections:

- Stormscope On/Off field — Enables/disables the display of Stormscope lightning symbols on the map.
- Stormscope maximum display range – Selects the maximum map range to display Stormscope symbols. Stormscope data is removed when a map range greater than this value is selected.
- Stormscope Mode – Selects the Cell or Strike mode of lightning activity. Cell mode identifies clusters or cells of electrical activity. Strike mode indicates the approximate location of lightning strikes.

5) When an item is highlighted, turn the small **FMS** Knob to select the option.

6) Press the **ENT** Key.

7) Press the **FMS** Knob to remove the menu.

Displaying Stormscope information on PFD maps:

1) On the PFD, press the **Map/HSI** Softkey.

2) Press the **Lightning** Softkey.

3) Press the **STRMSCP** Softkey.

STORMSCOPE ABNORMAL OPERATIONS

If heading input is lost, strikes and/or cells must be cleared manually after the execution of each turn. This is to ensure that the strike and/or cell positions are depicted accurately in relation to the nose of the aircraft. Clearing Stormscope lightning on any map clears this information from all displays on the system.

Manually clearing Stormscope lightning symbols from map displays:

1) Select the 'Map — Stormscope' Page.

2) Press the **Clear** Softkey.

Or:

a) Press the **MENU** Key.

b) Turn the **FMS** Knob to highlight 'Clear Lightning Data', then press the **ENT** Key.





Or:

a) Select the 'Map — Navigation Map' Page.

b) Press the **MENU** Key.

c) Turn the **FMS** Knob to highlight 'Clear Stormscope™ Lightning' then press the **ENT** Key.

6.4 TERRAIN DISPLAYS

-  **WARNING:** Do not use terrain avoidance displays as the sole source of information for maintaining separation from terrain and obstacles. Garmin obtains terrain and obstacle data from third party sources and cannot independently verify the accuracy of the information.
-  **NOTE:** Terrain data is not displayed when the aircraft is outside of the installed terrain database coverage area.
-  **NOTE:** Terrain and obstacle alerting is not available north of 89° North latitude and south of 89° South latitude. This is due to limitations present within the Terrain database and the system's ability to process the data representing the affected areas.
-  **NOTE:** Terrain and obstacle alerting requires the Terrain-SVT or TAWS-B option. No terrain or obstacle alerting occurs for the Terrain Proximity feature.

The terrain system increases situational awareness and aids in reducing controlled flight into terrain (CFIT) and obstacles.

One of the following terrain systems is installed on this aircraft:

- Terrain Proximity
- Terrain-SVT (included with the Garmin SVT option when the Terrain Awareness and Warning System Class-B (TAWS-B) is not installed; refer to the Flight Instruments section for more information about Garmin SVT.
- TAWS-B (optional)

The installed terrain system provides color indications on map displays when terrain or obstacles, including certain power lines, are within a certain altitude threshold from the aircraft. Terrain-SVT and TAWS-B furthermore provide advisory visual annunciations and voice alerts to indicate the presence of threatening terrain or obstacles relevant to the projected flight path. This alerting capability is not present in the Terrain Proximity feature. Compared to Terrain-SVT alerting, TAWS-B uses more sophisticated algorithms to assess aircraft distance from terrain and obstacles. The TAWS-B system includes more alerting capabilities than the Terrain-SVT system.

The terrain system requires the following for proper operation:

- Valid 3-D GPS position
- Valid terrain and obstacle databases

The terrain system uses terrain and obstacle information supplied by government and other sources. Terrain information is based on terrain elevation information in a database that may contain inaccuracies. Individual obstructions, such as towers or power lines, may be shown if available in the database. Garmin verifies the data to confirm accuracy of the content. However, the displayed information should never be understood as being all-inclusive and data may still contain inaccuracies.

The terrain and obstacle databases used by the terrain system are referenced to MSL. Using the GPS position and GSL altitude, the terrain system displays a 2-D picture of the surrounding terrain and

obstacles relative to the position and altitude of the aircraft. Furthermore, for the Terrain-SVT or TAWS-B systems, the system uses the GPS position and GSL altitude to calculate and “predict” the aircraft’s flight path in relation to the surrounding terrain and obstacles. In this manner, the Terrain-SVT or TAWS-B systems can provide advanced alerts of predicted dangerous terrain conditions.

Baro-corrected altitude (or indicated altitude) is derived by adjusting the altimeter setting for local atmospheric conditions. The most accurate baro-corrected altitude can be achieved by frequently updating the altimeter setting to the nearest reporting station along the flight path. However, because actual atmospheric conditions seldom match the standard conditions defined by the International Standard Atmosphere (ISA) model (where pressure, temperature, and lapse rates have fixed values), it is common for the baro-corrected altitude (as read from the altimeter) to differ from the GSL altitude. This variation results in the aircraft’s GSL altitude differing from the baro-corrected altitude.

RELATIVE TERRAIN SYMBOLOGY

The terrain system uses colors and symbols to represent terrain and point obstacles (with heights greater than 200 feet above ground level present in the databases relative to aircraft altitude. The system dynamically adjusts these colors as the aircraft altitude changes, and after takeoff and landing.

While the aircraft is on the ground, the system displays relative terrain 400 feet or more above the aircraft altitude using red, and terrain at less than 400 feet above aircraft altitude using black, as shown on the On-Ground Legend. When the aircraft is in the air, the system displays relative terrain information using red, yellow, green, and black, as shown on the In-Air Legend. As the aircraft transitions from on-ground to in-air, or from in-air to on-ground, the display of relative terrain momentarily fades into the corresponding colors. For Terrain-SVT or TAWS-B systems, if an alert occurs, the relative terrain colors transition to the In-Air Legend if the On-Ground Legend was shown in order to provide the pilot with the most information possible.

On-Ground Legend



In-Air Legend



Figure 6-58 Relative Terrain Legends

The following figure shows the relative terrain coloring for the Terrain Proximity system.

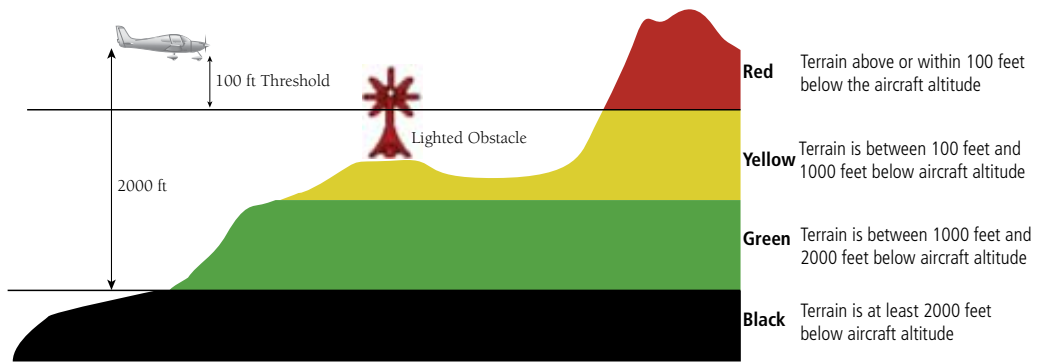


Figure 6-59 Terrain Altitude/Color Correlation for Terrain Proximity

The following figure shows relative terrain coloring for the Terrain-SVT and TAWS-B systems.

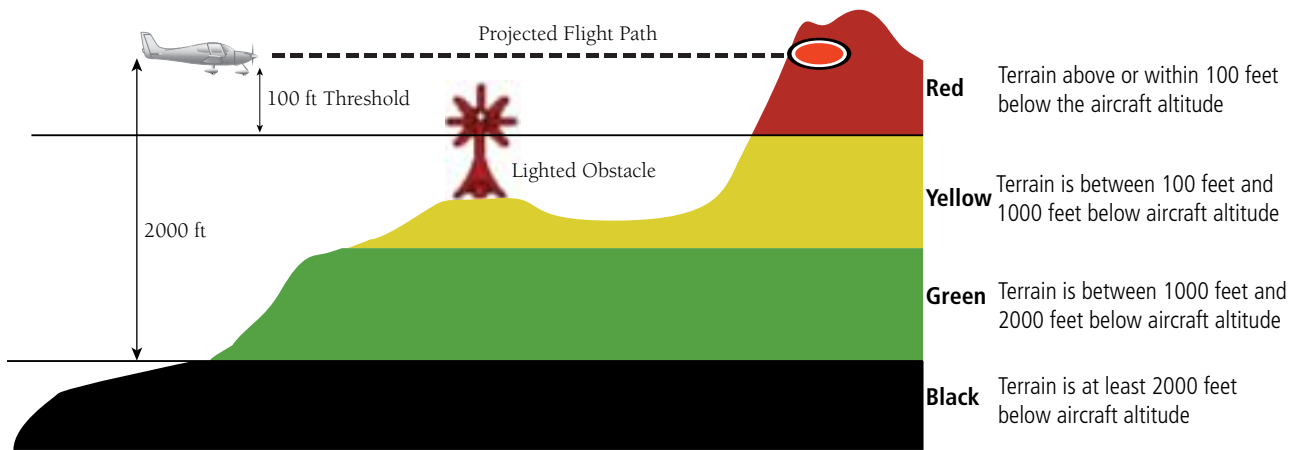


Figure 6-60 Terrain Altitude/Color Correlation for Terrain-SVT or TAWS-B Systems



NOTE: The Vertical Situation Display (VSD) Inset Window shows terrain at least 2000 feet below the aircraft altitude as gray.

The following tables show the relative obstacle coloring used by the terrain systems.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CWS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

Unlighted Obstacle		Lighted Obstacle		Obstacle Location
< 1000' AGL	> 1000' AGL	< 1000' AGL	> 1000' AGL	
				Red point obstacle is at or above the aircraft altitude
				Yellow point obstacle is between the aircraft altitude to within 250 feet below the aircraft altitude
				White point obstacle is more than 250 ft below the aircraft altitude

Table 6-12 Relative Point Obstacle Symbols and Colors

Wire Obstacle	Wire Obstacle Location
	Red wire obstacle is at or above the aircraft altitude
	Yellow wire obstacle is between the aircraft altitude to within 250 feet below the aircraft altitude
	White wire obstacle is more than 250 ft below the aircraft altitude

Table 6-13 Relative Wire Obstacles and Colors

Unlighted Wind Turbine Obstacle	Lighted Wind Turbine Obstacle	Wind Turbine Obstacle Location
		Red wind turbine obstacle is at or above the aircraft altitude
		Yellow wind turbine obstacle is between the aircraft altitude to within 250 feet below the aircraft altitude
		White wind turbine obstacle is more than 250 ft below the aircraft altitude

Table 6-14 Relative Wind Turbine Obstacles and Colors

The Terrain-SVT and TAWS-B systems show potential impacts areas for terrain and obstacles using yellow and red as shown in the following table.





Potential Impact Area Examples	Alert Type	Example Annunciation
 or 	Warning	TAWS-B Warning: PULL UP Terrain-SVT Warning: TERRAIN
 or 	Caution	TERRAIN

Table 6-15 Terrain-SVT and TAWS-B Potential Impact Area with Annunciations

TERRAIN PAGE

The ‘Map - Terrain Proximity’, or ‘Map - Terrain-SVT’, or ‘Map - TAWS-B’ Page is specialized to show terrain, and obstacle in relation to the aircraft’s current altitude, without clutter from the basemap. This page is the principal page for viewing terrain information. Aviation data (airports, VORs, and other NAVAIDs) can be enabled for reference.

For Terrain-SVT and TAWS-B systems only, this page also shows potential impact areas. If terrain or obstacles (including wire obstacles) and the projected flight path of the aircraft intersect, the display automatically adjusts to a map range if necessary to emphasize the display of the potential impact area.

Aircraft orientation on this map is always heading up unless there is no valid heading, in which case the orientation is track up. Map range is adjustable with the Joystick from 250 feet to 1000 nm, which is indicated on the map range arc.



Figure 6-61 Terrain-SVT Page

Displaying the terrain page:

- 1) Turn the large **FMS** Knob to select the Map Page Group.
- 2) Turn the small **FMS** Knob to select the Terrain Proximity/Terrain-SVT/TAWS-B Page.

Showing/hiding aviation information on the terrain page:

- 1) Press the **MENU** Key.
- 2) Turn the **FMS** Knob to highlight 'Show Aviation Data' or 'Hide Aviation Data' (choice dependent on current state) and press the **ENT** Key.

Showing/hiding aviation information on the terrain page:

- 1) Press the **MENU** Key.
- 2) Turn the **FMS** Knob to highlight 'Show Aviation Data' or 'Hide Aviation Data' (choice dependent on current state) and press the **ENT** Key.

Customizing terrain and obstacle display on the Navigation Map Page:

- 1) Select the Navigation Map Page.
- 2) Press the **MENU** Key.
- 3) With 'Map Settings' highlighted, press the **ENT** Key.
- 4) Turn the small **FMS** Knob to select the 'Map' Group and press the **ENT** Key.
- 5) Turn the large **FMS** Knob or press the **ENT** Key to scroll through product selections.

- Terrain Display – Enables the display of relative (‘REL’) terrain data or select ‘Off’ to disable; also sets maximum map range at which terrain is shown.
 - Point Obstacle – Enables/disables the display of point obstacle data and sets maximum range at which point obstacles are shown
 - Wire Obstacle – Enables/disables the display of wire obstacle data and sets maximum range at which wire obstacles are shown
- 6) Turn the small **FMS** Knob to scroll through options for each product (On/Off, range settings, etc.).
 - 7) Press the **ENT** Key to select an option.
 - 8) Press the **FMS** Knob or **CLR** Key to return to the Navigation Map Page with the changed settings.

ADDITIONAL TERRAIN DISPLAYS

The ‘Map - Terrain Proximity’ or ‘Map - Terrain-SVT’ or ‘Map - TAWS-B’ Page is the principal map page for viewing terrain information. Terrain and obstacle information can be displayed on the following maps and pages:

PFD Maps	Trip Planning Page
‘Map — Navigation Map’ Page	Flight Plan Page
Terrain Proximity/Terrain-SVT/TAWS-B Page	

When relative terrain is shown on maps other than the terrain page, a relative terrain icon appears on the map. A relative terrain legend appears with the icon on the Navigation Map Page. The legend appears by itself on the terrain page.

The Navigation Map Page Setup Menu provides controls for enabling/disabling the display of relative terrain, point obstacles (such as towers), and wire obstacles (such as power lines). The setup menu also controls the map range settings above which terrain and obstacle data are decluttered from the display. If a map range larger than the map range setting is selected, the data is removed from the map. For terrain data, the enable/disable function applies only to the MFD, while the maximum range setting also affects the PFD maps.

The pilot can display relative terrain information independently of point or wire obstacle information; however, obstacles for which Terrain-SVT or TAWS-B warnings and cautions are issued are shown when terrain is selected for display and the map range is within the setting limit.

Additional information about obstacles can be displayed by panning over the display on the map. The map panning feature is enabled by pressing the Joystick. The map range is adjusted by turning the Joystick. If the map range is adjusted while panning is enabled, the map is re-centered on the Map Pointer.

Maps besides the terrain page use settings based on those selected for the Navigation Map Page. The maximum display ranges for obstacles on each map are dependent on the range setting made for the Navigation Map.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CDS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control
- Additional Features
- Appendices
- Index

VERTICAL SITUATION DISPLAY (VSD) TERRAIN

The system offers a Vertical Situation Display (VSD), which includes a profile of terrain and obstacles in an inset window on the bottom of the Navigation Map Page. Although the VSD does not display Terrain-SVT or TAWS-B alerts and potential impact areas, the VSD does use many of the same colors and symbols as these systems to depict relative terrain and obstacles within the VSD.

Enabling/disabling the Vertical Situation Display (VSD):

- 1) Select the Navigation Map Page.
- 2) Press the **Map Opt** Softkey.
- 3) Press the **Inset** Softkey.
- 4) Press the **VSD** Softkey to enable/disable the VSD.

Or:

- 1) Select the Navigation Map Page.
- 2) Press the **MENU** Key.
- 3) Turn the **FMS** Knob to highlight 'Show VSD' or 'Hide VSD' (choice dependent on current state) and press the **ENT** Key.

VSD DISPLAY

The same controls which enable/disable the display of relative terrain and obstacles on the Navigation Map Page also control the display of this information in the VSD.

When the VSD is enabled, terrain and obstacles in the VSD will be shown if the aircraft altitude is low enough or the VSD altitude range is high enough for the terrain to be in view (absolute terrain will be shown in gray if the **TER** Softkey is selected off on the Navigation Map Page).

The depicted terrain profile represents an approximate forward-looking contour of the terrain based upon the highest reported terrain elevations, measured at intervals defined by the terrain database resolution, within a predefined width along the aircraft track between the aircraft present position and the end of the map range. The predefined width is determined by the flight phase, as annunciated on the HSI, and is widest during enroute or oceanic phases.

Flight Phase	Total VSD Width
Approach	0.6 NM
Departure	0.6 NM
Terminal	2.0 NM
Enroute	4.0 NM
Oceanic	4.0 NM

Table 6-16 VSD Terrain Width Varies According to Flight Phase

The forward looking swath of terrain is based on the selected VSD Mode, annunciated in the top-left corner of the VSD Inset Window. In Flight Plan Mode, the contour follows the active flight plan, and if no active flight plan is present, the VSD Inset Window displays 'Flight Plan Not Available'. In

Track Mode, the contour is based on the aircraft ground track. In Auto Mode, the contour is based on the active flight plan, when available, otherwise, it is based on the ground track.

Selecting a VSD Mode:

- 1) Select the Navigation MapPage.
- 2) Press the **Inset** Softkey.
- 3) Press the **VSD** Softkey, which displays the VSD mode in cyan. Each press of the softkey selects a mode: FPL (Flight Plan), TRK (track), or Auto.

When the Navigation Map range is adjusted with the Joystick, the horizontal distance of the VSD is adjusted to match the distance shown on the map range arc, down to one nautical mile. If the Navigation Map range is adjusted below one nautical mile, the VSD range remains at one nautical mile. When Navigation Map range is adjusted to remove altitude-correlated colored terrain data (as shown in the Terrain Legend) or obstacles from the Navigation Map, these items are also removed from the VSD; only an outline of the terrain will be displayed in black in the VSD Inset Window.

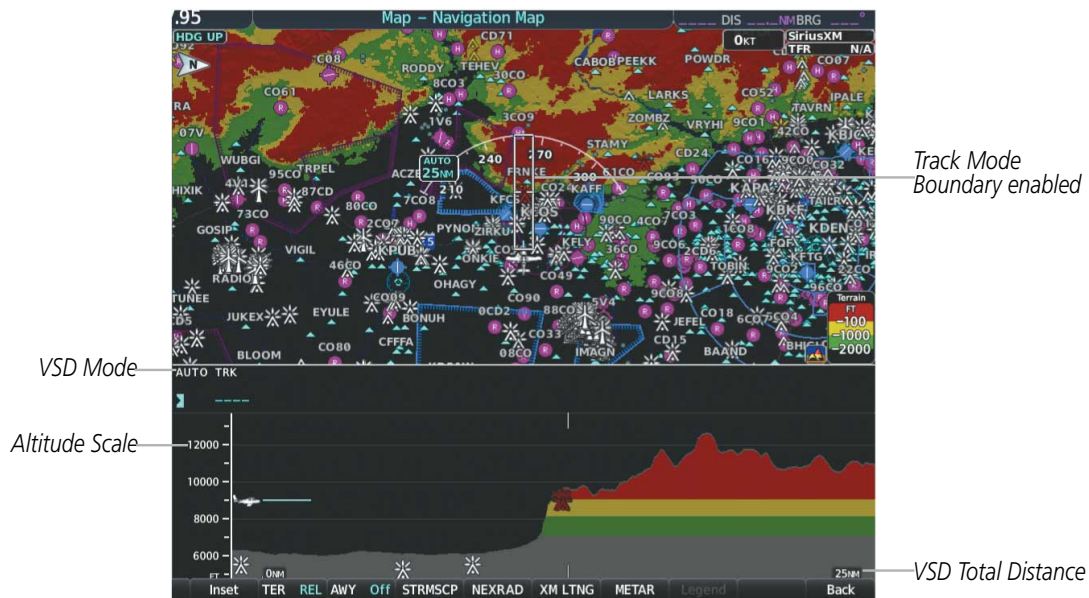


Figure 6-62 VSD on the Navigation Map Page with Relative Terrain Information

Obstacles with heights greater than 200 feet AGL appear relative to aircraft altitude along the altitude scale. The top of the obstacle symbol on the scale represents the obstacle's height AGL. If the obstacle's height AGL is higher than can be represented by the obstacle symbol itself (e.g. for especially tall obstacles), a vertical line appears below the obstacle symbol in order to depict the top of the obstacle symbol at its height AGL, as shown in the following figure.



Figure 6-63 VSD with Tall Obstacles

Customizing the Track Mode Boundary display on the 'Map - Navigation Map' Page:

- 1) Select the Navigation Map Page.
- 2) Press the **MENU** Key.
- 3) With 'Map Settings' highlighted, press the **ENT** Key.
- 4) Turn the small **FMS** Knob to highlight the 'VSD' group, then press the **ENT** Key.
- 5) Turn the large **FMS** Knob to highlight the Track Mode Boundary 'On' or 'Off' field. Turn the small **FMS** Knob if needed to change this setting.
- 6) Turn the large **FMS** Knob to highlight the maximum map range to display the Track Mode Boundary. Turn the small **FMS** Knob to select a maximum range, then press the **ENT** Key.
- 7) Press the **FMS** Knob or the **CLR** Key to return to the Navigation Map Page with the changed settings.

TERRAIN-SVT AND TAWS-B ALERTING DISPLAYS

Alerts are issued when flight conditions meet parameters that are set within Terrain-SVT or TAWS-B software algorithms. Terrain-SVT and TAWS-B alerts typically employ a caution or a warning alert severity level, or both. When an alert is issued, visual annunciations are displayed and voice alerts are simultaneously issued.

When an alert is issued, annunciations appear on the PFD and MFD. The terrain alert annunciation appears to the left of the Selected Altitude box on the PFD, and bottom on the MFD. If the terrain page is not displayed at the time, a pop-up alert appears on the MFD. To acknowledge the pop-up alert:

- Press the **CLR** Key (returns to the currently viewed page), or
- Press the **ENT** Key (accesses the 'Map - Terrain-SVT' or 'Map - TAWS-B' Page)



Figure 6-64 TAWS-B Alert Annunciations



Figure 6-65 TAWS-B Page with Alert Annunciation

Alert Type	PFD/Terrain—SVT Page Alert Annunciation	MFD Pop-Up Alert (except Terrain-SVT Page)	Voice Alert
Reduced Required Terrain Clearance Warning (RTC)	TERRAIN	WARNING - TERRAIN	"Warning; Terrain, Terrain"
Reduced Required Line Clearance (RLC) Warning	TERRAIN	WARNING - WIRE	"Warning; Wire, Wire"
Imminent Terrain Impact Warning (ITI)	TERRAIN	WARNING - TERRAIN	"Warning; Terrain, Terrain"
Reduced Required Obstacle Clearance Warning (ROC)	TERRAIN	WARNING - OBSTACLE	"Warning; Obstacle, Obstacle"
Imminent Obstacle Impact Warning (IOI)	TERRAIN	WARNING - OBSTACLE	"Warning; Obstacle, Obstacle"
Reduced Required Terrain Clearance Caution (RTC)	TERRAIN	CAUTION - TERRAIN	"Caution; Terrain, Terrain"
Imminent Line Impact Caution (ILI)	TERRAIN	CAUTION - WIRE	"Caution, Wire, Wire"
Imminent Terrain Impact Caution (ITI)	TERRAIN	CAUTION - TERRAIN	"Caution; Terrain, Terrain"
Reduced Required Line Clearance Caution (RLC)	TERRAIN	CAUTION - WIRE	"Caution, Wire, Wire"
Reduced Required Obstacle Clearance Caution (ROC)	TERRAIN	CAUTION - OBSTACLE	"Caution; Obstacle, Obstacle"
Imminent Obstacle Impact Caution (IOI)	TERRAIN	CAUTION - OBSTACLE	"Caution; Obstacle, Obstacle"

Table 6-17 Terrain-SVT Alerts Summary

Alert Type	PFD/TAWS—B Page Alert Annunciation	MFD Pop-Up Alert (except TAWS-B Page)	Voice Alert
Excessive Descent Rate Warning (EDR)	PULL UP	PULL-UP	"Pull Up"
Reduced Required Terrain Clearance Warning (RTC)	PULL UP	TERRAIN - PULL-UP	"Terrain, Terrain; Pull Up, Pull Up"

Alert Type	PFD/TAWS—B Page Alert Annunciation	MFD Pop-Up Alert (except TAWS-B Page)	Voice Alert
Imminent Line Impact Warning (ILI)	PULL UP	WIRE AHEAD - PULL-UP	"Wire Ahead; Pull Up, Pull Up"
Reduced Required Line Clearance Warning (RLC)	PULL UP	WARNING - WIRE	"Wire, Wire; Pull Up, Pull Up"
Imminent Terrain Impact Warning (ITI)	PULL UP	TERRAIN - PULL-UP	"Terrain, Terrain; Pull Up, Pull Up"
Reduced Required Obstacle Clearance Warning (ROC)	PULL UP	OBSTACLE - PULL-UP	"Obstacle, Obstacle; Pull Up, Pull Up"
Imminent Obstacle Impact Warning (IOI)	PULL UP	OBSTACLE - PULL-UP	"Obstacle, Obstacle; Pull Up, Pull Up"
Reduced Required Terrain Clearance Caution (RTC)	TERRAIN	CAUTION - TERRAIN	"Caution, Terrain; Caution, Terrain"
Imminent Terrain Impact Caution (ITC)	TERRAIN	CAUTION - TERRAIN	"Caution, Terrain; Caution, Terrain"
Required Reduced Line Clearance (RLC) Impact Caution	TERRAIN	CAUTION - WIRE	"Caution, Wire; Caution, Wire"
Imminent Line Clearance Impact Caution (ILI)	TERRAIN	WIRE AHEAD	"Wire Ahead; Wire Ahead"
Reduced Required Obstacle Clearance Caution (ROC)	TERRAIN	CAUTION - OBSTACLE	"Caution, Obstacle; Caution, Obstacle"
Imminent Obstacle Impact Caution (IOI)	TERRAIN	CAUTION - OBSTACLE	"Caution, Obstacle; Caution, Obstacle"
Premature Descent Alert Caution (PDA)	TERRAIN	TOO LOW - TERRAIN	"Too Low, Terrain"
Altitude Voice Callout (VCO) "500"	None	None	"Five-Hundred"
Excessive Descent Rate Caution (EDR)	TERRAIN	SINK RATE	"Sink Rate"
Negative Climb Rate Caution (NCR)	TERRAIN	DONT SINK	"Don't Sink"

Table 6-18 TAWS-B Alerts Summary

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CWS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

FORWARD LOOKING TERRAIN AVOIDANCE

The Forward Looking Terrain Avoidance (FLTA) feature of Terrain-SVT or TAWS-B compares the projected flight path as derived from GPS data with terrain features and obstacles from the terrain and obstacle databases. The system issues FLTA alerts when the projected flight path conflicts with terrain or obstacles.

The projected flight path is a calculated area ahead of, to the sides, and below the aircraft. The size of the projected flight path varies based on factors including ground speed (the path ahead is larger when the ground speed is higher), whether the aircraft is level, turning, or descending, and the proximity to the nearest runway along the current track. As the aircraft approaches the runway, the projected flight path becomes narrower until the system automatically disables FLTA alerts or the pilot manually inhibits them.

There are two types of FLTA alerts, Reduced Required Terrain/Obstacle/Line Clearance (RTC /ROC/RLC respectively) and Imminent Terrain/Obstacle/Line Impact (ITI/IOI/ILI respectively).

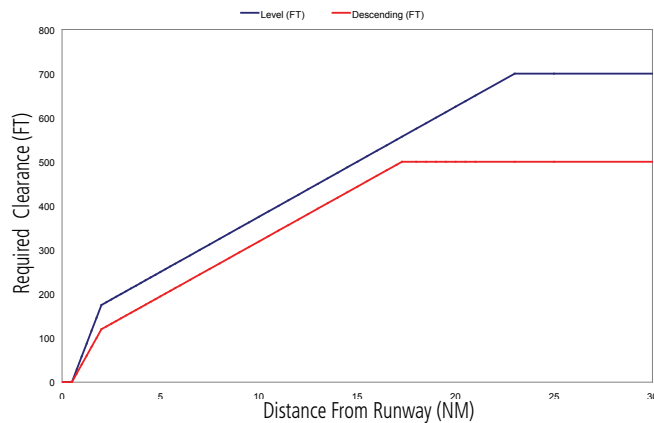


Figure 6-66 FLTA Alert Minimum Terrain and Obstacle Clearance Values

The system automatically disables FLTA alerts when the aircraft is less than 200 feet above the destination runway elevation while within 0.5 nm of the approach runway or the aircraft is between runway ends.

INHIBITING FLTA ALERTING

The pilot can manually inhibit FLTA alerts. If TAWS-B is installed, PDA alerts are also inhibited with FLTA alerts.



Figure 6-67 FLTA Inhibited Annunciations for Terrain-SVT and TAWS-B

Inhibiting/enabling FLTA Alerting (Terrain SVT and TAWS-B only):

- 1) Select the terrain page.
- 2) Press the **Inhibit** Softkey. FLTA alerting is inhibited when softkey annunciator is green.

Or:

- 1) Press the **MENU** Key.
- 2) Turn the **FMS** Knob to highlight the desired inhibit or enable option, then press the **ENT** Key.

ADDITIONAL TAWS-B ALERTING

In addition to the FLTA alerting discussed previously, TAWS-B provides the following additional types of alerts.

EXCESSIVE DESCENT RATE ALERT

The purpose of the Excessive Descent Rate (EDR) alert is to provide notification when the aircraft is determined to be closing (descending) upon terrain at a rate that is calculated to be excessive relative to height above terrain. The following figure shows the parameters for the alert.

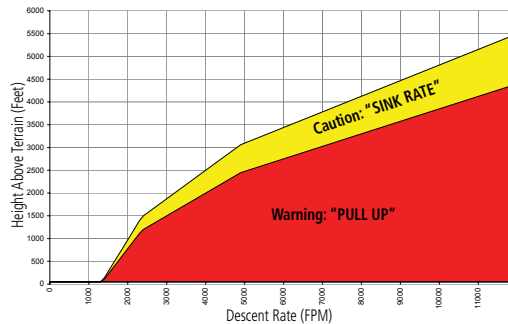


Figure 6-68 Excessive Descent Rate Alert Criteria

PREMATURE DESCENT ALERTING

A Premature Descent Alert (PDA) is issued when the system detects that the aircraft is significantly below the normal approach path to a runway.

PDA alerting begins when the aircraft is below 700 feet AGL within 15 nm of the destination airport and ends when the aircraft is 0.5 nm from the runway threshold.

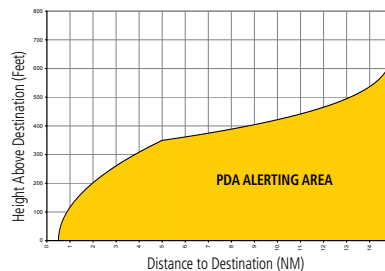


Figure 6-69 PDA Alerting Threshold

NEGATIVE CLIMB RATE AFTER TAKEOFF ALERT (NCR)

The Negative Climb Rate (NCR) After Takeoff alert (also referred to as “Altitude Loss After Takeoff”) provides alerts when the system determines the aircraft is losing altitude (closing upon

terrain) after takeoff. The voice alert “Don’t Sink” is given for NCR alerts, accompanied by visual annunciations. NCR alerting is only active when departing from an airport and when the following conditions are met:

- Height above the terrain is less than 700 feet
- Distance from the departure airport is 5 nm or less
- Heading change from the departure heading is less than 110 degrees

NCR alerts can be triggered by either altitude loss or sink rate.

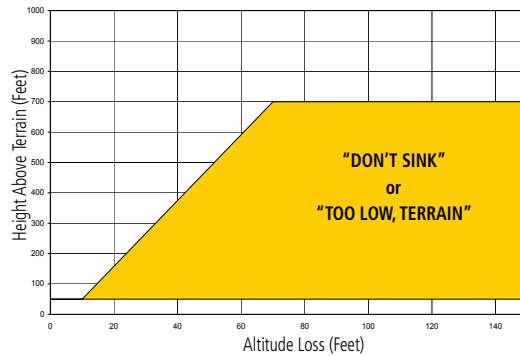


Figure 6-70 Negative Climb Rate (NCR) Altitude Loss

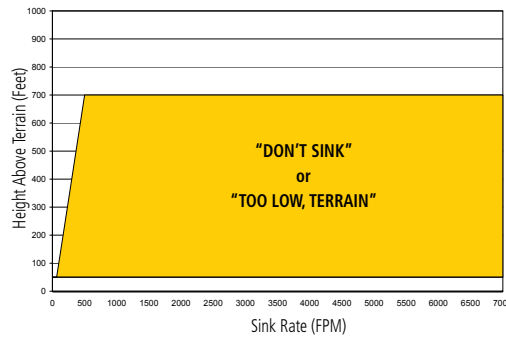


Figure 6-71 Negative Climb Rate (NCR) Sink Rate

FIVE-HUNDRED VOICE ALERT

The purpose of the TAWS-B “Five-hundred” voice alert is to provide an advisory alert when the aircraft descends to within 500 feet above the terrain or runway threshold. When the aircraft is within 5 NM of an airport, the “Five Hundred” voice alert is based on the nearest runway threshold elevation. When the aircraft is more than 5 NM of the nearest airport, the “Five Hundred” voice alert is based on the height above terrain (as determined by the GPS altitude and Terrain Database).

There are no display annunciations or pop-up alerts that accompany the voice alert.

SYSTEM STATUS

TERRAIN-SVT

At the beginning of an avionics power cycle, Terrain-SVT conducts a system test for its alerting capabilities. An aural chime indicates a successful test; otherwise a voice alert and visual annunciations indicate failure. Terrain-SVT continually monitors several system-critical items such as database validity, hardware status, and GPS status. If the terrain/obstacle database is not available, the system issues the voice alert *“Terrain System Failure”* along with the ‘TER FAIL’ alert annunciation. Terrain-SVT requires a 3-D GPS navigation solution along with specific vertical accuracy minimums. Should the navigation solution become degraded or if the aircraft is out of the database coverage area, the annunciation ‘TER N/A’ is generated in the annunciation window and on the ‘Map - Terrain-SVT’ Page. The voice alert *“Terrain System Not Available”* is generated. When sufficient GPS signal returns and the aircraft is within the database coverage area, the voice alert *“Terrain System Available”* is generated.

Alert Type	PFD/Terrain-SVT Page Annunciation	Terrain-SVT Page Center Banner Annunciation	Voice/Aural Alert
System Test in Progress	TER TEST	TERRAIN TEST	None
System Test Passed	None	None	Single Aural Chime
Terrain Alerting Inhibited	TER INH	None	None
No GPS Position	TER N/A	NO GPS POSITION	“Terrain System Not Available” *
Excessively degraded GPS signal; or Out of database coverage area	TER N/A	None	“Terrain System Not Available” *
Terrain System Test Fail; Terrain or Obstacle database unavailable or invalid; Invalid software configuration; or System audio fault	TER FAIL	TERRAIN FAIL	“Terrain System Failure”
MFD Terrain or Obstacle database unavailable or invalid, and Terrain-SVT operating with PFD Terrain or Obstacle databases	None	TERRAIN DATABASE FAILURE	None

Table 6-19 Terrain-SVT System Status Annunciations

* *“Terrain System Available”* will be heard when sufficient GPS signal is received, or Terrain database coverage area re-entered.

TAWS-B

At the beginning of an avionics power cycle, TAWS-B conducts a system test for its alerting capabilities. An aural chime indicates a successful test; otherwise a voice alert and visual annunciations indicate failure. The pilot can also manually select a TAWS-B system test. The system test option is unavailable when the ground speed exceeds 30 knots.

TAWS-B continually monitors several system-critical items such as database validity, hardware status, and GPS status. If the terrain/obstacle database is not available, the voice alert “*TAWS System Failure*” is generated along with the ‘TAWS FAIL’ alert annunciation.

TAWS-B requires a 3-D GPS navigation solution along with specific vertical accuracy minimums. Should the navigation solution become degraded or if the aircraft is out of the database coverage area, the system displays the ‘TAWS N/A’ annunciation, and issues the “TAWS Not Available” voice alert. When the GPS signal integrity returns and the aircraft is within the database coverage area, the system issues the voice alert, “*TAWS Available*”





Alert Type	PFD/TAWS—B Page Annunciation	TAWS—B Page Center Banner Annunciation	Voice/Aural Alert
System Test in Progress		TAWS TEST	None
System Test Passed	None	None	Single Aural Chime
Terrain Alerting Inhibited		None	None
No GPS Position	TAWS N/A	NO GPS POSITION	“TAWS Not Available”*
Excessively degraded GPS signal; or Out of database coverage area	TAWS N/A	None	“TAWS Not Available”*
TAWS-B System Test Fail; Terrain or Obstacle database unavailable or invalid; Invalid software configuration; or System audio fault	TAWS FAIL	TAWS FAIL	“TAWS System Failure”
MFD Terrain or Obstacle database unavailable or invalid, and TAWS—B operating with PFD Terrain or Obstacle databases	None	TERRAIN DATABASE FAILURE	None

Table 6-20 TAWS—B System Status Annunciations

6.5 TAS TRAFFIC

 **WARNING:** Do not rely solely upon the display of traffic information for collision avoidance maneuvering. The traffic display does not provide collision avoidance resolution advisories and does not under any circumstances or conditions relieve the pilot's responsibility to see and avoid other aircraft.

 **WARNING:** Do not rely solely upon the display of traffic information to accurately depict all of the traffic information within range of the aircraft. Due to lack of equipment, poor signal reception, and/or inaccurate information from other aircraft, traffic may be present but not represented on the display.

 **NOTE:** Refer to the ADS-B Traffic discussion for more information about ADS-B traffic displays.

The optional Garmin GTS 800 is a Traffic Advisory System (TAS). The traffic system enhances flight crew situational awareness by displaying traffic information for transponder-equipped aircraft. The traffic system also provides visual annunciations and voice traffic alerts to assist in visually acquiring traffic.

The traffic system is capable of tracking up to 45 intruding aircraft equipped with Mode A, C, or S transponders in order to issue alerts if warranted. The system can display up to 30 aircraft with the highest threat potential simultaneously. No TAS surveillance is provided for aircraft without operating transponders.

THEORY OF OPERATION

When the traffic system is in Operating Mode, the system interrogates the transponders of other aircraft in the vicinity while monitoring for transponder replies. The system uses this information to derive the distance, relative bearing, and if reported, the altitude and vertical trend for each aircraft within its surveillance range. The traffic system then calculates a closure rate to each intruder based on the projected Closest Point of Approach (CPA). If the closure rate meets the threat criteria for a Traffic Advisory (TA), the traffic system provides visual annunciations and voice alerts.

TAS SURVEILLANCE VOLUME AND SYMBOLOGY

The TAS surveillance system monitors the airspace within $\pm 10,000$ feet of own altitude. Under ideal conditions, the TAS system scans transponder traffic up to 22NM in the forward direction. The range is somewhat reduced to the sides and aft of own aircraft due to the directional interrogation signal patterns. In areas of greater transponder traffic density, the on-board traffic system automatically reduces its interrogation transmitter power (and therefore range) in order to limit potential interference from other signals.

The system can display the symbols shown in the following table.

Symbol	Description
	Traffic Advisory with directional information. Points in the direction of the intruder aircraft track.
	Traffic Advisory without directional information.
	Traffic Advisory out of the selected display range with directional information. Displayed at outer range ring at proper bearing.
	Traffic Advisory out of the selected display range without directional information. Displayed at outer range ring at proper bearing.
	Proximity Advisory with directional information. Points in the direction of the aircraft track.
	Proximity Advisory without directional information.
	Other Non-Threat traffic with directional information. Points in the direction of the intruder aircraft track.
	Other Non-Threat traffic without directional information.
	Traffic located on the ground with directional information. Points in the direction of the aircraft track. Ground traffic is only displayed when ADS-B is in Surface (SURF) Mode or own aircraft is on the ground.
	Ground traffic without directional information. Ground traffic is only displayed when ADS-B is in Surface (SURF) Mode or own aircraft is on the ground.
	Non-aircraft ground traffic. Ground traffic is only displayed when ADS-B is in Surface (SURF) Mode or own aircraft is on the ground.

Table 6-21 ADS-B Traffic Symbology with GTX 345R Transponder

If not equipped with an Automatic Dependent Surveillance - Broadcast (ADS-B) transponder, traffic symbology will be displayed as in the following table:

Symbol	Description
	Traffic Advisory without directional information.
	Traffic Advisory out of the selected display range without directional information. Displayed at outer range ring at proper bearing.
	Proximity Advisory without directional information.
	Other Non-Threat traffic without directional information.

Table 6-22 TAS Symbol Description with GTX 335 Transponder

A Traffic Advisory (TA), displayed as an amber circle or triangle, alerts the crew to a potentially hazardous intruding aircraft, if the closing rate, distance, and vertical separation meet TA criteria. A TA that is beyond the selected display range (off scale) is indicated by a half TA symbol at the edge of the screen at the relative bearing of the intruder.

A Proximity Advisory (PA), displayed as a solid white diamond or triangle, indicates the intruding aircraft is within ± 1200 feet and is within a 6 nm range, but is still not considered a TA threat. A Non-threat Advisory, shown as an open white diamond or triangle, is displayed for traffic beyond 6 nm that is neither a TA or PA.

Relative altitude, when available, is displayed above or below the corresponding intruder symbol in hundreds of feet. When this altitude is above own aircraft, it is preceded by a '+' symbol; a minus sign '-' indicates traffic is below own aircraft. The system displays the altitude vertical trend as an up/down arrow (for speeds greater than 500 fpm in either direction) to the right of the intruder symbol.

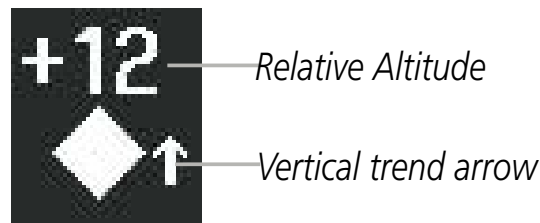


Figure 6-72 Intruder Altitude and Vertical Trend Arrow

If the intruding aircraft is providing ADS-B track information, a motion vector line extending beyond the traffic symbol in the direction of the track may also be displayed when either absolute or relative motion vectors are enabled; refer to the ADS-B Traffic discussion for more information.

TA ALERTING CONDITIONS

The traffic system automatically reduces its TA sensitivity level to reduce the likelihood of nuisance TA alerting during certain flight conditions. Level A (reduced) TA sensitivity normally applies when the aircraft is less than 2,000 feet above ground level. If the system cannot determine this height, then Level A TA sensitivity applies when the groundspeed is less than 120 knots. In all other conditions, the system uses Level B (increased) sensitivity in order to determine TA threats.

Sensitivity Level	Intruder Altitude Available	TA Alerting Conditions
A	Yes	Intruder closing rate provides less than 20 seconds of vertical and horizontal separation. Or: Intruder closing rate provides less than 20 seconds of horizontal separation and vertical separation is within 600 feet. Or: Intruder range is within 0.2 nm and vertical separation is within 600 feet.
A	No	Intruder closing rate provides less than 15 seconds of separation or intruder range is within 0.2 NM.

Sensitivity Level	Intruder Altitude Available	TA Alerting Conditions
B	Yes	Intruder closing rate provides less than 30 seconds of vertical and horizontal separation. Or: Intruder closing rate provides less than 30 seconds of horizontal separation and vertical separation is within 800 feet. Or: Intruder range is within 0.55 nm and vertical separation is within 800 feet.
B	No	Intruder closing rate provides less than 20 seconds of separation or intruder range is within 0.55 NM.

Table 6-23 TA Sensitivity Level and TA Alerting Criteria

TRAFFIC ALERTS

When the traffic system detects a new TA, the following occur:

- The system issues a single *“Traffic!”* voice alert, followed by additional voice information about the bearing, relative altitude, and approximate distance from the intruder that triggered the TA. For example, the announcement *“Traffic! 12 o’clock, high, four miles,”* would indicate the traffic is in front of own aircraft, above own altitude, and approximately four nautical miles away.
- A ‘TRAFFIC’ Annunciation appears at the right of the airspeed tape on the PFD, flashes for five seconds, and remains displayed until no TAs are detected in the area.
- The system displays the TA traffic on a PFD map. If a navigation map, such as the Inset Map or HSI map was already shown on the PFD prior to the TA occurrence, the system automatically enables the traffic overlay on the map if necessary in order to show the TA. If no map was shown on the PFD prior to the TA, then the Traffic Inset Map is displayed on the PFD.
- If the bearing of TA traffic cannot be determined, a yellow text banner will be displayed in the center of the Traffic Map Page and in the lower-left of the PFD inset map instead of a TA symbol. The text will indicate “TA” followed by the distance, relative altitude, and vertical trend arrow for the TA traffic, if known.

A TA will be displayed for at least eight seconds, even if the condition(s) that initially triggered the TA are no longer present.



Figure 6-73 Traffic Annunciation on the PFD with Inset Traffic Map

Bearing	Relative Altitude	Approximate Distance (nm)
“One o’clock” through “Twelve o’clock” or “No Bearing”	“High”, “Low”, “Same Altitude” (if within 200 feet of own altitude), or “Altitude not available”	“Less than one mile”, “One Mile” through “Ten Miles”, or “More than ten miles”

Table 6-24 TA Descriptive Voice Announcements

TRAFFIC MAP PAGE

The ‘Map - Traffic Map’ Page shows surrounding traffic data in relation to the aircraft’s current position and altitude, without basemap clutter. It is the principal map page for viewing traffic information. Aircraft orientation is always heading up unless there is no valid heading. Map range is adjustable with the Joystick (up to 40 nm) as indicated by the map range rings.

The system annunciates the traffic mode and altitude display mode in the upper right corner of the ‘Map - Traffic Map’ Page.

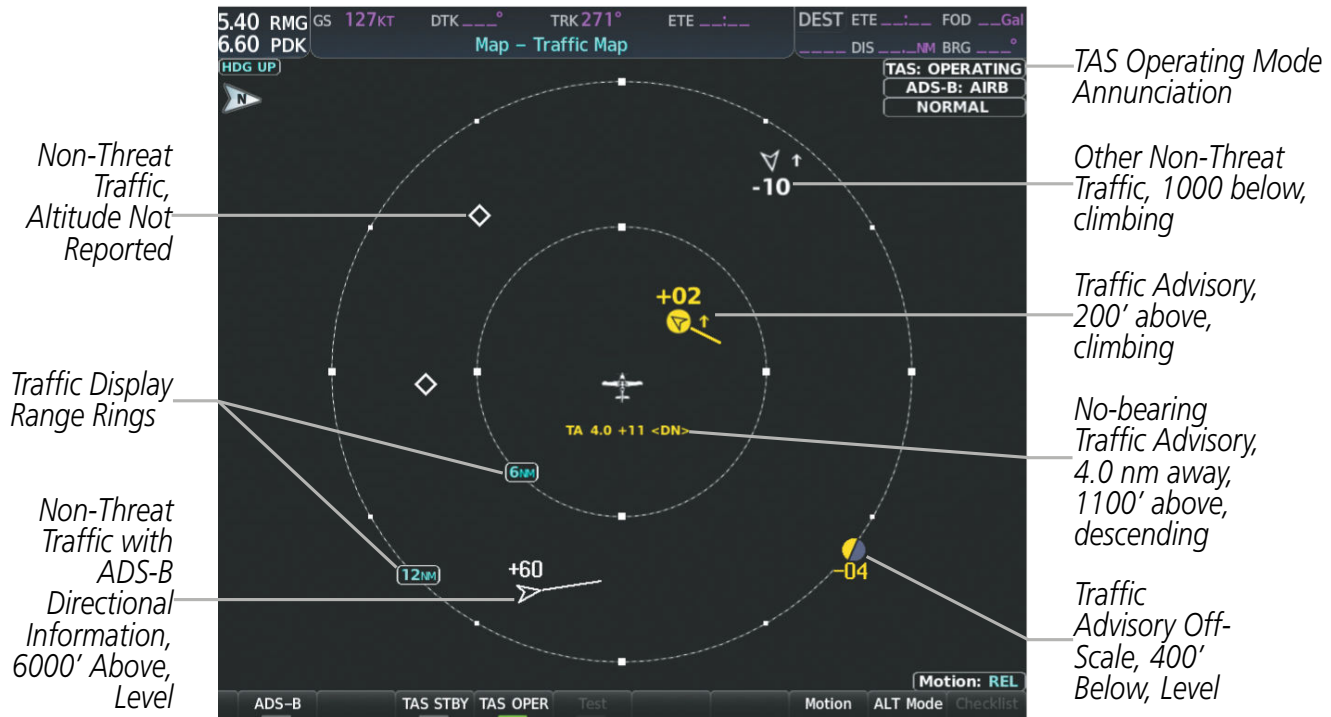


Figure 6-74 Traffic Map Page

Displaying traffic on the Traffic Map Page:

- 1) Turn the large **FMS** Knob to select the Map page group.
- 2) Turn the small **FMS** Knob to select the Traffic Map Page.
- 3) Press the **Operate** or **TAS OPER** Softkey to select Operating Mode.
- 4) Press the **Standby** or **TAS STBY** Softkey to select Standby Mode.

SYSTEM TEST

NOTE: Traffic surveillance is not available during the system test. Use caution when performing a system test during flight.

The traffic system provides a system test mode to verify normal operation. The test takes approximately ten seconds to complete. When the system test is initiated, a test pattern of traffic symbols appears on the traffic maps.

If the aircraft has ADS-B In capability, the system announces *“Traffic System Test”*, and the test pattern corresponds to the current aircraft heading. A climbing TA is shown to the west, level Other Non-Threat traffic is shown to the northwest, and a descending Proximity Advisory is in the northeast, relative to own aircraft. If the system test passes, the traffic system enters standby mode, and no traffic failure annunciations are displayed on the traffic maps.

If the aircraft does not have ADS-B In capability, the test pattern is fixed and does not correspond to the aircraft heading. If the system test passes, the system announces, *“TAS System Test Passed”*

Otherwise the system announces, “TAS System Test Failed.” When the system test is complete, the traffic system enters Standby Mode.



Figure 6-75 System Test in Progress with Test Pattern

Testing the Traffic System:

- 1) Select the Traffic Map Page.
- 2) Turn the Joystick to adjust the map range to 2 NM for the inner range ring, and 6 NM for the outer range ring. This ensures the full traffic test pattern is depicted on the map.
- 3) If the traffic system is in Operating Mode, press the **Standby** or **TAS STBY** Softkey.
- 4) Press the **Test** Softkey.

Or:

- 1) On the Traffic Map Page, press the **MENU** Key and turn the **FMS** Knob to highlight ‘Test Mode’.
- 2) Press the **ENT** Key.

OPERATION

NOTE: The traffic system automatically transitions from Standby to Operating mode eight seconds after takeoff. The system also automatically transitions from Operating to Standby mode 24 seconds after landing.

At the beginning of the avionics power cycle, the traffic system is in Standby Mode. The system must be in Operating Mode for traffic to be displayed and TAs to be issued.

Pressing the **Operate** Softkey allows the traffic unit to switch from Standby Mode to Operating Mode as necessary. Pressing the **Standby** Softkey forces the unit into Standby Mode.

Selecting a TAS Operating Mode:

- 1) Select the Traffic Map Page.
- 2) To select Standby Mode, press the **Standby** or **TAS STBY** Softkey.

Or:

- 1) Press the **MENU** Key.
- 2) Turn the **FMS** Knob to highlight the desired mode and press the **ENT** Key.

ALTITUDE DISPLAY MODE

The pilot can select the volume of airspace in which Other Non-Threat and Proximity Advisory traffic is displayed. TAs occurring outside of these limits will always be shown.

Changing the altitude range of traffic to display:

- 1) On the 'Map — Traffic Map' Page, press the **ALT Mode** Softkey.
- 2) Press one of the following softkeys:
 - **Above:** Displays Other Non-Threat and Proximity Advisory traffic from 9900 feet above the aircraft to 2700 feet below the aircraft. Typically used during climb phase of flight.
 - **Normal:** Displays Other Non-Threat and Proximity Advisory traffic from 2700 feet above the aircraft to 2700 feet below the aircraft. Typically used during enroute phase of flight.
 - **Below:** Displays Other Non-Threat and Proximity Advisory traffic from 2700 feet above the aircraft to 9900 feet below the aircraft. Typically used during descent phase of flight.
 - **UNREST** (unrestricted): All traffic is displayed from 9900 feet above and 9900 feet below the aircraft.

- 3) To return to the Traffic Map Page, press the **Back** Softkey.

Or:

- 1) Press the **MENU** Key.
- 2) Turn the small **FMS** Knob to select one of the following softkeys (see previous description):
 - Above
 - Normal

- Below
- Unrestricted

3) Press the **ENT** Key.

Selecting a display range on the Traffic Map Page:

- 1) Select the 'Map — Traffic Map' Page.
- 2) Turn the **Joystick** clockwise to increase the map range or counter-clockwise to decrease the map range.

ADDITIONAL TRAFFIC DISPLAYS

The 'Map - Traffic Map' Page is the principal map page for viewing traffic information. Traffic information can also be displayed on the following other maps for additional reference on the MFD when the traffic unit is operating:

Navigation Map Page	Nearest Page
Active Flight Plan Page	Trip Planning Page
IFR/VFR Charts Page	

When traffic is selected on maps other than the Traffic Map Page, the system shows a traffic status icon to indicate traffic is enabled for display.

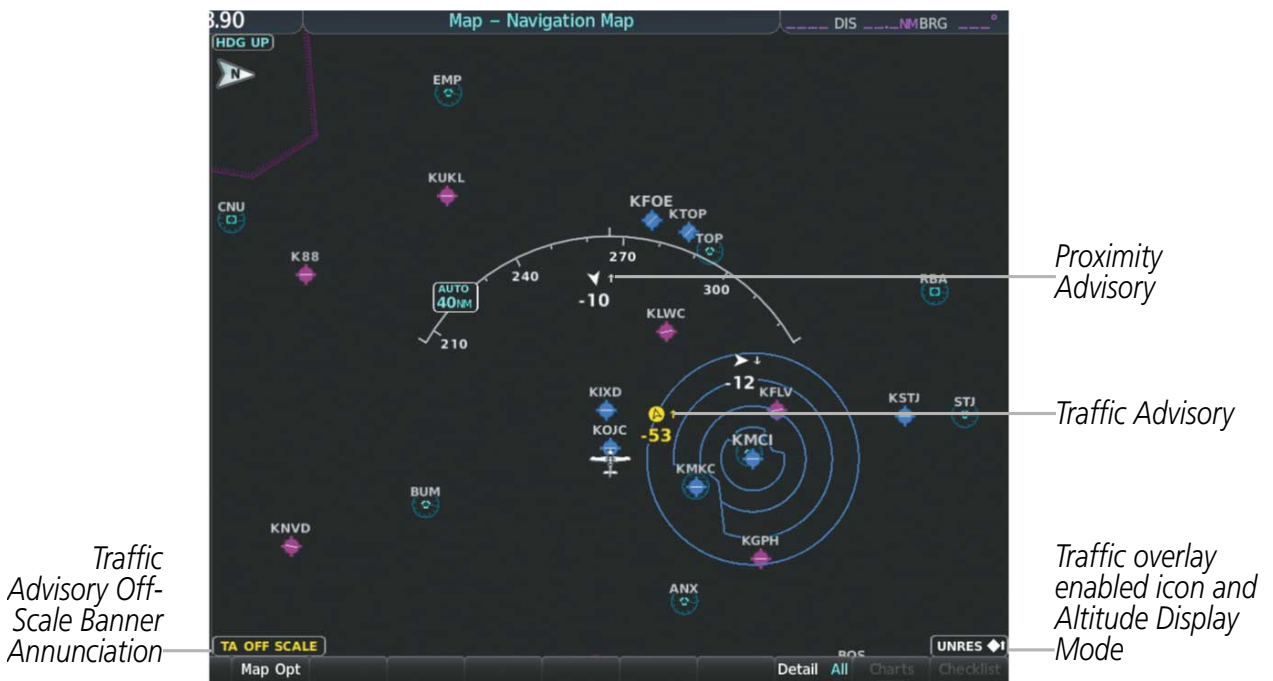


Figure 6-76 TAS Traffic on Navigation Map Page

Traffic information can also be displayed on the PFD when the Garmin Synthetic Vision Technology (SVT) option is installed and enabled. See the Flight Instruments section for details.

Enabling/disabling traffic information (MFD navigation maps):

- 1) Press the **Map Opt** Softkey.
- 2) Press the **Traffic** Softkey to enable/disable the traffic overlay.
- 3) Press the **Back** Softkey to return to the top-level softkeys.

Customizing the traffic display on the Navigation Map Page:

- 1) Select the 'Map - Navigation Map' Page.
- 2) Press the **MENU** Key.
- 3) With 'Map Settings' highlighted, press the **ENT** Key.
- 4) Turn the small **FMS** Knob to select the Traffic Group and press the **ENT** Key.
- 5) Turn the large **FMS** Knob or press the **ENT** Key to scroll through the selections.
 - Traffic – Turns the display of traffic data on or off
 - Traffic Mode – Selects the traffic mode for display; select from:
 - All Traffic - Displays all traffic
 - TA/PA - Displays Traffic Advisories and Proximity Advisories
 - TA Only - Displays Traffic Advisories only
 - Traffic Symbols – Selects the maximum range at which traffic symbols are shown
 - Traffic Labels – Selects the maximum range at which traffic labels are shown with the option to turn off
- 6) Turn the small **FMS** Knob to scroll through options (On/Off, range settings, etc.).
- 7) Press the **ENT** Key to select an option.
- 8) Press the **FMS** Knob or **CLR** Key to return to the Navigation Map Page.

The 'Map - Navigation Map' Page Setup Menu also controls the display of traffic. The setup menu controls the map range settings. Traffic data symbols and labels can be decluttered from the display. If a map range larger than the map range setting is selected, the data is removed from the map. Maps besides the 'Map - Traffic Map' Page use settings based on those selected for the 'Map - Navigation Map' Page.

A Traffic Map is available on the PFD by pressing the **TFC Map** Softkey. A traffic map will appear in heading up orientation. Traffic information can also be overlaid with navigation, topographic and optional data link weather information on navigation maps.

The HSI can also present a version of the Traffic Map. Traffic operating mode information is not present on this map. Refer to the Flight Instruments section for more information about displaying maps on the HSI.



Figure 6-77 HSI Traffic Map

Enabling/disabling traffic information on PFD navigation maps:

- 1) With the Inset Map or HSI Map displayed, press the **Map/HSI** Softkey.
- 2) Press the **Traffic** Softkey to enable/disable the traffic overlay.
- 3) Press the **Back** Softkey to return to the top-level PFD softkeys.

Enabling/disabling traffic information on the PFD Inset navigation map:

- 1) With the Inset map displayed, press the **Map/HSI** Softkey.
- 2) Press the **Traffic** Softkey to enable/disable the display of traffic information.

SYSTEM STATUS

Mode	Traffic Mode Annunciation (Traffic Map Page)	Traffic Display Status Icon (Other Maps)
Traffic System Test Initiated	TEST ('TEST MODE' shown in center of page)	
Operating	OPERATING	
Standby	STANDBY(also shown in center of page)	
Traffic System Failed*	FAIL	

* See the following table for additional failure annunciations.

Table 6-25 Traffic Modes

The traffic mode is annunciated in the upper right corner of the 'Map - Traffic Map' Page.

If the traffic unit fails, an annunciation as to the cause of the failure is shown in the center of the 'Map - Traffic Map' Page. During a failure condition, the Operating Mode cannot be selected.

Traffic Map Page Center Annunciation	Description
NO DATA	Data is not being received from the traffic unit
DATA FAILED	Data is being received from the traffic unit, but the unit is self-reporting a failure
FAILED	Incorrect data format received from the traffic unit

Table 6-26 Traffic Failure Annunciations

The annunciations to indicate the status of traffic information appear in a banner at the lower left corner of maps on which traffic can be displayed.

Traffic Status Banner Annunciation	Description
TA OFF SCALE	A Traffic Advisory is outside the selected display range*. Annunciation is removed when traffic comes within the selected display range.
TA X.X ± XX	System cannot determine bearing of Traffic Advisory**. Annunciation indicates distance in nm, altitude separation in hundreds of feet, and altitude trend arrow (climbing/ descending).
TRFC FAIL	Traffic unit has failed (unit is self-reporting a failure or sending incorrectly formatted data)
NO TRFC DATA	Data is not being received from the traffic unit
*Shown as symbol on Traffic Map Page	
**Shown in center of Traffic Map Page	

Table 6-27 Traffic Status Annunciations

6.6 ADS-B TRAFFIC

WARNING: Do not rely solely upon the display of traffic information for collision avoidance maneuvering. The traffic display does not provide collision avoidance resolution advisories and does not under any circumstances or conditions relieve the pilot's responsibility to see and avoid other aircraft.

WARNING: Do not rely solely upon the display of traffic information to accurately depict all of the traffic information within range of the aircraft. Due to lack of equipment, poor signal reception, and/or inaccurate information from other aircraft, traffic may be present but not represented on the display.

The optional Garmin GTX 345R transponder sends and receives Automatic Dependent Surveillance-Broadcast (ADS-B) traffic information on the 1090 MHz Extended Squitter (1090 ES) frequency. It receives ADS-B traffic and data link weather information on the 978 MHz Universal Access Transceiver (UAT) frequency. The system provides visual annunciations and voice traffic alerts to help the pilot visually acquire potentially conflicting traffic. This discussion covers the traffic features of the GTX transponder; refer to the Flight Information Service-Broadcast (FIS-B) Weather section for more information about the UAT data link weather features of the GTX 345.

ADS-B SYSTEM OVERVIEW

ADS-B is a core technology in the FAA NextGen air traffic control system and is comprised of three segments: ADS-B (Broadcast), ADS-R (Rebroadcast), and Traffic Information Service-Broadcast (TIS-B).

ADS-B is the automatic broadcast of position reports by aircraft, surface vehicles, and transmitters on fixed objects. These broadcasts contain information such as GPS position, identity (Flight ID, Call Sign, Tail Number, ICAO registration number, etc), ground track, ground speed, pressure altitude, and emergency status.

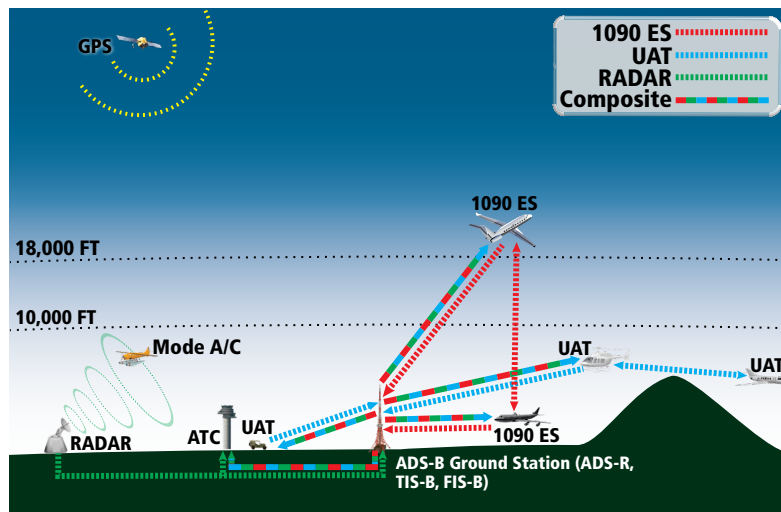


Figure 6-78 ADS-B System

For the purpose of distinguishing between levels of ADS-B service, there are three classifications of aircraft or system capability: ADS-B In, ADS-B Out, and ADS-B participating. ADS-B In refers to the capability to receive ADS-B information. ADS-B Out refers to the capability to transmit ADS-B information. ADS-B participating refers to the capability to both send and receive ADS-B information. Aircraft lacking either ADS-In, ADS-B Out, or both ADS-B capabilities may also be referred to as ADS-B nonparticipating aircraft.

AUTOMATIC DEPENDENT SURVEILLANCE-REBROADCAST (ADS-R)

Because it is not required that ADS-B In capable aircraft be able to receive ADS-B data on both the 1090 MHz and 978 MHz data links, a method exists to get data from one data link to the other. ADS-R is the rebroadcast of ADS-B data by FAA ground stations, which provide this service by taking data from one link and rebroadcasting it on the other. For example, two aircraft are in the service volume for a ground station, and one is transmitting on 1090 MHz and the other on 978 MHz, the ground station retransmits the data from each aircraft on the other link to ensure the two aircraft can “see” each other.

Because the GTX 345R transponder sends and receives ADS-B traffic reports on the 1090 ES frequency, but only receives traffic reports on the 978 MHz UAT frequency, the presence of an ADS-R ground station is necessary for an aircraft with only UAT-capabilities to ‘see’ the aircraft with the GTX 345R transponder.

TRAFFIC INFORMATION SERVICE-BROADCAST (TIS-B)

TIS-B provides the bridge between the radar-based ATC system and the ADS-B-based system. When an ADS-B In or Out capable aircraft is within the service volume of an FAA ADS-B ground station, the ground station broadcasts a portion of the ATC radar data to the aircraft. This aircraft is then included in the list of aircraft being provided TIS-B service and is then considered a “TIS-B participant.”

TIS-B coverage is available when the aircraft is within ground station coverage, in Secondary Surveillance Radar coverage, and the other aircraft is also in Secondary Surveillance Radar coverage, and is transmitting its altitude.

The ground station provides ATC radar information for other aircraft within $\pm 3,500$ feet and 15 NM of the participant, to include altitude, position, ground speed, and ground track. TIS-B broadcasts occur once every three to thirteen seconds, depending on the characteristics of the ground station providing the TIS-B service.

The following table describes the aircraft that are observed by a GTX 345R-equipped aircraft according to the level of equipment installed in the other aircraft.


Other Aircraft Equipment	Viewable by GTX 345R Equipped Aircraft
1090ES Out Equipped	Yes
UAT Receive Only Capable	No
UAT Transmit Equipped	Yes
No Transponder, No ADS-B	No

Other Aircraft Equipment	Viewable by GTX 345R Equipped Aircraft
Non ADS-B Equipped, but with Mode C or S Transponder	Yes*
*Only when in ADS-B ground station coverage and when the other aircraft is in ATC radar coverage, or own aircraft is equipped with a TAS system and traffic is within the TAS surveillance range.	

Table 6-28 Aircraft Available for Viewing by an ADS-B Equipped Own Aircraft

ADS-B WITH TAS

When an optional active traffic system, such as a Traffic Advisory System (TAS) is installed and operating with an optional GTX 345R transponder, the transponder receives traffic from the active traffic system and attempts to match (or “correlate”) this traffic with ADS-B traffic the transponder is tracking. When a correlation is made, only the traffic with the most accurate information is displayed to the flight crew. Any traffic that is not correlated (i.e., only detected by one system but not the other) is also displayed for the flight crew. This correlation of traffic by the transponder improves the accuracy of the traffic displayed, while reducing the occurrence of the same aircraft being displayed twice.

 **NOTE:** When operating on the edges of ATC radar coverage or when using an optional active traffic system providing intermittent traffic data, a single aircraft may be briefly or periodically depicted as two aircraft on the display.

CONFLICT SITUATIONAL AWARENESS AND ALERTING

Conflict Situational Awareness (CSA) is an alerting algorithm which provides ADS-B traffic alerting similar to the TAS system discussed previously.

The system issues a voice alert when a Traffic Advisory (TA) is displayed, for example “*Traffic! Two O’clock, Low, Two Miles.*”

The own aircraft altitude above terrain determines the sensitivity of the CSA algorithm to minimize nuisance alerts. Height Above Terrain, and Geodetic Sea Level (GSL) altitude are used to adjust the sensitivity of the CSA algorithm in accordance with the following table:

Sensitivity Level	Height Above Terrain (HAT)	GPS Phase of Flight	Own Altitude (Feet)	Look-ahead time (sec)	Vertical Threshold for Alert (feet)	Protected Volume (NM)
4	Any	Any	Any	20	850	0.2
4	Unavailable	Approach	Any	20	850	0.2
5	Any	Any	Any	25	850	0.2
5	>1000	Any	Any	25	850	0.2
	<=2350					
5	Unavailable	Terminal	Any	25	850	0.2

Sensitivity Level	Height Above Terrain (HAT)	GPS Phase of Flight	Own Altitude (Feet)	Look-ahead time (sec)	Vertical Threshold for Alert (feet)	Protected Volume (NM)
6	Unavailable or >2350	Not approach and not Terminal (including unavailable)	<=5000	30	850	0.35
7	Unavailable or >2350	Not approach and not Terminal (including unavailable)	>5000	40	850	0.55
			<=10,000			
8	Unavailable or >2350	Not approach and not Terminal (including unavailable)	>10,000	45	850	0.8
			<=20,000			
9	Unavailable or >2350	Not approach and not Terminal (including unavailable)	>20,000	48	850	1.1
			<=42,000			

Table 6-29 CSA Alerting Thresholds for ADS-B Traffic

When the system detects a new Traffic Advisory (TA), the following occur:

- The system issues a single “Traffic!” voice alert, followed by additional voice information about the bearing, relative altitude, and approximate distance from the intruder that triggered the TA (Table 6-34). For example, the announcement “Traffic! 12 o’clock, high, four miles,” would indicate the traffic is in front of own aircraft, above own altitude, and approximately four nautical miles away.
- A ‘TRAFFIC’ annunciation appears to the right of the Airspeed Indicator on the PFD, flashes for five seconds, and remains displayed until no TAs are detected in the area.
- If the PFD Inset Map was already displayed, the traffic is shown on the displayed map. Otherwise the Traffic Map is shown on the PFD.
- If the bearing of TA traffic cannot be determined, a yellow text banner will be displayed in the center of the Traffic Map and in the lower-left of the PFD inset map instead of a TA symbol. The text will indicate ‘TA’ followed by the distance, relative altitude, and vertical trend arrow for the TA traffic, if known.



Figure 6-79 Traffic Annunciation (PFD)

Bearing	Relative Altitude	Approximate Distance (nm)
“One o’clock” through “Twelve o’clock” or “No Bearing”	“High”, “Low”, “Same Altitude” (if within 200 feet of own altitude), or “Altitude not available”	“Zero miles”, “Less than one mile”, “One Mile” through “Ten Miles”, or “More than ten miles”

NOTE: ADS-B traffic voice alerts are suppressed when below 500 feet.

AIRBORNE AND SURFACE APPLICATIONS

ADS-B can help the pilot visually acquire traffic both in the air and on-the-ground. There are two ADS-B applications or modes: Airborne Situational Awareness (AIRB) and Surface Situational Awareness (SURF). The system automatically selects the appropriate application based on conditions.

The AIRB application is on when the aircraft is more than five nautical miles and 1,500 feet above the nearest airport. When the AIRB application is active, the system only displays traffic which is airborne.

The SURF application is on when the aircraft is within five nautical miles and less than 1,500 feet above field elevation. When the SURF applications is on, the system displays airborne and on the ground traffic. At a Traffic Map Page range of one nautical mile or less, the airport environment (including taxiways and runways) appears in addition to traffic. The airport displays are derived from the SafeTaxi database. Refer to the Additional Features section for more information about SafeTaxi displays.

NOTE: Do not rely solely on the traffic display to determine the runway alignment of traffic, especially when runways are in close proximity to each other.

Due to the varying precision of the data received via ADS-B, ADS-R, and TIS-B services, not all traffic symbols may be depicted on the traffic display. Because higher data precision is required for traffic to

be displayed in the SURF environment, some traffic eligible for AIRB will not be displayed while SURF is on. Availability for AIRB and SURF is depicted on the 'Aux - ADS-B Status' Page, discussed later in this section.



Figure 6-80 Traffic Map Page with SURF Mode On

TRAFFIC DESCRIPTION

The symbols used to display ADS-B traffic are shown in the table below. Above or below the traffic symbol is the traffic identifier, and altitude. A small up or down arrow next to the traffic symbol indicates that the traffic is climbing or descending at a rate of at least 500 feet per minute.

Symbol	Description
	Traffic Advisory with directional information. Points in the direction of the intruder aircraft track
	Traffic Advisory without directional information.
	Traffic Advisory out of the selected display range with directional information. Displayed at outer range ring at proper bearing.
	Traffic Advisory out of the selected display range without directional information. Displayed at outer range ring at proper bearing.
	Proximity Advisory with directional information. Points in the direction of the aircraft track.
	Proximity Advisory without directional information.

Symbol	Description
	Other Non-Threat traffic with directional information. Points in the direction of the intruder aircraft track.
	Other Non-Threat traffic without directional information.
	Traffic located on the ground with directional information. Points in the direction of the aircraft track. Ground traffic is only displayed when ADS-B is in Surface (SURF) Mode or own aircraft is on the ground.
	Ground traffic without directional information. Ground traffic is only displayed when ADS-B is in Surface (SURF) Mode or own aircraft is on the ground.
	Non-aircraft ground traffic. Ground traffic is only displayed when ADS-B is in Surface (SURF) Mode or own aircraft is on the ground.

OPERATION

TRAFFIC MAP PAGE

The 'Map - Traffic Map' Page shows surrounding traffic data in relation to the aircraft's current position and altitude, without basemap clutter. Aircraft orientation is always heading up unless there is no valid heading. Map range is adjustable with the Joystick, as indicated by the map range rings.

The traffic mode and altitude display mode are annunciated in the upper left corner of the page.



Figure 6-81 Traffic Map Page with ADS-B Traffic Displayed

Testing the display of ADS-B traffic:

- 1) Select the 'Map - Traffic Map' Page.
- 2) If necessary, turn the **Joystick** to select a map range of 2 and 6 nm to ensure full test pattern display.
- 3) Ensure the **ADS-B** Softkey is disabled.
- 4) If the optional TAS is installed, ensure the **TAS STBY** Softkey is enabled.
- 5) Press the **Test** Softkey.

Or:

Press the **MENU** Key.

- a) Turn the **FMS** Knob to highlight 'Test Mode'.
- b) Press the **ENT** Key.

The traffic system provides a system test mode to verify normal operation. The test takes about ten seconds to complete. When the system test is initiated, a test pattern of traffic symbols appears on any displayed traffic maps. The test pattern corresponds to the current aircraft heading. A climbing TA is shown to the west, level Other Non-Threat traffic is shown to the northwest, and a descending Proximity Advisory is in the northeast, relative to own aircraft. The voice alert "*Traffic System Test*" indicates the traffic system test is complete, and the system enters Standby Mode.

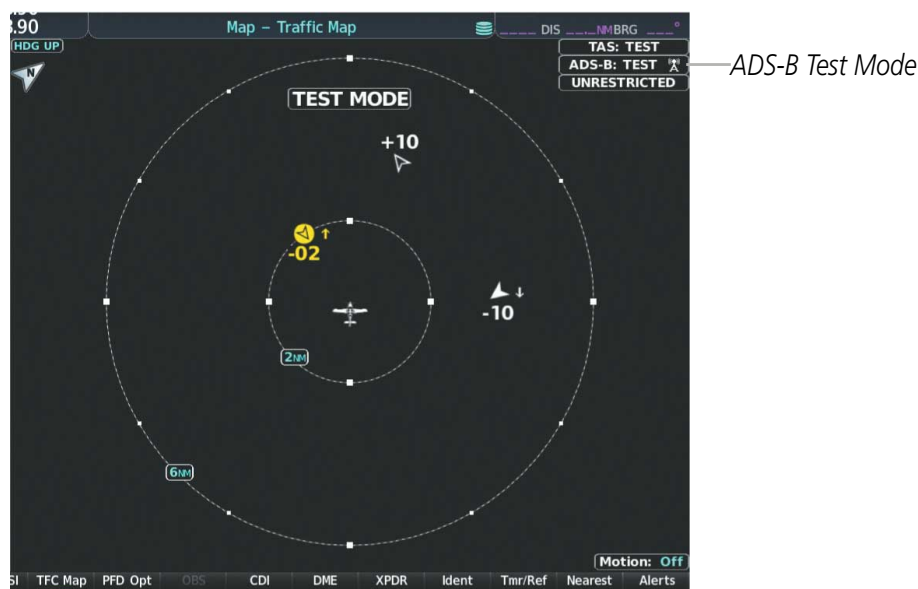


Figure 6-82 ADS-B System Test with Example Test Pattern Relative to Current Heading

The pilot can select the volume of airspace in which Other Non-Threat and Proximity traffic is displayed. TAs occurring outside of these limits will always be shown.

Changing the altitude range:

- 1) On the 'Map - Traffic Map' Page, press the **ALT Mode** Softkey.
 - 2) Select one of the following softkeys:
 - **Above:** Displays Other Non-Threat and proximity traffic from 9000 feet above the aircraft to 2700 feet below the aircraft. Typically used during climb phase of flight.
 - **Normal:** Displays Other Non-Threat and proximity traffic from 2700 feet above the aircraft to 2700 feet below the aircraft. Typically used during enroute phase of flight.
 - **Below:** Displays Other Non-Threat and proximity traffic from 2700 feet above the aircraft to 9000 feet below the aircraft. Typically used during descent phase of flight.
 - **UNREST** (unrestricted): All traffic is displayed from 9900 feet above and 9900 feet below the aircraft.
 - 3) To return to the 'Map - Traffic Map' Page, select the **Back** Softkey.
- Or:**
- 1) Press the **MENU** Key.
 - 2) Turn the small **FMS** Knob to highlight one of the following options (see softkey description in step 2 above):
 - Above
 - Normal
 - Below
 - Unrestricted
 - 3) Press the **ENT** Key.

DISPLAYING MOTION VECTORS

When Absolute Motion Vectors are selected, the vectors extending from the traffic symbols depict the traffic's reported track and speed over the ground. When Relative Motion Vectors are selected, the vectors extending from the traffic symbols display how the traffic is moving relative to own aircraft. These vectors are calculated using the traffic's track and ground speed and own aircraft's track and ground speed. These two values are combined to depict where the traffic is moving purely with respect to own aircraft, and provide a forecast of where the traffic will be, relative to own aircraft, in the near future.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CNS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index



Figure 6-83 Traffic Map Page with Absolute Motion Vectors Enabled



Figure 6-84 Traffic Map Page with Relative Motion Vectors Enabled

Enabling/disabling the Motion Vector display:

- 1) Select the 'Map - Traffic Map' Page.
- 2) Press the **Motion** Softkey.
- 3) Press one of the following softkeys:
 - **Absolute**: Displays the motion vector pointing in the absolute direction.
 - **Relative**: Displays the motion vector relative to own aircraft
 - **Off**: Disables the display of the motion vector.

Or:

- 1) Select the 'Map - Traffic Map' Page.
- 2) Press the **MENU** Key.
- 3) Turn the **FMS** Knob to highlight 'Relative Motion', 'Absolute Motion' or 'Motion Vector Off'.
- 4) Press the **ENT** Key.

Adjusting the duration for the Motion Vector projected time:

- 1) Select the 'Map - Traffic Map' Page.
- 2) Press the **Motion** Softkey.
- 3) Press the **Duration** Softkey.
- 4) Press a softkey for the desired duration (**30 SEC, 1 MIN, 2 MIN, 5 MIN**).
- 5) When finished, press the **Back** Softkey to return to the 'Map - Traffic Map' Page.

DISPLAYING ADDITIONAL TRAFFIC INFORMATION

The Traffic Map Page can display additional information for a selected aircraft symbol. This may include the aircraft tail number/Flight ID, type of aircraft (e.g., glider, small/medium/large aircraft, service vehicle, unmanned airborne vehicle (UAV), course, track, groundspeed), and other information.

Showing additional traffic information:







- 1) Select the 'Map - Traffic Map' Page.
- 2) Press the **FMS** Knob. The first selected traffic symbol is highlighted in cyan. Additional information appears in a window in the upper-right corner of the 'Map - Traffic Map' Page.
- 3) To select a different aircraft symbol, turn the **FMS** Knob until the selected aircraft traffic symbol is highlighted.
- 4) When finished, press the **FMS** Knob again to disable the traffic selection.

Changing the display range on the Traffic Map Page:

- 1) Turn the **Joystick**.
- 2) The following range options are available:
 - 500 feet
 - 500 and 1000 feet
 - 1000 and 2000 feet
 - 2000 feet and 1 NM
 - 1 and 2 NM
 - 2 and 6 MN
 - 6 and 12 NM
 - 12 and 24 NM
 - 24 and 40 NM

ADS-B SYSTEM STATUS

The traffic mode is annunciated in the upper right corner of the 'Map - Traffic Map' Page.

ADS-B Mode	Traffic Mode Annunciation (Traffic Map Page)	Traffic Map Page Center Banner Annunciation	Traffic Display Status Icon (Other Maps)
ADS-B System Test Initiated	ADS-B: TEST	TEST MODE	
ADS-B Operating in Airborne Mode	ADS-B: AIRB	NONE	
ADS-B Operating in Surface Mode	ADS-B: SURF	NONE	
ADS-B Traffic Off	ADS-B: OFF	ADS-B TRFC OFF	
ADS-B Traffic Not Available	ADS-B: N/A	NO TRK/HDG	
ADS-B Failed*	ADS-B: FAIL	FAILED	

* See 'Traffic Failure Annunciations' Table for additional failure annunciations

Table 6-30 ADS-B Modes

If the traffic unit fails, an annunciation as to the cause of the failure is shown in the center of the 'Map - Traffic Map' Page. During a failure condition, the Operating Mode cannot be selected.

Traffic Map Page Center Annunciation	Description
NO DATA	Data is not being received from the traffic unit
DATA FAILED	Data is being received from the traffic unit, but the unit is self-reporting a failure
FAILED	Incorrect data format received from the traffic unit

Table 6-31 Traffic Failure Annunciations

The annunciations to indicate the status of traffic information appear in a banner at the lower left corner of maps on which traffic can be displayed.

Traffic Status Banner Annunciation	Description
TA OFF SCALE	A Traffic Advisory is outside the selected display range*. Annunciation is removed when traffic comes within the selected display range.
TA X.X±XX	System cannot determine bearing of Traffic Advisory**. Annunciation indicates distance in nm, altitude separation in hundreds of feet, and altitude trend arrow (climbing/descending).
TRFC FAIL	Traffic unit has failed (unit is self-reporting a failure or sending incorrectly formatted data).
NO TRFC DATA	Data is not being received from the traffic unit.

*Shown as symbol on Traffic Map Page
 **Shown in center of Traffic Map Page

Table 6-32 Traffic Status Annunciations

Additional information about the status of ADS-B traffic products is available on the ‘Aux - ADS-B Status’ Page.

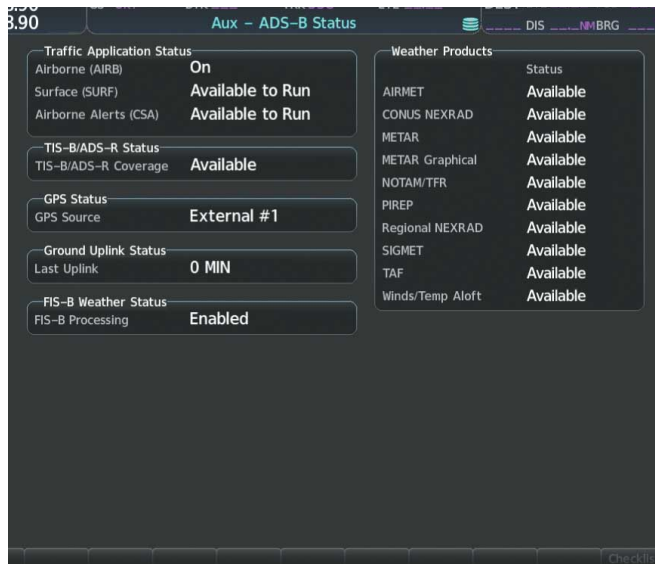


Figure 6-85 Viewing ADS-B Traffic Status on the 'Aux - ADS-B Status' Page

Viewing ADS-B Traffic Status:

- 1) Turn the large **FMS** Knob to select the Aux Page Group.
- 2) Turn the small **FMS** Knob to select the 'Aux - ADS-B Status' Page.

ADS-B Status Page Item	Status Message	Description
Traffic Application Status: Airborne (AIRB), Surface (SURF), Airborne Alerts (CSA)	On	Traffic application is currently on. Required input data is available, and it meets performance requirements.
	Available to Run	Traffic application is not currently active, but application is ready to run when condition(s) determine the application should be active. Required input data is available, and it meets performance requirements.
	Not Available	Traffic application is not available. Required input data is available, but it does not meet performance requirements.
	Fault	Traffic application is not available. Required input data is not available or the application has failed.
	Not Configured	Traffic application is not available, because it has not been configured. If this annunciation persists, the system should be serviced.
	-----	Traffic application status is invalid or unknown.

ADS-B Status Page Item	Status Message	Description
TIS-B/ADS-R Coverage	Available	The system is receiving the ADS-R coverage from an FAA ground station.
	Not Available	The system is not receiving the ADS-R coverage from an FAA ground station.
	-----	ADS-R coverage is invalid or unknown.
GPS Status: GPS Source	External #1	The GTX 345R is using the #1 GPS receiver for the GPS position source.
	External #2	The GTX 345R is using the #2 GPS receiver for the GPS position source.
	-----	The GPS source is invalid or unknown.
Ground Uplink Status: Last Uplink	Number of minutes, or '-----'	Displays the number of minutes since the last uplink from a ground station occurred. If no uplink has been received, or the status is invalid, dashes appear instead of a number of minutes.

Table 6-33 'Aux-ADS-B Status' Page Messages for ADS-B Traffic

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CMS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CNS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

BLANK PAGE

SECTION 7 AUTOMATIC FLIGHT CONTROL SYSTEM

7.1 AFCS OVERVIEW

 **NOTE:** The approved Pilot's Operating Handbook (POH) always supersedes this Pilot's Guide.

The Garmin AFCS is a digital Automatic Flight Control System (AFCS), fully integrated within the system avionics architecture. The System Overview section provides a block diagram to support this system description.

The Garmin AFCS can be divided into these main operating functions:

- **Flight Director (FD)** — The aircraft has two flight directors, each operating within a GIA and referred to as pilot-side and copilot-side. The flight director provides:
 - Command Bars showing pitch/roll guidance
 - Vertical/lateral mode selection and processing
 - Autopilot communication
- **Autopilot (AP)** — Autopilot operation occurs within the pitch, roll, and pitch trim servos. It also provides servo monitoring and automatic flight control in response to flight director steering commands, Attitude and Heading Reference System (AHRS) attitude and rate information, and airspeed.
- **Yaw Damper (YD)** — The yaw servo is self-monitoring and provides Dutch roll damping and turn coordination in response to yaw rate, roll angle, lateral acceleration, and airspeed.
- **Manual Electric Pitch Trim (MEPT)** — The pitch trim servo provides manual electric pitch trim capability when the autopilot is not engaged.

AFCS CONTROLS

1	HDG Key	Selects/deselects Heading Select Mode
2	APR Key	Selects/deselects Approach Mode
3	AP Key	Engages/disengages the autopilot
4	LVL Key	Engages the autopilot (if the autopilot is disengaged and the aircraft is within the autopilot engagement limitations) in level vertical and lateral modes
5	NOSE UP/DN Wheel	Adjusts the vertical mode reference in Pitch Hold, Vertical Speed, Indicated Airspeed, and Altitude Hold modes
6	FLC Key	Selects/deselects Flight Level Change Mode
7	VNV Key	Selects/deselects Vertical Path Tracking Mode for Vertical Navigation flight control
8	ALT Knob	Controls the Selected Altitude in 100-ft increments

9	ALT Key	Selects/deselects Altitude Hold Mode
10	VS Key	Selects/deselects Vertical Speed Mode
11	FD Key	Activates/deactivates the flight director only
12	NAV Key	Selects/deselects Navigation Mode
13	HDG Key	Selects/deselects Heading Select Mode

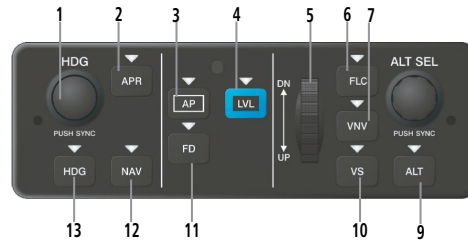


Figure 7-1 GMC 707 AFCS Control Unit

ADDITIONAL AFCS CONTROLS

The following AFCS controls are located separately from the AFCS Control Unit:

AP DISC Button (Autopilot Disconnect)	Disengages the autopilot, yaw damper, and interrupts pitch trim operation An AP DISC Button is located on the pilot’s control stick. This button may be used to acknowledge an autopilot disconnect alert and mute the associated aural tone.
GA Button (Go Around)	Selects flight director Takeoff (on ground) or Go Around (in air) Mode If an approach procedure is loaded, this switch also activates the missed approach when the selected navigation source is GPS or when the navigation source is VOR/LOC and a valid frequency has been tuned. The GA Button is located on the power lever.
MET Switch (Manual Electric Trim)	Used to command manual electric pitch trim An MET Switch is located on the pilot and copilot control stick. Press DN (forward) and UP (rearward) for manual electric trim.

7.2 FLIGHT DIRECTOR OPERATION

FLIGHT DIRECTOR OPERATION

The flight director function provides pitch and roll commands to the AFCS and displays them on the PFD. With the flight director active, the aircraft can be hand-flown to follow the path shown by the Command Bars. Maximum commanded pitch (-15°, +20°) and roll (25°) angles, vertical acceleration, and roll rate are limited to values established during AFCS certification. The flight director also provides commands to the autopilot.

Activating The Flight Director

An initial press of a key listed in the following table (when the flight director is not active) activates the flight director in the listed modes. The flight director may be turned off and the Command Bars removed from the display by pressing the **FD** Key again. The **FD** Key is disabled when the autopilot is engaged.

Control Pressed	Modes Selected			
	Lateral		Vertical	
FD Key	Roll Hold (default)	ROL	Pitch Hold (default)	PIT
AP Key	Roll Hold (default)	ROL	Roll Hold (default)	PIT
GA Button	Takeoff (on ground) Go Around (in air)	TO GA	Takeoff (on Ground) Go Around (in air)	TO GA
ALT Key	Roll Hold (default)	ROL	Altitude Hold	ALT
VS Key	Roll Hold (default)	ROL	Vertical Speed	VS
VNV Key	Roll Hold (default)	ROL	Vertical Path Tracking*	VPTH
NAV Key	Navigation**	FMS VOR LOC	Pitch Hold (default)	PIT
APR Key	Approach**	FMS VOR LOC	Pitch Hold (default)	PIT
HDG Key	Heading Select	HDG	Pitch Hold (default)	PIT
LVL Key	Level Hold	LVL	Level Hold	LVL
*Valid VNV flight plan must be entered before VNV Key press activates flight director.				
**The selected navigation receiver must have a valid VOR or LOC signal or active GPS course before NAV or APR Key press activates flight director.				

AFCS STATUS BOX

Flight director mode annunciations are displayed on the PFDs when the flight director is active. Flight director selection and autopilot and yaw damper statuses are shown in the center of the AFCS Status Box. Lateral flight director modes are displayed on the left and vertical on the right. Armed modes are displayed in white and active in green. Th

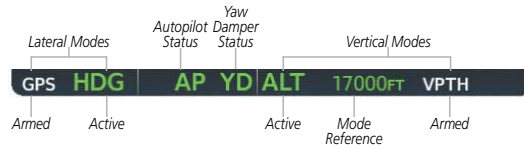


Figure 7-2 PFD AFCS Display

FLIGHT DIRECTOR MODES

Flight director modes are normally selected independently for the pitch and roll axes. Unless otherwise specified, all mode keys are alternate action (i.e., press on, press off). In the absence of specific mode selection, the flight director reverts to the default pitch and/or roll modes. Mode keys on the AFCS controller are accompanied by annunciator lights which are illuminated when their respective modes are armed or active.

Armed modes are annunciated in white and active in green in the AFCS Status Box. Under normal operation, when the **FD** Key is pressed, the flight director reverts to the default mode(s) for the axis(es). Automatic transition from armed to active mode is indicated by the white armed mode annunciation moving to the green active mode field and flashing for 10 seconds.

If the information required to compute a flight director mode becomes invalid or unavailable, the flight director automatically reverts to the default mode for that axis. A flashing yellow mode annunciation and annunciator light indicate loss of sensor (ADC) or navigation data (VOR, LOC, GPS, VNV, SBAS) required to compute commands. When such a loss occurs, the system automatically begins to roll the wings level (enters Roll Hold Mode) or maintain the pitch angle (enters Pitch Hold Mode), depending on the affected axis. The flashing annunciation stops when the affected mode key is pressed or another mode for the axis is selected. If after 10 seconds no action is taken, the flashing annunciation stops.




Figure 7-3 Loss of GPS Signal

The flight director is automatically disabled if the attitude information required to compute the default flight director modes becomes invalid or unavailable.

COMMAND BARS

Upon activation of the flight director, Command Bars are displayed in magenta on the PFDs as a single cue. The Aircraft Symbol (in yellow) changes to accommodate the Command Bar format; the Command Bars do not override the Aircraft Symbol. The single-cue Command Bars move together vertically to indicate pitch commands and bank left or right to indicate roll commands.

If the attitude information being sent to the flight director becomes invalid or unavailable, the Command Bars are removed from the display. The flight director Command Bars also disappear if the pitch exceeds +30°/-20° or bank exceeds 65°.

7.3 AFCS MODES

The AFCS is capable of operating in a variety of independent Lateral Modes, Vertical Modes and Combination of both the Lateral and Vertical Modes.

VERTICAL MODES

The following table lists the vertical modes with their corresponding controls and annunciations. The mode reference is displayed next to the active mode annunciation for Altitude Hold, Vertical Speed, and Flight Level Change modes. The NOSE UP/DN Wheel can be used to change the vertical mode reference while operating under Pitch Hold, Vertical Speed, or Flight Level Change Mode.

Vertical Mode	Description	Control	Annunciation		Reference Range	Reference Change Increment
Pitch Hold	Holds the current aircraft pitch attitude; may be used to climb/descend to the Selected Altitude	(default)	PIT		-15° to +20°	0.5°
Selected Altitude Capture	Captures the Selected Altitude	*	ALTS		±150 ft	10 ft
Altitude Hold	Holds the current Altitude Reference	ALT Key	ALT	nnnnn ft		
Vertical Speed	Maintains the current aircraft vertical speed; may be used to climb/descend to the Selected Altitude	VS Key	VS	nnnn fpm	-3000 to +1500 fpm	100 fpm
Flight Level Change, IAS Hold	Maintains the current aircraft airspeed while the aircraft is climbing/descending to the Selected Altitude	FLC Key	FLC	nnn kt	80 to 185kt	1 kt
* ALTS armed automatically when PIT, VS, FLC, TO, or GA active, and under VPTH when Selected Altitude is to be captured instead of VNV Target Altitude						

PITCH HOLD MODE (PIT)

When the flight director is activated (the **FD** Key is pressed), Pitch Hold Mode is selected by default. Pitch Hold Mode is indicated as the active vertical mode by the ‘PIT’ annunciation. This mode may be used for climb or descent to the Selected Altitude (shown above the Altimeter), since Selected Altitude Capture Mode is automatically armed when Pitch Hold Mode is activated.

In Pitch Hold Mode, the flight director maintains a constant pitch attitude, the pitch reference. The pitch reference is set to the aircraft pitch attitude at the moment of mode selection. If the aircraft pitch

attitude exceeds the flight director pitch command limitations, the flight director commands a pitch angle equal to the nose-up/down limit.

Changing the Pitch Reference

When operating in Pitch Hold Mode, the pitch reference can be adjusted by:

- Using the NOSE UP/DN Wheel

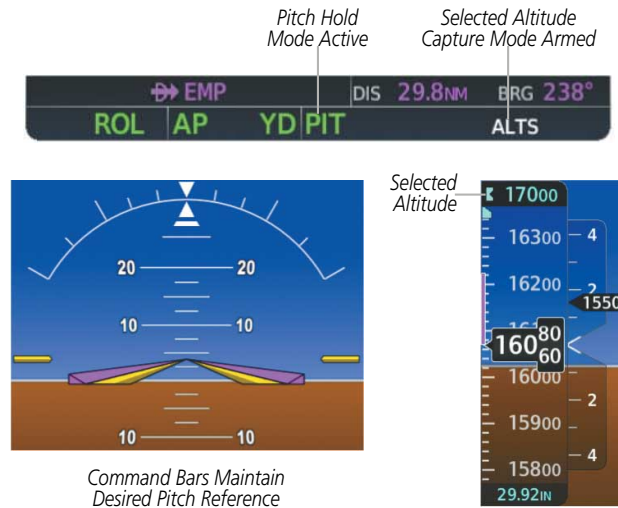


Figure 7-4 Pitch Hold Mode

SELECTED ALTITUDE CAPTURE MODE (ALTS)

Selected Altitude Capture Mode is automatically armed with activation of the following modes:

- Pitch Hold
- Vertical Speed
- Flight Level Change
- Takeoff/Go Around (if the Selected Altitude is at least 400 feet above the current aircraft altitude)
- Vertical Path Tracking (if the Selected Altitude is to be captured instead of the VNV Target Altitude)

The white 'ALTS' annunciation indicates Selected Altitude Capture Mode is armed (see previous figure for example). The ALT SEL Knob is used to set the Selected Altitude (shown above the Altimeter) until Selected Altitude Capture Mode becomes active. As the aircraft nears the Selected Altitude, the flight director automatically transitions to Selected Altitude Capture Mode with Altitude Hold Mode armed (next figure). This automatic transition is indicated by the green 'ALTS' annunciation flashing for up to 10 seconds and the appearance of the white 'ALT' annunciation. The Selected Altitude is shown as the Altitude Reference beside the 'ALTS' annunciation. At 50 feet from the Selected Altitude, the flight director automatically transitions from Selected Altitude Capture to Altitude Hold Mode and holds the Selected Altitude (shown as the Altitude Reference). As Altitude

Hold Mode becomes active, the white 'ALT' annunciation moves to the active vertical mode field and flashes green for 10 seconds to indicate the automatic transition.

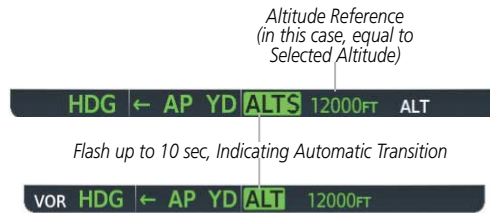


Figure 7-5 Automatic Mode Transitions During Altitude Capture

Changing the Selected Altitude

Use of the **ALT SEL** Knob to change the Selected Altitude while Selected Altitude Capture Mode is active causes the flight director to revert to Pitch Hold Mode with Selected Altitude Capture Mode armed for the new Selected Altitude.

ALTITUDE HOLD MODE

Altitude Hold Mode can be activated by pressing the **ALT** Key; the flight director maintains the current aircraft altitude (to the nearest 10 feet) as the Altitude Reference. The flight director's Altitude Reference, shown in the AFCS Status Box, is independent of the Selected Altitude, displayed above the Altimeter. Altitude Hold Mode active is indicated by a green 'ALT' annunciation in the AFCS Status Box. Altitude Hold Mode is automatically armed when the flight director is in Selected Altitude Capture Mode. Selected Altitude Capture Mode automatically transitions to Altitude Hold Mode when the altitude error is less than 50 feet. In this case, the Selected Altitude becomes the flight director's Altitude Reference.

Changing The Altitude Reference



NOTE: Turning the **ALT SEL** Knob while in Altitude Hold Mode changes the Selected Altitude, but not the flight director's Altitude Reference, and does not cancel the mode.

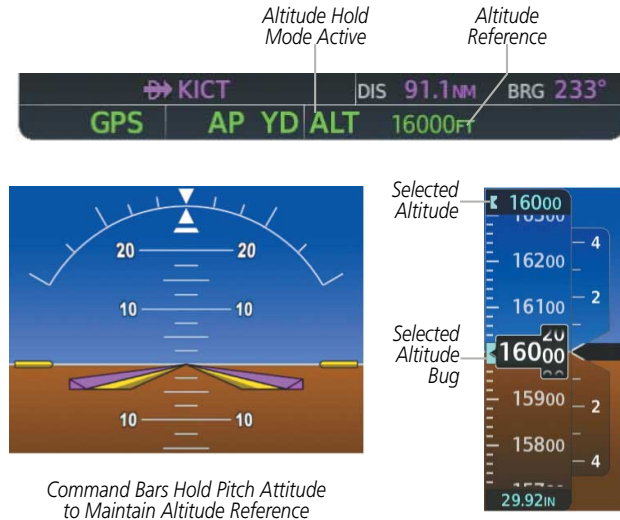


Figure 7-6 Altitude Hold Mode

VERTICAL SPEED MODE

In Vertical Speed Mode, the flight director acquires and maintains a Vertical Speed Reference. Current aircraft vertical speed (to the nearest 100 fpm) becomes the Vertical Speed Reference at the moment of Vertical Speed Mode activation. This mode may be used for climb or descent to the Selected Altitude (shown above the Altimeter) since Selected Altitude Capture Mode is automatically armed when Vertical Speed Mode is selected. When Vertical Speed Mode is activated by pressing the VS Key, 'VS' is annunciated in green in the AFCS Status Box along with the Vertical Speed Reference. The Vertical Speed Reference is also displayed above the Vertical Speed Indicator. A Vertical Speed Reference Bug corresponding to the Vertical Speed Reference is shown on the indicator.

Changing the Vertical Speed Reference

The Vertical Speed Reference (shown both in the AFCS Status Box and above the Vertical Speed Indicator) may be changed by:

- Using the NOSE UP/DN Wheel

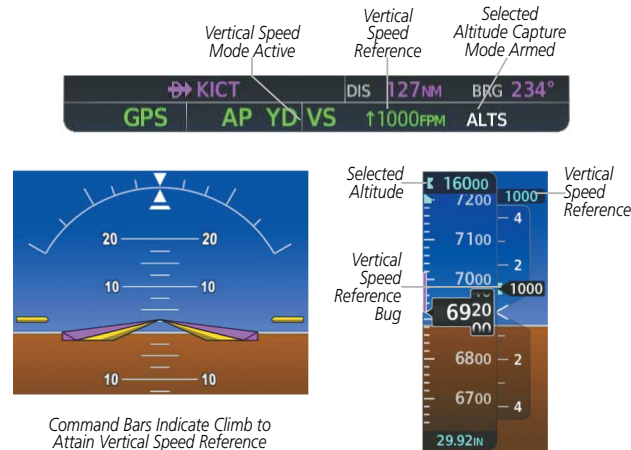


Figure 7-7 Vertical Speed Hold Mode

FLIGHT LEVEL CHANGE MODE

NOTE: The Selected Altitude should be set before selecting Flight Level Change Mode.

Flight Level Change Mode is selected by pressing the FLC Key. This mode acquires and maintains the Airspeed Reference in IAS while climbing or descending to the Selected Altitude (shown above the Altimeter). When Flight Level Change Mode is active, the flight director continuously monitors Selected Altitude, airspeed, and altitude. The Airspeed Reference is set to the current airspeed upon mode activation. Flight Level Change Mode is indicated by a green 'FLC' annunciation beside the Airspeed Reference in the AFCS Status Box. The Airspeed Reference is also displayed directly above the Airspeed Indicator, along with a bug corresponding to the Airspeed Reference along the tape. Engine power must be adjusted to allow the autopilot to fly the aircraft at a pitch attitude corresponding to the desired flight profile (climb or descent) while maintaining the Airspeed Reference. The flight director maintains the current altitude until either engine power or the Airspeed Reference are adjusted and does not allow the aircraft to climb or descend away from the Selected Altitude.

Changing the Airspeed Reference

The Airspeed Reference (shown in both the AFCS Status Box and above the Airspeed Indicator) may be adjusted by:

- Using the NOSE UP/DN Wheel

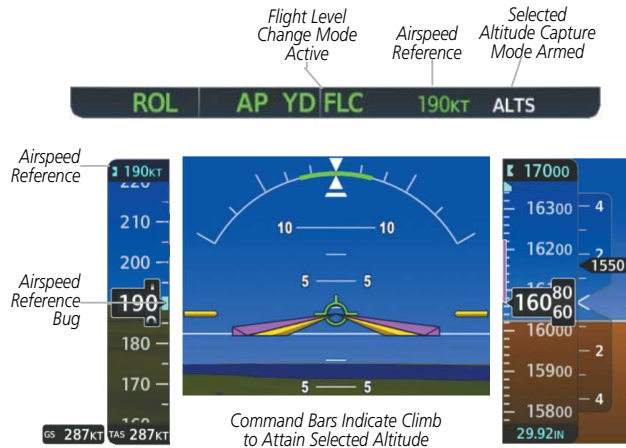



Figure 7-8 Flight Level Change Mode

LATERAL MODES

The following table relates each Garmin AFCS lateral mode to its respective control and annunciation. Refer to the combination modes section for information regarding Go Around and Takeoff modes.

Lateral Mode	Description	Control	Annunciation	Maximum Roll Command Limit
Roll Hold	Holds the current aircraft roll attitude or rolls the wings level, depending on the commanded bank angle	(default)	ROL	25°
Heading Select	Captures and tracks the Selected Heading	HDG Key	HDG	25°
Navigation, GPS Arm/Capture/Track	Captures and tracks the selected navigation source (FMS, VOR, LOC)	NAV Key	GPS	25° Capture 10° Track
Navigation, VOR Enroute Arm/Capture/Track			VOR	25° Capture 10° Track
Navigation, LOC Arm/Capture/Track (No Glideslope)			LOC	25° Capture 10° Track
The AFCS limits turn rate to 3 degrees per second (standard rate turn).				

ROLL HOLD MODE (ROL)

 **NOTE:** If Roll Hold Mode is activated as a result of a mode reversion, the flight director rolls the wings level.

When the flight director is activated or switched, Roll Hold Mode is selected by default. This mode is annunciated as ‘ROL’ in the AFCS Status Box. The current aircraft bank angle is held, subject to the bank angle condition.




Bank Angle	Flight Director Response
< 6°	Rolls wings level
6 to 25°	Maintains current aircraft roll attitude
> 25°	Limits bank to 25°

Figure 7-9 Roll Hold Mode Responses

HEADING SELECT MODE (HDG)

Heading Select Mode is activated by pressing the HDG Key. Heading Select Mode acquires and maintains the Selected Heading. The Selected Heading is shown by a light blue bug on the HSI and in the box to the upper left of the HSI.

Changing The Selected Heading

 **NOTE:** Pressing the **HDG** Knob synchronizes the Selected Heading to the current heading.

The Selected Heading is adjusted using the HDG Knob on either PFD.

Turns are commanded in the same direction as Selected Heading Bug movement, even if the bug is turned more than 180° from the present heading (e.g., a 270° turn to the right). However, Selected Heading changes of more than 330° at a time result in turn reversals.

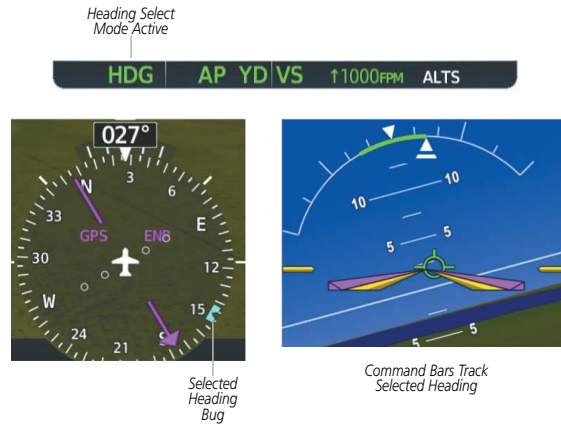


Figure 7-10 Heading Select Mode

NAVIGATION MODES (FMS, VOR, LOC)

NOTE: The selected navigation receiver must have a valid VOR or LOC signal or active FMS course for the flight director to enter Navigation Mode.

Pressing the NAV Key selects Navigation Mode. Navigation Mode acquires and tracks the selected navigation source (FMS, VOR, LOC). The flight director follows FMS roll steering commands when FMS is the selected navigation source. When the navigation source is VOR or LOC, the flight director creates roll steering commands from the Selected Course and deviation. Navigation Mode can also be used to fly non-precision FMS and LOC approaches where vertical guidance is not required. If the Course Deviation Indicator (CDI) shows greater than one dot when the NAV Key is pressed, the selected mode is armed. If the CDI shows less than one dot, Navigation Mode is automatically captured when the NAV Key is pressed. The armed annunciation appears in white to the left of the active lateral mode.



Figure 7-11 FMS Navigation Mode Armed

When the CDI has automatically switched from FMS to LOC during a LOC/ILS approach, FMS Navigation Mode remains active, providing FMS steering guidance until the localizer signal is captured. LOC Navigation Mode is armed automatically when the navigation source switch takes place if the APR Key is not pressed prior to the automatic source switch.

If Navigation Mode is active and either of the following occur, the flight director reverts to Roll Hold Mode (wings rolled level):

- Different VOR tuned while in VOR Navigation Mode (VOR Navigation Mode reverts to armed)
- Navigation source manually switched (with the CDI Softkey)
- During a LOC/ILS approach, the FAF is crossed while in FMS Navigation Mode after the automatic navigation source switch from FMS to LOC

Changing The Selected Course

If the navigation source is VOR or localizer or OBS Mode has been enabled when using GPS, the Selected Course is controlled using the **COM/NAV/CRS/XPDR** Knob.

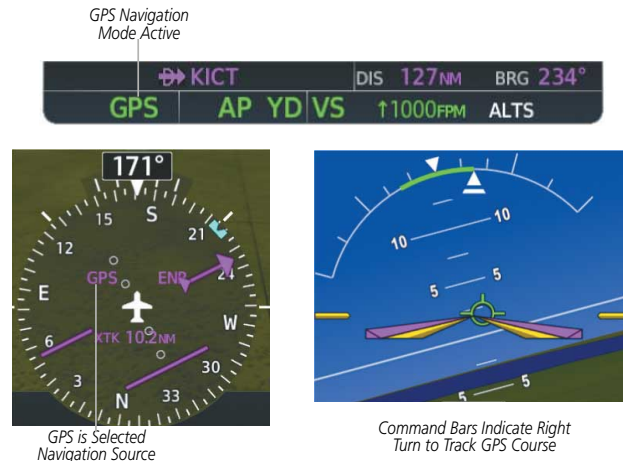


Figure 7-12 Navigation Mode

COMBINATION MODES (VNV, APR, NAV, BC, GA)

The following table lists the modes that operating by using both Vertical and Lateral Modes with their corresponding controls and annunciations.

Mode	Description	Control	Annunciation	Maximum Roll Command Limit
Vertical Path Tracking	Captures and tracks descent legs of an active vertical profile	VNV Key	VPTH	
VNV Target Altitude Capture	Captures the Vertical Navigation (VNV) Target Altitude	*	ALTV	
Glidepath	Captures and tracks the SBAS glidepath on approach	APR Key	GP	
Glideslope	Captures and tracks the ILS glideslope on approach		GS	
Backcourse Arm/Capture/Track	Captures and tracks a localizer signal for backcourse approaches	NAV Key	BC	25° Capture 10° Track

Mode	Description	Control	Annunciation	Maximum Roll Command Limit
Approach, GPS Arm/Capture/Track	Captures and tracks the selected navigation source (FMS, VOR, LOC)	APR Key	GPS	25°
Approach, VOR Arm/Capture/Track			VAPP	25° Capture 10° Track
Approach, ILS Arm/Capture/Track (Glideslope Mode automatically armed)			LOC	
Takeoff	Commands a constant pitch angle and wings level on the ground in preparation for takeoff	GA Button	Wings Level	
Go Around	Commands a constant pitch angle and wings level in the air	GA Button	Wings Level	
Level	Autopilot engages and commands pitch angle necessary to establish zero vertical fpm	***	Wings Level	
* ALTV is armed automatically under VPTH when VNV Target Altitude is to be captured instead of Selected Altitude.				

VERTICAL NAVIGATION MODES (VPTH, ALTV)

 **NOTE:** VNV is disabled when parallel track or Dead Reckoning Mode is active.

 **NOTE:** The Selected Altitude takes precedence over any other vertical constraints.

Vertical Navigation (VNV) flight control is available for enroute/terminal cruise and descent operations any time that VNV flight planning is available. Refer to the GPS Navigation Section for more information on VNV flight plans. Conditions for availability include, but are not limited to:

- The selected navigation source is GPS.
- A VNV flight plan (with at least one altitude-constrained waypoint) or vertical direct-to is active.
- VNV is enabled (VNV ENBL Softkey pressed on the MFD).
- Crosstrack error is valid and within certain limits.
- Desired/actual track are valid or track angle error is within certain limits.

- The VNV Target Altitude of the active waypoint is no more than 250 ft above the current aircraft altitude.

The flight director may be armed for VNV at any time, but no target altitudes are captured during a climb. The Command Bars provide vertical profile guidance based on specified altitudes (entered manually or loaded from the database) at waypoints in the active flight plan or vertical direct-to. The appropriate VNV flight control modes are sequenced by the flight director to follow the path defined by the vertical profile. Upon reaching the last waypoint in the VNV flight plan, the flight director transitions to Altitude Hold Mode and cancels any armed VNV modes.

Vertical Path Tracking Mode (VPTH)



NOTE: *If another vertical mode key is pressed while Vertical Path Tracking Mode is selected, Vertical Path Tracking Mode reverts to armed.*

When a vertical profile (VNV flight plan) is active and the VNV Key is pressed, Vertical Path Tracking Mode is armed in preparation for descent path capture. ‘VPTH’ (or ‘V’ when Glidepath or Glideslope Mode is concurrently armed) is annunciated in white in addition to previously armed modes. If applicable, the appropriate altitude capture mode is armed for capture of the next VNV Target Altitude (ALTV) or the Selected Altitude (ALTS), whichever is greater.




Figure 7-13 Vertical Path Tracking Armed Annunciations

Prior to descent path interception, the Selected Altitude must be set below the current aircraft altitude by at least 75 feet. For the flight director to transition from Altitude Hold to Vertical Path Tracking Mode, acknowledgment is required within five minutes of descent path interception by:

- Pressing the VNV Key
- Adjusting the Selected Altitude

If acknowledgment is not received within one minute of descent path interception, the white ‘VPTH’ annunciation starts to flash. Flashing continues until acknowledged or the descent path is intercepted. If the descent is not confirmed by the time of interception, Vertical Path Tracking Mode remains armed and the descent is not captured.

In conjunction with the “TOD [top of descent] within 1 minute” annunciation in the PFD Navigation Status Box and the “Vertical track” voice message, VNV indications (VNV Target Altitude, vertical deviation, and vertical speed required) appear on the PFDs in magenta.

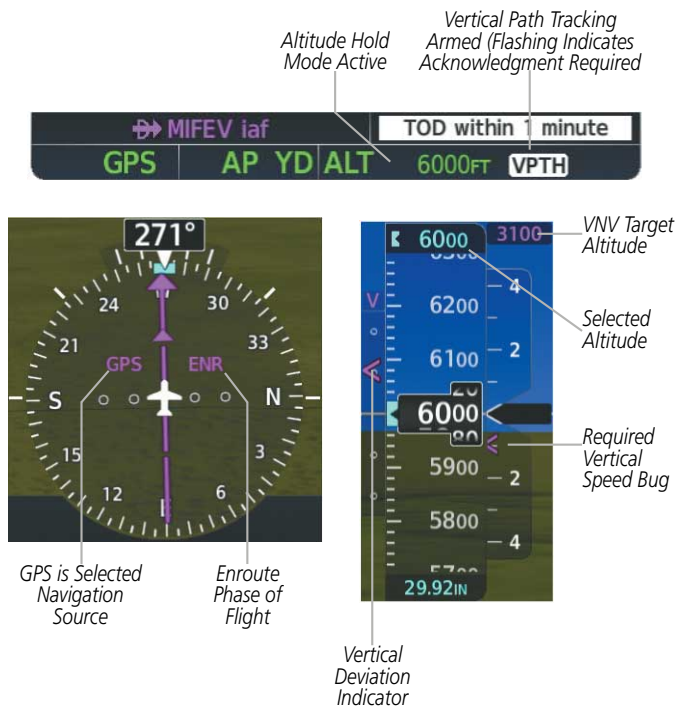


Figure 7-14 Vertical Path Capture

When a descent leg is captured (i.e., vertical deviation becomes valid), Vertical Path Tracking becomes active and tracks the descent profile (next figure). An altitude capture mode ('ALTS' or 'ALTV') is armed as appropriate.

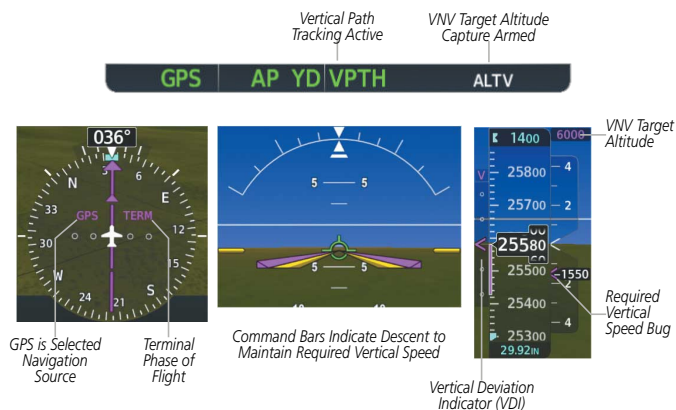


Figure 7-15 Vertical Path Tracking Mode

If the altimeter barometric setting is adjusted while Vertical Path Tracking is active, the flight director increases/decreases the descent rate by up to 500 fpm to re-establish the aircraft on the descent path (without commanding a climb). Adjusting the altimeter barometric setting creates discontinuities in VNV vertical deviation, moving the descent path. For large adjustments, it may take several minutes for the aircraft to re-establish on the descent path. If the change is made while nearing a waypoint with a VNV Target Altitude, the aircraft may not re-establish on the descent path in time to meet the vertical constraint.

AUTOMATIC REVERSION TO PITCH HOLD MODE

Several situations can occur while Vertical Path Tracking Mode is active which cause the flight director to revert to Pitch Hold Mode:

- Vertical deviation exceeds 200 feet during an overspeed condition.
- Vertical deviation experiences a discontinuity that both exceeds 200 feet in magnitude and results in the vertical deviation exceeding 200 feet in magnitude. Such discontinuities are usually caused by flight plan changes that affect the vertical profile.
- Vertical deviation becomes invalid (the Vertical Deviation Indicator is removed from the PFD).
- A display enters Reversionary Mode (this does not apply to an active vertical direct-to).

Unless VNV is disabled, Vertical Path Tracking Mode and the appropriate altitude capture mode become armed following the reversion to Pitch Hold Mode to allow for possible profile recapture.

NON-PATH DESCENTS

Pitch Hold, Vertical Speed, and Flight Level Change modes can also be used to fly non-path descents while VNV flight control is selected. If the VS or FLC Key is pressed while Vertical Path Tracking Mode is selected, Vertical Path Tracking Mode reverts to armed along with the appropriate altitude capture mode to allow profile re-capture.




Figure 7-16 Flight Level Change VNV Non-Path Descent

To prevent immediate profile re-capture, the following must be satisfied:

- At least 10 seconds have passed since the non-path transition was initiated
- Vertical deviation from the profile has exceeded 250 feet, but is now less than 200 feet

Pressing the VNV Key twice re-arms Vertical Path Tracking for immediate profile re-capture.

VNV TARGET ALTITUDE CAPTURE MODE (ALTV)

 **NOTE:** Armed VNV Target Altitude and Selected Altitude capture modes are mutually exclusive. However, Selected Altitude Capture Mode is armed implicitly (not annunciated) whenever VNV Target Altitude Capture Mode is armed.

VNV Target Altitude Capture is analogous to Selected Altitude Capture Mode and is armed automatically after the VNV Key is pressed and the next VNV Target Altitude is to be intercepted before the Selected Altitude. The annunciation 'ALTV' indicates that the VNV Target Altitude is to be captured. VNV Target Altitudes are shown in the active flight plan or vertical direct-to, and can be entered manually or loaded from a database (see the FMS Navigation Section for details). At the same time as "TOD within 1 minute" is annunciated in the Navigation Status Box, the active VNV Target Altitude is displayed above the Vertical Speed Indicator.

As the aircraft nears the VNV Target Altitude, the flight director automatically transitions to VNV Target Altitude Capture Mode with Altitude Hold Mode armed. This automatic transition is indicated by the green 'ALTV' annunciation flashing for up to 10 seconds and the appearance of the white 'ALT' annunciation. The VNV Target Altitude is shown as the Altitude Reference beside the 'ALTV' annunciation and remains displayed above the Vertical Speed Indicator. The Required Vertical Speed Indication (RSVI) is removed once VNV Target Altitude Capture Mode becomes active.

At 50 feet from the VNV Target Altitude, the flight director automatically transitions from VNV Target Altitude Capture to Altitude Hold Mode and tracks the level leg. As Altitude Hold Mode becomes active, the white 'ALT' annunciation moves to the active vertical mode field and flashes green for 10 seconds to indicate the automatic transition. The flight director automatically arms Vertical Path Tracking, allowing upcoming descent legs to be captured and subsequently tracked.

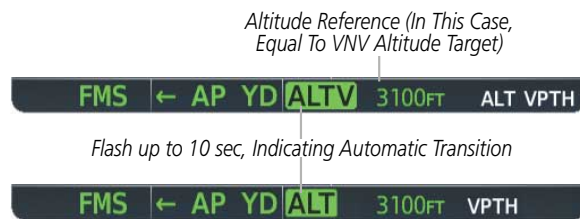


Figure 7-17 Automatic Mode Transitions During Altitude Capture

Changing the VNV Target Altitude

Changing the current VNV Target Altitude while VNV Target Altitude Capture Mode is active causes the flight director to revert to Pitch Hold Mode. Vertical Path Tracking and the appropriate altitude capture mode are armed in preparation to capture the new VNV Target Altitude or the Selected Altitude, depending on which altitude is to be intercepted first.

VNV target altitudes can be changed while editing the active flight plan (see the GPS Navigation Section for details).

APPROACH MODES (GPS, VAPP, LOC)

NOTE: The selected navigation receiver must have a valid VOR or LOC signal or active GPS course for the flight director to enter Approach Mode.

Approach Mode is activated when the APR Key is pressed. Approach Mode acquires and tracks the selected navigation source (GPS, VOR, or LOC), depending on loaded approach. This mode uses the selected navigation receiver deviation and desired course inputs to fly the approach. Pressing the APR Key when the CDI is greater than one dot arms the selected approach mode (annunciated in white to the left of the active lateral mode). If the CDI is less the 1 dot, the LOC is automatically captured when the APR Key is pressed.

VOR Approach Mode (VAPP) provides greater sensitivity for signal tracking than VOR Navigation Mode.

Selecting VOR Approach Mode:

- 1) Ensure a valid VOR frequency is tuned
- 2) Ensure that VOR is the selected navigation source (use the **CDI** Softkey to cycle through navigation sources if necessary).
- 3) Press the **APR** Key.

When GPS Approach Mode is armed, Glidepath Mode is also armed.

Selecting GPS Approach Mode without a Glidepath:

- 1) Ensure a GPS approach is loaded into the active flight plan. The active waypoint must be part of the flight plan (cannot be a direct-to a waypoint not in the flight plan).
- 2) Ensure that GPS is the selected navigation source (use the **CDI** Softkey to cycle through navigation sources if necessary).
- 3) Press the **APR** Key.

GLIDEPATH MODE (GP)

Glidepath Mode is used to track the SBAS-based glidepath. When Glidepath Mode is armed, 'GP' is annunciated in white in the AFCS Status Box.

Selecting Glidepath Mode

- 1) Ensure a FMS approach is loaded into the active flight plan. The active waypoint must be part of the flight plan (cannot be a direct-to a waypoint not in the flight plan).
- 2) Ensure that FMS is the selected navigation source (use the **CDI** Softkey to cycle through navigation sources if necessary).
- 3) Press the **APR** Key.

Selecting LOC Approach Mode without a Glideslope:

- 1) Ensure a valid localizer frequency is tuned.
- 2) Ensure that LOC is the selected navigation source (use the **CDI** Softkey to cycle through navigation sources if necessary).
- 3) Press the **NAV** Key.

Or

- 1) Ensure that GPS is the selected navigation source (use the **CDI** Softkey to cycle through navigation sources if necessary).
- 2) Ensure a LOC/ILS approach is loaded into the active flight plan.
- 3) Ensure the corresponding LOC frequency is tuned.
- 4) Press the **NAV** Key.

GLIDESLOPE MODE (GS)

Glideslope Mode is available for LOC/ILS approaches to capture and track the glideslope. When Glideslope Mode is armed (annunciated as ‘GS’ in white), LOC Approach Mode is armed as the lateral flight director mode.

Selecting LOC with Glideslope Mode:

- 1) Ensure a valid localizer frequency is tuned.
- 2) Ensure that LOC is the selected navigation source (use the **CDI** Softkey to cycle through navigation sources if necessary).
- 3) Press the **APR** Key.

Or

- 1) Ensure that GPS is the selected navigation source (use the **CDI** Softkey to cycle through navigation sources if necessary).
- 2) Ensure a LOC/ILS approach is loaded into the active flight plan.
- 3) Ensure the corresponding LOC frequency is tuned.
- 4) Press the **APR** Key.



Figure 7-18 Glideslope Mode Armed

Once LOC is the navigation source, the localizer and glideslope can be captured. Upon reaching the glideslope, the flight director transitions to Glideslope Mode and begins to capture and track the glideslope.

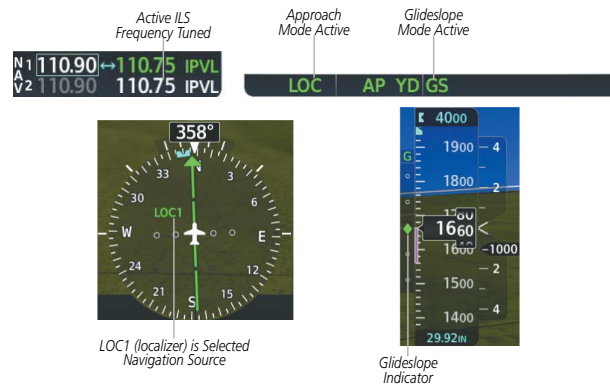


Figure 7-19 Glideslope Mode

If the following occurs, the flight director reverts to Roll Hold Mode (wings rolled level):

- Approach Mode is active and a Vectors-To-Final is activated
- Approach Mode is active and Navigation source is manually switched

- During a LOC/ILS approach, GPS Navigation Mode is active and the FAF is crossed after the automatic navigation source switch from GPS to LOC

BACKCOURSE MODE (BC)

NOTE: When making a backcourse approach, set the Selected Course to the localizer front course.

Backcourse Mode captures and tracks a localizer signal in the backcourse direction. The mode may be selected by pressing the NAV Key. Backcourse Mode is armed if the CDI is greater than one dot when the mode is selected. If the CDI is less than one dot, Backcourse Mode is automatically captured when the NAV Key is pressed. The flight director creates roll steering commands from the Selected Course and deviation when in Backcourse Mode.

Backcourse Navigation Mode is selected when the localizer front course is greater than 105° from the aircraft heading. Backcourse Navigation Mode captures and tracks a localizer signal in the backcourse direction. The annunciation 'BC' in the AFCS Status Box indicates Backcourse Navigation Mode.



Figure 7-20 Backcourse Mode

Intercepting and Flying a DME Arc

The AFCS will intercept and track a DME arc that is part of the active flight plan provided that FMS Navigation Mode is engaged, FMS is the active navigation source on the CDI, and the DME arc segment is the active flight plan leg. It is important to note that automatic navigation of DME arcs is based on GPS. Thus, even if the **APR** key is pressed and LOC or VOR Approach Mode is armed prior to reaching the Initial Approach Fix (IAF), Approach Mode will not activate until the arc segment is completed.

If the pilot decides to intercept the arc at a location other than the published IAF (i.e. ATC provides vectors to intercept the arc) and subsequently selects Heading Mode or Roll Mode, the AFCS will not automatically intercept or track the arc unless the pilot activates the arc leg of the flight plan and arms FMS Navigation Mode. The AFCS will not intercept and fly a DME arc before reaching an IAF that defines the beginning of

the arc segment. Likewise, if at any point while established on the DME arc the pilot deselects FMS Navigation Mode, the AFCS will no longer track the arc.

TAKEOFF (TO) AND GO AROUND (GA) MODES

Go Around and Takeoff modes are coupled pitch and roll modes and are annunciated as both the vertical and lateral modes when active. In these modes, the flight director commands a constant set pitch attitude and wings level. The **GA** Button is used to select both modes. The mode entered by the flight director depends on whether the aircraft is on the ground.

Takeoff Mode provides an attitude reference during rotation and takeoff. This mode can be selected only while on the ground by pushing the **GA** Button. The flight director Command Bars assume a wings-level, pitch-up attitude.

Pressing the **GA** Button while in the air activates the flight director in wings level, pitch-up attitudes, allowing the execution of a missed approach or a go around.

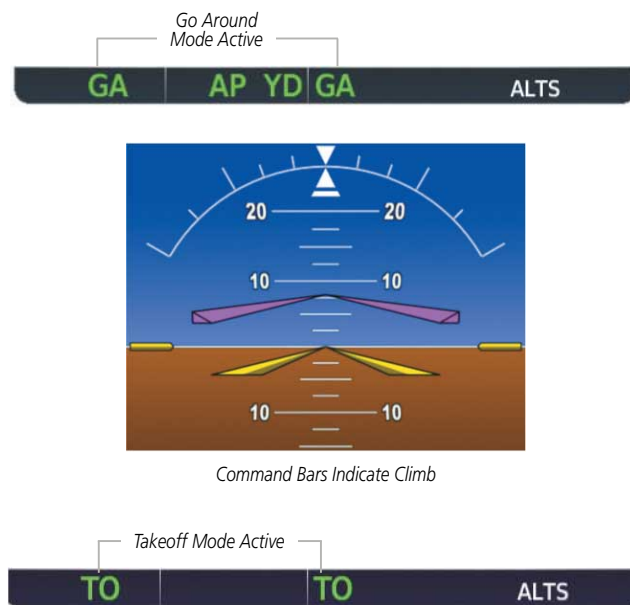


Figure 7-21 Takeoff and Go Around Modes

LEVEL MODE (LVL)

Level Mode is coupled pitch and roll modes and is annunciated as both the vertical and lateral modes when active. Pressing the LVL Key engages the autopilot (if the autopilot is disengaged) in level vertical and lateral modes. Level Mode does not track altitude or heading. When the LVL Key is pressed all armed and active modes are cancelled and the autopilot and flight director revert to LVL mode for pitch and roll. While in level mode, all other modes are available by pressing the corresponding button.

7.4 AUTOPILOT AND YAW DAMPER OPERATION



NOTE: Refer to the POH for specific instructions regarding emergency procedures.

The autopilot and yaw damper operate the flight control surface servos to provide automatic flight control. The autopilot controls the aircraft pitch and roll attitudes following commands received from the flight director. Pitch autotrim provides trim commands to the pitch trim servo to relieve any sustained effort required by the pitch servo. Autopilot operation is independent of the yaw damper.

The yaw damper reduces Dutch roll tendencies and coordinates turns. It can operate independently of the autopilot and may be used during normal hand-flight maneuvers. Yaw rate commands are limited to 6 deg/sec by the yaw damper.

PITCH AXIS AND TRIM

The autopilot pitch axis uses pitch rate to stabilize the aircraft pitch attitude during flight director maneuvers. Flight director pitch commands are rate- and attitude-limited, combined with pitch damper control, and sent to the pitch servo motor. The pitch servo measures the output effort (torque) and provides this signal to the pitch trim servo. The pitch trim servo commands the motor to reduce the average pitch servo effort.

When the autopilot is not engaged, the pitch trim servo may be used to provide manual electric pitch trim (MEPT). This allows the aircraft to be trimmed using a control wheel switch rather than the trim wheel. Trim speeds are scheduled with airspeed to provide more consistent response.

ROLL AXIS

The autopilot roll axis uses roll rate to stabilize aircraft roll attitude during flight director maneuvers. The flight director roll commands are rate- and attitude-limited, combined with roll damper control, and sent to the roll servo motor.

YAW AXIS

The yaw damper uses yaw rate and roll attitude to dampen the aircraft's natural Dutch roll response. It also uses lateral acceleration to coordinate turns. Yaw damper operation is independent of autopilot engagement.

The system automatically engages the yaw damper independent of the autopilot. When the AP Key is pressed, the autopilot, yaw damper, and flight director (if not already active) are activated and the annunciator lights on the AFCS controller for the autopilot are illuminated. The flight director engages in Pitch and Roll Hold Modes when initially activated.

FLIGHT CONTROL

Pitch and roll commands are provided to the servos based on the active flight director modes. Yaw damping is provided by the yaw servo. Servo motor control limits the maximum servo speed and torque. The servo gearboxes are equipped with slip-clutches set to certain values. This allows the servos to be overridden in case of an emergency.

PITCH AXIS AND TRIM

The autopilot pitch axis uses pitch rate to stabilize the aircraft pitch attitude during flight director maneuvers. Flight director pitch commands are rate- and attitude-limited, combined with pitch damper

control, and sent to the pitch servo motor. The pitch servo measures the output effort (torque) and provides this signal to the pitch trim servo. The pitch trim servo commands the motor to reduce the average pitch servo effort.

When the autopilot is not engaged, the pitch trim servo may be used to provide manual electric pitch trim (MEPT). This allows the aircraft to be trimmed using a control wheel switch rather than the trim wheel. Manual trim commands are generated only when both halves of the MEPT Switch are operated simultaneously. Trim speeds are scheduled with airspeed to provide more consistent response.

The pilot side MEPT Switch has priority over the copilot side MEPT Switch.

ROLL AXIS

The autopilot roll axis uses roll rate to stabilize aircraft roll attitude during flight director maneuvers. The flight director roll commands are rate- and attitude-limited, combined with roll damper control, and sent to the roll servo motor.

YAW AXIS

The yaw damper uses yaw rate and roll attitude to dampen the aircraft's natural Dutch roll response. It also uses lateral acceleration to coordinate turns.

ENGAGEMENT



NOTE: *Autopilot engagement/disengagement is not equivalent to servo engagement/disengagement.*

When the AP Key is pressed, the autopilot, yaw damper, and flight director (if not already active) are activated and the annunciator lights on the AFCS controller for the autopilot and yaw damper are illuminated. The flight director engages in Pitch and Roll Hold Modes when initially activated.



Figure 7-22 Autopilot and Yaw Damper Engaged

The YD will engage automatically when the aircraft climbs through 200' AGL and disengages when the aircraft descends through 200' AGL. The YD will always engage when AP is engaged. Disabling ESP on the 'Aux - System Setup 2' page will disable the automatic YD engagement.

Autopilot and yaw damper status are displayed in the center of the AFCS Status Box. Engagement is indicated by green 'AP' and 'YD' annunciators, respectively.

DISENGAGEMENT

The autopilot is manually disengaged by pushing the AP Key on the AFCS Control Unit. Manual autopilot disengagement is indicated by a five-second flashing yellow 'AP' annunciation and a three-second autopilot disconnect aural alert.



Figure 7-23 Manual Autopilot Disengagement

Pushing the AP DISC Switch disengages both the yaw damper and the autopilot. When the yaw damper and autopilot are manually disengaged, both the ‘AP’ and ‘YD’ annunciation turn yellow and flash for 5 seconds and a three-second autopilot disconnect aural alert is generated.



NOTE: Yaw damper will reengage when aircraft is above 200 feet AGL.



Figure 7-24 Yaw Damper Disengagement

After manual disengagement, the autopilot disconnect aural alert may be cancelled by pushing the AP DISC Switch (AP DISC Switch also cancels the flashing ‘AP’ annunciation).

Automatic autopilot disengagement is indicated by a flashing red and white ‘AP’ annunciation and by the autopilot disconnect aural alert, which continue until acknowledged by pushing the AP DISC Switch. Automatic autopilot disengagement occurs due to:

- System failure
- Invalid sensor data
- Inability to compute default flight director modes (FD also disengages automatically)

Yaw damper disengagement is indicated by a five-second flashing yellow ‘YD’ annunciation. Automatic yaw damper disengagement occurs when autopilot disengagement is caused by failure in a parameter also affecting the yaw damper. This means the yaw damper can remain operational in some cases where the autopilot automatically disengages. A localized failure in the yaw damper system or invalid sensor data also cause yaw damper disengagement.



Figure 7-25 Automatic Autopilot and Yaw Damper Disengagement

7.5 AFCS ANNUNCIATIONS AND ALERTS

UNDERSPEED PROTECTION

Underspeed Protection is designed to discourage aircraft operation below minimum established airspeeds.

When the aircraft reaches a predetermined airspeed (specific to each flap setting), a yellow MINSPD annunciation will appear above the airspeed indicator.

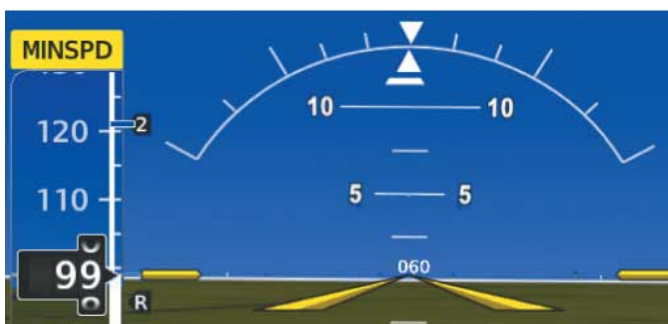


Figure 7-26 MINSPD Annunciation

If the aircraft continues to decelerate, Underspeed Protection functionality depends on which vertical flight director mode is selected. For the purpose of this discussion, the vertical flight director modes can be divided into two categories: Those in which it is important to maintain altitude for as long as possible (altitude-critical modes), and those in which maintaining altitude is less crucial (non-altitude critical modes).

TKS FIKI*	Flaps	MINSPD Annunciation	Aural AIRSPEED Alert
OFF	0%	80 kt	85 kt
	50%	76 kt	80 kt
	100%	70 kt	80 kt
ON	0%	85 kt	90 kt
	50%	81 kt	85 kt

* The optional TKS Flight Into Known Icing (FIKI) Anti-Ice System is only available on SR22 Models

ALTITUDE-CRITICAL MODES (ALT, GS, GP, TO, GA, FLC)

If the aircraft decelerates to stall warning, the lateral and vertical flight director modes will change from active to armed, and the autopilot will provide input causing the aircraft to pitch down and the wings to level.



Figure 7-27 Lateral and Vertical Flight Director Modes Armed

An aural “AIRSPEED” alert will sound and a red “UNDERSPEED PROTECT ACTIVE” annunciation (next figure) will appear to the right of the vertical speed indicator. The pitch down force will continue until the aircraft reaches a pitch attitude at which IAS equals the IAS at which stall warning turns off, plus two knots. When airspeed increases (as a result of adding power/thrust) to an IAS above the minimum commandable autopilot airspeed, the autopilot will cause the aircraft to pitch up, recapturing the vertical reference and the vertical and lateral flight director modes will change from armed to active.



Figure 7-28 Underspeed Protect Active Annunciation

NON-ALTITUDE CRITICAL MODES (VS, VNAV)

When the aircraft reaches a predetermined airspeed, a yellow MINSPEED annunciation will appear above the airspeed indicator. When the airspeed trend vector reaches a predetermined airspeed, a single aural “AIRSPEED” will sound, alerting the pilot to the impending underspeed condition.



Figure 7-29 Vertical Flight Director Mode Armed

When airspeed increases (as a result of adding power/thrust) to an IAS above the minimum commandable autopilot airspeed, the autopilot will cause the aircraft to pitch up until recapturing the vertical reference.

OVERSPEED PROTECTION

NOTE: *Overspeed protection is not active in ALT, GS or GP modes.*

While Pitch Hold, Vertical Speed, Flight Level Change, Vertical Path Tracking, or an altitude capture mode is active, airspeed is monitored by the flight director. Overspeed protection is provided to limit the flight director’s pitch command in situations where the flight director cannot acquire and maintain the mode reference for the selected vertical mode.

When Overspeed Protection is active, the Airspeed Reference appears in a box above the Airspeed Indicator, flashing a yellow 'MAXSPD' annunciation. Engine power should be reduced and/or the pitch reference adjusted to slow the aircraft. The annunciation disappears when the overspeed condition is resolved.

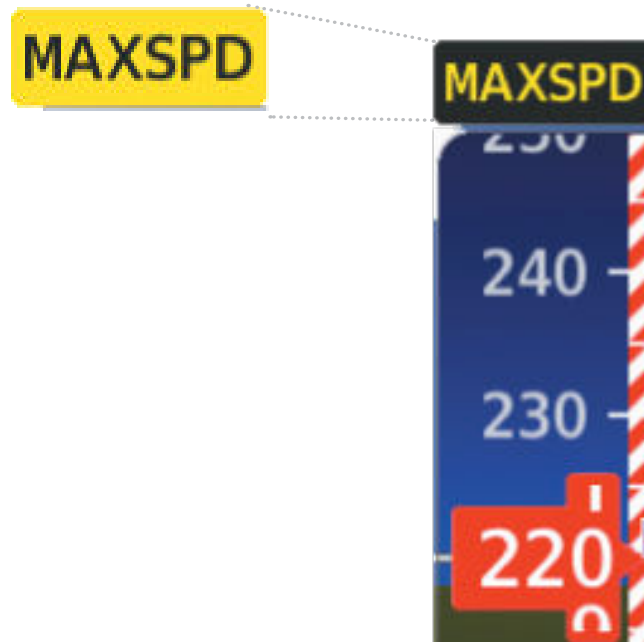


Figure 7-30 Overspeed Annunciation


LEVEL MODE (LVL)

Level Mode is coupled pitch and roll modes and is annunciated as both the vertical and lateral modes when active. Pressing the LVL Key engages the autopilot (if the autopilot is disengaged) in level vertical and lateral modes. Level Mode does not track altitude or heading. When the LVL Key is pressed all armed and active modes are cancelled and the autopilot and flight director revert to LVL mode for pitch and roll. While in level mode, all other modes are available by pressing the corresponding button. Level Mode will automatically engage when Electronic Stability Protection (ESP) has been active for 50% of the previous 40 seconds.

7.6 ABNORMAL OPERATION

ABNORMAL OPERATION

Suspected Autopilot Malfunction

 **NOTE:** Consult the aircraft documentation for the location of circuit breakers as well as specifics that may supplement or amplify this procedure.

If an autopilot failure or trim failure is suspected to have occurred, perform the following steps:

- 1) Firmly grasp the control stick.
- 2) Press and hold the **AP DISC** Switch. The autopilot will disconnect and power is removed from the trim motor. Power is also removed from all primary servo motors and engaged solenoids. Note the visual and aural alerting indicating autopilot disconnect.
- 3) Retrim the aircraft as needed. Substantial trim adjustment may be needed.
- 4) Pull the appropriate circuit breaker(s) to electrically isolate the servo and solenoid components.
- 5) Release the **AP DISC** Switch.

Overpowering Autopilot Servos

In the context of this discussion, “overpowering” refers to any pressure or force applied to the pitch controls when the autopilot is engaged. A small amount of pressure or force on the pitch controls can cause the autopilot automatic trim to run to an out-of-trim condition. Therefore, any application of pressure or force to the controls should be avoided when the autopilot is engaged.

Overpowering the autopilot during flight will cause the autopilot’s automatic trim to run, resulting in an out-of-trim condition or cause the trim to hit the stop if the action is prolonged. In this case, larger than anticipated control forces are required after the autopilot is disengaged.

The following steps should be added to the preflight check:

- 1) Check for proper autopilot operation and ensure the autopilot can be overpowered.
- 2) Note the forces required to overpower the autopilot servo clutches.

REVERSIONARY MODE


In the event of a PFD failure, the MFD goes into reversionary mode. The autopilot remains engaged but reverts to pitch hold and roll hold modes; all other modes are available for selection. If the MFD fails, the PFD goes into reversionary mode and the autopilot continues to function.

BLANK PAGE

SECTION 8 ADDITIONAL FEATURES

8.1 OVERVIEW

OVERVIEW

 **NOTE:** With the availability of SafeTaxi®, ChartView, or FliteCharts®, it may be necessary to carry another source of charts on-board the aircraft.

Additional features of the system include the following:

- SafeTaxi® diagrams
- FliteCharts®/ChartView electronic charts
- IFR/VFR Charts
- SiriusXM Satellite Radio entertainment
- Flight Data Logging
- Connex
- Wi-Fi connections
- SurfaceWatch™
- Satellite telephone and SMS messaging services
- Electronic Stability and Protection (ESP™) System
- Hypoxia Recognition with Automatic Descent Mode
- Electronic Checklists
- Auxiliary Video/EVS (Optional)
- Position Reporting

SafeTaxi diagrams provide detailed taxiway, runway, and ramp information at more than 700 airports in the United States. By decreasing range on an airport that has a SafeTaxi diagram available, a close up view of the airport layout can be seen.

The optional ChartView and FliteCharts provide on-board electronic terminal procedures charts. Electronic charts offer the convenience of rapid access to essential information.

The optional SiriusXM Satellite Radio entertainment audio feature of the GDL 69A SXM Data Link Receiver handles more than 170 channels of music, news, and sports. SiriusXM Satellite Radio offers more entertainment choices and longer range coverage than commercial broadcast stations.

The Flight Data Logging feature automatically stores critical flight and engine data on an SD data card. Approximately 1,000 flight hours can be recorded for each 1GB of available space on the card.

Connex allows for setting up the installed optional Flight Stream device for a Bluetooth connection between the system and a mobile device running the Garmin Pilot™ application.

Iridium Telephone Services and SMS messaging is an optional subscription service offered through Garmin Connex® and Iridium Satellite LLC. Voice and SMS messaging communications are through the Iridium Satellite Network. Data communications are through Iridium Data Services, or a wireless network (Wi-Fi) when the aircraft is on the ground.

The Electronic Stability and Protection (ESP™) system discourages aircraft operation outside the normal flight envelope.

The system provides a control and display interface to an optional EVS/auxiliary video system.

8.2 SAFETAXI

SafeTaxi is an enhanced feature that gives greater map detail when viewing airports at close range. The maximum map ranges for enhanced detail are pilot configurable. When viewing at ranges close enough to show the airport detail, the map reveals taxiways with identifying letters/numbers, airport Hot Spots, and airport landmarks including ramps, buildings, control towers, and other prominent features. Resolution is greater at lower map ranges. When the MFD display is within the SafeTaxi ranges, the airplane symbol on the airport provides enhanced position awareness.

Designated Hot Spots are recognized at airports with many intersecting taxiways and runways, and/or complex ramp areas. Airport Hot Spots are outlined to caution pilots of areas on an airport surface where positional awareness confusion or runway incursions happen most often. Hot Spots are defined with a magenta circle or outline around the region of possible confusion.

Any map page that displays the navigation view can also show the SafeTaxi airport layout within the maximum configured range. The following is a list of pages where the SafeTaxi feature can be seen:

- Navigation Map Page
- PFD Maps
- Weather Datalink Page
- Airport Information Page
- Intersection Information Page
- NDB Information Page
- VOR Information Page
- User Waypoint Information Page
- Trip Planning Page
- Nearest Pages
- Active and Stored Flight Plan Pages

During ground operations the aircraft's position is displayed in reference to taxiways, runways, and airport features. Airport Hot Spots are outlined in magenta. When panning over the airport, features such as runway holding lines and taxiways are shown at the cursor.

The **Detail** Softkey (declutter) label advances to Detail All, Detail 3, Detail 2 and Detail 1 each time the softkey is selected for easy recognition of decluttering level. Pressing the **Detail All** Softkey removes the taxiway markings and airport feature labels. Pressing the **Detail 3** Softkey removes VOR station ID, the VOR symbol, and intersection names if within the airport plan view. Pressing the **Detail 2** Softkey removes the airport runway layout, unless the airport in view is part of an active route structure. Pressing the **Detail 1** Softkey cycles back to the original map detail. Refer to Map Declutter Levels in the Flight Management Section.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CAS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

Configuring SafeTaxi Range

- 1) While viewing the 'Map-Navigation Map' Page, press the **MENU** Key to display the 'Page Menu.'
- 2) Turn the large **FMS** Knob to highlight the 'Map Settings' Menu Option and press the **ENT** Key.
- 3) Turn the small **FMS** Knob to select the 'Aviation' Group and press the **ENT** Key.
- 4) Turn the large **FMS** Knob to scroll through the 'Aviation' Group options to SafeTaxi.
- 5) Turn the small **FMS** Knob to display the range of distances.
- 6) Turn either **FMS** Knob to select the desired distance for maximum SafeTaxi display range.
- 7) Press the **ENT** Key to complete the selection.
- 8) Press the **FMS** Knob to return to the 'Map-Navigation Map' Page.

8.3 CHARTS

CHARTS

The preferred charts source can be selected within the system. The active chart source for a particular procedure is shown on the information pane under Source.

Selecting preferred charts source:

- 1) While viewing a chart select the **MENU** Softkey to display the Page Menu options.
- 2) Turn the large **FMS** Knob to highlight the Chart Setup menu option and press the ENT Key.
- 3) Turn the large **FMS** Knob to move to the Preferred Charts Source option.
- 4) Turn the small **FMS** Knob to choose between the available options (FliteCharts, ChartView).

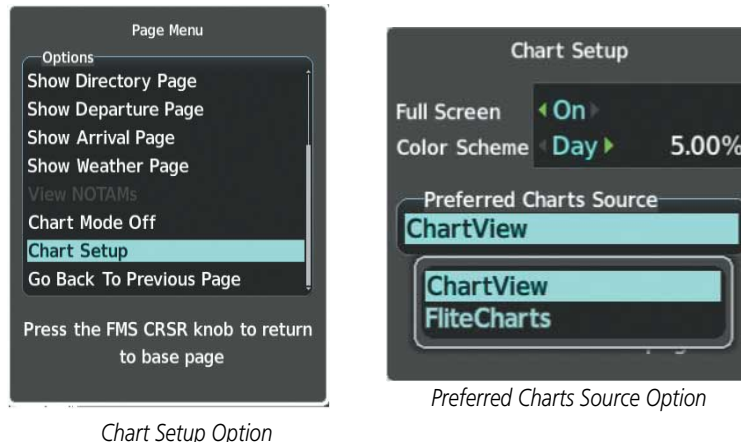


Chart Setup Option

Preferred Charts Source Option

Figure 8-1 Preferred Charts Source

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CDS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

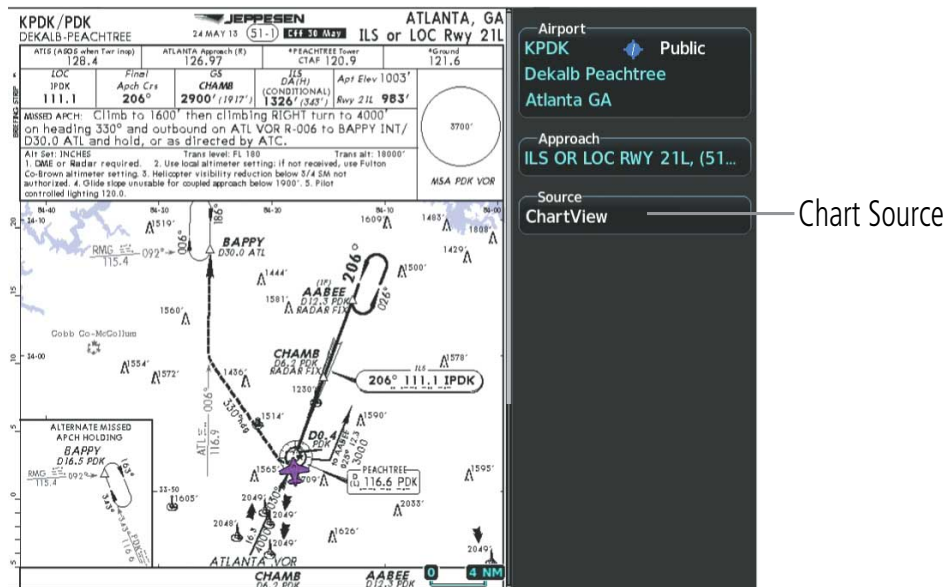


Figure 8-2 Chart Source

FLITECHARTS

FliteCharts resemble the paper version of AeroNav Services terminal procedures charts. The charts are displayed with high-resolution and in color for applicable charts.

The geo-referenced aircraft position is indicated by an aircraft symbol displayed on the chart when the current position is within the boundaries of the chart. Not all charts are geo-referenced. These charts will display an Aircraft Not Shown Icon in the lower right corner of the MFD.



Figure 8-3 Aircraft Not Shown Icon

An aircraft symbol may be displayed within an off-scale area depicted on some charts. Off-scale areas are indicated by the grey shading. Note, these areas are not shaded on the published chart. These off-scale areas appear on the chart to convey supplemental information. However, the depicted geographical position of this information, as it relates to the chart planview, is not the actual geographic position. Therefore, when the aircraft symbol appears within one of these areas, the aircraft position indicated is relative to the chart planview, not to the off-scale area.

The FliteCharts database subscription is available from Garmin. Available data includes:

- Arrivals (STAR)
- Departure Procedures (DP)
- Approaches
- Airport Diagrams



NOTE: Do not maneuver the aircraft based solely upon the geo-referenced aircraft symbol.

CHARTVIEW

ChartView resembles the paper version of Jeppesen terminal procedures charts. The charts are displayed in full color with high-resolution. The MFD depiction shows the aircraft position on the moving map in the planview of approach charts and on airport diagrams. Airport Hot Spots are outlined in magenta.

The geo-referenced aircraft position is indicated by an aircraft symbol displayed on the chart when the current position is within the boundaries of the chart. Inset boxes are not considered within the chart boundaries. Therefore, when the aircraft symbol reaches a chart boundary line, or inset box, the aircraft symbol is removed from the display.

The following figure shows examples of off-scale areas, indicated by the grey shading. Note, the grey shading is for illustrative purposes only and will not appear on the published chart or MFD display. These off-scale areas appear on the chart to convey supplemental information. However, the depicted geographical position of this information, as it relates to the chart planview, is not the actual geographic position. Therefore, when the aircraft symbol appears within one of these areas, the aircraft position indicated is relative to the chart planview, not to the off-scale area.

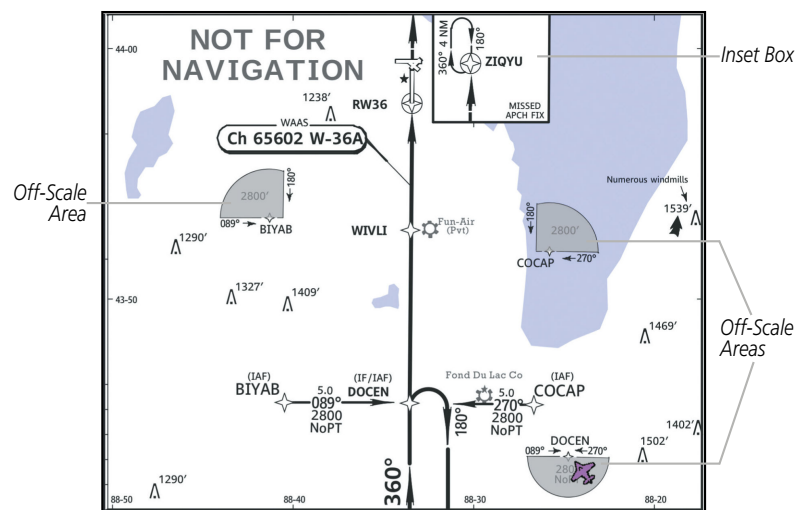


Figure 8-4 Sample Chart Indicating Off-Scale Areas



NOTE: Do not maneuver the aircraft based solely upon the geo-referenced aircraft symbol.

The ChartView database subscription is available from Jeppesen, Inc. Available data includes:

- Arrivals (STAR)
- Departure Procedures (DP)
- Approaches

- Airport Diagrams
- NOTAMs


Terminal Procedures Charts

Selecting Terminal Procedures Charts:

While viewing the Navigation Map Page, Nearest Airport Page, or Flight Plan Page, select the **Charts** Softkey.

Or:

- 1) Turn the large **FMS** Knob to scroll through the Options Menu to Show Chart.
- 2) Press the **ENT** Key to display the chart.

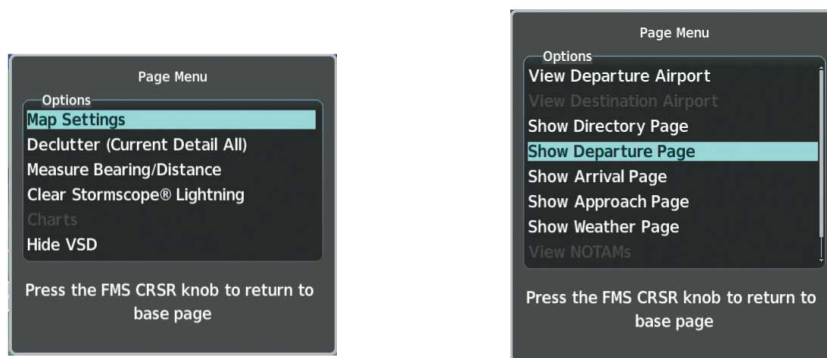

Navigation Map Page Options Menu

Waypoint Airport Information Page Options Menu

Figure 8-5 Option Menus

On the Waypoint Airport Information Page Options Menu, select the desired chart and press the **ENT** Key to display the chart.

When no terminal procedure chart is available, the banner CHART NOT AVAILABLE appears on the screen. The CHART NOT AVAILABLE banner does not refer to the FliteCharts subscription, but rather the availability of a particular airport chart selection or procedure for a selected airport.

CHART NOT AVAILABLE

Figure 8-6 Chart Not Available Banner

If there is a problem in rendering the data (such as a data error or a failure of an individual chart), the banner UNABLE TO DISPLAY CHART is then displayed.

A black rectangular banner with the text "UNABLE TO DISPLAY CHART" in white, all-caps, sans-serif font.

Figure 8-7 Unable To Display Chart Banner

When a chart is not available by selecting the **Charts** Softkey or selecting a Page Menu Option, charts may be obtained for other airports from the WPT Pages or Flight Plan Pages.

If a chart is available for the destination airport, or the airport selected in the active flight plan, the chart appears on the screen. When no flight plan is active, or when not flying to a direct-to destination, selecting the **Charts** Softkey displays the chart for the nearest airport, if available.

The chart shown is one associated with the 'WPT-Airport Information' page. Usually this is the airport runway diagram. Where no runway diagram exists, but Take Off Minimums or Alternate Minimums are available, that page appears. If Airport Information pages are unavailable, the Approach Chart for the airport is shown.

Selecting a chart

- 1) While viewing the 'Map-Navigation Map' Page, 'FPL-Active Flight Plan' Page, or 'NRST-Nearest Airports' Page, press the **Chart** Softkey. The airport diagram or approach chart is displayed on the 'WPT-Airport Information' Page.
- 2) Press the **FMS** Knob to activate the cursor.
- 3) Turn the large **FMS** Knob to select either the Airport Identifier Box or the 'Approach' Box. (Press the **APR** Softkey if the 'Approach' Box is not currently shown).
- 4) Turn the small and large **FMS** Knob to enter the desired airport identifier.
- 5) Press the **ENT** Key to complete the airport selection.
- 6) Turn the large **FMS** Knob to select the 'Approach' Box.
- 7) Turn the small **FMS** Knob to show the approach chart selection choices.
- 8) Turn either **FMS** Knob to scroll through the available charts.
- 9) Press the **ENT** Key to complete the chart selection.

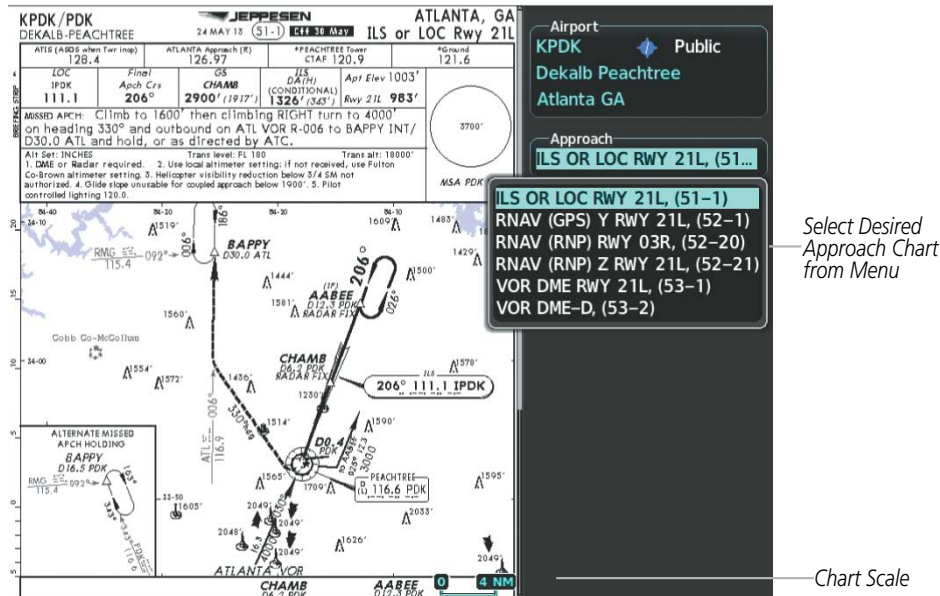


Figure 8-8 Approach Information Page, Chart Selection

While the Approaches Box is selected using the **FMS** Knob, the softkeys are blank. Once the desired chart is selected, the chart scale can be changed and the chart page can be scrolled using the **Joystick**. Pressing the **Joystick** centers the chart on the screen.

The aircraft symbol is shown on the chart only if the chart is to scale and the aircraft position is within the boundaries of the chart. The aircraft symbol is not displayed when the Aircraft Not Shown Icon appears. If the Chart Scale Box displays a banner NOT TO SCALE, the aircraft symbol is not shown. The Aircraft Not Shown Icon may appear at certain times, even if the chart is displayed to scale.

Pressing the **Chart** Softkey switches between the ChartView diagram and the associated map in the WPT page group. In the example shown, the **Chart** Softkey switches between the Atlanta, GA(KPKDK) Airport Diagram and the navigation map on the 'WPT–Airport Information' page.

Pressing the **Info 1** or **Info 2** Softkey returns to the airport diagram when the view is on a different chart. If the displayed chart is the airport diagram, the **Info 1** or **Info 2** Softkey has no effect. The aircraft position is shown in magenta on the ChartView diagrams when the location of the aircraft is within the chart boundaries.

Another source for additional airport information is from the Info Box above the chart for certain airports. This information source is not related to the **Info 1** or **Info 2** Softkey. When the Info Box is selected using the **FMS** Knob, the softkeys are blank. The Atlanta, GA airport has five additional charts offering information; the Airport Diagram, Take-off Minimums, Class B Airspace, Airline Parking Gate Coordinates, and Airline

Parking Gate Location. (The numbers in parentheses after the chart name are Jeppesen designators.)

In the example shown in following figure, the Class B Chart is selected. Pressing the **ENT** Key displays the Charlotte Class B Airspace Chart.

- Pressing the **DP** Softkey displays the Departure Procedure Chart if available.
- Pressing the **STAR** Softkey displays the Standard Terminal Arrival Chart if available.
- Pressing the **APR** Softkey displays the approach chart for the airport if available.
- Pressing the **WX** Softkey shows the airport weather frequency information, and includes weather data such as METAR and TAF from the data link receiver, when available. Weather information is available only when a data link receiver is installed and the data link weather subscription is current when required.
- Recent NOTAMS applicable to the current ChartView cycle are included in the ChartView database. Pressing the **NOTAM** Softkey shows the local NOTAM information for selected airports, when available. When NOTAMS are not available, the **NOTAM** Softkey label appears subdued and is disabled. The **NOTAM** Softkey may appear on the Airport Information Page and all of the chart page selections. Pressing the **NOTAM** Softkey again removes the NOTAMS information.

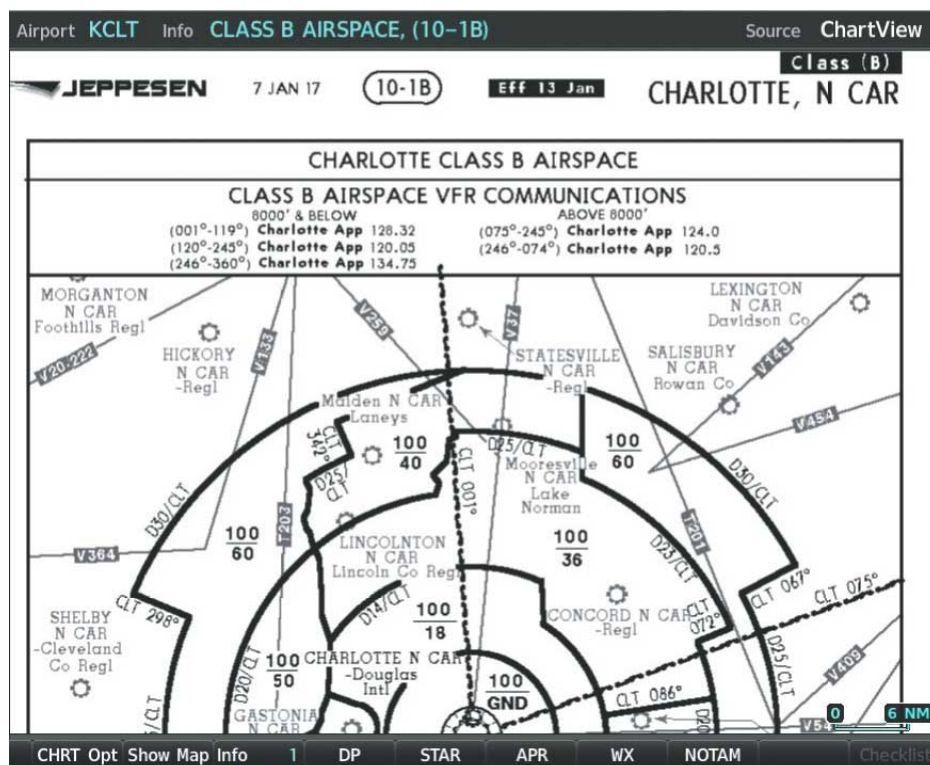


Figure 8-9 Airport Information Page, Class B Chart Selected from INFO View



NOTE: A subdued softkey label indicates the function is disabled.



NOTE: Only NOTAMs applicable to specific information conveyed on the displayed Jeppesen chart are available when the NOTAM Softkey is pressed. There may be other NOTAMs available pertaining to the flight that may not be displayed. Contact Jeppesen for more information regarding Jeppesen database published NOTAMs.

Chart Options

Pressing the **CHRTOpt** Softkey displays the next level of softkeys, the chart options level.

Pressing the **All** Softkey shows the complete approach chart on the screen.


Pressing the **Header** Softkey shows the header view (approach chart briefing strip) on the screen.

KPDK/PDK DEKALB-PEACHTREE		JEPPESEN 7 OCT 05 (51-1)		ATLANTA, GA ILS Rwy 20L	
ATIS (ASOS when Twr inop) 128.4		ATLANTA Approach (R) 126.97		*PEACHTREE Tower CTAF 120.9	
*Ground 121.6		LOC IPDK 111.1		Final Apch Crs 203°	
GS CHAMB 2832' (1841')		ILS DATA (CONDITIONAL) 1241' (250')		Apt Elev 1003' TDZE 991'	
<p>MISSED APCH: Climb to 1400' then climbing RIGHT turn to 3000' via 330° hdg and outbound on ATL VOR R-006 to GORST INT/D26.0 ATL and hold.</p> <p>All Set: INCHES Trans level: FL 180 Trans alt: 18000'</p> <p>1. DME or RADAR required. 2. Use local altimeter setting; If not received, use Fulton Co-Brown Field altimeter setting. 3. GS unusable for coupled approach below 1900'. 4. Numerous towers to heights of 2000' plus in sector south of airport. 5. Pilot controlled lighting 120.0.</p>					
				<p>MSA PDK VOR</p>	

Approach
Chart
Briefing Strip

Figure 8-10 Approach Information Page, Header View


Pressing the **Plan** Softkey shows the approach chart two dimensional plan view.

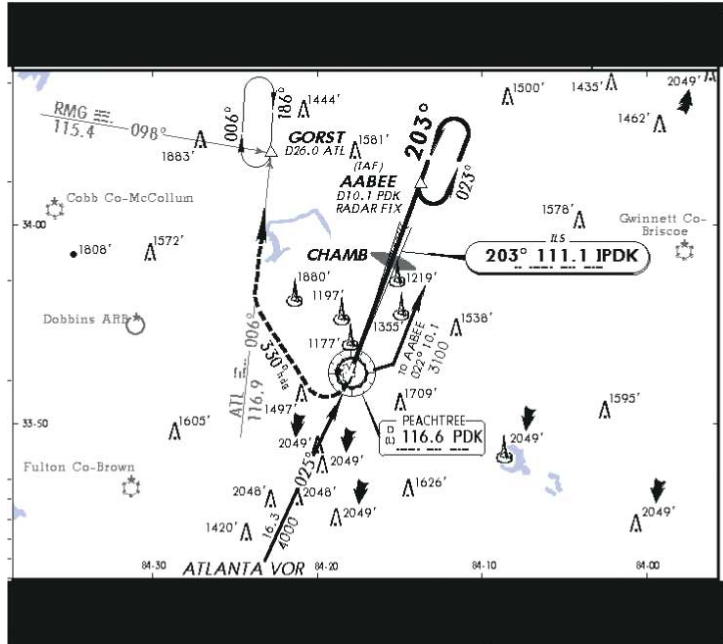

Approach Chart Plan View

Figure 8-11 Approach Information Page, Plan View

Pressing the **Profile** Softkey displays the approach chart descent profile strip.

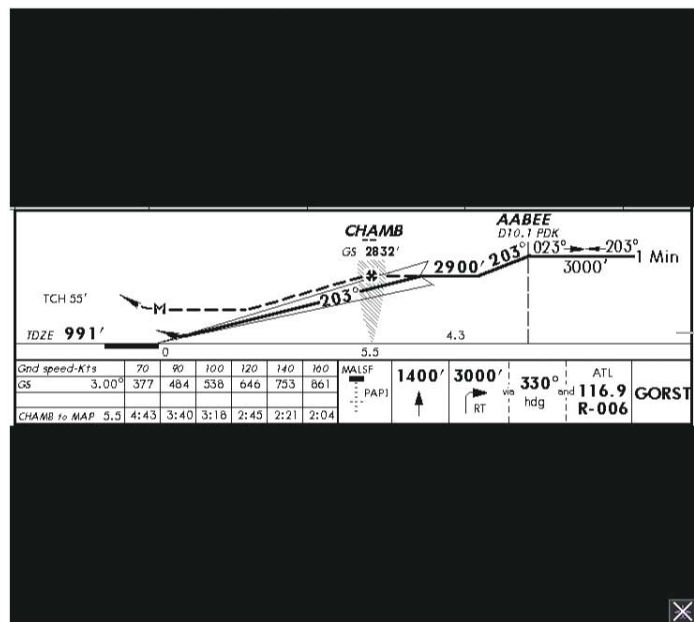

Approach Chart Descent Profile Strip

Figure 8-12 Approach Information Page, Profile View, Full Screen Width

Pressing the **Minimums** Softkey displays the minimum descent altitude/visibility strip at the bottom of the approach chart.

STRAIGHT-IN LANDING RWY 20L								CIRCLE-TO-LAND									
ILS		DA(H)		LOC (GS out)		MDA(H)		With Local Altimeter Setting		With Fulton Co. Brown Field Altimeter Setting							
1241' (250')		1281' (290')		1580' (580')		1620' (620')											
With Local Altimeter Setting		With Fulton Co. Brown Field Altimeter Setting		With Local Altimeter Setting		With Fulton Co. Brown Field Altimeter Setting											
FULL ALS out		FULL ALS out		ALS out		ALS out		Mx Kts		MDA(H)							
A				3/4		1		3/4		1		1580'(577') -1		1620'(617') -1			
B		3/4		3/4								140		1580'(577') -1 1/2		1620'(617') -1 1/2	
C				1 1/2		1 1/2						165		1580'(577') -2		1620'(617') -2	
D				1 3/4		1 3/4											

CHANGES: Charted obstructions. © JEFFERSON SANDERSON, INC. 1999-2005. ALL RIGHTS RESERVED.

Minimum
Descent
Altitude/
Visibility Strip

Figure 8-13 Approach Information Page, Minimums View, Full Screen Width

If the chart scale has been adjusted to view a small area of the chart, pressing the **Fit WDTN** Softkey changes the chart size to fit the available screen width.

Pressing the **Full SCN** Softkey alternates between removing and replacing the data window to the right.

Selecting Additional Information

- 1) While viewing the Airport Taxi Diagram, press the **Full SCN** Softkey to display the information windows (Airport, Info).
- 2) Press the **FMS** Knob to activate the cursor.
- 3) Turn the large **FMS** Knob to highlight the Airport, Info, Runways, or Frequencies Box.
- 4) Turn the small **FMS** Knob to select the Info Box choices. If multiple choices are available, scroll to the desired choice with the large **FMS** Knob and press the **ENT** Key to complete the selection.
- 5) Press the **FMS** Knob again to deactivate the cursor.

Pressing the **Back** Softkey, or waiting for 45 seconds reverts to the chart selection softkeys. The full screen view can also be selected by using the page menu option.

Selecting full screen On or Off:

- 1) While viewing a terminal chart press the **MENU** Key to display the 'Page Menu' Options.
- 2) Turn the large **FMS** Knob to highlight the 'Chart Setup' Menu Option and press the **ENT** Key.

- 3) Turn the large **FMS** Knob to move between the 'Full Screen' and 'Color Scheme' Options.
- 4) Turn the small **FMS** Knob to choose between the 'On' and 'Off' 'Full Screen' Options.

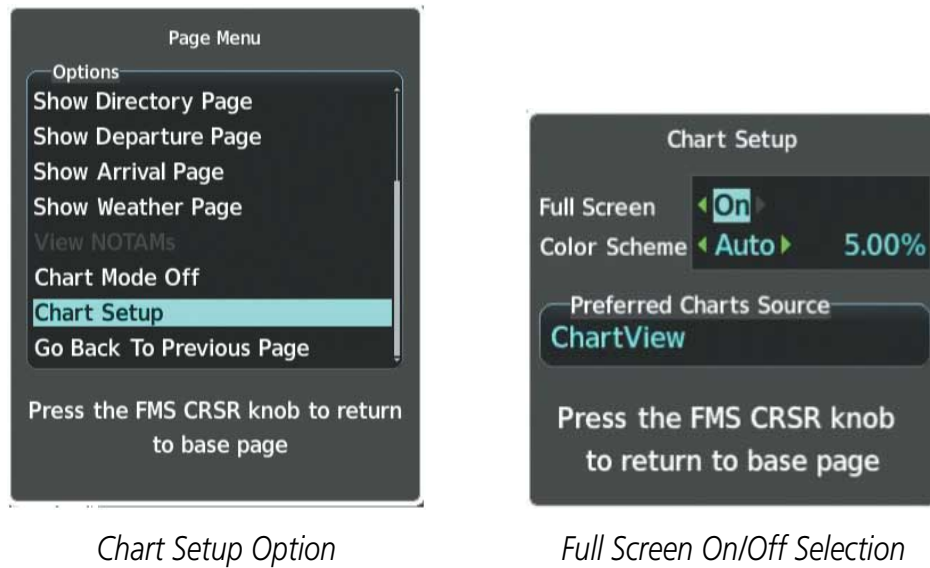


Figure 8-14 Page Menus

DAY/NIGHT VIEW

ChartView can be displayed on a white or black background for day or night viewing. The Day View offers a better presentation in a bright environment. The Night View gives a better presentation for viewing in a dark environment. When the Chart Setup Box is selected the MFD softkeys are blank.

Selecting Day, Night, or Automatic View:

- 1) While viewing a terminal chart press the **MENU** Key to display the Page Menu Options.
- 2) Turn the large **FMS** Knob to highlight the Chart Setup Menu Option and press the **ENT** Key.
- 3) Turn the large **FMS** Knob to move to the Color Scheme Option.
- 4) Turn the small **FMS** Knob to choose between Day, Auto, and Night Options.
- 5) If Auto Mode is selected, turn the large **FMS** Knob to select the percentage field. Use the small **FMS** Knob to change the percentage value. The percentage value is the day/night crossover point based on the percentage of backlighting intensity. For example, if the value is set to 15%, the day/night display changes when the display backlight reaches 15% of full brightness.

The display must be changed in order for the new setting to become active. This may be accomplished by selecting another page or changing the display range.

- 6) Press the **FMS** Knob when finished to remove the Chart Setup Menu.

AIRPORT DIRECTORY

The Aircraft Owners and Pilots Association (AOPA) and optional AC-U-KWIK Airport Directory databases offer detailed information regarding services, hours of operation, lodging options, and more. This information is viewed on the Airport Information Page by pressing the **Info** Softkey until Info 2 is displayed.

Both Airport Directories are available for downloading at flygarmin.com. However, copy only one of the databases to the Supplemental Data Card. The system cannot recognize both databases simultaneously.

Selecting the Airport Directory Page:

- 1) Turn the large **FMS** Knob to select the 'WPT' page group.
- 2) Turn the small **FMS** Knob to select the Airport Information Page. Initially, information for the airport closest to the aircraft's present position is displayed.
- 3) If necessary, press the **Info** softkey until **Info 2** is displayed.

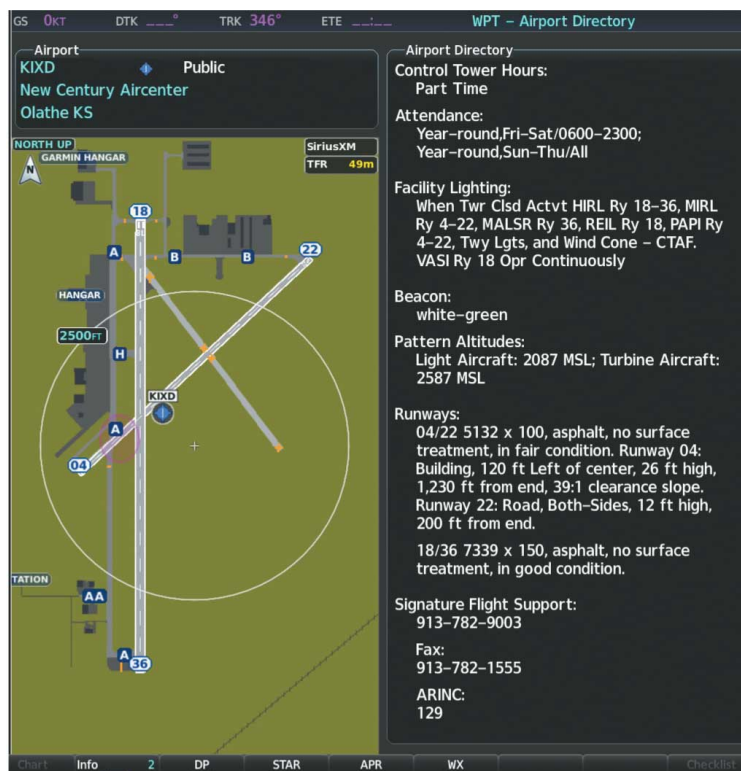


Figure 8-15 AOPA Information on the Airport Information Page

IFR/VFR CHARTS

The system can display GPS navigation information on a VFR chart, a low altitude IFR chart, or a high altitude IFR chart, if installed. The information overlaid on the IFR/VFR Charts is selected and setup on the Navigation Map, but the IFR/VFR charts will not display some of the selected items. Only the following items will be overlaid on the chart:

- Map Pointer (distance and bearing to pointer, location of pointer, name, and other pertinent information)
- Map Range (17 range choices from 1 nm to 150 nm)
- Map Orientation (always North Up for IFR/VFR Charts)
- Aircraft Icon (representing present position)
- Wind Direction and Speed
- Icons for enabled map features (Traffic only)
- Flight Plan Legs
- Track Vector
- Runway extension
- Missed Approach Preview
- Intersections (only as part of active flight plan)
- Visual Reporting Points
- VNAV Constraints
- Selected Altitude Intercept Arc

Map panning on the IFR/VFR Charts works the same as on the Navigation Map. Map range selected on either the Navigation Map or the IFR/VFR Charts applies to both. However, if the range selected on the Navigation Map it is not a valid chart range, the chart is shown with a range of 7.5 nm.

When different VFR charts exist for the same area the chart type will automatically display according to the range chosen. For example, in an area where both a Sectional and a Terminal Area Chart (TAC) are available, a range of 6 nm or more will show the Sectional chart. Once the range is decreased below 6 nm, the system will automatically change the displayed chart from the Sectional to the TAC.

Due to the potential error involved with the electronic depiction of maps, charts will display a gray ‘circle of uncertainty’ centered upon the aircraft icon. The aircraft’s actual position can be anywhere within the range of the gray circle. The range of the circle will change based on the chart displayed and current zoom range.



Figure 8-16 GPS Navigation Information on the VFR Chart

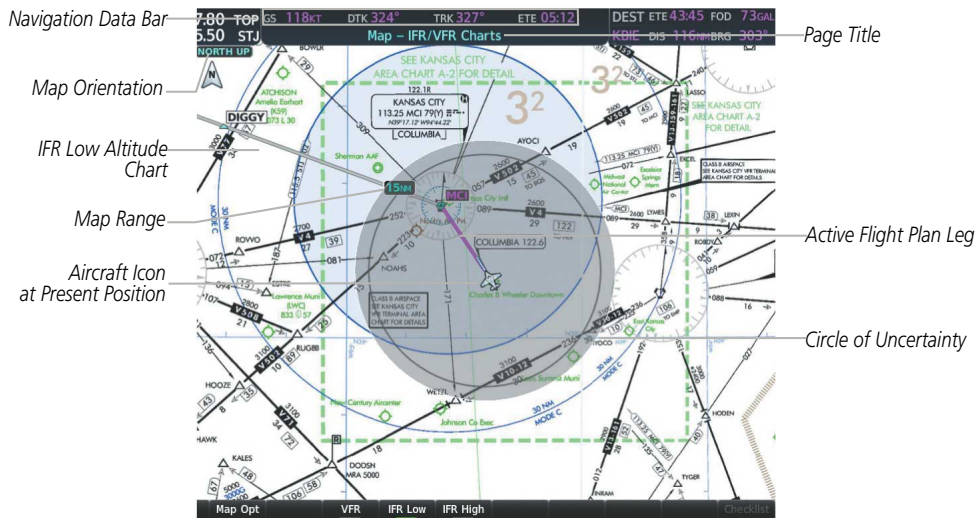


Figure 8-17 GPS Navigation Information on the IFR Low Altitude Chart

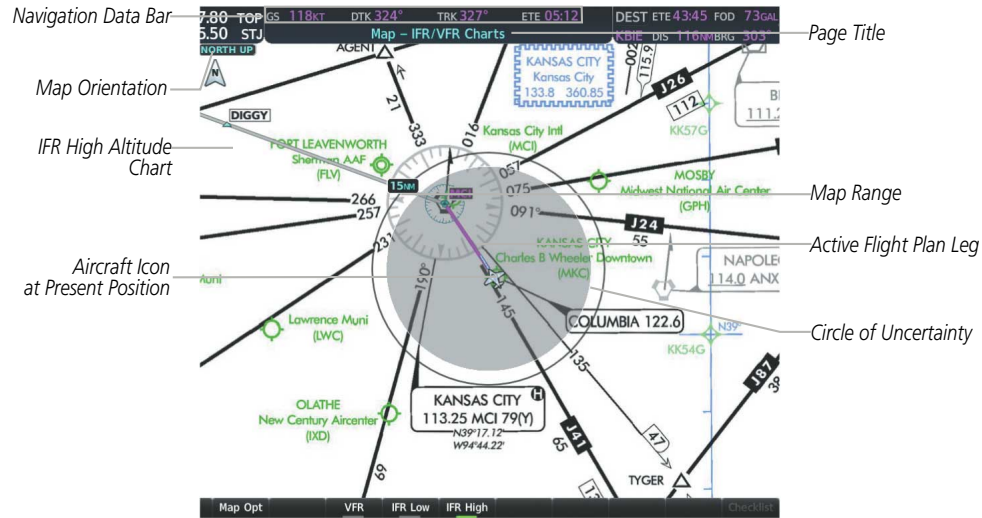


Figure 8-18 GPS Navigation Information on the IFR High Altitude Chart

Map panning on the IFR/VFR Charts works the same as on the Navigation Map. Map range selected on either the Navigation Map or the IFR/VFR Charts applies to both. However, if the range selected on the Navigation Map it is not a valid chart range, the chart is shown with a range of 7.5 nm.

Modifying the Chart Settings:

- 1) Press the **MENU** Key with the IFR Low / IFR High Chart displayed. The cursor flashes on the 'Settings' option.
- 2) Press the **ENT** Key. The cursor flashes on the 'Color Scheme' setting.
- 3) Turn the small **FMS** Knob to select 'Day', 'Auto', or 'Night'. The IFR Chart display changes to reflect the setting.
- 4) If 'Auto' was selected, turn the large **FMS** Knob to select the backlight threshold field (sets value for automatic day/night switching).

Selecting the chart to display:

- 1) Press the **MENU** Key with the 'Map - IFR/VFR Charts' Page displayed.
- 2) Turn the **FMS** Knob to highlight the 'Display VFR' Field, the 'Display IFR Low' Field, or the 'Display IFR High' Field.
- 3) Press the **ENT** Key. The selected chart is displayed.

8.4 DATABASE CYCLE NUMBER AND REVISIONS

Databases that may be available include FliteCharts, Obstacle, Terrain, IFR/VFR, Navigation, ChartView, SafeTaxi, Airport Directory. Data is revised and expiration dates vary. Data is still viewable during a period that extends from the cycle expiration date to the disables date. When turning on the system, the Power-up Page displays the current status of the databases. As an example, see the table below for the various FliteCharts Power-up Page displays and the definition of each. The expiration date and disables date varies for each database.

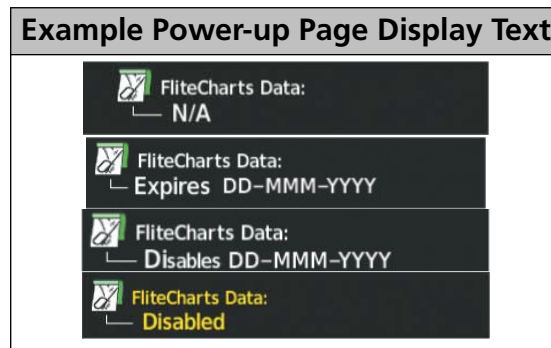


Table 8-1 Database Power-up Page Annunciations

White text, such as ‘FliteCharts Data Expires’ plus a date, indicates the chart database is current. Yellow text, such as ‘Chart data is out of date!’ or ‘FliteCharts Data: Disabled”, indicates charts are no longer viewable and have expired.

Database time critical information can also be found on the ‘Aux - System Status’ page. The database Region, Cycle number, Effective, Expires, and Disables dates of the subscription appear in either blue or yellow text. Dates shown in blue are current data. Dates shown in yellow indicate the data is not within the current subscription period.

NOTE: A subdued softkey label indicates the function is disabled.

Press the **MFD1 DB** Softkey to place the cursor in the Database window. Scroll through the listed information by turning the **FMS** Knob or pressing the **ENT** Key until the applicable database information is shown.

Database cycle numbers are in a format such as **YYTI** or **YYII**, which are deciphered as follows:

YYTI

YY – Indicates the last two digits of the year (ex. 18 represents 2018)

T – Indicates the database type (ex. S is for SafeTaxi, D is for Airport Directory)

I – Indicates the numerical issue of the database for the year (ex. 5 is the fifth issue of the year)

YYII

YY – Indicates the last two digits of the year (ex. 18 represents 2018)

II – Indicates the numerical issue of the database for the year (ex. 05 is the fifth issue of the year)

Refer to Updating Garmin Databases in Appendix for instructions on revising databases.









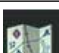
Example Power-up Page Display Text	Database Cycle Number Format	Revision Cycle
 Navigation	YYII	28 days
 Basemap Land	YYMI	Not Applicable
 Terrain	YYTI	Not Applicable
 Obstacle	YYBI	56 days
 SafeTaxi	YYSI	56 days
 Airport Directory	YYDI	56 days
 FliteCharts	YYII	28 days
 ChartView	YYII	14 days
 IFR/VFR Charts	YYII	28 days

Table 8-2 Database Cycle Number and Revision

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CWS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

8.5 WIFI CONNECTIONS

WIFI CONNECTIONS

The Flightstream 510 Data Link provides a high speed IEEE 802.11g WiFi data link between the aircraft and a ground computer network while the aircraft is on the ground and located within range of the network.

The system is capable of WEP64, WEP128, WPA-PSK, and WPA2-PSK encryption formats. WPA-Enterprise and WPA2-Enterprise are not supported. Connections that require web proxies, captive portals, or other elements that require user credentials, including a user name and password or a redemption or access code; or require action such as accepting a user agreement, are not supported.

Control and monitoring of Wi-Fi functions are accomplished through the 'Aux-Maintenance WiFi Setup' Page.

Viewing the WiFi Setup Page:

- 1) Turn the large **FMS** Knob to select the Aux page group.
- 2) Turn the small **FMS** Knob to select the 'Aux-Maintenance WiFi Setup' Page.

Setting up a new WiFi connection:

- 1) Press the **Avail** Softkey on the MFD. A list of available networks will be displayed in the Available Networks window. Signal strength is shown for each network, as well as security requirements and whether the network has been saved in the system's memory.

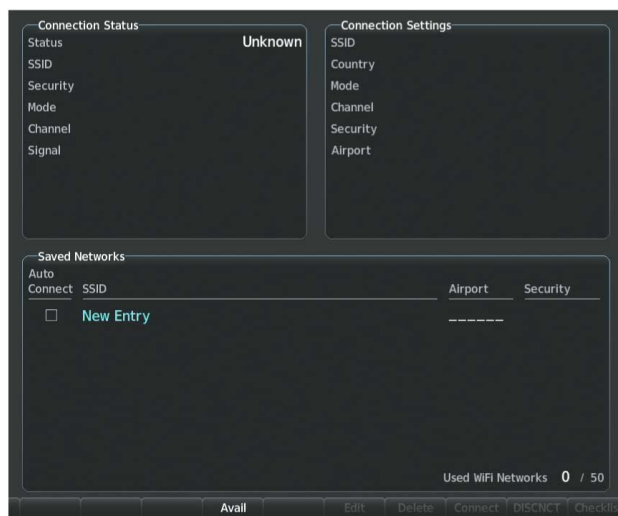


Figure 8-19 Available WI-FI Networks

- 2) If necessary, press the **Rescan** Softkey to have the system scan again for available networks.

Or:

- a) Press the **MENU** Key to display the Page Menu.
 - b) Turn either **FMS** Knob to place the cursor on 'Rescan Available Networks'.
 - c) Press the **ENT** Key.
 - 3) Press the **FMS** Knob to place the cursor in the list of networks.
 - 4) Turn either **FMS** Knob to select the desired network.
 - 5) Press the **Connect** Softkey.
- Or:**
- a) Press the **MENU** Key to display the Page Menu.
 - b) Turn either **FMS** Knob to place the cursor on 'Connect to Selected Network'.
 - c) Press the **ENT** Key.
 - 6) If the network is secured, a window will be displayed in order to enter the necessary passcode. Use the GCU 479 Alphabetic Keys to enter the desired alpha numeric characters. Press the **CapsLock** Softkey to enter upper case letters. If there is no security associated with the network, proceed to step 9.
 - 7) Press the **ENT** Key. 'OK' will be highlighted.
 - 8) Press the **ENT** Key again.
 - 9) The Save Settings window is now displayed with the cursor highlighting 'Save Connection'.
 - 10) The selected network can be saved to system memory to make re-connection easier at a later time.

Editing a saved network:

- 1) While viewing list of saved networks, press the **FMS** Knob to activate the cursor.
- 2) Turn either **FMS** Knob to highlight the network to be edited.
- 3) Pressing the **ENT** Key at this point will check or uncheck the Auto Connect checkbox. When a checkmark is present, the system will automatically connect to the network when within range.
- 4) Press the **Edit** Softkey. The cursor now appears in the Connection Settings window.
- 5) Turn the large **FMS** Knob to select the network attribute to be edited.
- 6) Turn the small **FMS** Knob to begin editing the field.
- 7) When the entry is complete, press the **ENT** Key.
- 8) Turn the large **FMS** Knob or press the **ENT** Key until 'Save' is highlighted.
- 9) Press the **ENT** Key.

Disconnecting a WiFi network:

Press the **DISCNCT** Softkey.

Or:

- a) Press the **MENU** Key to display the Page Menu.
- b) Turn either **FMS** Knob to place the cursor on 'Disconnect From Network'.
- c) Press the **ENT** Key.

Deleting a saved WiFi network:

- 1) While viewing the list of saved networks, press the **FMS** Knob to activate the cursor.
- 2) Turn either **FMS** Knob to highlight the network to be deleted.
- 3) Press the **Delete** Softkey. The selected network is removed from the list.

8.6 SIRIUSXM RADIO ENTERTAINMENT



NOTE: Refer to the Hazard Avoidance Section for information about SiriusXM Weather products.

The optional SiriusXM Satellite Radio entertainment feature of the GDL69A SiriusXM Data Link Receiver is available for the pilot's and passengers' enjoyment. The GDL 69A SiriusXM can receive SiriusXM Satellite Radio entertainment services at any altitude throughout the Continental U.S.

SiriusXM Satellite Radio offers a variety of radio programming over long distances without having to constantly search for new stations. Based on signals from satellites, coverage far exceeds land-based transmissions. SiriusXM Satellite Radio services are subscription-based. For more information on specific service packages, visit www.SiriusXM.com.

Activating SiriusXM Satellite Radio Services:

The service is activated by providing SiriusXM Satellite Radio with either one or two coded IDs, depending on the equipment. Either the Audio Radio ID or the Data Radio ID, or both, must be provided to SiriusXM Satellite Radio to activate the entertainment subscription.

It is not required to activate both the entertainment and weather service subscriptions with the GDL 69A SiriusXM. Either or both services can be activated. SiriusXM Satellite Radio uses one or both of the coded IDs to send an activation signal that, when received by the GDL 69A SiriusXM, allows it to play entertainment programming.

These IDs are located:

??Turn the large FMS Knob on the MFD to select the Aux page group

??Turn the small FMS Knob to select the 'Aux-Telephone' or 'Aux-Text Messaging' Page.

??If necessary, select the SMS Softkey to display the 'Aux-Text Messaging' Page.

Contact Cirrus Aircraft Customer Service if the Data Radio ID and the Audio Radio ID cannot be located.

- 1) Contact SiriusXM Satellite Radio. Follow the instructions provided by SiriusXM Satellite Radio services.
- 2) Select the Auxiliary Page Group.
- 3) Select the 'Aux - XM Radio' page.
- 4) Press the **Info** Softkey to display the 'Aux-XM Information' Page.
- 5) Verify that the desired services are activated.



Figure 8-20 XM Information Page

- 6) If SiriusXM Weather services have not been activated, all the weather product boxes are blank on the XM Information Page and a yellow Activation Required message is displayed in the center of the Weather Data Link Page (Map Page Group). The Service Class refers to the groupings of weather products available for subscription.

USING SIRIUSXM RADIO

The XM Radio Page provides information and control of the audio entertainment features of the SiriusXM Satellite Radio.

Selecting the XM Radio Page:

- 1) Turn the large **FMS** Knob to select the Auxiliary Page Group.
- 2) Turn the small **FMS** Knob to select the displayed 'Aux — XM Information' Page.
- 3) Press the **Radio** Softkey to show the 'Aux — XM Radio' Page where audio entertainment is controlled.

ACTIVE CHANNEL AND CHANNEL LIST

The Active Channel Box on the XM Radio Page displays the currently selected channel that the SiriusXM Radio is using.

The Channels List Box of the XM Radio Page shows a list of the available channels for the selected category. Channels can be stepped through one at a time or may be selected directly by channel number.

Selecting a channel from the channel list:

- 1) While on the 'Aux-XM Radio' Page, press the **Channel** Softkey.
- 2) Press the **CH+** Softkey to go up through the list in the 'Channels' Box, or move down the list with the **CH-** Softkey.

Or:

- 1) Press the **FMS** Knob to highlight the channel list and turn the large **FMS** Knob to scroll through the channels.
- 2) Press the **ENT** Key to activate the selected channel.

Selecting a channel directly:

- 1) While on the 'Aux-XM Radio' Page, press the **Channel** Softkey.
- 2) Press the **Direct CH** Softkey. The channel number in the 'Active Channel' Box is highlighted.
- 3) Press the Alphabetic Keys on the GCU 479 to directly select the desired channel number.
- 4) Press the **ENT** Key to activate the selected channel.

CATEGORY

The Category Box of the XM Radio Page displays the currently selected category of audio. Categories of channels such as jazz, rock, or news can be selected to list the available channels for a type of music or other contents. One of the optional categories is Presets to view channels that have been programmed.

Selecting a category:

- 1) Press the **Category** Softkey on the 'Aux-XM Radio' Page.
- 2) Press the **CAT +** and **CAT -** Softkeys to cycle through the categories.

Or:

Turn the small **FMS** Knob to display the Categories list. Highlight the desired category with the small **FMS** Knob and press the **ENT** Key. Selecting All Categories places all channels in the list.

PRESETS

Up to 15 channels from any category can be assigned a preset number. The preset channels are selected by pressing the **Presets** and **More** Softkeys. Then the preset channel can be selected directly and added to the channel list for the Presets category.

Setting a preset channel number:

- 1) On the 'Aux-XM Radio' Page, while listening to an 'Active Channel' that is wanted for a preset, press the **Presets** Softkey to access the first five preset channels (**Preset 1 - Preset 5**).
- 2) Press the **More** Softkey to access the next five channels (**Preset 6 – Preset 10**), and again to access the last five channels (**Preset 11 – Preset 15**). Pressing the **More** Softkey repeatedly cycles through the preset channels.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CDS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

- 3) Press any one of the (**Preset 1 - Preset 15**) softkeys to assign a number to the active channel.
- 4) Press the **Set** Softkey on the desired channel number to save the channel as a preset.
Pressing the **Back** Softkey, or 45 seconds of softkey inactivity, returns the system to the top level softkeys.

VOLUME

Radio volume is shown as a percentage. Volume level is controlled by selecting the **Volume** Softkey, which brings up the Mute Softkey and the volume increase and decrease softkeys.

Adjusting the volume

- 1) With the XM Radio Page displayed, select the **Volume** Softkey.
- 2) Select the **VOL -** Softkey to reduce volume or select the **VOL +** Softkey to increase volume. Volume can also be adjusted with the GMA 350/350c Volume Knob when MUSIC 1 or MUSIC 2 Buttons are pressed.



Figure 8-21 Volume Control


SiriusXM Radio volume may also be adjusted on each passenger headset.

Muting SiriusXM audio:

Refer to the the GMA 350c Audio Panel Controls in Section 4 for SiriusXM muting instructions.

8.7 FLIGHT DATA LOGGING

FLIGHT DATA LOGGING

 **NOTE:** *Some aircraft installations may not provide all aircraft/engine data capable of being logged by the system.*

The Flight Data Logging feature will automatically store critical flight and engine data on an SD data card (up to 16GB) inserted into the top card slot of the MFD. Approximately 1,000 flight hours can be recorded for each 1GB of available space on the card.

Data is written to the SD card once each second while the MFD is powered on. All flight data logged on a specific date is stored in a file named in a format which includes the date, time, and nearest airport identifier. The file is created automatically each time the system is powered on, provided an SD card has been inserted.

The status of the Flight Data Logging feature can be viewed on the ‘Aux-Utility’ Page. If no SD card has been inserted, “NO CARD” is displayed. When data is being written to the SD card, “LOGGING DATA” is displayed.

The .csv file may be viewed with Microsoft Excel® or other spreadsheet applications.

The following is a list of data parameters the system is capable of logging.

- Local Date (YYYY-MM-DD)
- Local Time (HH:MM:SS)
- Active Waypoint Distance (nm)
- Active Waypoint Bearing (degrees mag.)
- UTC Offset (HH:MM)
- Mag. Variation (degrees)
- Active Waypoint Identifier
- Voltage 1 (volts)
- Voltage 2 (volts)
- Amps 1 (amps)
- AFCS On (0 – false, 1 – true)
- Latitude (degrees)
- AFCS Roll Mode (e.g. HDG, LOC, GPS, VOR, ROL)
- Longitude (degrees)
- Right Fuel Qty (gals or lbs)
- Left Fuel Qty (gals or lbs)
- EGT (1–6 deg. F)
- CHT (1–6 deg. F)

- TIT (1 & 2 deg. F)
- AFCS Pitch Mode (e.g. ALT, GS, GP, VS)

- Barometric Altitude (feet)
- Altimeter Setting (in. Hg.)
- GPS Altitude (ft)
- Pitch Commanded (degrees)

- Roll Commanded (degrees)
- OAT (deg. C)
- True Airspeed (kts)
- Selected Vertical Speed (fpm)

- Vertical Speed (fpm)
- HSI Selection (GPS, NAV1/2)
- GPS Fix (e.g. 2D, 3D, 3DDiff)

- Indicated Airspeed (kts)
- Horizontal Alert Limit (HAL, meters)
- Gnd Speed (kts)
- Vertical Alert Limit (VAL, meters)

- Vertical Speed (fpm)
- NAV1 Frequency (MHz)
- NAV2 Frequency (MHz)

- Horizontal Protection Level (HPLWAS, meters)
- Pitch (degrees)
- Roll (degrees)
- Horizontal Protection Level (HPLFD, meters)

- Vertical Protection Level (VPLWAS, meters)
- COM1 Frequency (MHz)
- COM2 Frequency (MHz)

- Lateral Acceleration (g)
- CDI Deflection (0.0 to 1.0)
- VDI Deflection (0.0 to 1.0)
- Normal Acceleration (g)

- Heading (degrees magnetic)
- Course (deg)

- Wind Direction (degrees mag.)
- Wind Speed (kts)
- Gnd Trk (degrees magnetic)
- Fuel Flow (gph)
- Oil Temperature (deg. F)
- Oil Pressure (psi)
- Engine Speed (rpm)
- Power (%)

The file containing the recorded data will appear in the format shown in the following figure. This file can be imported into most computer spreadsheet applications.

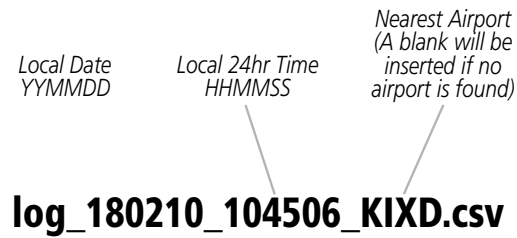


Figure 8-22 Log File Format

Data logging status can be monitored on the 'Aux-Utility' Page.

8.8 CONNEXT SETUP

The Connex Setup Page allows for setting up the installed optional Flight Stream device for a Bluetooth connection between the system and a mobile device running the Garmin Pilot™ application.

The mobile device must be ‘paired’ with the system in order to use the various functions. Pairing is accomplished by first placing the system in pairing mode by displaying the Connex Setup Page. The system is ‘discoverable’ whenever this page is displayed. The pairing operation is completed from the mobile device and the Garmin Pilot application. See the device Bluetooth pairing instructions and the connection instructions in the Garmin Pilot application.

Viewing the Connex Setup Page:

- 1) Turn the large **FMS** Knob to select the Aux page group.
- 2) Turn the small **FMS** Knob to select the Connex Setup page.

Changing the Bluetooth Name:

- 1) While viewing the Connex Setup Page, press the **FMS** Knob to activate the cursor.
- 2) Turn the large **FMS** Knob to place the cursor in the ‘Bluetooth Name’ field.
- 3) Enter the desired name by using the large **FMS** Knob to select the character field, and the small **FMS** Knob select the desired alphanumeric character for that field.
- 4) Press the **ENT** Key. The cursor is removed and the new name is displayed.

Enabling/Disabling Flight Plan Importing from Garmin Pilot:

- 1) While viewing the Connex Setup Page, press the **FMS** Knob to activate the cursor.
- 2) Turn the large **FMS** Knob to place the cursor in the ‘Flight Plan Import’ field.
- 3) Turn the small **FMS** Knob to select ‘Enabled’ or ‘Disabled’.
- 4) Press the **FMS** Knob to remove the cursor.

Enabling/Disabling WiFi Database Importing from Garmin Pilot:

- 1) While viewing the Connex Setup Page, press the **FMS** Knob to activate the cursor.
- 2) Turn the large **FMS** Knob to place the cursor in the ‘WiFi Database Import’ field.
- 3) Turn the small **FMS** Knob to select ‘Enabled’ or ‘Disabled’.
- 4) Press the **FMS** Knob to remove the cursor.

Enabling/Disabling Automatic Reconnection of a Specific Paired Device:

- 1) While viewing the Connex Setup Page, press the **FMS** Knob to activate the cursor.
- 2) Turn the large **FMS** Knob to highlight the desired paired device.


- 3) Turn the small **FMS** Knob to select 'Enabled' or 'Disabled'. Selecting 'Enabled' allows the system to automatically connect to a previously paired device when detected.
- 4) Press the **FMS** Knob to remove the cursor.


Remove a Specific Paired Device from the List of Paired Devices:

- 1) While viewing the Connex Setup Page, press the **FMS** Knob to activate the cursor.
- 2) Turn the large **FMS** Knob to highlight the desired paired device.
- 3) Press the **Remove** Softkey. A confirmation screen is displayed.
- 4) If necessary, turn the large **FMS** Knob to select 'Yes'.
- 5) Press the **ENT** Key to remove the device from the list of paired devices.

8.9 SURFACE WATCH

SURFACEWATCH™

 **NOTE:** The SafeTaxi database must be available to provide information regarding taxiways, aprons and other objects in the airport environment.

 **NOTE:** The SurfaceWatch feature can only operate on runways for which threshold positions are defined in the navigation database. Such runways can typically be identified by viewing them on the 'MAP-Navigation Map' page or the 'WPT-Airport Information' page. Only runways with threshold positions defined are shown graphically on those pages.

The SurfaceWatch feature provides visual annunciations to help the flight crew maintain situational awareness and avoid potential runway incursions and excursions during ground and air operations in the airport environment. The SurfaceWatch feature is comprised of the following key components:

- Alert Annunciations
 - Taxiway Takeoff
 - Runway Too Short (during takeoff or landing)
 - Check Runway (during takeoff or landing)
 - Taxiway Landing
- Runway distance remaining
- Provides information on the Primary Flight Display (PFD) that contains runway and taxiway information that changes as the aircraft moves through the airport environment

The SurfaceWatch feature is not available in Reversionary Mode.

Inhibit/Uninhibit SurfaceWatch:

- 1) Select the 'Aux - System Setup 1' Page.
- 2) Press the **FMS** Knob momentarily to activate the flashing cursor.
- 3) Turn the large **FMS** Knob to highlight the SurfaceWatch field.
- 4) Turn the small **FMS** Knob to toggle the SurfaceWatch alerts on or off.

INFORMATION BOX

The SurfaceWatch™ Information Box is displayed on the PFD. It contains runway and taxiway information that dynamically changes as the aircraft moves through the airport environment. The information that is displayed in the Information Box is the aircraft's relative position to nearby aprons, taxiways, and runways.

There are three components to the SurfaceWatch™ Information Box. These components are Currently Occupied, Approaching, and Crossing Runways.

Currently Occupied		Approaching		Crossing Runways	
ON	REMAINING	APPROACHING	DIS	ON	REMAINING
RWY 04R	8000FT	TWY H	130FT	RWY 15R	8100FT
				CROSSING	DIS
				RWY 04L/22R	1100FT

Figure 8-23 Information Types Displayed in the Information Box

CURRENTLY OCCUPIED

This component indicates the aircraft is ‘ON’ the indicated apron, taxiway, or runway. The aircraft is currently ‘ON’ runway 04 right (RWY 04R). The remaining runway distance is also shown when the aircraft is situated on and aligned with a runway.

If the aircraft is airborne and approaching an airport, ‘AIRBORNE TO’ and the destination airport identifier will be displayed.

Information regarding non-manuevering areas not labeled on the SafeTaxi diagram will not be displayed.

APPROACHING COMPONENT

This component indicates the aircraft is ‘APPROACHING’ the indicated apron, taxiway, or runway. In the following figure, the aircraft is currently ‘APPROACHING’ taxiway E (TWY E). The distance to the taxiway is also shown.

When the aircraft is taxiing and approaching an intersection of multiple taxiways, the taxiway identifiers will be listed in order of proximity and the distance to the nearest is displayed.

When the aircraft is taxiing and crossing an intersection of multiple taxiways, ‘CROSSING’ will be displayed and no distance will be shown.

CROSSING RUNWAYS

This component lists the runways, from closest to furthest, that are ‘CROSSING’ the runway the aircraft currently occupies. The distance to each runway is also shown in order of closest distance. Runways behind the aircraft are not depicted.

The Crossing Runways component is shown in conjunction with the Currently Occupied component of the Information Box.

ALERTS

The SurfaceWatch alert annunciations are displayed in the central portion of the PFD. The alert annunciations are accompanied by a corresponding voice alert.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CAS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

SurfaceWatch Annunciation	Associated Voice Alert	Description
TWY TAKEOFF	“Taxiway”	Issued when the aircraft is taking off from a non-runway (e.g. a taxiway)
RWY TOO SHORT	“Runway too Short”	Issued when the aircraft is taking off from, or landing on, a runway with a length less than needed as entered by the crew.
CHECK RUNWAY	“Check Runway”	Issued when the aircraft is taking off from, or landing on, a runway different than that entered by the crew.
TWY LANDING	“Taxiway”	Issued when the aircraft is landing on a non-runway (e.g. a taxiway).

Table 8-3 SurfaceWatch Alert Annunciations

TAKEOFF ALERTS

The Takeoff phase-of-flight, as determined by the system, must be valid in order for the system to issue Takeoff Alerts.

TAXIWAY TAKEOFF

The Taxiway Takeoff alert is issued when the aircraft attempts to takeoff from a non-runway (e.g. a taxiway) or the aircraft is not aligned with a runway.

In addition to the visual and voice alerts, the Information Box contains a textual description of the currently occupied taxiway (or other maneuvering area) and potentially the next area (apron or maneuvering area) to be occupied (based on aircraft heading and the airport geometry) and the distance to that area.



Figure 8-24 Typical Taxiway Information Displayed in the Information Box

RUNWAY TOO SHORT

The Runway Too Short (during takeoff) alert is issued when the aircraft attempts to takeoff from a runway and the remaining runway length is less than the required length. The insufficient runway length condition is determined based on aircraft current position during the takeoff roll and the required takeoff distance information entered on the Takeoff Data Screen.

Note that while the Runway Too Short alert may be issued for any runway from which the aircraft is taking off, the system will always calculate the runway length for the specific runway entered in the Takeoff Data.

In addition to the visual and voice alert, the Information Box will contain a textual description of the currently occupied runway and the remaining runway length as shown in the following figure.



Figure 8-25 Typical Runway Information Displayed in the Information Box

CHECK RUNWAY

The Check Runway alert is issued when the aircraft attempts to takeoff from a runway that does not match the departure runway entered in the Takeoff Data Screen.

In addition to the visual and voice alert, the Information Box contains a textual description of the currently occupied runway.

LANDING ALERTS

The On-Final phase-of-flight, as determined by the system, must be valid in order for the system to issue Landing Alerts.

TAXIWAY LANDING

The Taxiway Landing alert is issued when the aircraft attempts to land on a non-runway (e.g. a taxiway) or the aircraft is not aligned with a runway.

In addition to the visual and voice alert, the Information Box will display the destination airport identifier and the text “APPROACHING TWY” to indicate a non-runway landing is being attempted.

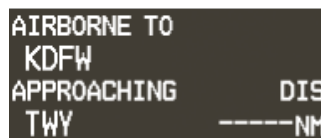


Figure 8-26 Typical Information displayed During a Taxiway Landing Alert

RUNWAY TOO SHORT

The Runway Too Short alert is issued when the aircraft attempts to land on a runway where the remaining runway length is less than the required landing runway length entered in the Landing Data Screen.

Note that while the Runway Too Short alert may be issued for any runway with which aircraft is aligned, the system will always calculate the runway length for the specific runway entered in entered in the Landing Data Screen.

In addition to the visual and voice alert, the Information Box will display the destination airport identifier and the text “APPROACHING REMAINING” to indicate a the remaining runway length as indicated in following figure.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CWS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

```

AIRBORNE TO
KBOS
APPROACHING REMAINING
RWY 22L      5800FT
    
```

Figure 8-27 Typical Information Displayed During a Runway Too Short Alert

CHECK RUNWAY

The Check Runway alert is issued when the aircraft attempts to land on a runway that does not match the arrival runway specified in the Landing Data.

Additionally, the Information Box will display the destination airport identifier, the runway with which the aircraft is aligned, and the distance to the runway see following figure.

```

AIRBORNE TO
KBOS
APPROACHING      DIS
RWY 22R          1.6NM
    
```

Figure 8-28 Typical Information Displayed During a Check Runway Alert

SURFACEWATCH SETUP

Origin/destination airport, runway and distance data entered integrates with SurfaceWatch technology to alert the flight crew to a runway too short for takeoff/landing, or to advise of a potential taxiway takeoff/landing. The runway selected in SurfaceWatch Setup appears on the airport diagram in cyan, and appears outlined in cyan on the synthetic vision representation of the runway on the PFD.

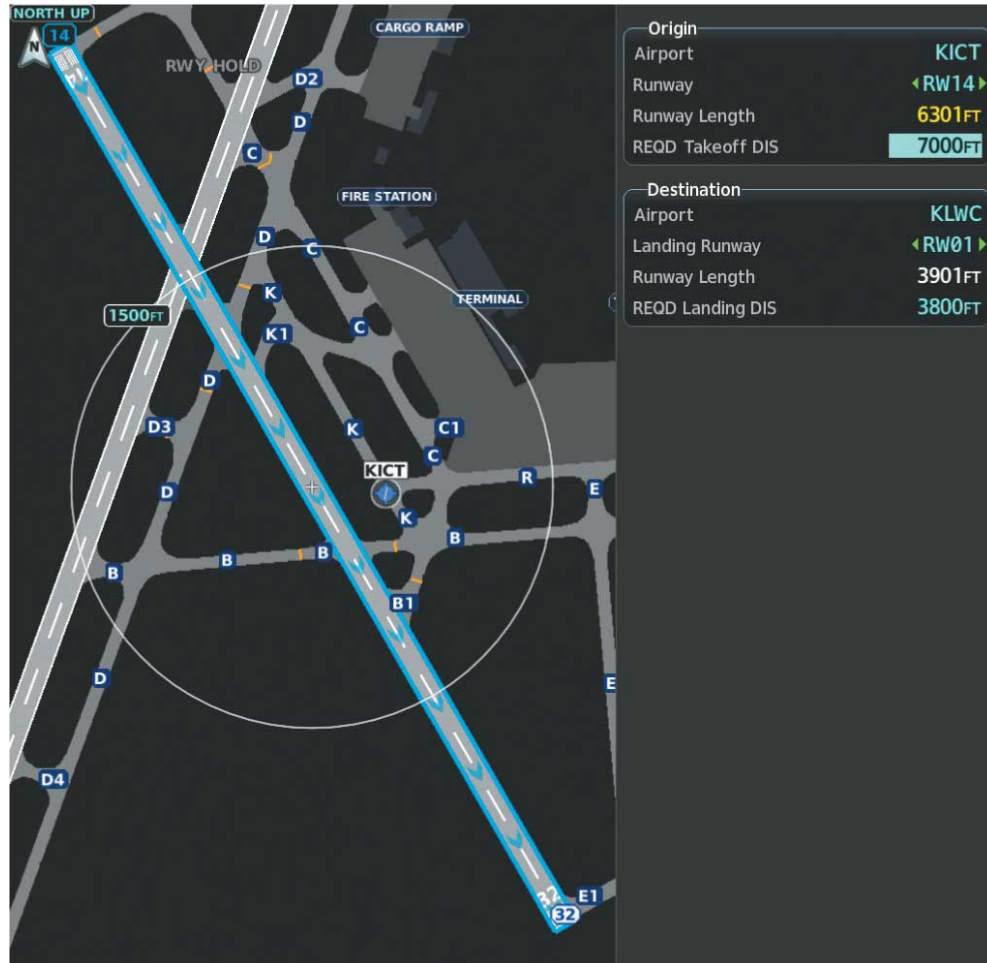


Figure 8-29 SurfaceWatch Setup Page (MFD)

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CWS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features**
- Appendices
- Index



Figure 8-30 SurfaceWatch Info and Cyan Runway Outline (PFD)

Entering Origin/Destination Airport:

- 1) Select the 'FPL - SurfaceWatch Setup' Page.
- 2) Press the **FMS** Knob momentarily to activate the flashing cursor.
- 3) Turn the large **FMS** Knob if necessary to highlight the Origin or Destination Airport field.
- 4) Use the **FMS** Knobs or the Keypad to input the desired Origin or Destination Airport.

Selecting Origin/Destination Runway:

- 1) Select the 'FPL - SurfaceWatch Setup' Page.
- 2) Press the **FMS** Knob momentarily to activate the flashing cursor.
- 3) Turn the large **FMS** Knob if necessary to highlight the Runway or Landing Runway field.
- 4) Turn the small **FMS** Knob to select the desired available Runway or Landing Runway. As the small FMS Knob is turned, the preview of the selected runway or landing runway is also displayed.

Selecting Required Takeoff/Landing Distance:

- 1) Select the 'FPL - SurfaceWatch Setup' Page.
- 2) Press the **FMS** Knob momentarily to activate the flashing cursor.

- 3) Turn the large **FMS** Knob if necessary to highlight the 'REQD Takeoff DIS' or 'REQD Landing DIS' field.
- 4) Use the **FMS** Knob or the Keypad to enter the required takeoff or landing distance. Upon pressing the **FMS** Knob and committing the required takeoff or landing distance, the Runway Length field will turn amber if an insufficient runway length exists.

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CAS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

8.10 SATELLITE TELEPHONE AND SMS MESSAGING

NOTE: An account must be established to access the Iridium satellite network for voice/SMS.

The GSR 56 Iridium Transceiver provides an airborne low speed data link, Iridium Satellite Telephone service, and Short Message Service (SMS).

The telephone is available to the flight crew through the audio panel and headsets.

Registering With Garmin Connex

A subscriber account must be established prior to using the Iridium Satellite System. Before setting up an Iridium account, obtain the serial number of the Iridium Transceiver (GSR1) and the System ID by selecting the 'Aux- System Status' Page. Contact Garmin at www.flyGarmin.com.

Disabling/enabling telephone and low speed data services:

- 1) Turn the large **FMS** Knob to select the Aux page group.
- 2) Turn the small **FMS** Knob to select the 'Aux-Telephone' Page.
- 3) Press the **MENU** Key. The Page Menu window is now displayed.
- 4) Turn the **FMS** Knob to select 'Disable Iridium Transmission' in the menu list.

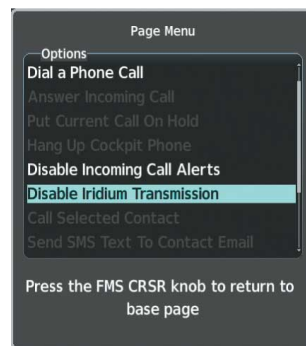


Figure 8-31 Select Disable Iridium Transmission

- 5) Press the **ENT** Key. The Iridium transceiver is now disabled.
- 6) To enable the Iridium transceiver, repeat steps 1 through 3, then select 'Enable Iridium Transceiver'.

















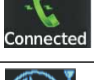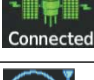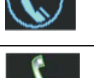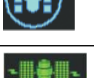


TELEPHONE COMMUNICATION

The pilot or copilot can place and answer calls on the Iridium satellite network. Control and monitoring of telephone functions are accomplished through the 'Aux-Telephone' Page.

Viewing the Telephone Page

- 1) Turn the large **FMS** Knob to select the Aux page group.
- 2) Turn the small **FMS** Knob to select the 'Aux - Telephone' or 'Aux - Text Messaging' Page.
- 3) If necessary, select the **TEL** Softkey to display the 'Aux-Telephone' Page.

The phone status display gives a graphical representation of the current disposition of voice and/or data transmissions.

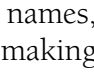Internal Phone	External Phone	Description
 Idle	 Idle	Phone is idle
 Ringing	 Ringing	Phone is ringing
 Connected	 Connected	Phone has a dial tone (off hook) or connected to another phone
 Busy	 Busy	Phone dialed is busy
 Dialing	 Dialing	Phone is dialing another phone
 Failed	 Failed	Phone has failed
 Status Not Known	 Status Not Known	Phone Status not known
	 Disabled	Phone is disabled
	 DATA TX	Phone is reserved for data transmission
		Calling other phone or incoming call from other phone
		Other phone is on hold
		Phones are connected
Telephone Symbols		

CONTACTS

The names, telephone number, and email addresses can be saved in a list of contacts for easy use when making telephone calls.

Entering a new contact:

- 1) With the 'Aux - Telephone' Page displayed, press the **FMS** Knob to display the cursor.
- 2) If necessary, turn either **FMS** Knob to place the cursor on 'New Entry'.
- 3) Press the **ENT** Key. The cursor moves the 'Name' field of the 'Contact Details' window.
- 4) Enter the desired name of the new contact. Entry can be accomplished through the alphanumeric keys on the MFD Controller, or the **FMS** Knobs on the controller or the MFD.
- 5) Press the **ENT** Key. The cursor moves to the 'Phone Number' field.
- 6) Enter the desired telephone number. Entry can be accomplished through the alphanumeric keys on the MFD Controller, or the **FMS** Knobs on the controller or the MFD.
- 7) Press the **ENT** Key. The cursor moves to the 'Email' field.
- 8) Enter the desired email address. Entry can be accomplished through the alphanumeric keys on the MFD Controller, or the **FMS** Knobs on the controller or the MFD.
- 9) Press the **ENT** Key. The Save button is highlighted.
- 10) Press the **ENT** Key. The new contact entry is added to the list of saved contacts.

Deleting a contact:

- 1) With the 'Aux - Telephone' Page displayed, press the **FMS** Knob to display the cursor.
- 2) Turn either **FMS** Knob to place the cursor on the desired contact name.
- 3) Select the **Delete** Softkey. A confirmation window is displayed.
- 4) With 'OK' highlighted, press the **ENT** Key to delete the selected contact.

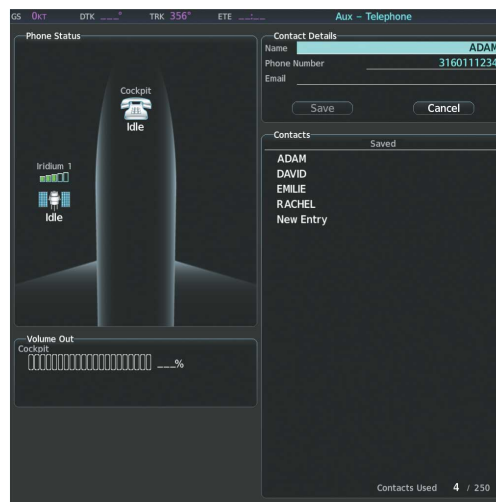


Figure 8-32 Editing a Contact

Editing a contact:

- 1) With the 'Aux - Telephone' Page displayed, press the **FMS** Knob to display the cursor.
- 2) Turn either **FMS** Knob to place the cursor on the desired contact name.
- 3) Select the **Edit** Softkey. The cursor is placed in the 'Name' field. Enter the desired changes. Entry can be accomplished through the alphanumeric keys on the MFD Controller, or the **FMS** Knobs on the controller or the MFD.
- 4) Press the **ENT** Key when each field is complete. The **Save** Button is now highlighted.
- 5) Press the **ENT** Key to save the changes.

INCOMING CALLS

When viewing MFD pages other than the 'Aux-Telephone' Page, a pop-up alert will be displayed and an aural alert "Incoming Call" will be heard. If the incoming call is an Iridium network call, Iridium will be displayed. The pop-up alert may be inhibited at times, such as during takeoff. In addition to the pop-up alert, a ringing phone symbol will be displayed to the right of the MFD page title. Also, the voice alert "Incoming Call" will be heard on the selected cockpit audio.

1) Answering an incoming call in the cockpit:

- 1) Press the **Phone** Key on the appropriate audio panel to activate audio if not already selected.
- 2) Select the **Answer** Softkey on the MFD.
- 2) **OR**

While viewing the 'Aux-Telephone' Page



NOTE: The Push-to-Talk switch is not utilized for telephone communication. The microphone is active after selecting the **Answer** Softkey, and stays active until the call is terminated.

- 1) Press the **Phone** Key on the appropriate audio panel to activate audio if not already selected.
- 2) Press the **MENU** Key to display the Page Menu..
- 3) Turn either **FMS** Knob to place the cursor on 'Answer Incoming Call'..
- 4) Press the **ENT** Key

Selecting the **Ignore** Softkey will extinguish the pop-up window and leave the call unanswered. Selecting the **Phone** Softkey will display the 'Aux-Telephone' Page allowing additional call information to be viewed before answering.

OUTGOING CALLS

Voice calls can be made from the cockpit to an external phone through the Iridium Satellite Network.

Making an external call from the cockpit using the Iridium satellite network:

- 1) Press the **Phone** Key on the appropriate audio panel.
- 2) Select the **Dial** Softkey on the MFD.
- 3) Turn the small **FMS** Knob to select 'Iridium'.
- 4) Press the **ENT** Key. The cursor has now moved to the phone number entry field.

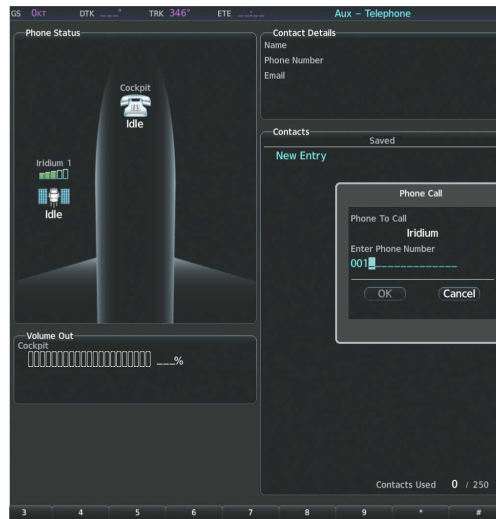


Figure 8-33 Enter Phone Number

- 5) Enter the desired telephone number (country code first) by selecting the number softkeys on the MFD or by pressing the numeric keys on the MFD Control Unit.
- 6) Press the **ENT** Key. 'OK' is highlighted.

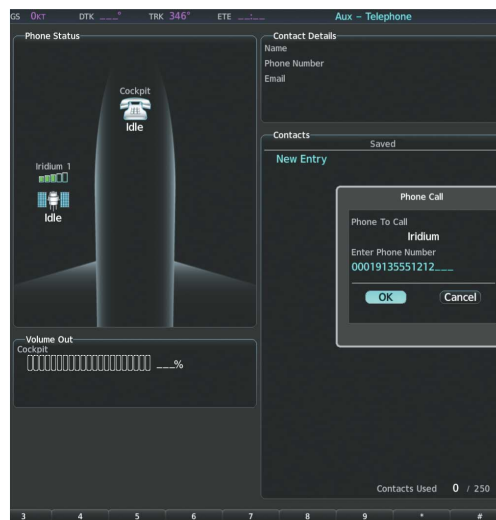


Figure 8-34 Make the Call

- 7) Press the **ENT** Key. The system will begin calling the number.

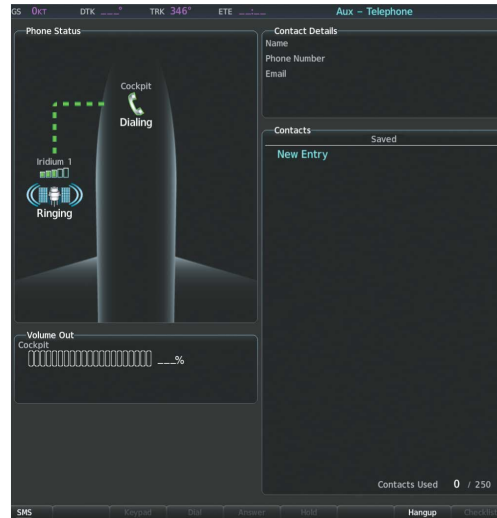


Figure 8-35 System is Making the Connection

When the phone is answered, the connection is established. To exit the call, select the **Hangup** Softkey.

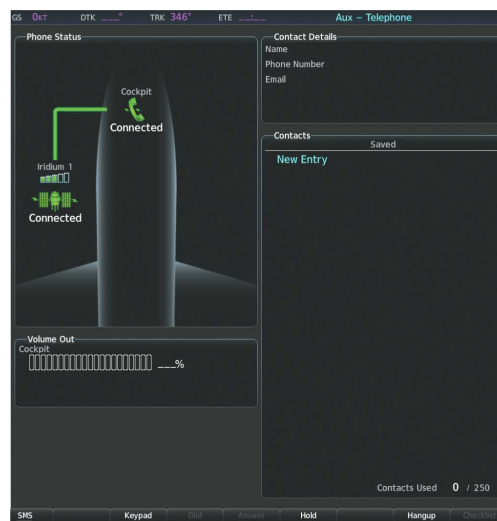


Figure 8-36 Phone is Answered, Connection is Complete

Making an external call from the cockpit by using the Contact List:

- 1) Press the **TEL** Key on the appropriate audio panel.
- 2) Press the **FMS** Knob to activate the cursor.
- 3) Turn the small **FMS** Knob to select the desired contact name in the list of contacts.
- 4) Select the **Call** Softkey. The external call is initiated and the number associated with the contact name is dialed.

PLACING THE COCKPIT PHONE ON HOLD

Placing a call on hold:

Select the **Hold** Softkey on the MFD.

Or

- 1) Press the **MENU** Key to display the Page Menu.
- 2) Turn either **FMS** Knob to place the cursor on 'Put Current Call On Hold'.
- 3) Press the **ENT** Key.

The cockpit phone is now isolated from the call. This figure illustrates a call between the cockpit and an external phone in which the cockpit phone has been put on hold. Select the **Hold** Softkey again to resume the call.

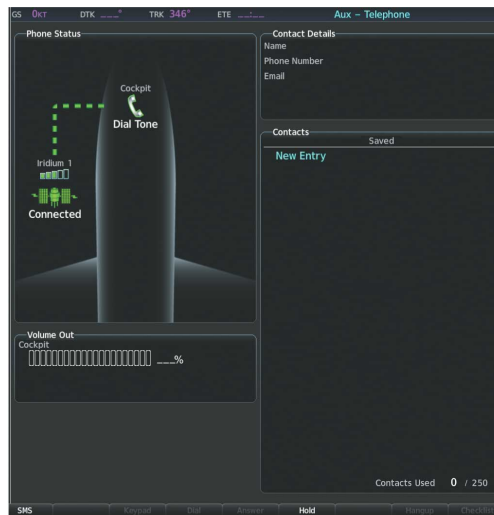


Figure 8-37 Cockpit Phone on Hold

TEXT MESSAGING (SMS)

The pilot or copilot can send and receive text messages on the Iridium satellite network. Messages may be sent to an email address or text message capable cellular telephone. Message length is limited to 160 characters, including the email address.

The text messaging user interface is mainly through the 'Aux-Text Messaging' Page.

Viewing the Text Messaging Page:

- 1) Turn the large **FMS** Knob to select the Aux page group.
- 2) Turn the small **FMS** Knob to select the 'Aux-Telephone' or 'Aux-Text Messaging' Page.
- 3) If necessary, select the **SMS** Softkey to display the 'Aux-Text Messaging' Page.

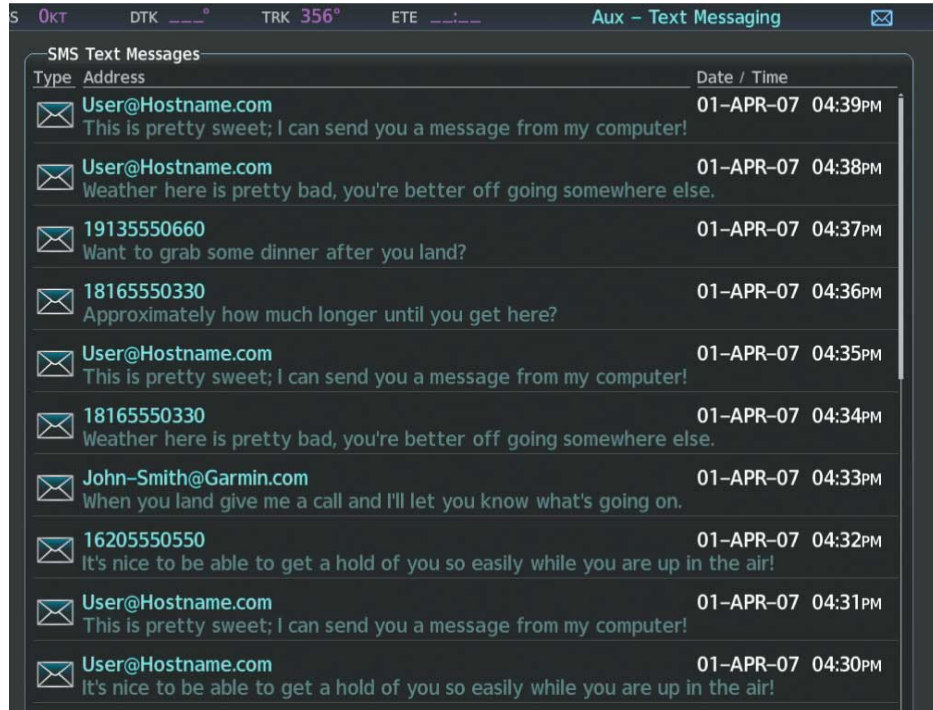


Figure 8-38 Text Messaging Page


Message Symbol	Description
	Received text message that has not been opened
	Received text message that has been opened
	Saved text message, draft not sent
	System is sending text message
	Text message has been sent
	System failed to send text message
	Predefined text message
Text Message Symbols	

VIEWING A TEXT MESSAGE WHEN RECEIVED

When viewing MFD pages other than the 'Aux-Text Messaging' Page, a pop-up alert will be displayed when a new text message is received.



New Text Message Pop-up



New Text Message Symbol on MFD Page

Figure 8-39 New Text Message Received

Press the **View** Softkey to view the message. Pressing the **Ignore** Softkey will extinguish the pop-up window and leave the text message unopened. Pressing the **Ignore All** Softkey will extinguish the pop-up window and ignore all future incoming text messages. Pressing the **SMS** Softkey will display the 'Aux-Text Messaging' Page.

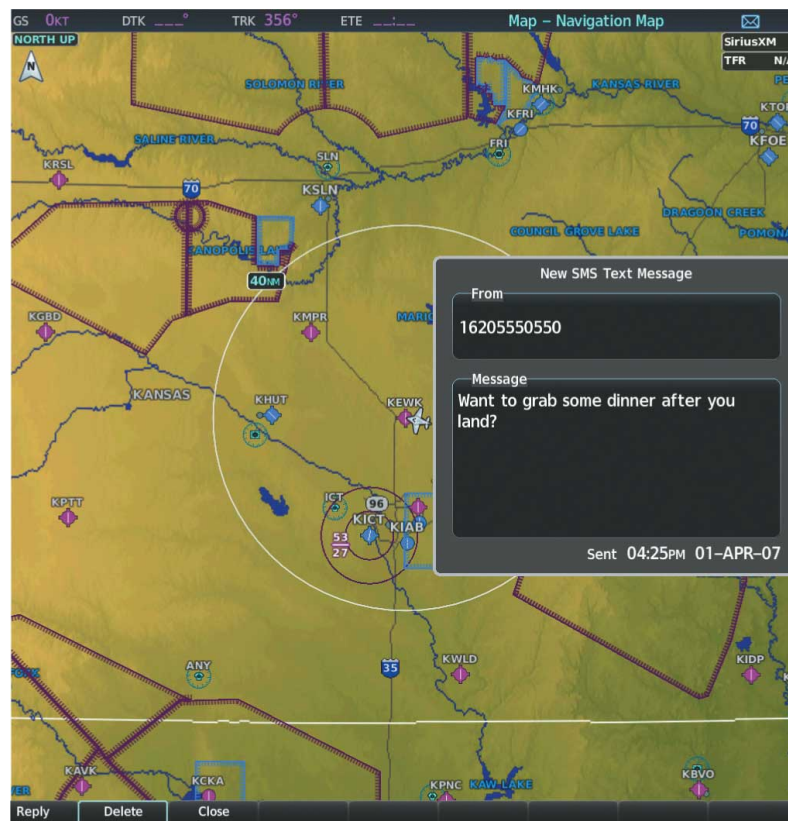


Figure 8-40 Text Message Displayed from Pop-Up Alert

The pop-up alerts may be enabled or disabled through the Page Menu.

Enabling/disabling incoming text message pop-up alerts:

- 1) With the 'Aux-Text Messaging' Page displayed, press the **MENU** Key on the MFD to display the Page Menu.
- 2) Turn either **FMS** Knob to place the cursor on 'Disable New Message Popups' or 'Enable New Message Popups'.
- 3) Press the **ENT** Key. The pop-up alert will not be displayed when an incoming text message is received.

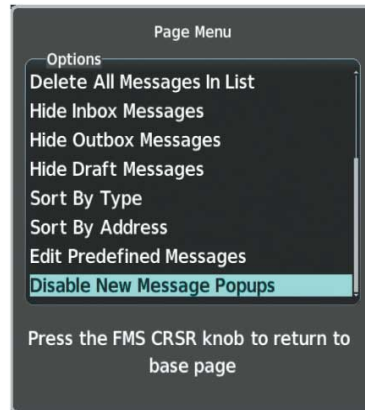


Figure 8-41 Disabling New Text Message Pop-Ups

REPLY TO A TEXT MESSAGE

After reading a text message, a reply may be sent.

Replying to a text message:

While viewing the text message, press the **Reply** Softkey.

Or:

- 1) Press the **MENU** Key to display the Page Menu.
- 2) Turn either **FMS** Knob to place the cursor on 'Reply To Message'.
- 3) Press the **ENT** Key.

SENDING A TEXT MESSAGE

Text messages may be sent from the 'Aux-Text Messaging' Page.

Sending a new text message:

1) While viewing the 'Aux-Text Messaging' Page, press the **New** Softkey.

Or:

- a) Press the **MENU** Key to display the Page Menu.
- b) Turn either **FMS** Knob to place the cursor on 'Draft New Message'.
- c) Press the **ENT** Key.

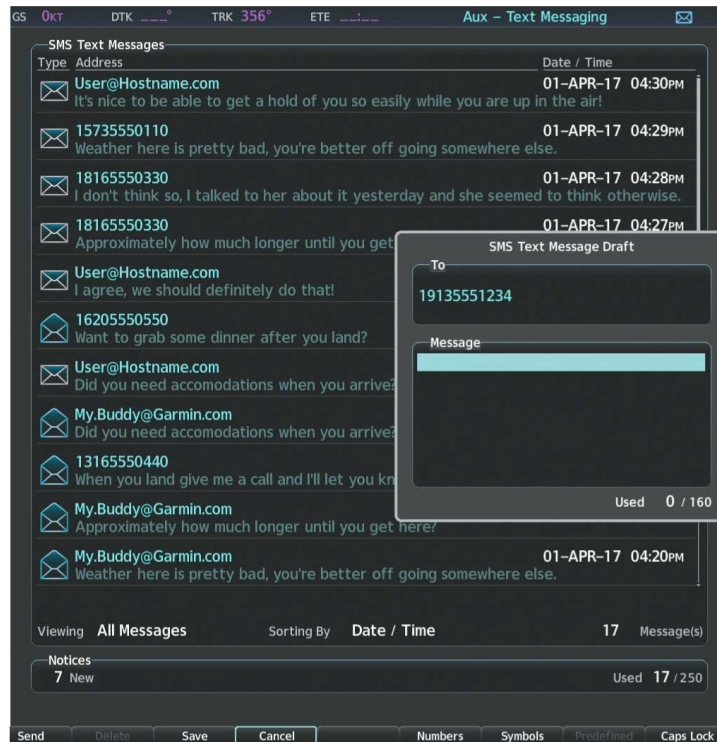


Figure 8-42 Composing a New Text Message

- 2) The SMS Text Message Draft Window is now displayed with the cursor in the 'To' field. Enter the desired telephone number or email address. Entry can be accomplished through the alphanumeric keys on the MFD Controller, or combination of the **FMS** Knob on the controller and softkeys on the MFD. The **FMS** Knob is used to enter letters and numbers, or numbers can be entered from the MFD by pressing the **Numbers** Softkey. Press the **CapsLock** Softkey to create upper and lower case alpha characters. Special characters can be accessed by pressing the **Symbols** Softkey.
- 3) Press the **ENT** Key. The cursor is now displayed in the 'Message' field.
- 4) Enter the desired message using any combination of entry methods as described in step 2.

- 5) Press the **ENT** Key.
- 6) Press the **Send** Softkey to send the message immediately, or press the **Save** Softkey to save the message in Outbox for sending at a later time. Press the **Cancel** Softkey to delete the message.

Sending a New Text Message/Email to a Saved Contact:

- 1) With the 'Aux - Telephone' Page displayed, press the **FMS** Knob to display the cursor.
- 2) Turn either **FMS** Knob to place the cursor on the desired contact name.
- 3) Select either the **Text Email** Softkey to send to the email address saved for the contact or **Text Phone** Softkey to send to the phone number saved for the contact. The cursor is placed in the 'To' field. Confirm the contact you wish to send a message to by pressing the **ENT** Key.
- 4) Enter the desired message, then press the **ENT** Key.
- 5) Confirm you wish to send the message by pressing the **ENT** Key with 'Yes' highlighted. Select 'No' to return to the message entry field and either select the **Cancel** Softkey to delete the message or select the **Save** Softkey to save the message as a draft.

PREDEFINED TEXT MESSAGES

Time and effort can be saved in typing text messages that are used repeatedly by saving these messages as a predefined message.

Creating a predefined text message:

- 1) While viewing the 'Aux-Text Messaging' Page, press the **MENU** Key to display the Page Menu.

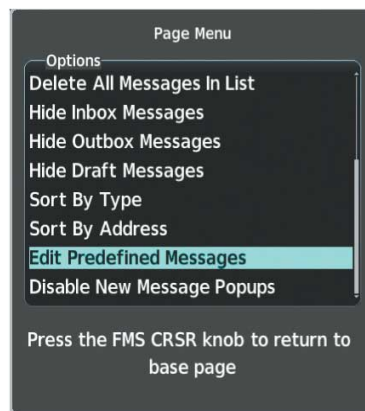


Figure 8-43 Creating/Editing Predefined Messages

- 2) Turn either **FMS** Knob to select 'Edit Predefined Messages'.
- 3) Press the **ENT** Key. The Predefined Messages view is now displayed.
- 4) Press the **New** Softkey.

Or:

- a) Press the **MENU** Key to display the Page Menu.
- b) Turn either **FMS** Knob to place the cursor on 'Draft New Predefined Message'.
- c) Press the **ENT** Key. The Predefined SMS Text Message Window is now displayed.

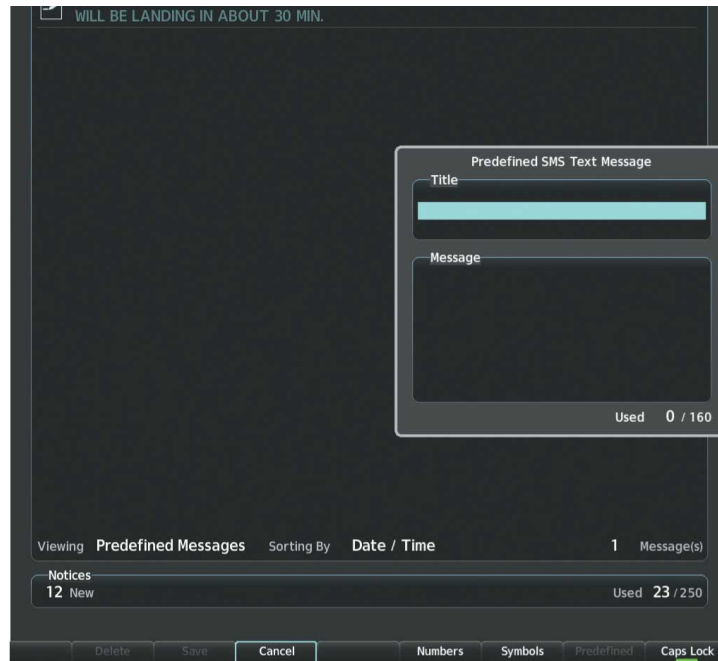


Figure 8-44 Composing a Predefined Message

- 5) The cursor is displayed in the 'Title' field. Enter the desired message title. Entry can be accomplished through the alphanumeric keys on the MFD Controller, or combination of the **FMS** Knob on the controller and softkeys on the MFD. The **FMS** Knob is used to enter letters and numbers, or numbers can be entered from the MFD by pressing the **Numbers** Softkey. Press the **CapsLock** Softkey to create upper and lower case alpha characters. Special characters can be accessed by pressing the **Symbols** Softkey.
- 6) Press the **ENT** Key. The cursor is now displayed in the 'Message' field.
- 7) Enter the desired message using any combination of entry methods as described in step 5.
- 8) Press the **ENT** Key.
- 9) Press the **Save** Softkey. The new predefined message is now shown in the displayed list. Pressing the **Cancel** Softkey will delete the message without saving.
- 10) Press the **MENU** Key to display the Page Menu.
- 11) Turn either **FMS** Knob to place the cursor on 'Cancel Drafting Message'.
- 12) Press the **ENT** Key.

Sending a predefined text message:

- 1) While viewing the 'Aux-Text Messaging' Page, press the **New** Softkey.
- 2) The Predefined SMS Text Message Window is now displayed with the cursor in the 'To' field. Enter the desired telephone number or email address. Entry can be accomplished through the alphanumeric keys on the MFD Controller, or combination of the **FMS** Knob on the controller and softkeys on the MFD. The **FMS** Knob is used to enter letters and numbers, or numbers can be entered from the MFD by pressing the **Numbers** Softkey. Press the **CapsLock** Softkey to create upper and lower case alpha characters. Special characters can be accessed by pressing the **Symbols** Softkey.
- 3) Press the **ENT** Key. The cursor is now displayed in the 'Message' field.
- 4) Press the **Predefined** Softkey. The Predefined Message Menu Window is displayed.
- 5) Turn either **FMS** Knob to select the desired predefined message.
- 6) Press the **ENT** Key. The predefined message text is inserted into the message field. If desired, the message can be edited by using the **FMS** Knobs.
- 7) Press the **ENT** Key.
- 8) Press the **Send** Softkey to transmit the message.

TEXT MESSAGE BOXES

Received text messages reside in the Inbox as 'Read' or 'Unread' messages. The Outbox contains 'Sent' and 'Unsent' text messages. Saved messages that are meant to be sent later are stored as Drafts. Each text message box may be viewed separately, or together in any combination.

Show Inbox messages:

While viewing the 'Aux-Text Messaging' Page, press the **Arrange** Softkey, then press the **Inbox** Softkey.

Or:

- 1) Press the **MENU** Key to display the Page Menu.
- 2) Turn either **FMS** Knob to place the cursor on 'Show Inbox Messages'.
- 3) Press the **ENT** Key. The message box selected for viewing is indicated at the bottom left of the list window.

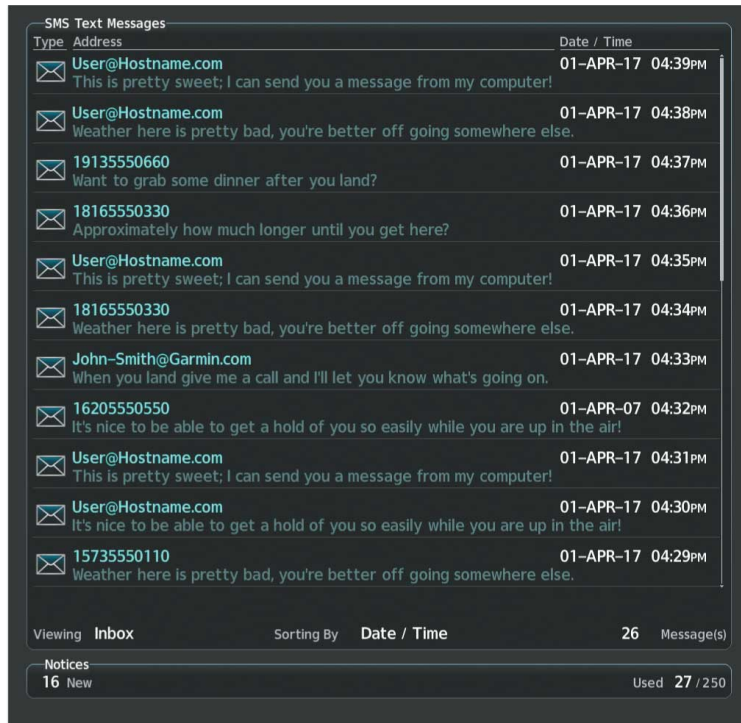


Figure 8-45 Text Message Inbox

Show Outbox messages:

While viewing the 'Aux-Text Messaging' Page, press the **Arrange** Softkey, then press the **Outbox** Softkey.

Or:

- 1) Press the **MENU** Key to display the Page Menu.
- 2) Turn either **FMS** Knob to place the cursor on 'Show Outbox Messages'.
- 3) Press the **ENT** Key. The message box selected for viewing is indicated at the bottom left of the list window.

Show Draft messages:

While viewing the 'Aux-Text Messaging' Page, press the **Arrange** Softkey, then press the **Drafts** Softkey.

Or:

- 1) Press the **MENU** Key to display the Page Menu.
- 2) Turn either **FMS** Knob to place the cursor on 'Show Draft Messages'.
- 3) Press the **ENT** Key. The message box selected for viewing is indicated at the bottom left of the list window.

MANAGING TEXT MESSAGES

The viewed messages may be listed according to the date/time the message was sent or received, the type of message (read, unread, sent, unsent, etc.), or by message address.

Viewing messages sorted by message date/time:

While viewing the 'Aux-Text Messaging' Page, press the **Arrange** Softkey, then press the **Time** Softkey.

Or:

- 1) Press the **MENU** Key to display the Page Menu.
- 2) Turn either **FMS** Knob to place the cursor on 'Sort By Date/Time'.
- 3) Press the **ENT** Key. The sorting selection is indicated at the bottom center of the list window.

Viewing messages sorted by message type:

While viewing the 'Aux-Text Messaging' Page, press the **Arrange** Softkey, then press the **Type** Softkey.

Or:

- 1) Press the **MENU** Key to display the Page Menu.
- 2) Turn either **FMS** Knob to place the cursor on 'Sort By Type'.
- 3) Press the **ENT** Key. The sorting selection is indicated at the bottom center of the list window.

Viewing messages sorted by address:

While viewing the 'Aux-Text Messaging' Page, press the **Arrange** Softkey, then press the **Address** Softkey.

Or:

- 1) Press the **MENU** Key to display the Page Menu.
- 2) Turn either **FMS** Knob to place the cursor on 'Sort By Address'.
- 3) Press the **ENT** Key. The sorting selection is indicated at the bottom center of the list window..

Viewing the content of a text message:

- 1) While viewing the 'Aux-Text Messaging' Page, select the desired message box.
- 2) Press the **FMS** Knob to activate the cursor.
- 3) Turn either **FMS** Knob to select the desired message.
- 4) Press the **View** Softkey.

Or:

Press the **ENT** Key.

Or:

- a) Press the **MENU** Key to display the Page Menu.
- b) Turn either **FMS** Knob to place the cursor on 'View Selected Message'.
- c) Press the **ENT** Key.

Message content is displayed.

- 5) To close the text message, press the **Close** Softkey.

Or:

- a) Press the **MENU** Key to display the Page Menu.
- b) Turn either **FMS** Knob to place the cursor on 'Close Message'.
- c) Press the **ENT** Key.

Marking selected message as read:

- 1) While viewing the Inbox on the 'Aux-Text Messaging' Page, press the **FMS** Knob to activate the cursor.
- 2) Turn either **FMS** Knob to select the desired message.
- 3) Press the **MRK Read** Softkey.

Or:

- a) Press the **MENU** Key to display the Page Menu.
- b) Turn either **FMS** Knob to place the cursor on 'Mark Selected Message As Read'.
- c) Press the **ENT** Key.

The message symbol now indicates the message has been opened.

Marking all messages as read:

- 1) While viewing the Inbox on the 'Aux-Text Messaging' Page, press the **MENU** Key to display the Page Menu.
- 2) Turn either **FMS** Knob to place the cursor on 'Mark All New Messages As Read'.
- 3) Press the **ENT** Key. A confirmation window is displayed.
- 4) With cursor highlighting 'YES', press the **ENT** Key. The message symbols now indicate all the message have been opened.

Deleting a message:

- 1) While viewing the Inbox on the 'Aux-Text Messaging' Page, press the **FMS** Knob to activate the cursor.
- 2) Turn either **FMS** Knob to select the desired message.
- 3) Press the **Delete** Softkey.

Or:

- 1) Press the **MENU** Key to display the 'Page Menu.'
- 2) Turn either **FMS** Knob to place the cursor on 'Delete Selected Message'.
- 3) Press the **ENT** Key.

8.11 ELECTRONIC STABILITY AND PROTECTION (ESP)

ELECTRONIC STABILITY & PROTECTION (ESP™)

Electronic Stability and Protection (ESP™) is an optional feature that is intended to discourage the exceedance of attitude, established airspeed and angle of attack parameters. This feature will only function when the aircraft is above 200 feet AGL and the autopilot is not engaged.

ESP engages when the aircraft exceeds one or more conditions (pitch, roll, airspeed) beyond the normal flight parameters. Enhanced stability for each condition is provided by applying a force to the appropriate control surface to return the aircraft to the normal flight envelope. This is perceived by the pilot as resistance to control movement in the undesired direction when the aircraft approaches a steep attitude, high airspeed, or when a stall is imminent.

As the aircraft deviates further from the normal attitude and/or airspeed range, the force increases (up to an established maximum) to encourage control movement in the direction necessary to return to the normal attitude and/or airspeed range. Except in the case of high airspeed, when maximum force is reached, force remains constant up to the maximum engagement limit. Above the maximum engagement limit, forces are no longer applied. There is no maximum engagement related to a high airspeed condition.

The pilot can interrupt ESP™ by pressing and holding the Autopilot Disconnect (AP DISC) switch. Upon releasing the AP DISC switch, ESP™ force will again be applied, provided aircraft roll attitude is within engagement limits. ESP™ can also be overridden by overpowering the servo's mechanical torque limit. ESP can be enabled or disabled on the Aux-System Setup 2 Page on the MFD.



NOTE: *Disabling ESP on the 'Aux-System Setup 2' Page on the MFD will also disable automatic engagement of the Yaw Damper only when the autopilot is not engaged. The Yaw Damper will engage with the autopilot when ESP is enabled or disabled.*

Enabling/Disabling ESP:

- 1) Turn the large **FMS** Knob to select the Aux Page Group.
- 2) Turn the small **FMS** Knob to select the System Setup Page.
- 3) If necessary, select the **SETUP 2** Softkey to display the Aux-System Setup 2 Page. If the Aux-System Setup 2 is already displayed, proceed to step 4.
- 4) Press the **FMS** Knob to activate the cursor.
- 5) Turn the large **FMS** Knob to place the cursor in the Stability & Protection field.
- 6) Turn the small **FMS** Knob to select 'Enabled' or 'Disabled'.
- 7) Press the **FMS** Knob to remove the cursor.

ESP is automatically enabled on system power up.

ROLL ENGAGEMENT

Roll Limit Indicators are displayed on the roll scale at 45° right and left, indicating where ESP will engage. As roll attitude exceeds 45°, ESP will engage and the on-side Roll Limit Indicator will move to 30°. The Roll Limit Indicator is now showing where ESP will disengage as roll attitude decreases.

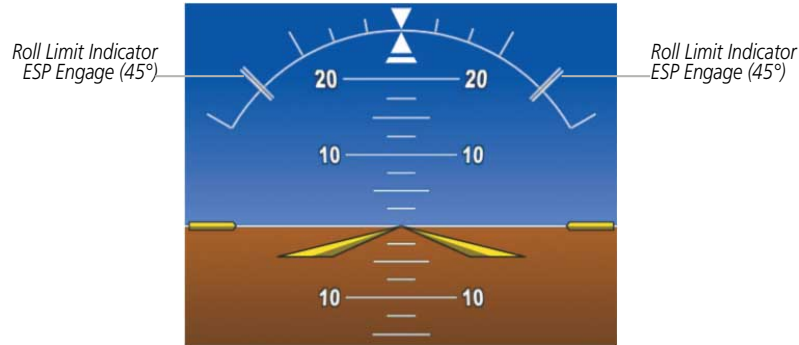


Figure 8-46 ESP Roll Engagement Indication (ESP NOT Engaged)

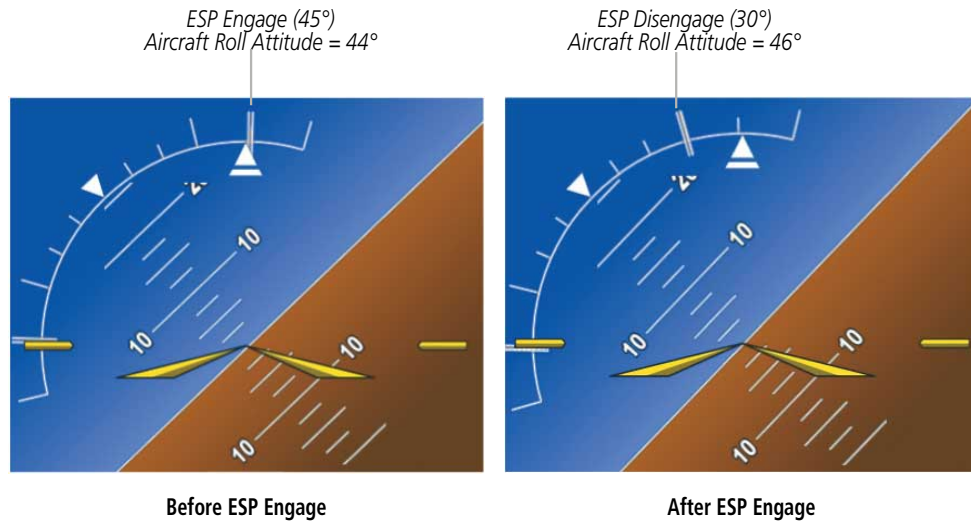


Figure 8-47 Roll Increasing to ESP Engagement

Once engaged, ESP force will be applied between 30° and 75°. The force increases as roll attitude increases and decreases as roll attitude decreases. The applied force is intended to encourage pilot input that returns the airplane to a more normal roll attitude. As roll attitude decreases, ESP will disengage at 30°.

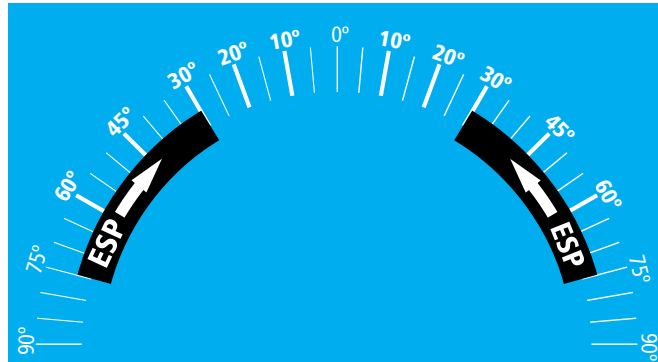


Figure 8-48 ESP Roll Operating Range When Engaged (Force Increases as Roll Increases & Decreases as Roll Decreases)

ESP is automatically disengaged if the aircraft reaches the autopilot roll engagement attitude limit of 75°.

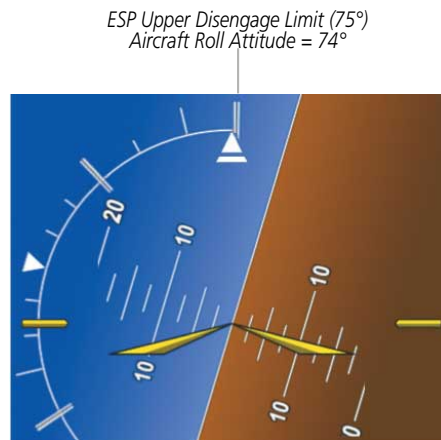


Figure 8-49 Roll Attitude Autopilot Engagement Limit (ESP Engaged)

PITCH ENGAGEMENT

ESP™ engages at 17.5° nose-up and 15.5° nose-down. Once ESP™ is engaged, it will apply opposing force between 17.5° and 50° nose-up and between 15.5° and 50° nose-down, as indicated in Figure 8-133. Maximum opposing force is applied between 22.5° and 50° nose-up and between 20.5° and 50° nose-down.

With ESP™ engaged, and the aircraft in a nose-up condition, opposing force steadily decreases from 17.5° nose-up to 12.5° nose-up as aircraft pitch moves toward zero degrees. ESP™ disengages at 12.5° nose-up. With ESP™ engaged, and the aircraft in a nose-down condition, opposing force steadily decreases from 15.5° nose-down to 10.5° nose-down as aircraft pitch moves toward zero degrees. ESP™ disengages at 10.5° nose-down.

The opposing force increases or decreases depending on the pitch angle and the direction of pitch travel. This force is intended to encourage movement in the pitch axis in the direction of the normal pitch attitude range for the aircraft.

There are no indications marking the pitch ESP™ engage and disengage limits in these nose-up/nose-down conditions.

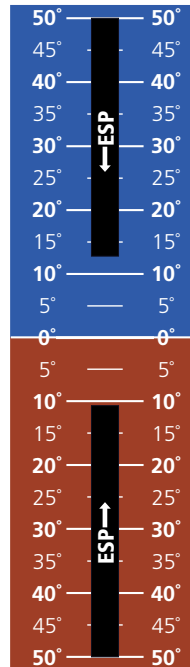


Figure 8-50 ESP Pitch Operating Range When Engaged (Force Increases as Pitch Increases & Decreases as Pitch Decreases)

LOW SPEED PROTECTION

Low speed protection is provided as part of the ESP feature. When the stall warning system determines a stall condition is imminent, ESP will engage, applying force in the direction necessary to lower the nose of the aircraft.

HIGH AIRSPEED PROTECTION

Exceeding V_{mo} or M_{mo} will result in ESP applying force to raise the nose of the aircraft. When the high airspeed condition is remedied, ESP force is no longer applied.

8.12 HYPOXIA RECOGNITION AND AUTOMATIC DESCENT MODE

HYPOXIA RECOGNITION WITH AUTOMATIC DESCENT MODE

The optional Hypoxia Recognition detects pilot incapacitation due to the affects of hypoxia or other physical conditions. This is accomplished by monitoring pilot interaction with the Perspective+ system. If the system determines the pilot is not responding, Automatic Descent Mode is activated placing the aircraft in a descent to a lower altitude to provide the pilot and passengers an opportunity to recover from the effects of hypoxia.

The system is operative when the aircraft altitude is above 14,900 feet (pressure altitude) and the Garmin AFCS autopilot is engaged. Pilot interaction with the Perspective+ system is monitored by detecting key presses and turns of the knobs (Audio Panel and push-to-talk switch excluded). If a period of inactivity (time dependent on altitude, see Figure 8-50) is detected, Hypoxia Recognition initiates an automatic descent.

Upon activation, there are three sequential phases employed by the system; determining pilot alertness, descent to 14,000 feet MSL, and descent to 12,500 feet MSL.

DETERMINING PILOT ALERTNESS

When the system detects a sufficient period of inactivity the Advisory Annunciation ‘Are you alert?’ is displayed. Selecting the **ALERT** Softkey will acknowledge the message and reset the system. Pressing any other softkey, or turning a knob will also reset the system.

When no pilot interaction is detected for an additional 60 seconds, the Caution Annunciation ‘HYPOXIA ALERT’ is displayed. Again, selecting the **ALERT** Softkey will acknowledge the message and reset the system. Pressing any other softkey, or turning a knob will also reset the system.

When no pilot interaction is detected for an additional 60 seconds, the Warning Annunciation ‘AUTO DESCENT’ is displayed in the Annunciation Window and ‘Automatic descent to 14,000FT in 60 seconds’ is displayed in the Alerts Window. Once again, selecting the **ALERT** Softkey will acknowledge the message and reset the system. Pressing any other softkey, or turning a knob will also reset the system.

When no interaction is detected for another 60 seconds, the system will automatically proceed with the descent.

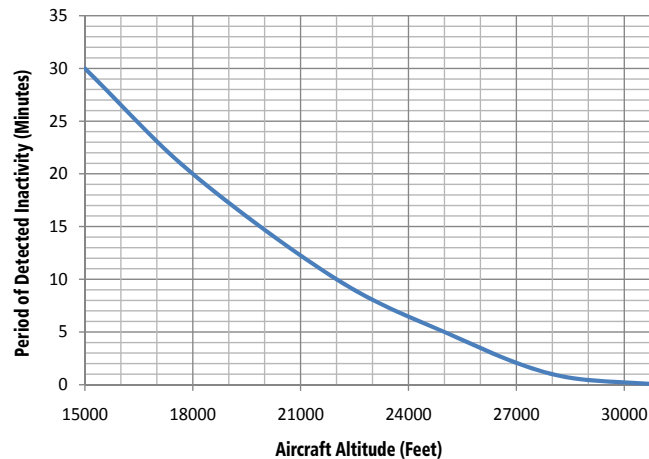


Figure 8-51 Hypoxia Recognition Activation Times

AUTOMATIC DESCENT MODE

 **NOTE:** Automatic Descent Mode does not account for terrain elevation.

As the system prepares for descent, the Selected Altitude is set to 14,000 and the AFCS enters Indicated Airspeed (IAS) mode with the airspeed reference set to the maximum allowable airspeed setting for the specific aircraft model. Refer to the Flight Director Vertical Modes in the AFCS section. AFCS lateral mode settings are not affected.

As the descent begins, an ‘AUTO DESCENT’ warning is displayed in the Annunciation Window. ‘AUTO DESCENT - Aircraft Descending to 14,000FT’ is displayed in the Alerts Window. ‘EDM’ is shown as an AFCS Status Annunciation indicating the system has entered Automatic Descent Mode. ‘EDM’ (Emergency Descent Mode) is the AFCS mode that is activated when Hypoxia Recognition initiates an automatic descent. A continuous repeating chime will be heard as long as Automatic Descent Mode is active. After the descent begins, Automatic Descent Mode can only be canceled by disconnecting the autopilot.

As the aircraft reaches 14,000 feet the system sets the AFCS to Altitude Hold mode. The AFCS will also remain in Automatic Descent Mode as indicated by ‘EDM’ continuing to be displayed as an AFCS Status Annunciation. The system again begins monitoring for pilot interaction.

If no pilot interaction is detected for four minutes, the system initiates the second descent. As the system prepares for this descent, the Selected Altitude is set to 12,500 and the AFCS again enters IAS mode with the airspeed reference set to the maximum allowable airspeed for the specific aircraft model.

As the descent begins, an ‘AUTO DESCENT’ warning is displayed in the Annunciation Window. ‘AUTO DESCENT - Aircraft Descending to 12,500FT’ is displayed in the Alerts Window. ‘EDM’ is shown as an AFCS Status Annunciation. Also, the continuous repeating chime is heard.

As the aircraft reaches 12,500 feet the system sets the AFCS to Altitude Hold mode. The AFCS will also remain in Automatic Descent Mode as indicated by ‘EDM’ continuing to be displayed as an AFCS

Status Annunciation as well as the continuing presence of the repeating chime. At this point, the AFCS must be disconnected to cancel Automatic Descent Mode.

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CNS

Flight Management

Hazard Avoidance

Automatic Flight Control System


Additional Features


Appendices

Index

8.13 ELECTRONIC CHECKLISTS

ELECTRONIC CHECKLISTS

 **NOTE:** The optional checklists presented here are for example only and may differ from checklists available for the SR20/SR22/SR22T. The information described in this section is not intended to replace the checklist information described in the AFM or the Pilot Safety and Warning Supplements document.

 **NOTE:** Garmin is not responsible for the content of checklists. Checklists are created by the aircraft manufacturer. Modifications or updates to the checklists are coordinated through the aircraft manufacturer. The user cannot edit these checklists.

The MFD is able to display optional electronic checklists which allow a pilot to quickly find the proper procedure on the ground and during each phase of flight. The system accesses the checklists from an SD card inserted into the bezel slot. If the SD card contains an invalid checklist file or no checklist, the Power-up Page messages display 'Checklist File: Invalid' or 'Checklist File: N/A' (not available) and the CHKLIST Softkey is not available.

Accessing and Navigating Checklist

- 1) From any page on the MFD (except the EIS Pages), press the **Checklist** Softkey or turn the large **FMS** Knob to select the Checklist Page.
- 2) Turn the large **FMS** Knob to select the 'Group' field.
- 3) Turn the small **FMS** Knob to select the desired procedure and press the **ENT** Key.
- 4) Turn the large **FMS** Knob to select the 'Checklist' field.
- 5) Turn the **FMS** Knob to select the desired checklist and press the **ENT** Key. The selected checklist item is indicated with white text surrounded by a white box.
- 6) Press the **ENT** Key or **Check** Softkey to check the selected checklist item. The line item turns green and a checkmark is placed in the associated box. The next line item is automatically selected for checking.

Either **FMS** Knob can be used to scroll through the checklist and select the desired checklist item.

Press the **CLR** Key or **Uncheck** Softkey to remove a check mark from an item.

- 7) When all checklist items have been checked, '*Checklist Finished*' is displayed in green text at the bottom left of the checklist window. If all items in the checklist have not be checked, '*Checklist Not Finished*' will be displayed in yellow text.
- 8) Press the **ENT** Key. 'Go To Next Checklist?' will be highlighted by the cursor.
- 9) Press the **ENT** Key to advance to the next checklist.
- 10) Press the **Exit** Softkey to exit the Checklist Page and return to the page last viewed.

Accessing Emergency Checklist

- 1) From any page on the MFD (except the EIS Pages), press the **Checklist** Softkey or turn the large **FMS** Knob to select the Checklist Page.
- 2) Press the **EMER** Softkey.
- 3) Turn the **FMS** Knob to select the desired emergency checklist and press the **ENT** Key.
- 4) Press the **ENT** Key or **Check** Softkey to check the selected emergency checklist item. The line item turns green and a checkmark is placed in the box next to it. The next line item is automatically highlighted for checking.

Either **FMS** Knob can be used to scroll through the checklist and select the desired checklist item.

Press the **CLR** Key or **Uncheck** Softkey to remove a check mark from an item.

- 5) When all checklist items have been checked, '*Checklist Finished*' is displayed in green text at the bottom left of the checklist window. If all items in the checklist have not be checked, '*Checklist Not Finished*' will be displayed in yellow text.
- 6) Press the **ENT** Key. 'Go To Next Checklist?' will be highlighted by the cursor.
- 7) Press the **ENT** Key to advance to the next checklist.
- 8) Press the **Return** Softkey to return to the previous checklist.
- 9) Press the **Exit** Softkey to exit the Checklist Page and return to the page last viewed.

8.14 AUXILIARY VIDEO

ENHANCED VISION SYSTEM (EVS) & AUXILIARY VIDEO

The Perspective+ system provides a control and display interface to an optional Enhanced Vision System and an additional optional video display. EVS is designed to provide an aid to situational awareness while operating in low visibility environments. The EVS camera view is displayed on the 'Aux - Video' page.

EVS IMAGE QUALITY AND INTERPRETATION

Upon power-up the EVS requires approximately 30 seconds to produce a usable image. The image generated is monochrome (black and white). Normally the hotter an object is the whiter it appears on the display.

The EVS periodically calibrates itself to optimize the image. The calibration process can be observed on the display as a one second image interruption, which happens every five minutes or when calibration is manually activated.

Image quality may vary according to target size, target temperature, background temperature, and attenuation from airborne particles or moisture within view of the sensor. If the video signal is ever completely interrupted, the display may appear as a solid field of gray, white, or blue, and the message No Video or NO DATA AVAILABLE may appear.

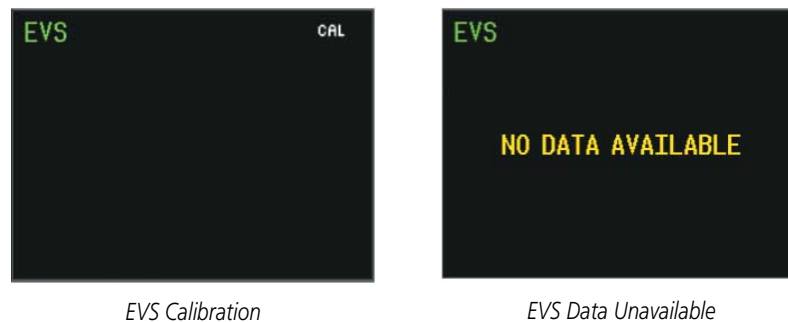


Figure 8-52 EVS Messages

The video adjustment options can also be selected by using the page menu option.

Selecting video adjustment options:

- 1) While viewing the Aux - Video Page press the Menu Key to display the Page Menu Options.
- 2) Turn the large FMS Knob to highlight the desired video adjustment option and press the **ENT** Key.

Once the **ENT** key is pressed on any option, the page menu closes and returns to the 'Aux - Video' Page.



Figure 8-53 'Aux - Video' Page Menu



Figure 8-54 Full Screen EVS Image

ZOOM/RANGE

Pressing the **Zoom+** or **Zoom-** Softkeys increases or decreases video display magnification between 1x and 10x.

The **Joystick** can be used to increase or decrease the range setting on the map display or zoom in and out on the video display. While in the Split-Screen mode, pressing the **MAP ACTV** or **VID ACTV** Softkey determines which display the **Joystick** adjusts. Pressing the softkey to display **MAP ACTV** allows the **Joystick** to control the range setting of the map display. Pressing the softkey to display **VID ACTV** allows the **Joystick** to control the zoom setting of the video display.

When zooming in on the video display, a **Zoom Window** will appear in the upper right of the display. A box within this window indicates the portion of the display currently being viewed. The currently displayed portion of the full display may be adjusted by using **Joystick**.

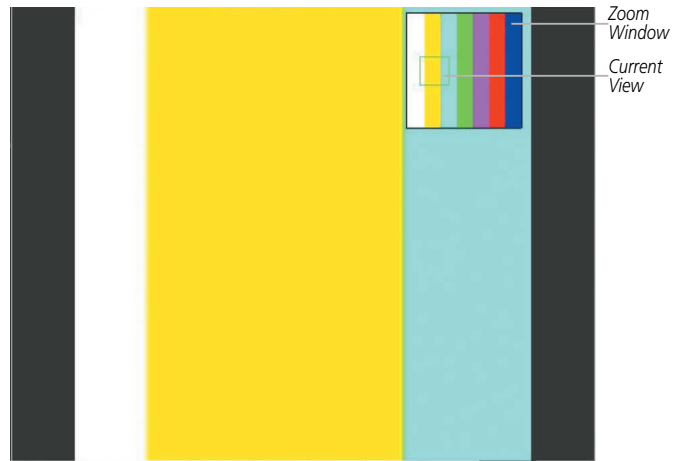



Figure 8-55 Zoom Window

8.15 POSITION REPORTING

POSITION REPORTING

 **NOTE:** An account must be established with Garmin ConnexTM to make full use of the Position Reporting feature.

The Position Reporting feature allows the system to send position reporting information to a provider, such as FlightAware.com.

The position reports can be activated or deactivated by the pilot. While active, the position reports are transmitted over the Iridium Short Burst Datalink periodically at a pilot specified interval or by pressing the **Send Rep** Softkey. The minimum automatic transmission period between reports is two minutes with more frequent transmissions possible via manually sending reports with the **Send Rep** Softkey. During voice communications and data transfers the Iridium datalink is occupied and position reports will not be sent. During this period the reports will buffer and be sent as a package as soon as the link is available. The position reports are received by Garmin Connex and forwarded to select flight tracking provider(s).

To reduce excess usage, position reports are only transmitted while the aircraft is in the air.

The following are position reports contents:

- Tail Number
- Time
- Latitude/Longitude
- Ground Speed
- Ground Track
- Heading
- Barometric Altitude
- True Airspeed
- Outside Air Temperature
- Destination
- Estimated Time Enroute
- Airborne Status

The Airborne Status field is the indication that the aircraft is on the ground or in the air at the time the position report was generated. The avionics generate a position report when the Airborne Status field changes state.

- Passenger Onboard

Passenger Onboard indicates passengers are on the aircraft at the time the position report was generated. A position report is generated when the Passenger Onboard field changes state.

Viewing the Connex Page:

- 1) Turn the large **FMS** Knob to select the Aux page group.
- 2) Turn the small FMS Knob to select 'Aux - Connex' Page.

Setting up Position Reporting:

- 1) With the 'Aux - Connex' Page displayed, press the **FMS** Knob to display the cursor in the Transmission Period field.
- 2) Turn the small **FMS** Knob to select 'Auto' for automatic transmission of position reports or 'Off' to disable transmission of position reports.
- 3) Press the **ENT** Key. The selection is entered and the cursor is placed in the Transmission Rate field.
- 4) Turn the small **FMS** Knob to highlight the first digit.
- 5) Again, turn the small **FMS** Knob to enter the desired number.
- 6) Turn the large **FMS** Knob to highlight the second digit.
- 7) Turn the small **FMS** Knob to enter the desired number.
- 8) Press the **ENT** Key. The selection is entered and the cursor is placed in the Passengers On Board field.
- 9) Turn the small **FMS** Knob left or right to select 'Yes' or 'No'.



Figure 8-56 Set Transmission Rate

- 10) Press the **FMS** Knob to remove the cursor.

Sending a position report manually

- 1) Turn the large **FMS** Knob to select the Aux page group.
- 2) Turn the small **FMS** Knob to select 'Aux - Connex' Page.
- 3) If necessary, set the Transmission Period to 'Auto'.
- 4) Press the **Send Rep** Softkey...

8.16 ABNORMAL OPERATION

ABNORMAL OPERATION

GDL 69A SXM Troubleshooting

For troubleshooting purposes, check the LRU Information Box on the 'Aux - System Status' Page for GDL 69A SXM status, serial number, and software version number. If a failure has been detected in the GDL 69A SXM the status is marked with a red X.

Selecting the 'Aux — System Status' Page:

- 1) Turn the large **FMS** Knob to select the Aux Page Group.
- 2) Turn the small **FMS** Knob to select the 'Aux - System Status' Page.

LRU Information	Status	Serial Number	Version
COM1	✗	-----	-----
COM2	✗	-----	-----
GDC1	✗	-----	-----
GDC2	✗	-----	-----
GDL 59	✓	-----	-----
GDL 59 RTR	✗	-----	-----
GDL 69	✓	0000001	0.00
GEA 1	✗	-----	-----
GEA 2	✗	-----	-----
GIA 1	✓	0000001	0.50
GIA 2	✗	0000002	0.50
GMA 1	✗	-----	-----
GMA 2	✗	-----	-----
GMU 1	✗	-----	-----
GMU 2	✗	-----	-----
GPS 1	✓	0000001	3.0

Figure 8-57 LRU Information Window on System Status Page

Some quick troubleshooting steps listed below can be performed to find the possible cause of a failure.

- Ensure the installed Data Link Receiver or Iridium Transceiver has an active subscription or account
- Perform a quick check of the circuit breakers to ensure that power is applied to the Data Link Receiver or Iridium Transceiver

IF FAILURE STILL EXISTS

If a failure still exists, the following messages may provide insight as to the possible problem:

Message	Message Location	Description
CHECK ANTENNA	XM Information Page (MFD)	Data Link Receiver antenna error; service required
UPDATING	XM Information Page (MFD)	Data Link Receiver updating encryption code
NO SIGNAL	XM Information Page Weather Datalink Page (MFD)	Loss of signal; signal strength too low for receiver
LOADING	XM Radio Page (MFD)	Acquiring channel audio or information
OFF AIR	XM Radio Page (MFD)	Channel not in service
-----	XM Radio Page (MFD)	Missing channel information
WEATHER DATA LINK FAILED	Weather Datalink Page (MFD)	No communication from Data Link Receiver within last 5 minutes
ACTIVATION REQUIRED	XM Information Page (MFD)	SiriusXM subscription is not activated
DETECTING ACTIVATION	Weather Datalink Page (MFD)	SiriusXM subscription is activating
WAITING FOR DATA...	Weather Datalink Page (MFD)	SiriusXM subscription confirmed downloading weather data

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CNS

Flight Management

Hazard Avoidance

Automatic Flight Control System


Additional Features

Appendices

Index

BLANK PAGE

ANNUNCIATIONS AND ALERTS

 **NOTE:** *The Pilot's Operating Handbook (POH) supersedes information found in this document.*

The Alerting System conveys alerts using the following:

- **CAS Window:** The CAS Window displays abbreviated Crew Alerting System (CAS) annunciation text. Text color is based on alert levels described in the following section. The Annunciation Window is located to the right of the Altimeter and Vertical Speed Indicator. All aircraft annunciations can be displayed simultaneously in the Annunciation Window. A white horizontal line separates annunciations that are acknowledged from annunciations that are not yet acknowledged. Higher priority annunciations are displayed towards the top of the window.
- **Alerts Window:** The Alerts Window displays text messages for up to 64 prioritized alert messages. Pressing the **Alerts** Softkey displays the Alerts Window. Pressing the **Alerts** Softkey a second time removes the Alerts Window from the display. When the Alerts Window is displayed, the **FMS** Knob can be used to scroll through the alert message list.
- **Softkey Annunciation:** During certain alerts, the **Alerts** Softkey may appear as a flashing annunciation to accompany an alert. The **Alerts** Softkey assumes a new label consistent with the alert level (Warning, Caution, or Advisory). By selecting the softkey when flashing an annunciation, the alert is acknowledged. The softkey label then returns to **Alerts**. If alerts are still present, the **Alerts** label is displayed in white with black text. Selecting the **Alerts** Softkey a second time views the alert text messages.
- **System Annunciations:** Typically, a large red or amber 'X' appears over instruments whose information is supplied by a failed Line Replaceable Unit (LRU). See the System Annunciations Section for more information.

Audio Alerting System: The system issues audio alert tones when specific system conditions are met. See the Alert Level Definitions Section for more information. The annunciation tone may be tested from the Aux - System Status Page.

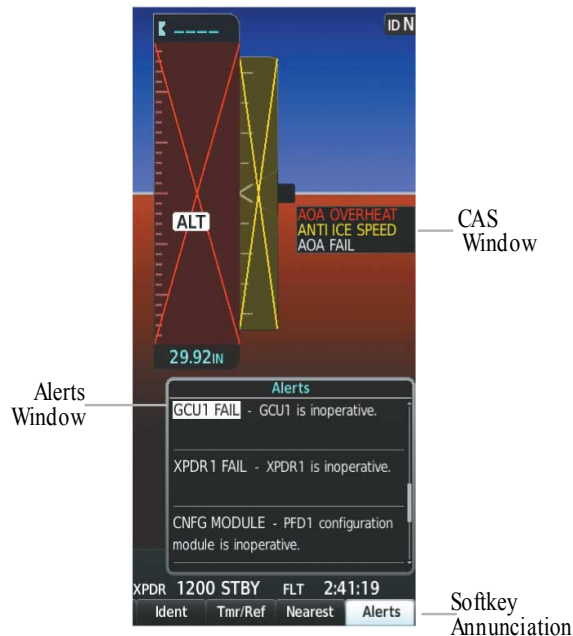


Figure A-1 Alerting System

Testing the system annunciation tone:

- 1) Use the **FMS** knob to select the AUX — System Status Page.
- 2) Select the **Ann Test** Softkey.

Or:

- a) Press the **MENU** Key.
- b) Highlight 'Enable Annunciator Test Mode' and press the **ENT** Key.

CAS MESSAGE PRIORITIZATION

NOTE: Refer to the Pilot's Operating Handbook (POH) for corrective pilot actions.

NOTE: Any CAS messages that are generated when the system is first powered on are considered already acknowledged. They do not flash or trigger the Warning or Caution softkeys.

The Alerting System uses four alert levels. Messages are grouped by criticality (warning, caution, advisory, message advisory alerts) and sorted by order of appearance (most recent messages on top). The color of the message is based on its urgency and on required action:

NOTE: Aural alerts associated with abnormal conditions and advisories are managed through the audio panels. Refer to the Audio Panel and CNS Section for more information.

- **Warning:** This level of alert requires immediate attention. Warning alert text is shown in red in the Annunciation Window and a flashing ‘Warning’ Softkey annunciation. A repeating double chime accompanies select warning conditions. Pressing the **Warning** Softkey acknowledges the presence of the warning alert and stops the chime (if present). Refer to Warning Annunciations Table A-1 for warning conditions and alerting behaviors.
- **Caution:** This level of alert indicates the existence of abnormal conditions on the aircraft that may require intervention. Caution alert text is shown in amber in the Annunciation Window and is accompanied by a flashing ‘Caution’ Softkey annunciation. A double chime lasting for one second occurs with select caution alerts. Pressing the **Caution** Softkey acknowledges the presence of the caution alert. Refer to Caution Annunciations Table A-1 for caution conditions and alerting behaviors.
- **Advisory:** This level of alert provides general information. Annunciation alert text is shown in white in the CAS Window; no aural tone is generated with the exception of the 'OXYGEN LEFT ON' advisory alert, which produces a one second double chime. An annunciation alert is accompanied by a flashing **Advisory** Softkey annunciation. Pressing the **Advisory** Softkey acknowledges the presence of the annunciation alert. Some messages do not require acknowledgement. Refer to Advisory Annunciations Table A-1 for annunciation alert conditions and behaviors.
- **Message Advisory Alerts:** This level of alert also provides general information but does not issue annunciations in the CAS Window. Instead, message advisory alerts only issue a flashing ‘Message’ Softkey annunciation. Selecting the **Message** Softkey acknowledges the presence of the message advisory alert and displays the alert text message in the Alerts Window. Refer to Message Advisory Alerts Table A-1 for annunciation alert conditions and behaviors.

Some CAS messages can be display in more than one alert level group. For example, a message might display as both a warning and a caution, but cannot appear more than once at any given time (unless the CAS is being tested). If the received signals justify multiple priorities for a certain message, the message is displayed for the higher priority condition. When graduating to a higher priority, the message flashes and requires new acknowledgment. When degrading to a lower priority condition, the message moves to the top of the appropriate grouping, but does not require new acknowledgment.

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CAS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

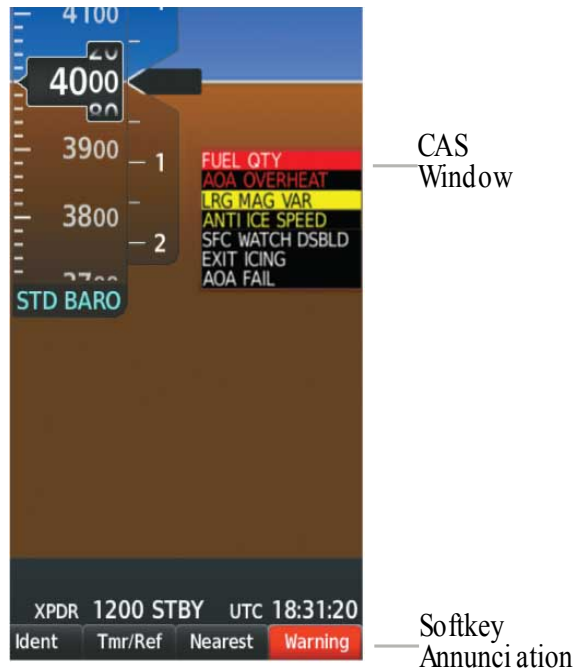


Figure A-2 CAS Message Prioritization



Figure A-3 Softkey Annunciation (Alert Softkey Labels)

CAS ANNUNCIATIONS

The following alerts are configured specifically for the Cirrus SR2x models. Red annunciation window text signifies warnings and amber, cautions. See the Pilot’s Operating Handbook (POH) for recommended pilot actions.

DISPLAY INHIBITS

Inhibits prevent certain CAS messages from being displayed during the following conditions:

If two alert levels of the same message are active simultaneously (e.g., L FUEL QTY warning and L FUEL QTY caution) only the higher alert level is displayed.

If a GEA or GIA fails, all CAS messages depending on sensors associated with that LRU are automatically inhibited. Inhibits cannot be activated by invalid sensor data.

WARNING ANNUNCIATIONS

Annunciation Text	Description
ANTI ICE CTRL ⚠	Tank valves cannot be controlled (closed) (TKS).
ANTI ICE FLOW ⚠	Flow rate is low (TKS).

Annunciation Text	Description
ANTI ICE QTY α	Left and right fluid quantities are unknown (TKS).
ANTI ICE QTY α	Fluid quantity is low (TKS).
AOA OVERHEAT α	AOA probe is overheated.
AUTO DESCENT †	Automatic descent to 14,000FT in 60 seconds.
AUTO DESCENT †	Aircraft descending to 14,000FT.
AUTO DESCENT †	Aircraft descending to 12,500FT.
AUTO DESCENT †	Aircraft descended due to pilot incapacitation.
BRAKE TEMP	Brake temperature is high.
CHT	Cylinder head temperature is high.
CO LVL HIGH	Carbon monoxide level is too high.
DUCT OVERHEAT ^	Cabin heat duct temperature is high.
ESS BUS	Check essential power bus voltage.
FUEL FLOW *	Check fuel flow.
FUEL IMBALANCE	Fuel quantity imbalance has been detected.
FUEL QTY	Check fuel tank levels.
M BUS 1	Check main power bus 1 voltage.
M BUS 2	Check main power bus 2 voltage.
MAN PRESSURE *	Check manifold pressure.
OIL PRESSURE	Oil pressure is out of range.
OIL TEMP	Oil temperature is high.
OXYGEN FAULT #	Oxygen system fault.
OXYGEN QTY #	Oxygen quantity is low.
PITCH TRIM	Pitch Trim control has failed.
RPM	Check engine RPM.
SPIN SPIN SPIN	Spin entry detected.
STALL	Stall warning.
START ENGAGED	Starter is engaged.
TIT *	TIT temperature is high.

Annunciation Text	Description
UNDERSPEED PROTECT ACTIVE †	None.
α — TKS FIKI (optional) † — Garmin AFCS required ^ — SR22T only * — Not applicable to all models # — Optional	

CAUTION ANNUNCIATIONS

Annunciation Text	Description
ALT 1	Check alternator 1 current.
ALT 2	Check alternator 2 current.
ALT AIR OPEN *	Alternate air door is open.
ANTI ICE HEAT α	Stall warning/AoA heater has failed.
ANTI ICE LEVEL α	Left tank fluid quantity is unreliable (TKS).
ANTI ICE LEVEL α	Right tank fluid quantity is unreliable (TKS).
ANTI ICE PRESS α	Tail pressure is low (TKS).
ANTI ICE PRESS α	Pressure is high (TKS).
ANTI ICE QTY α	Fluid quantity imbalance has been detected (TKS).
ANTI ICE QTY α	Fluid quantity is low (TKS).
ANTI ICE SPEED α	Airspeed is too low for ice protection (TKS).
ANTI ICE SPEED α	Airspeed is too high for ice protection (TKS).
AP MISCOMPARE #	Autopilot miscompare, autopilot is not available.
AP/PFD DIF ADC #	Autopilot and PFD are using different ADCs.
AP/PFD DIF AHRS #	Autopilot and PFD are using different AHRSs.
AVIONICS OFF	Avionics master switch is off.
BATT 1	Check battery 1 current.
BRAKE TEMP	Brake temperature is high.
CHT	Cylinder head temperature is high.

Annunciation Text	Description
FLAP OVERSPEED	Flaps are extended beyond airspeed limitations.
FUEL IMBALANCE	Fuel quantity imbalance has been detected.
FUEL QTY	Check fuel tank levels.
HYPOXIA ALERT †	Hypoxia caution alert.
LRG MAG VAR	The GDU's internal model cannot determine the exact magnetic variance for geographic locations near the magnetic poles. Displayed magnetic course angles may differ from the actual magnetic heading by more than 2°.
M BUS 1	Check main power bus 1.
M BUS 2	Check main power bus 2.
MAN PRESSURE *	Check manifold pressure.
NO ADC MODES #	Autopilot air data modes are not available.
NO VERT MODES #	Autopilot vertical modes are not available.
OIL PRESSURE	Oil pressure is out of range.
OIL TEMP	Oil temperature is high.
OXYGEN QTY #	Oxygen quantity is low.
OXYGEN RQD #	Oxygen is required.
PARK BRAKE	Parking break is set.
PITOT HEAT FAIL	Pitot heat failure.
PITOT HEAT REQD	Pitot heat is required.
SLCT MAG	The system notifies the pilot to set the Nav Angle units on the Avioncs Settings Screen to Magnetic.
SLCT NON-MAG	The system notifies the pilot to set the Nav Angle units on the Avioncs Settings Screen to True.
START ENGAGED	Starter is engaged.
α — TKS FIKI (optional) † — Garmin AFCS required ^ — SR22T only * — Not applicable to all models # — Optional	

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CAS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

ADVISORY ANNUNCIATIONS

Annunciation Text	Description
ALTITUDE SEL #	Climbing away from selected altitude.
ALTITUDE SEL #	Descending away from selected altitude.
AOA FAIL α	Dynamic stall speed band is unavailable.
ARE YOU ALERT †	Are you alert?
COURSE SEL #	Current track will not intercept selected course.
FUEL IMBALANCE	Fuel quantity imbalance has been detected.
HIGH MP FF *	Avoid fuel flow 18 to 30 GPH and MP above 26".
L FUEL QTY	Check left fuel tank level.
OXYGEN LEFT #	Oxygen system is left on after shutdown.
OXYGEN QTY #	Oxygen quantity is low.
PUMP BACKUP α	Anti-ice backup pump mode has been selected (TKS).
R FUEL QTY	Check right fuel tank level.
SFC WATCH FAIL	Surfacewatch failed.
α — TKS FIKI (optional) † — Garmin AFCS required ^ — SR22T only * — Not applicable to all models # — Optional	

MESSAGE ADVISORY ALERTS

Annunciation Text	Description
ANTI ICE QTY α	Fluid quantity is low (TKS).
CO DET FAIL	The carbon monoxide detector is inoperative.
CO DET SRVC	The carbon monoxide detector needs service.
ESP CONFIG †	ESP config error. Config service req'd.
ESP FAIL †	ESP is inoperative.
ESP OFF †	ESP selected off.
ESP DEGRADE †	ESP IAS mode is inoperative.
EXIT ICING α#	Exit icing conditions.

Annunciation Text	Description
FAILED PATH #	An autopilot servo data path has failed.
MFD FAN FAIL	MFD cooling fan is inoperative.
PFD FAN FAIL	PFD cooling fan is inoperative.
□ — TKS FIKI (optional) † — Garmin AFCS required ^ — SR22T only * — Not applicable to all models # — Optional	


VOICE ALERTS

The following aural alerts are announced by the system using a human voice. If an optional terrain system is installed, voice alerts are also generated (refer to the appropriate terrain alerts section).

Message	Description
“Airspeed”	Airspeed exceeds VNE
“Altitude”	Issued when the aircraft transitions beyond the set altitude limit
“Check runway”	Issued when the aircraft is landing on a non-runway (e.g. a taxiway).
“Engaging autopilot”	The ESP system is engaging the autopilot. See the AFCS section for more details.
“Minimums, minimums”	Aircraft has descended below the preset barometric minimum descent altitude
“Incoming Call”	A call has been received via the Iridium system.
“Runway too short”	Issued when the aircraft is taking off from a non-runway (e.g. a taxiway)
“Stall”	Imminent stall is sensed by stall vane
“TAS System Test Passed”	Played when the optional GTS 800 traffic system passes a pilot-initiated self test.
“TAS System Test Failed”	Played when the optional GTS 800 traffic system fails a pilot-initiated self test.
“Taxiway”	Issued when the aircraft is taking off from, or landing on, a runway with a length less than needed as entered.

Message	Description
"Taxiway"	Issued when the aircraft is taking off from, or landing on, a runway different than that entered in the Takeoff Data or Landing Data screen.
"Timer Expired"	Countdown timer on the PFD has reached zero
"TIS Not Available"	Aircraft is outside TIS coverage area
"Traffic"	TIS Traffic Advisory (TA) is issued with the TIS system
"Traffic, (distance, bearing, altitude)"	TAS Traffic Advisory (TA) is issued with the optional GTS 800 TAS system. See the Hazard Avoidance section for additional details on GTS 800 voice alerts.
"Vertical track"	Aircraft is one minute from Top of Descent. Issued only when vertical navigation is enabled.

SYSTEM MESSAGE ANNUNCIATIONS

 **NOTE:** Upon power-up, certain windows remain invalid as system equipment begins to initialize. All windows should be operational within one minute of power-up. If any window continues to remain flagged, the system should be serviced by a Garmin-authorized repair facility.

When a new message is issued, the **Message** Softkey flashes to alert the flight crew of a new message. It continues to flash until acknowledged by pressing the softkey. Active messages are displayed in white text. Messages that have become inactive change to gray text. The **Message** Softkey flashes if the state of a displayed message changes or a new message is displayed. If a Message Advisory message is active, the **Message** Softkey will not flash until the messages have been acknowledged. The inactive messages can be removed from the Message Window by pressing the flashing **Message** Softkey. The softkey label then returns to **Alerts**. System Messages convey messages to the flight crew regarding problems with the system. Typically, a large red or amber 'X' appears in a window when a related LRU fails or detects invalid data.

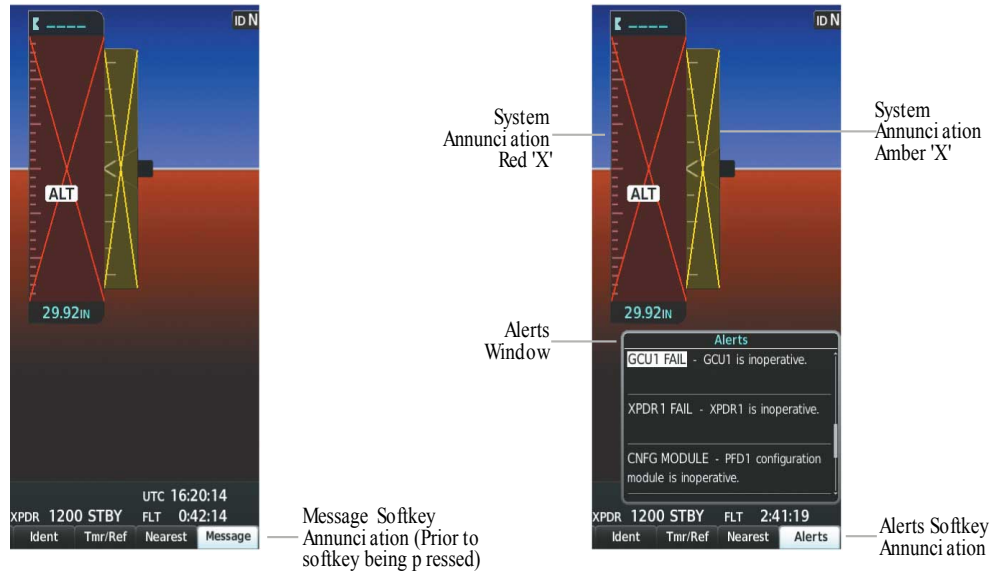


Figure A-4 System Annunciations in Alerts Window

SYSTEM MESSAGES

NOTE: This section provides information regarding message advisories that may be displayed by the system. Knowledge of the aircraft, systems, flight conditions, and other existing operational priorities must be considered when responding to a message. Always use sound pilot judgment. The Pilot’s Operating Handbook (POH) takes precedence over any conflicting guidance found in this section.

This section describes various system message advisories. Certain messages are issued due to an LRU or an LRU function failure. Such messages are normally accompanied by a corresponding red amber ‘X’ annunciation as shown previously in the System Annunciation section.

Message Advisory	Comments
ABORT APR – Loss of GPS navigation. Abort approach.	Abort approach due to loss of GPS navigation.
ADC1 ALT EC – ADC1 altitude error correction is unavailable.	GDC is reporting that the altitude error correction is unavailable.
ADC1 AS EC – ADC1 airspeed error correction is unavailable.	GDC is reporting that the airspeed error correction is unavailable.

Message Advisory	Comments
ADC1 SERVICE – ADC1 needs service. Return unit for repair.	The AHRS should be serviced.
ADC2 ALT EC – ADC1 altitude error correction is unavailable.	GDC is reporting that the altitude error correction is unavailable.
ADC2 AS EC – ADC1 airspeed error correction is unavailable.	GDC is reporting that the airspeed error correction is unavailable.
ADC2 SERVICE – ADC1 needs service. Return unit for repair.	The AHRS should be serviced.
AHRS MAG DB – AHRS magnetic model database version mismatch.	The #1 AHRS and #2 AHRS magnetic model database versions do not match.
AHRS1 CAL – AHRS1 calibration version error. Svc req'd	The #1 AHRS calibration version error. The system should be serviced.
AHRS1 CONFIG – AHRS1 config error. Config service req'd	AHRS configuration settings do not match those of backup configuration memory. The system should be serviced.
AHRS1 GPS – AHRS1 using backup GPS source.	The #1 AHRS is using the backup GPS path. Primary GPS path has failed. The system should be serviced when possible.
AHRS1 GPS – AHRS1 not receiving any GPS information.	The #1 AHRS is not receiving any or any useful GPS information. Check AFMS limitations. The system should be serviced.
AHRS1 GPS – AHRS1 not receiving backup GPS information.	The #1 AHRS is not receiving backup GPS information. The system should be serviced.
AHRS1 GPS – AHRS1 operating exclusively in no-GPS mode.	The #1 AHRS is operating exclusively in no-GPS mode. The system should be serviced.
AHRS1 SRVC – AHRS1 Magnetic-field model needs update.	The #1 AHRS earth magnetic field model is out of date. Update magnetic field model when practical.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CNS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

Message Advisory	Comments
AHRS1 TAS – AHRS1 not receiving valid airspeed.	The #1 AHRS is not receiving true airspeed from the air data computer. The AHRS relies on GPS information to augment the lack of airspeed. The system should be serviced.
AHRS2 CAL – AHRS2 calibration version error. Svc req'd	The #2 AHRS calibration version error. The system should be serviced.
AHRS2 CONFIG – AHRS2 config error. Config service req'd	#2 AHRS configuration settings do not match those of backup configuration memory. The system should be serviced.
AHRS2 GPS – AHRS2 using backup GPS source.	The #2 AHRS is using the backup GPS path. Primary GPS path has failed. The system should be serviced when possible.
AHRS2 GPS – AHRS2 not receiving any GPS information.	The #2 AHRS is not receiving any or any useful GPS information. Check AFMS limitations. The system should be serviced.
AHRS2 GPS – AHRS2 not receiving backup GPS information.	The #2 AHRS is not receiving backup GPS information. The system should be serviced.
AHRS2 GPS – AHRS2 operating exclusively in no-GPS mode.	The #2 AHRS is operating exclusively in no-GPS mode. The system should be serviced.
AHRS2 SRVC – AHRS2 Magnetic-field model needs update.	The #2 AHRS earth magnetic field model is out of date. Update magnetic field model when practical.
AHRS2 TAS – AHRS2 not receiving valid airspeed.	The #2 AHRS is not receiving true airspeed from the air data computer. The AHRS relies on GPS information to augment the lack of airspeed. The system should be serviced.
APPR INACTV – Approach is not active.	The system notifies the pilot that the loaded approach is not active. Activate approach when required.
APR DWNGRADE – Approach downgraded.	Vertical guidance generated by SBAS is unavailable, use LNAV only minimums.
ARSPC AHEAD – Airspace ahead less than 10 minutes.	Special use airspace is ahead of aircraft. The aircraft will penetrate the airspace within 10 minutes.

Message Advisory	Comments
ARSPC NEAR – Airspace near and ahead.	Special use airspace is near and ahead of the aircraft position.
ARSPC NEAR – Airspace near – less than 2 nm.	Special use airspace is within 2 nm of the aircraft position.
AUDIO MANIFEST – AUDIO MANIFEST	Incorrect audio software installed. The system should be serviced
CHECK CRS – Database course for LOC1 / [LOC ID] is [CRS]°.	Selected course for LOC1 differs from published localizer course by more than 10 degrees.
CHECK CRS – Database course for LOC2 / [LOC ID] is [CRS]°.	Selected course for LOC2 differs from published localizer course by more than 10 degrees.
CNFG MODULE – PFD1 configuration module is inoperative.	The PFD configuration module backup memory has failed. The system should be serviced.
COM1 CONFIG – COM1 config error. Config service req'd.	The COM1 configuration settings do not match backup configuration memory. The system should be serviced
COM1 MANIFEST – COM1 software mismatch, communication halted.	COM1 software mismatch. The system should be serviced.
COM1 PTT – COM1 push-to-talk key is stuck.	The COM1 external push-to-talk switch is stuck in the enable (or “pressed”) position. Press the PTT switch again to cycle its operation. If the problem persists, the system should be serviced.
COM1 RMT XFR – COM1 remote transfer key is stuck.	The COM1 transfer switch is stuck in the enabled (or “pressed”) position. Press the transfer switch again to cycle its operation. If the problem persists, the system should be serviced.
COM1 SERVICE – COM1 needs service. Return unit for repair.	The system has detected a failure in COM1. COM1 may still be usable. The system should be serviced when possible.

Message Advisory	Comments
COM1 TEMP – COM1 over temp. Reducing transmitter power.	The system has detected an over temperature condition in COM 1. The transmitter is operating at reduced power. If the problem persists, the system should be serviced.
COM2 CONFIG – COM2 config error. Config service req'd.	The COM2 configuration settings do not match backup configuration memory. The system should be serviced
COM2 MANIFEST – COM2 software mismatch, communication halted.	COM2 software mismatch. The system should be serviced.
COM2 PTT – COM2 push-to-talk key is stuck.	The COM2 external push-to-talk switch is stuck in the enable (or “pressed”) position. Press the PTT switch again to cycle its operation. If the problem persists, the system should be serviced.
COM2 RMT XFR – COM2 remote transfer key is stuck.	The COM2 transfer switch is stuck in the enabled (or “pressed”) position. Press the transfer switch again to cycle its operation. If the problem persists, the system should be serviced.
COM2 SERVICE – COM2 needs service. Return unit for repair.	The system has detected a failure in COM2. COM2 may still be usable. The system should be serviced when possible.
COM2 TEMP – COM2 over temp. Reducing transmitter power.	The system has detected an over temperature condition in COM2. The transmitter is operating at reduced power. If the problem persists, the system should be serviced.
CNFG MODULE – PFD1 configuration module is inoperative.	The PFD configuration module backup memory has failed. The system should be serviced.
DATA LOST – Pilot stored data was lost. Recheck settings.	The pilot profile data was lost. System reverts to default pilot profile and settings. The pilot may reconfigure the MFD & PFD with preferred settings, if desired.

Message Advisory	Comments
DB CHANGE – Database changed. Verify user modified procedures.	This occurs when a stored flight plan contains procedures that have been manually edited. This alert is issued only after an navigation database update. Verify that the user-modified procedures in stored flight plans are correct and up to date.
DB CHANGE – Database changed. Verify stored airways.	This occurs when a stored flight plan contains an airway that is no longer consistent with the navigation database. This alert is issued only after an navigation database update. Verify use of airways in stored flight plans and reload airways as needed.
DB MISMATCH – Navigation database mismatch. Xtalk is off.	The PFDs and MFD have different navigation database versions or types (Americas, European, etc.) installed. Crossfill is off. Install correct navigation database version or type in all displays.
DB MISMATCH – Obstacle database mismatch.	The PFDs and MFD have different obstacle database installed. Install correct obstacle database in all displays.
DB MISMATCH – Terrain database mismatch.	The PFDs and MFD have different terrain database versions or types installed. Install correct terrain database version or type in all displays.
FAILED PATH – A data path has failed.	A data path connected to the GDU, GSD 41, or the GIA has failed.
FPL TRUNC – Flight plan has been truncated.	This occurs when a newly installed navigation database eliminates an obsolete approach or arrival used by a stored flight plan. The obsolete procedure is removed from the flight plan. Update flight plan with current arrival or approach.

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CNS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

Message Advisory	Comments
FPL WPT LOCK – Flight plan waypoint is locked.	Upon power-up, the system detects that a stored flight plan waypoint is locked. This occurs when an navigation database update eliminates an obsolete waypoint. The flight plan cannot find the specified waypoint and flags this message. This can also occur with user waypoints in a flight plan that is deleted. Remove the waypoint from the flight plan if it no longer exists in any database, or update the waypoint name/identifier to reflect the new information.
FPL WPT MOVE – Flight plan waypoint moved.	The system has detected that a waypoint coordinate has changed due to a new navigation database update. Verify that stored flight plans contain correct waypoint locations.
G/S1 FAIL – G/S1 is inoperative	A fault has been detected in glideslope receiver 1 and/or receiver 2. The system should be serviced.
G/S2 FAIL – G/S2 is inoperative	A fault has been detected in glideslope receiver 1 and/or receiver 2. The system should be serviced.
G/S1 SERVICE – G/S1 needs service. Return unit for repair	A fault has been detected in glideslope receiver 1 and/or receiver 2. The receiver may still be available. The system should be serviced when possible.
G/S2 SERVICE – G/S2 needs service. Return unit for repair	A fault has been detected in glideslope receiver 1 and/or receiver 2. The receiver may still be available. The system should be serviced when possible.
GCU1 CONFIG – GCU1 Config error. Config service req'd.	GCU 479 configuration settings do not match those of backup configuration memory. The G1000 system should be serviced.
GCU1 FAIL – GCU1 is inoperative.	A failure has been detected in the GCU 479. The GCU 479 is unavailable.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CNS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

Message Advisory	Comments
GCU1 KEYSTK – GDC1 software mismatch, communication halted.	A key is stuck on the GCU 479 bezel. Attempt to free the stuck key by pressing it several times. The G1000 system should be serviced if the problem persists.
GCU1 MANIFEST – GCU1 software mismatch, communication halted.	The GCU 479 has incorrect software installed. The G1000 system should be serviced.
GDC1 MANIFEST – GDC1 software mismatch, communication halted.	The GDC has incorrect software installed. The system should be serviced.
GDC2 MANIFEST – GDC2 software mismatch, communication halted.	The GDC has incorrect software installed. The system should be serviced.
GDL69 CONFIG – GDL 69 config error. Config service req'd.	GDL 69A configuration settings do not match those of backup configuration memory. The system should be serviced.
GDL69 FAIL – GDL 69 has failed.	A failure has been detected in the GDL 69A. The receiver is unavailable. The system should be serviced.
GDL69 MANIFEST – GDL69 software mismatch, communication halted.	The GDL 69A has incorrect software installed. The system should be serviced.
GEA1 CONFIG – GEA1 config error. Config service req'd.	The GEA configuration settings do not match those of backup configuration memory. The system should be serviced.
GEA1 MANIFEST – GEA1 software mismatch, communication halted.	The GEA 71 incorrect software installed. The system should be serviced.
GEO LIMITS – AHRS1 too far North/South, no magnetic compass.	The aircraft is outside geographical limits for approved AHRS operation. Heading is flagged as invalid.

Message Advisory	Comments
GEO LIMITS – AHRS2 too far North/South, no magnetic compass.	The aircraft is outside geographical limits for approved AHRS operation. Heading is flagged as invalid.
GFC MANIFEST – GFC software mismatch, communication halted.	Incorrect servo software is installed, or gain settings are incorrect.
GIA1 COOLING – GIA1 temperature too low.	The GIA1 temperature is too low to operate correctly. Allow units to warm up to operating temperature.
GIA1 COOLING – GIA1 over temperature.	The GIA1 temperature is too high. If problem persists, the system should be serviced.
GIA1 CONFIG – GIA1 config error. Config service req'd.	The GIA1 configuration settings do not match backup configuration memory. The system should be serviced.
GIA1 CONFIG – GIA1 audio config error. Config service req'd.	The GIA1 have an error in the audio configuration. The system should be serviced.
GIA1 MANIFEST – GIA1 software mismatch, communication halted.	The GIA1 has incorrect software installed. The system should be serviced.
GIA1 SERVICE – GIA1 needs service. Return the unit for repair.	The GIA1 self-test has detected a problem in the unit. The system should be serviced.
GIA2 COOLING – GIA2 temperature too low.	The GIA2 temperature is too low to operate correctly. Allow units to warm up to operating temperature.
GIA2 COOLING – GIA2 over temperature.	The GIA2 temperature is too high. If problem persists, the system should be serviced.
GIA2 CONFIG – GIA2 config error. Config service req'd.	The GIA2 configuration settings do not match backup configuration memory. The system should be serviced.
GIA2 CONFIG – GIA2 audio config error. Config service req'd.	The GIA2 have an error in the audio configuration. The system should be serviced.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CNS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

Message Advisory	Comments
GIA2 MANIFEST – GIA2 software mismatch, communication halted.	The GIA2 has incorrect software installed. The system should be serviced.
GIA2 SERVICE – GIA2 needs service. Return the unit for repair.	The GIA2 self-test has detected a problem in the unit. The system should be serviced.
GMA1 AUX MANIFEST – GMA 1 AUX software mismatch, communication halted.	The digital audio controller has incorrect software installed. The system should be serviced.
GMA1 CONFIG – GMA1 config error. Config service req'd.	The audio panel configuration settings do not match backup configuration memory. The system should be serviced.
GMA1 FAIL – GMA1 is inoperative.	The audio panel self-test has detected a failure. The audio panel is unavailable. The system should be serviced.
GMA1 MANIFEST – GMA1 software mismatch, communication halted.	The audio panel has incorrect software installed. The system should be serviced.
GMA1 SERVICE – GMA1 needs service. Return unit for repair.	The audio panel self-test has detected a problem in the unit. Certain audio functions may still be available, and the audio panel may still be usable. The system should be serviced when possible.
GMU1 MANIFEST – GMU1 software mismatch, communication halted.	The GMU 44 has incorrect software installed. The system should be serviced.
GMC CONFIG – GMC Config error. Config service req'd	Error in the configuration of the GMC 707.

Message Advisory	Comments
GMC KEYSTK – GCU [key name] Key is stuck.	A key is stuck on the GMC 707 bezel. Attempt to free the stuck key by pressing it several times. The system should be serviced if the problem persists.
GMC MANIFEST – GMC software mismatch, communication halted.	The GMC 707 has incorrect software installed. The system should be serviced.
GPS NAV LOST – Loss of GPS navigation. Insufficient satellites.	Loss of GPS navigation due to insufficient satellites.
GPS NAV LOST – Loss of GPS navigation. Position error.	Loss of GPS navigation due to position error.
GPS NAV LOST – Loss of GPS navigation. GPS fail.	Loss of GPS navigation due to GPS failure.
GPS1 SERVICE – GPS1 needs service. Return unit for repair.	A failure has been detected in the GPS1 receiver. The receiver may still be available. The system should be serviced.
GPS2 SERVICE – GPS2 needs service. Return unit for repair.	A failure has been detected in the GPS2 receiver. The receiver may still be available. The system should be serviced.
GSR1 FAIL – GSR1 has failed.	A failure has been detected in the GSR. The system should be serviced.
GRS1 MANIFEST – GRS1 software mismatch, communication halted.	The #1 AHRS has incorrect software installed. The system should be serviced.
GSR2 FAIL – GSR2 has failed.	A failure has been detected in the #2 GSR 56. The system should be serviced.
GRS2 MANIFEST – GRS2 software mismatch, communication halted.	The #2 AHRS has incorrect software installed. The system should be serviced.

Message Advisory	Comments
GTS CONFIG – GTS config error. Config service req'd.	The GTS and GDU have incompatible configurations. This alert is also set when the GTS has an invalid mode S address configured or the mode S address does not match both XPDR mode S addresses.
GTS MANIFEST – GTS software mismatch, communication halted.	The GTS 800 has incorrect software installed. The G1000 system should be serviced.
GTX1 MANIFEST – GTX1 software mismatch, communication halted.	The transponder has incorrect software installed. The system should be serviced.
HDG FAULT – AHRS1 magnetometer fault has occurred.	A fault has occurred in the #1 GMU 44. Heading is flagged as invalid. The AHRS uses GPS for backup mode operation. The system should be serviced.
HDG FAULT – AHRS2 magnetometer fault has occurred.	A fault has occurred in the #2 GMU 44. Heading is flagged as invalid. The AHRS uses GPS for backup mode operation. The system should be serviced.
HW MISMATCH – GIA hardware mismatch. GIA1 communication halted.	A GIA mismatch has been detected, where only one is SBAS capable.
HW MISMATCH – GIA hardware mismatch. GIA2 communication halted.	A GIA mismatch has been detected, where only one is SBAS capable.
INSIDE ARSPC – Incoming call.	The aircraft is inside the airspace.
INVALID ADM – Invalid ADM: ATN communication halted.	Data link avionics were not configured correctly and therefore will not be able to communicate with the ground network.

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CNS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

Message Advisory	Comments
LOCKED FPL – Cannot navigate locked flight plan.	This occurs when the pilot attempts to activate a stored flight plan that contains locked waypoint. Remove locked waypoint from flight plan. Update flight plan with current waypoint.
LOI – GPS integrity lost. Crosscheck with other NAVS.	GPS integrity is insufficient for the current phase of flight.
MANIFEST – MFD1 software mismatch, communication halted.	The MFD has incorrect software installed. The system should be serviced.
MANIFEST – PFD1 software mismatch, communication halted.	The PFD has incorrect software installed. The system should be serviced.
MFD SOFTWARE – MFD mismatch, communication halted.	The specified GDU has different software versions installed. The system should be serviced.
MFD TERRAIN DSP – MFD Terrain awareness display unavailable.	One of the terrain or obstacle databases required for TAWS in the specified GDU is missing or invalid.
MFD1 CARD 1 ERR – Card 1 is invalid.	The SD card in the top card slot of the specified PFD or MFD contains invalid data.
MFD1 BACKLIGHT CALIBRATION – MFD1 calibration. Return for repair.	The specified GDU's backlight calibration cannot be found or is invalid. The system should be serviced.
MFD1 CARD 2 ERR – Card 2 is invalid.	The SD card in the bottom card slot of the specified MFD contains invalid data.
MFD1 CARD 1 REM – Card 1 was removed. Reinsert card.	The SD card was removed from the top card slot of the specified MFD. The SD card needs to be reinserted.
MFD1 CARD 2 REM – Card 2 was removed. Reinsert card.	The SD card was removed from the bottom card slot of the specified MFD. The SD card needs to be reinserted.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CNS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

Message Advisory	Comments
MFD1 CONFIG – MFD1 config error. Config service req'd.	The MFD configuration settings do not match backup configuration memory. The system should be serviced.
MFD1 DB ERR – MFD1 Airport Directory database error exists.	The MFD detected a failure in the Airport Directory database. Ensure the data card is properly programmed if present. If problem persists, the system should be serviced.
MFD1 DB ERR – MFD1 basemap database error exists.	The detected a failure in the basemap database.
MFD1 DB ERR – MFD1 basemap database error exists.	The MFD detected a failure in the basemap database.
MFD1 DB ERR – MFD1 Chartview database error exists.	The MFD detected a failure in the ChartView database (optional feature). Ensure the data card is properly programmed if present. If problem persists, the system should be serviced.
MFD1 DB ERR – MFD1 FliteCharts database error exists.	The MFD detected a failure in the FliteCharts database (optional feature). Ensure the data card is properly programmed if present. If problem persists, the system should be serviced.
MFD1 DB ERR – MFD1 navigation database error exists.	The MFD detected a failure in the navigation database. Attempt to reload the navigation database. If problem persists, the system should be serviced.
MFD1 DB ERR – MFD1 obstacle database error exists.	The MFD detected a failure in the obstacle database. Ensure the data card is properly programmed if present. If problem persists, the system should be serviced.
MFD1 DB ERR – MFD1 obstacle database missing.	The obstacle database is present on another LRU, but is missing on the specified LRU.
MFD1 DB ERR – MFD1 Safe Taxi database error exists.	The MFD detected a failure in the Safe Taxi database. Ensure the data card is properly programmed if present. If problem persists, the system should be serviced.

Message Advisory	Comments
MFD1 DB ERR – MFD1 terrain database error exists.	The MFD detected a failure in the terrain database. Ensure the data card is properly programmed if present. If problem persists, the system should be serviced.
MFD1 DB ERR – MFD1 terrain database missing.	The terrain database is present on another LRU, but is missing on the specified LRU.
MFD1 VOLTAGE – MFD1 has low voltage. Reducing power usage	The MFD voltage is low. The system should be serviced.
MFD1 COOLING – MFD1 has poor cooling. Reducing power usage.	The MFD is overheating and is reducing power consumption by dimming the display. If problem persists, the system should be serviced.
MFD1 KEYSTK – MFD [key name] Key is stuck.	A key is stuck on the MFD bezel. Attempt to free the stuck key by pressing it several times. The system should be serviced if the problem persists.
MFD1 MANIFEST – MFD1 software mismatch, communication halted.	The MFD has incorrect software installed. The system should be serviced.
MFD1 SERVICE – MFD1 needs service. Return unit for repair.	The MFD self-test has detected a problem. The system should be serviced.
NAV1 RMT XFR – NAV1 remote transfer key is stuck.	The remote NAV1 transfer switch is stuck in the enabled (or “pressed”) state. Press the transfer switch again to cycle its operation. If the problem persists, the system should be serviced.
NAV1 SERVICE – NAV1 needs service. Return unit for repair.	A failure has been detected in the NAV1 and/or NAV2 receiver. The receiver may still be available. The system should be serviced.
NAV2 RMT XFR – NAV2 remote transfer key is stuck.	The remote NAV2 transfer switch is stuck in the enabled (or “pressed”) state. Press the transfer switch again to cycle its operation. If the problem persists, the system should be serviced.

Message Advisory	Comments
NAV2 SERVICE – NAV2 needs service. Return unit for repair.	A failure has been detected in the NAV1 and/or NAV2 receiver. The receiver may still be available. The system should be serviced.
NON WGS84 WPT – Non WGS 84 waypoint for navigation -[xxxx]	The position of the selected waypoint [xxxx] is not calculated based on the WGS84 map reference datum and may be positioned in error as displayed. Do not use GPS to navigate to the selected non-WGS84 waypoint.
PFD1 COOLING – PFD1 has poor cooling. Reducing power usage.	The PFD is overheating and is reducing power consumption by dimming the display. If problem persists, the system should be serviced.
PFD1 CONFIG – PFD1 config error. Config service req'd.	The PFD configuration settings do not match backup configuration memory. The system should be serviced.
PFD1 DB ERR – PFD1 basemap database error exists.	The PFD detected a failure in the basemap database.
PFD1 DB ERR – PFD1 navigation database error exists.	The PFD detected a failure in the navigation database. Attempt to reload the navigation database. If problem persists, the system should be serviced.
PFD1 DB ERR – PFD1 obstacle database error exists.	The PFD detected a failure in the obstacle database. Ensure the data card is properly programmed if present. If problem persists, the system should be serviced.
PFD1 DB ERR – PFD1 obstacle database missing.	The obstacle database is present on another LRU, but is missing on the specified LRU.
PFD1 DB ERR – PFD1 Safe Taxi database error exists.	The PFD detected a failure in the Safe Taxi database. Ensure the data card is properly programmed if present. If problem persists, the system should be serviced.
PFD1 DB ERR – PFD1 terrain database error exists.	The PFD detected a failure in the terrain database. Ensure the data card is properly programmed if present. If problem persists, the system should be serviced.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CNS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

Message Advisory	Comments
PFD1 DB ERR – PFD1 terrain database missing.	The terrain database is present on another LRU, but is missing on the specified LRU.
PFD1 KEYSTK – PFD1 [key name] Key is stuck.	A key is stuck on the PFD bezel. Attempt to free the stuck key by pressing it several times. The system should be serviced if the problem persists.
PFD1 MANIFEST – PFD1 software mismatch, communication halted.	The PFD has incorrect software installed. The system should be serviced.
PFD1 CARD 1 REM – Card 1 was removed. Reinsert card.	The SD card was removed from the top card slot of the specified PFD. The SD card needs to be reinserted.
PFD1 CARD 2 REM – Card 2 was removed. Reinsert card.	The SD card was removed from the bottom card slot of the specified PFD. The SD card needs to be reinserted.
PFD1 CARD 1 REM ERR – Card 1 is invalid.	The SD card in the top card slot of the specified PFD contains invalid data.
PFD1 CARD 2 ERR – Card 2 is invalid.	The SD card in the bottom card slot of the specified PFD contains invalid data.
PFD1 SERVICE – PFD1 needs service. Return unit for repair.	The PFD self-test has detected a problem. The system should be serviced.
PFD1 VOLTAGE – PFD1 has low voltage. Reducing power usage	The PFD voltage is low. The system should be serviced.
PILOT RADIOS MUTED – Pilot radios are muted.	The pilot radios are set on mute.
PTK FAIL – Parallel track unavailable: bad geometry.	Bad parallel track geometry.
PTK FAIL – Parallel track unavailable: invalid leg type.	Invalid leg type for parallel offset.
PTK FAIL – Parallel track unavailable: past IAF.	IAF waypoint for parallel offset has been passed.

Message Advisory	Comments
REGISTER GFDS – Data services are inoperative, register w/ Connex.	The system is not registered with Connex, or its current registration data has failed authentication.
SCHEDULER [#] –	Message criteria entered by the user.
SLCT FREQ – Select appropriate frequency for approach.	The system notifies the pilot to load the approach frequency for the appropriate NAV receiver. Select the correct frequency for the approach.
SLCT NAV – Select NAV on CDI for approach.	The system notifies the pilot to set the CDI to the correct NAV receiver. Set the CDI to the correct NAV receiver.
STEEP TURN – Steep turn ahead.	A steep turn is 15 seconds ahead. Prepare to turn.
STRMSCP FAIL – Stormscope has failed.	Stormscope has failed. The system should be serviced.
SURFACEWATCH DISABLED – Too far north/south.	The SurfaceWatch system has been disabled.
SURFACEWATCH FAIL – Invalid audio configuration.	The SurfaceWatch system has failed due to an invalid audio configuration.
SURFACEWATCH FAIL – Invalid configurable alerts.	The SurfaceWatch system has failed due to invalid configurable alerts.
SURFACEWATCH FAIL – One or more inputs invalid.	The SurfaceWatch system has failed due to one or more invalid inputs.
SURFACEWATCH INHIBITED – Surfacewatch inhibited.	The SurfaceWatch system has been inhibited.
SVT DISABLED – Out of available terrain region.	Synthetic Vision is disabled because the aircraft is not within the boundaries of the installed terrain database.
SVT DISABLED – Terrain DB resolution too low.	Synthetic Vision is disabled because a terrain database of sufficient resolution (9 arc-second or better) is not currently installed.
SW MISMATCH – GDU software version mismatch. Xtalk is off.	The MFD and PFD have different software versions installed. The system should be serviced.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CNS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

Message Advisory	Comments
SYSTEM CONFIG – SYSTEM config error. Config service req'd.	The system configuration has changed unexpectedly. The system should be serviced.
TERRAIN AUD CFG – Trn Awareness audio config error. Service req'd	TAWS is disabled because the audio configuration is invalid. The system should be serviced.
TERRAIN DISABLED –Terrain Awareness DB resolution too low.	TAWS is disabled because a terrain database of sufficient resolution (4.9 arc-second or better) is not currently installed.
TIMER EXPIRD – Timer has expired.	The system notifies the pilot that the timer has expired.
TRAFFIC FAIL – Traffic device has failed.	The system is no longer receiving data from the traffic system. The traffic device should be serviced.
TRN AUD FAIL – Trn Awareness audio source unavailable	Terrain Awareness audio is unavailable. The system should be serviced.
UNABLE V WPT – Can't reach current vertical waypoint.	The current vertical waypoint can not be reached within the maximum flight path angle and vertical speed constraints. The system automatically transitions to the next vertical waypoint.
VNV- UNAVAILABLE. Excessive track angle error.	The current track angle error exceeds the limit, causing the vertical deviation to go invalid.
VNV- UNAVAILABLE. Excessive crosstrack error.	The current crosstrack exceeds the limit, causing vertical deviation to go invalid.
VNV- UNAVAILABLE. Parallel course selected.	A parallel course has been selected, causing the vertical deviation to go invalid.
VNV- UNAVAILABLE. Unsupported leg type in flight plan.	The lateral flight plan contains a procedure turn, vector, or other unsupported leg type prior to the active vertical waypoint. This prevents vertical guidance to the active vertical waypoint.
WPT ARRIVAL – Arriving at waypoint - [xxxx]	Arriving at waypoint [xxxx], where [xxxx] is the waypoint name.

Message Advisory	Comments
XPDR1 ADS-B 1090 – Datalink: ADS-B 1090 receiver has failed.	A failure has been detected in the 1090 receiver.
XPDR1 ADS-B FAIL – Transponder: XPDR1 is unable to transmit ADS-B messages.	ADS-B is inoperative. The transponder may not be receiving a valid GPS position. Other transponder functions may be available. Service when possible.
XPDR1 ADS-B NO POS – Transponder: ADS-B is not transmitting position.	The transponder is not able to receive position information.
XPDR1 ADS-B TRFC – Transponder: ADS-B traffic has failed	The Transponder is incapable of processing traffic information.
XPDR1 ADS-B UAT – Datalink: ADS-B in UAT receiver has failed.	A failure has been detected in the UAT receiver.
XPDR1 CONFIG – XPDR1 config error. Config service req'd.	The transponder configuration settings do not match those of backup configuration memory. The system should be serviced.
XPDR1 CSA FAIL - Traffic: ADS-B In traffic alerting has failed.	ADS-B Conflict Situational Awareness (CSA) is unavailable.
XPDR1 FAIL – XPDR1 is inoperative.	There is no communication with the transponder.
XPDR1 FAULT – Datalink: ADSB-B in has failed.	The transponder is unable to receive ADS-B information.
XPDR1 FIS-B WX – Datalink: FIS-B Weather has failed.	The transponder is unable to receive FIS-B weather information.
XPDR1 OVER TEMP - Transponder: Transponder over temp.	The system has detected an over temperature condition in the transponder. The transmitter operates at reduced power. If the problem persists, the system should be serviced.
XPDR1 PRES ALT – Transponder: ADS-B no pressure altitude.	Unable to provide pressure altitude information.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CNS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index

Message Advisory	Comments
XPDR1 SRVC – XPDR1 needs service. Return unit for repair.	The transponder should be serviced when possible.
XPDR1 UNDER TEMP - Transponder: Transponder under temp.	The system has detected an under temperature condition in the transponder. The transmitter operates at reduced power. If the problem persists, the system should be serviced.
XTALK ERROR – A flight display crosstalk error has occurred.	The MFD and PFDs are not communicating with each other. The system should be serviced.

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CNS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index


BLANK PAGE

DATABASE MANAGEMENT


Database information is obtained from third party sources. Inaccuracies in the data may be discovered from time to time. Garmin communicates this information by issuing a Database Alert. These notifications are available on <http://fly.garmin.com>.


Garmin requests the flight crew report any observed discrepancies related to database information. These discrepancies could come in the form of an incorrect procedure; incorrectly identified terrain, obstacles and fixes; or any other displayed item used for navigation or communication in the air or on the ground. Go to <http://fly.garmin.com> and select Aviation Data Error Report.

The system uses Secure Digital (SD) cards to load various types of data. For basic flight operations, SD cards are required for database updates. Not all SD cards are compatible with the system.

 **NOTE:** Loading a database in the system prior to its effective date will result in the expiration date on the power-up screen and the effective date on the Aux – Databases Page being displayed in amber.

LOADING UPDATED DATABASES

 **CAUTION:** Never disconnect power to the system when loading a database. Power interruption during the database loading process could result in maintenance being required to reboot the system.

 **NOTE:** When loading database updates, the ‘DB Mismatch’ system messages will be displayed until database synchronization is complete, followed by turning system power off, then on. Synchronization can be monitored on the Aux - Database Page.

Databases may be loaded through Garmin Pilot and Flight Stream 510. When loading databases through Garmin Pilot and the Flight Stream 510, it must be enabled on the system and the multimedia card inserted in the bottom SD slot of the MFD.

The cycles and dates for both standby and active databases are displayed on the “Aux – Databases” page on the MFD. Any active databases with expiration dates in the past will be highlighted with amber text. When an expired active database has a standby database that is ready to become effective, a cyan double-sided arrow will be displayed between the database cycles. When this arrow is visible, it indicates that the standby and active databases in that row will be switched on the next power cycle, activating the current standby database. Databases can also be manually selected (or deselected) by highlighting a list item and pressing the ENT key, provided a valid, verified standby database is present.

In some cases it may be necessary to obtain an unlock code from Garmin in order to make the database product functional. It may also be necessary to have the system configured by a Garmin authorized service facility in order to use some database features.

The navigation database contains the aeronautical data used by the system for the flight management and flight planning functions. Included is detailed data for waypoints, procedures (arrivals, departures, approaches), and airways. The navigation database is updated every 28 days.

The basemap database contains data for the topography and land features, such as rivers, lakes, and towns. It is updated only periodically, with no set schedule. There is no expiration date.

The terrain database contains the terrain mapping data. These databases are updated periodically and have no expiration date.

The obstacle database contains data for obstacles, such as towers, that pose a potential hazard to aircraft. Obstacles 200 feet and higher are included in the obstacle database. It is very important to note that not all obstacles are necessarily charted and therefore may not be contained in the obstacle database. This database is updated on a 56-day cycle.



NOTE: *The data contained in the terrain and obstacle databases comes from government agencies. Garmin accurately processes and cross-validates the data, but cannot guarantee the accuracy and completeness of the data.*

The AOPA or AC-U-KWIK Airport Directory provides data on airports and heliports throughout the U.S. or worldwide, respectively. The AOPA Directory offers detailed information for over 5,300 U. S. airports, along with the names and phone numbers of thousands of FBOs. These databases are updated every 56 days. The AC-U-KWIK Directory offers detailed information for more than 8,000 airports with runways longer than 3,000 feet worldwide.

The SafeTaxi database contains detailed airport diagrams for selected airports. These diagrams aid in following ground control instructions by accurately displaying the aircraft position on the map in relation to taxiways, ramps, runways, terminals, and services. This database is updated on a 56-day cycle.

The FliteCharts database contains procedure charts for the United States only. This database is updated on a 28-day cycle. If not updated within 180 days of the expiration date, FliteCharts will no longer function.

The ChartView database is updated on a 14-day cycle. If the ChartView database is not updated within 70 days of the expiration date, ChartView will no longer function. The ChartView database must be purchased directly from Jeppesen, but can be updated at jeppesen.com or flygarmin.com.

The IFR/VFR charts database contains VFR and IFR raster charts. The VFR Charts are digital representations of the Sectional Aeronautical Charts and Terminal Area Charts. The IFR Charts include both IFR High (designed for navigation at or above 18,000 ft) and IFR Low (designed for navigation below 18,000 ft). IFR/VFR Charts are updated every 28 days except for Canadian IFR/VFR Charts which are updated every 56 days.

DATABASE UPDATES USING A SUPPLEMENTAL DATA (SD) CARD

All databases are updated through a single SD card in the bottom slot of the MFD. When the card is inserted, the databases on the card will be copied to standby and synchronized across all powered, configured units. After update, the card is removed and the databases are stored on the system. When in standby, databases are not immediately available for use, but stored to be activated at a later time.

Database updates can be obtained by following the instructions detailed in the 'Aviation Databases' section of the Garmin website (fly.garmin.com). Once the updated files have been downloaded from the website, a PC equipped with an appropriate SD card reader is used to unpack and program the

new databases onto an existing Supplemental Data Card. Equipment required to perform the update is as follows:

- Windows-compatible PC computer
- SD Card Reader: SanDisk SDDR-93, SanDisk SDDR-99, Verbatim #96504, or equivalent
- Updated database obtained from the Garmin website
- Supplemental SD Cards

In some cases it may be necessary to obtain an unlock code from Garmin in order to make the database product functional. It may also be necessary to have the system configured by a Garmin authorized service facility in order to use some database features.

Updating Databases using an SD Card:

- 1) With the system OFF, remove an SD Card from the bottom SD card slot of the MFD.
- 2) Download the databases and install them on an SD card.
- 3) Put the SD Card in the bottom SD card slot of the MFD.
- 4) Turn the system ON.
- 5) Press the **ENT** Key or the right most softkey on MFD display to acknowledge the startup screen.
- 6) Turn the large **FMS** Knob to select the Aux page group on the MFD.
- 7) Turn the small **FMS** Knob to select the Database page group on the MFD.
- 8) Monitor the Sync Status on the Database page. Wait for all databases to complete syncing, indicated by 'Sync Complete' being displayed. A cyan double arrow will appear between the Standby and Active columns to show which Standby databases will be transferred to Active at the next power cycle.

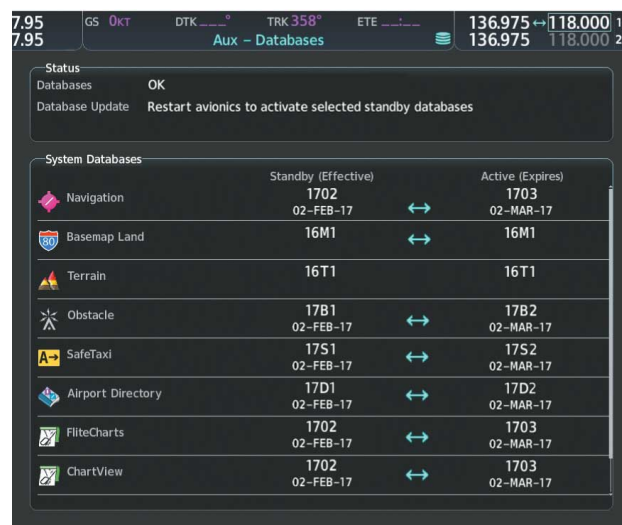


Figure B-1 Databases Page before Activation of Standby Databases

- 9) Verify the correct database cycle information is shown in the Standby Database column.

NOTE: The **Restart** Softkey is enabled only when the aircraft is on the ground.

- 10) Press the **Restart** Softkey. A 10 second restart countdown will appear.
- 11) Press the **Restart** Button in the display window to continue with the restart of the system, or remove power from the system if the **Restart** Softkey is diminished.

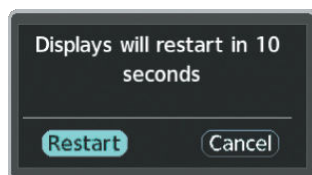


Figure B-2 Database Restart

- 12) Remove the SD card from the bottom slot of the MFD.
- 13) After restarting the system, turn the large **FMS** Knob and select the Aux page group on the MFD.
- 14) Turn the small **FMS** Knob and select the Databases page.
- 15) Verify that the standby databases transferred and are now in the active database column.

System Databases	Standby (Effective)	Active (Expires)
Navigation	1702 02-FEB-17	1703 02-MAR-17
Basemap Land	16M1	16M1
Terrain	16T1	16T1
Obstacle	17B1 02-FEB-17	17B2 02-MAR-17
SafeTaxi	17S1 02-FEB-17	17S2 02-MAR-17
Airport Directory	17D1 02-FEB-17	17D2 02-MAR-17
FliteCharts	1702 02-FEB-17	1703 02-MAR-17
ChartView	1702 02-FEB-17	1703 02-MAR-17

Figure B-3 Databases Page with Updated Databases

- 16) To view database information for an individual display, press and then turn the **FMS** Knob to select the database, and then press the **Details** Softkey. Press the **ENT** Key or the **FMS** Knob to exit.

- 17) To manually activate any databases that did not transfer to the active column:
 - a) Press the **FMS** Knob. The first database title on the screen will be selected.
 - b) Turn the small **FMS** Knob as necessary to select the database title.
 - c) Press the **ENT** Key. A cyan double-sided arrow will appear indicating that the standby database will become active.
 - d) Remove and reapply power to the system.
 - e) Verify that the standby databases transferred and are now in the active database column.
- 18) Remove power from the system.

DATABASES UPDATES USING FLIGHT STREAM 510

In order to load databases through Garmin Pilot and the Flight Stream 510, the Flight Stream 510 must be enabled on the system with the Multimedia card inserted in the bottom SD slot of the MFD. A mobile device with Garmin Pilot must be paired with the Flight Stream 510 over Bluetooth (refer to the Additional Features section). When there is at least one paired device available to connect, the Flight Stream 510 will automatically connect to the system’s preferred mobile device. The preferred device can be selected on the Aux – Databases page from a menu list of paired devices.

Once a connection to the paired mobile device is made, Garmin Pilot makes available databases that can be transferred to the Flight Stream 510. If any of these databases is more recent than the respective standby database on the system, (or if there is no standby database on the system) those databases will be automatically selected to load. The database updates may be initiated from the Aux - Databases page, or from other pages on the MFD.

Updating Databases from any MFD page (except the Aux - Databases page):

- 1) Insert the Flight Stream Multimedia Card in the bottom slot of the MFD.
- 2) Press the **Update** softkey when the Database Update screen appears.

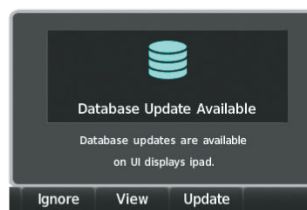


Figure B-4 Database Update Available

- 3) The Flight Stream 510 will enter WI-FI mode. The following screen will appear.

- System Overview
- Flight Instruments
- Engine Indication System
- Audio Panel and CDS
- Flight Management
- Hazard Avoidance
- Automatic Flight Control System
- Additional Features
- Appendices
- Index



Figure B-5 Starting Database Transfer

- 4) Put the mobile device in WI-FI mode (refer to the Additional Features section).
- 5) Connect the mobile device to the Flight Stream 510 WI-FI (refer to the Additional Features section). The 'WI-FI Not Connected' screen will close when the WI-FI connection is established.
- 6) When the transfer is complete, the following screen will appear.

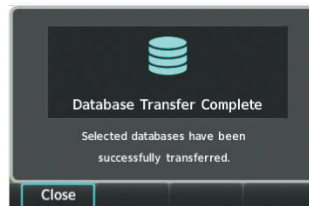


Figure B-6 Database Transfer Complete

- 7) Press the **Close** softkey.
- 8) When an existing database is expired and a new one is ready to become active, a 'Database Expired' window will appear. Continue to the next step to restart the system.

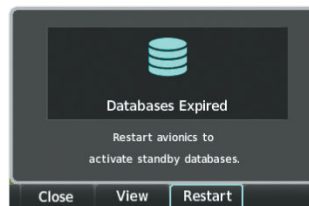


Figure B-7 Database Expired



NOTE: The **Restart** Softkey is enabled only when the aircraft is on the ground.

- 9) Select the **Restart** Softkey to restart the system and load the updated database(s), or remove power from the system if the **Restart** Softkey is diminished.
- 10) After restarting the system, turn the large **FMS** Knob and select the Aux page group on the MFD.
- 11) Turn the small **FMS** Knob and select the Databases page.

- 12) Verify that the standby databases transferred and are now in the active database column.



Figure B-8 Databases Page with Updated Databases

- 13) To view database information for an individual display, press and then turn the **FMS** Knob to select the database, and then press the **Details** Softkey. Press the **ENT** Key or the **FMS** Knob to exit.
- 14) To manually activate any databases that did not transfer to the active column:
 - a) Press the **FMS** Knob. The first database title on the screen will be selected.
 - b) Turn the small **FMS** Knob as necessary to select the database title.
 - c) Press the **ENT** Key. A cyan double-sided arrow will appear indicating that the standby database will become active.
 - d) Remove and reapply power to the system.
 - e) Verify that the standby databases transferred and are now in the active database column.

Updating Databases from the Aux - Databases page:

- 1) With the system OFF, insert the Flight Stream Multimedia Card in the bottom slot of the MFD.
- 2) Turn the large **FMS** Knob to select the Aux page group on the MFD.
- 3) Turn the small **FMS** Knob to select the Database page group on the MFD.
- 4) Press the **Device** Softkey.
- 5) The Aux - Databases page will show the databases connected to the mobile device in place of the active databases on the system. Databases selected to load will be indicated by a cyan arrow.

- 6) Press the **Update** softkey. The Flight Stream 510 will enter WI-FI mode.
- 7) Put the mobile device in WI-FI mode (refer to the Additional Features section).
- 8) Connect the mobile device to the Flight Stream 510 WI-FI (refer to the Additional Features section).
- 9) The Database Update status will appear in the Status window at the top of the page.



NOTE: The **Restart** Softkey is enabled only when the aircraft is on the ground.

- 10) Select the **Restart** Softkey to restart the system and load the updated database(s), or remove power from the system if the **Restart** Softkey is diminished .
- 11) After restarting the system, turn the large **FMS** Knob and select the Aux page group on the MFD.
- 12) Turn the small **FMS** Knob and select the Databases page.
- 13) Verify that the standby databases transferred and are now in the active database column.

	Standby (Effective)	Active (Expires)
Navigation	1702 02-FEB-17	1703 02-MAR-17
Basemap Land	16M1	16M1
Terrain	16T1	16T1
Obstacle	17B1 02-FEB-17	17B2 02-MAR-17
SafeTaxi	17S1 02-FEB-17	17S2 02-MAR-17
Airport Directory	17D1 02-FEB-17	17D2 02-MAR-17
FliteCharts	1702 02-FEB-17	1703 02-MAR-17
ChartView	1702 02-FEB-17	1703 02-MAR-17

Figure B-9 Databases Page with Updated Databases

- 14) To view database information for an individual display, press and then turn the **FMS** Knob to select the database, and then press the **Details** Softkey. Press the **ENT** Key or the **FMS** Knob to exit.
- 15) To manually activate any databases that did not transfer to the active column:
 - a) Press the **FMS** Knob. The first database title on the screen will be selected.
 - b) Turn the small **FMS** Knob as necessary to select the database title.

- c) Press the **ENT** Key. A cyan double-sided arrow will appear indicating that the standby database will become active.
 - d) Remove and reapply power to the system.
 - e) Verify that the standby databases transferred and are now in the active database column.
- 16) Remove power from the system.

MAGNETIC FIELD VARIATION DATABASE UPDATE

A copy of the current magnetic field variation database (MV DB) is included with the navigation database. At startup, the system compares this version of the MV DB with that presently being used by the AHRS. If the system determines the MV DB needs to be updated, a prompt is displayed on the Navigation Map Page.




Figure B-10 GRS1 Magnetic Field Variation Database Update Prompt

Loading the magnetic field variation database update:

- 1) With 'OK' highlighted, as seen in "GRS1 Magnetic Field Variation Database Update Prompt" Figure, press the **ENT** Key on the MFD. A progress monitor is displayed as shown in Figure B-11.

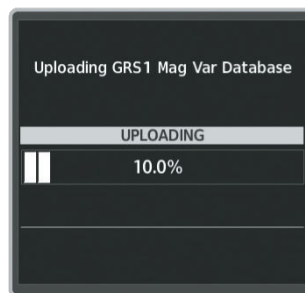


Figure B-11 Uploading Database to GRS1

- 2) When the upload is complete, the prompt for the next GRS upload is displayed, as seen in Figure B-12.

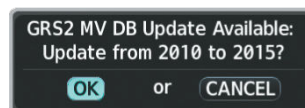


Figure B-12 GRS2 Magnetic Field Variation Database Update Prompt

- 3) With 'OK' highlighted, press the ENT Key on the MFD. A progress monitor is displayed as shown in Figure B-13.



Figure B-13 Uploading Database to GRS2

- 4) When the upload is complete, the system is ready for use.

AVIATION TERMS AND ACRONYMS

Term/Acronym	Definition
A	Amps
AC	Advisory Circular, Alternating Current
ACARS	Airborne Communications Addressing and Reporting System
ACC	Accuracy
ACT, ACTV	Active, Activate
ADAHRS	Air Data, Attitude and Heading Reference System
ADC	Air Data Computer
ADF	Automatic Direction Finder
ADI	Attitude Direction Indicator
ADIZ	Air Defense Identification Zone
ADS-B	Automatic Dependent Surveillance-Broadcast
ADS-R	Automatic Dependent Surveillance-Rebroadcast
AEA	Aircraft Electronic Association
AF	Arc to Fix Leg
AFCS	Automatic Flight Control System
AFM	Airplane Flight Manual
AFMS	Airplane Flight Manual Supplement
AFRM	Airframe
AGL	Above Ground Level
AHRS	Attitude and Heading Reference System
AIM	Aeronautical Information Manual
AIRB	Airborne
AIRMET	Airman's Meteorological Information
AIRREP	Air Reports
ALRT	Alert
ALT	Altitude
ALT, ALTN	Alternator, Alternate
ALTS	Selected Altitude Capture Mode
ALTV	VNAV Altitude Capture Mode
AMPS	Amperes
ANNUNC/ANN	Annunciation/Annunciator
ANT	Antenna
AOA	Angle of Attack

Term/Acronym	Definition
AOC	Aeronautical Operational Control
AOG	Aircraft On Ground
AOPA	Aircraft Owners and Pilots Association
AP	Autopilot
AP DISC	Autopilot Disconnect
APPR, APR	Approach
APT	Airport, Aerodrome
APTSIGNS	Airport Signs
ARINC	Aeronautical Radio Incorporated
ARSPC	Airspace
ARTCC	Air Route Traffic Control Center
ARV	Arrival
AS	Airspeed
ASB	Aviation Support Branch
ASOS	Automated Surface Observing System
AT	Auto Throttle
ATC	Air Traffic Control
ATCRBS	ATC Radar Beacon System
ATIS	Automatic Terminal Information Service
ATK	Along Track
AUTOSEQ	Automatic Sequence
AUX	Auxiliary
AVG	Average
AVLC	Aviation VHF Link Control
AWOS	Automated Weather Observing System
B	Both Runways
B ALT	Barometric Altitude
BARO	Barometer, Barometric
BATT	Battery
BC	Backcourse
Bearing	The compass direction from the present position to a destination waypoint.
BFO	Beat Frequency Oscillator
BKSP	Backspace
Bluetooth	Wireless standard for data exchange over short distances

Term/Acronym	Definition
BOC	Bottom of Climb
BOD	Bottom of Descent
BRG	see also Bearing
°C	Degrees Celsius
C	Center Runway
CA	Course to Altitude Leg
CAL	Calibrated
CALC	Calculator
Calibrated Airspeed	Indicated airspeed corrected for installation and instrument errors.
CAS	Crew Alerting System
CD	Course to DME Distance Leg
CDI	Course Deviation Indicator
CDU	Control Display Unit
CF	Course to Fix Leg
CG	Center of Gravity
CH, CHNL	Channel
CHT	Cylinder Head Temperature
CHKLIST	Checklist
CI	Course to Intercept Leg
CLD	Cloud
CLR	Clear
CM	Centimeter
CMC	Central Maintenance Computer
CN	Canada
CNS	Communication, Navigation, & Surveillance
CO	Carbon Monoxide
COM	Communication Radio
CONFIG	Configuration
COOL	Coolant
COPLT	Copilot
Course	The line between two points to be followed by the aircraft.
Course to Steer	The recommended direction to steer in order to reduce course error or stay on course. Provides the most efficient heading to get back to the desired course and proceed along the flight plan.
CPDLC	Controller Pilot Datalink Communications
CPL	Couple

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CMS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

Term/Acronym	Definition
CR	Course to Radial Leg
CRG	Cockpit Reference Guide
CRNT	Current
Crosstrack Error	The distance the aircraft is off a desired course in either direction, left or right.
CRS	see also Course, Course to Steer
CRSR	Cursor
CSA	Conflict Situational Awareness
CSC	Current Speed Control
CTA	Control Area
CTR	Center
CTRL	Control
Cumulative, CUM	The total of all legs in a flight plan.
CVDR	Cockpit Voice Data Recorder
CVR	Cockpit Voice Recorder
CVRG	Coverage
CWS	Control Wheel Steering
CYC CTR	Cyclic Centering
CYL	Cylinder
D ALT	Density Altitude
D-ATIS	Digital Automatic Terminal Info Service
DB, DBASE	Database
dBZ	Decibels 'Z' (Radar Return)
DCL	Departure Clearance
DCLTR, DECLTR	Declutter
DEC FUEL	Decrease Fuel
DEG	Degree
DEIC, DEICE	De-icing
DEP	Departure
Desired Track	The desired course between the active "from" and "to" waypoints.
DES, DEST	Destination
DEV	Deviation
DF	Direct to Fix Leg
DFLT	Default
DG	Directional Gyro

Term/Acronym	Definition
DGRD	Degrade
DH	Decision Height
Dilution of Precision	A measure of GPS satellite geometry quality on a scale of one to ten (lower numbers equal better geometry, where higher numbers equal poorer geometry).
DIR	Direction
DIS	Distance
Distance	The 'great circle' distance from the present position to a destination waypoint.
DL LTNG	Datalink Lightning
DLS	Data Link System
DME	Distance Measuring Equipment
DN	Down
DOD	Department of Defense
DOP	see also Dilution of Precision
DP	Departure Procedure
DPRT	Departure
DR	Dead Reckoning
DSBL	Disabled
DTG	Distance To Go, Remaining distance to last active FPL waypoint
DTK	see also Desired Track
DQR	Data Quality Requirements
E	Empty, East
EAS	Engine and Airframe Systems
ECU	Engine Control Unit
EDM	Emergency Descent Mode
EFC	Expected Further Clearance
Efficiency	A measure of fuel consumption, expressed in distance per unit of fuel.
EGNOS	European Geostationary Navigation Overlay Service
EGT	Exhaust Gas Temperature
EICAS	Engine Indication and Crew Alerting System
EIS	Engine Indication System
ELEV	Elevation, Elevator
ELT	Emergency Locator Transmitter
EMER, EMERG, EMERGCY	Emergency

System Overview

Flight Instruments

Engine Indication System

Audio Panel and COM

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

Term/Acronym	Definition
EMI	Electromagnetic Interference
END, ENDUR	Endurance
Endurance	Flight endurance, or total possible flight time based on available fuel on board.
ENG	Engine
ENGD	Engaged
ENR	Enroute; ETE to Final Destination
Enroute Safe Altitude (ESA)	Uses Grid MORAs to determine a safe altitude within ten miles left or right of the desired course on an active flight plan or direct-to.
ENT	Enter
EPE	see also Estimated Position Error
EPU	Estimated Position Uncertainty
ERR	Error
ES	Extended Squitter
ESA	see also Enroute Safe Altitude
ESP	Electronic Stability and Protection
Estimated Position Error (EPE)	A measure of horizontal GPS position error derived by satellite geometry conditions and other factors.
Estimated Time of Arrival (ETA)	The estimated time at which the aircraft should reach the destination waypoint, based upon current speed and track.
Estimated Time Enroute (ETE)	The estimated time it takes to reach the destination waypoint from the present position, based upon current groundspeed.
ETA	see also Estimated Time of Arrival
ETE	see also Estimated Time Enroute
EVS	Enhanced Vision System
EXPIRD	Expired
°F	Degrees Fahrenheit
FA	Course From Fix to Altitude Leg
FAA	Federal Aviation Administration
FADEC	Full Authority Digital Engine Control
FAF	Final Approach Fix
FAIL	Failure
FANS	Future Air Navigation System
FAR	Federal Aviation Regulations
FBO	Fixed Base Operator
FC	Course From Fix to Distance Leg

Term/Acronym	Definition
FCC	Federal Communication Commission
FCST	Forecast
FD	Flight Director, Course From Fix to DME Distance Leg
FDE	Fault Detection and Exclusion
FF, FFLOW	see also Fuel Flow
FIS-B	Flight Information Services-Broadcast
FISDL	Flight Information Service Data Link
FL	Flight Level
FLC	Flight Level Change
FLT	Flight Timer
FLTA	Forward Looking Terrain Avoidance
FM	Course From Fix to Manual Termination Leg
FMS	Flight Management System
FOB	see also Fuel On Board
FOD	see also Fuel Over Destination
FPA	Flight Path Angle
FPL	Flight Plan
FPM	Feet Per Minute, Flight Path Marker
FREQ	Frequency
FRMT	Format
FRZ	Freezing
FSM	Flight System Messages
FSS	Flight Service Station
FT	foot/feet
Fuel Flow	The fuel flow rate, expressed in units of fuel per hour.
Fuel On Board	The total amount of usable fuel on board the aircraft.
Fuel Over Destination	The estimated fuel remaining when the aircraft reaches the destination waypoint, based upon current fuel flow.
FWD	Forward
G/S	Glideslope
GA	Go-Around
GAL, GL	Gallon(s)
GBOX	Gearbox
GBT	Ground Based Transceiver
GCU	Garmin Control Unit

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CMS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

Term/Acronym	Definition
GCS	Ground Clutter Suppression
GDC	Garmin Air Data Computer
GDL	Garmin Satellite Data Link
GDR	Garmin Data Radio
GDU	Garmin Display Unit
GEA	Garmin Engine/Airframe Unit
GEN	Generator
GEO	Geographic
GFC	Garmin Flight Control
GIA	Garmin Integrated Avionics Unit
GLONASS	Global Orbiting Navigation Satellite Landing System
GLS	Global Navigation Satellite Landing System
GMA	Garmin Audio Panel System
GMC	Garmin Mode Controller
GMT	Greenwich Mean Time
GMU	Garmin Magnetometer Unit
GND	Ground
GPH	Gallons per Hour
GPN	Garmin Part Number
GPS	Global Positioning System
GPWS	Ground Proximity Warning System
Grid MORA (Minimum Off —Route Altitude)	One degree latitude by one degree longitude in size and clears the highest elevation reference point in the grid by: a) 1,000 feet where the highest elevation is <5001MSL or b) 2,000 feet where the highest elevation is >5000MSL
Groundspeed	The velocity that the aircraft is travelling relative to a ground position.
Ground Track	See Track
GRS	Garmin Reference System
GS	Ground Speed, Glideslope
GSA	Garmin Servo Adapter
GSD	Garmin Data Concentrator
GSL	Geodetic Sea Level
GSR	Garmin Satellite Radio
GSU	Garmin Sensor Unit
GTC	Garmin Touchscreen Controller

Term/Acronym	Definition
GTS	Garmin Traffic System
GTX	Garmin Transponder
GW	Gross Weight
GWX	Garmin Weather Radar
HA	Hold Terminating at Altitude Leg
HDG	see also Heading
HDOP	Horizontal Dilution of Precision
Heading	The direction an aircraft is pointed, based upon indications from a magnetic compass or a properly set directional gyro.
HF	High Frequency, Hold Terminating at Fix Leg
HFOM	see also Horizontal Figure of Merit
Hg	Mercury
HI	High
HI SENS	High Sensitivity
HM	Hold with Manual Termination Leg
HNS	Hybrid Navigation System
Horizontal Figure of Merit	A measure of the uncertainty in the aircraft's horizontal position.
HOV	Hover
HOV-P	Hover Prediction
hPa	Hectopascal
HPI	Hover Power Indicator
HPL	Horizontal Protection Level
HR	Hour
HRZN HDG	Horizon Heading
HSDB	High-Speed Data Bus
HSI	Horizontal Situation Indicator
HT	Heat
HUL	Horizontal Uncertainty Level
Hz	Hertz (cycles per second)
I	Inner Marker
IAF	Initial Approach Fix
IAS	Indicated Air Speed
IAT	Indicated Air Temperature
IAU	Integrated Avionics Unit
ICAO	International Civil Aviation Organization

Term/Acronym	Definition
ICS	Intercom System
ID	Identification/Morse Code Identifier
IDENT, IDNT	Identification
IEEE	Institute of Electrical & Electronics Engineers
IF	Initial Fix
IFR	Instrument Flight Rules
IG	Imperial Gallon
IGE	In Ground Effect
ILS	Instrument Landing System
IMC	Instrument Meteorological Conditions
IN	Inch
INACTV	Inactive
INC FUEL	Increase Fuel
IND	Indicator, Indicated
Indicated	Information provided by properly calibrated and set instrumentation on the aircraft panel.
INFO	Information
IN Hg	Inches of Mercury
INS	Inertial Navigation System
INT	Intersection(s)
INTEG	Integrity (RAIM unavailable)
IrDA, IRDA	Infrared Data Association
ISA	International Standard Atmosphere; ISA Relative Temperature
ISO	International Standards Organization
ITT	Inter-Turbine Temperature, Interstage Turbine Temperature
KEYSTK	Key Stuck
KG	Kilogram
KHz	Kilohertz
KM	Kilometer
KT	Knot
L	Left, Left Runway
LAT	Latitude, Lateral
LBL	Label
LB	Pound
LCD	Liquid Crystal Display

Term/Acronym	Definition
LCL	Local
LDA	Landing Distance Available
LDG	ETA at Final Destination
LED	Light Emitting Diode
Left Over Fuel On Board	The amount of fuel remaining on board after the completion of one or more legs of a flight plan or direct-to.
Left Over Fuel Reserve	The amount of flight time remaining, based on the amount of fuel on board after the completion of one or more legs of a flight plan or direct-to, and a known consumption rate.
Leg	The portion of a flight plan between two waypoints.
LGND	Legend
LIFR	Low Instrument Flight Rules
LMM	Location Middle Marker
LNAV	Lateral Navigation
LO	Low
LOA	Letter of Authorization
LOC	Localizer
LOI	Loss of Integrity (GPS)
LOM	Location Outer Marker
LON	Longitude, Longitudinal
LP	Localizer Performance
LPV	Localizer Performance with Vertical Guidance
LRU	Line Replaceable Unit
LT	Left
LTNG	Lightning
LVL	Level
M	Meter, Middle Marker, Mach
MMO (VMO)	Maximum Speed
Mach Number	Mach number is the ratio of the true airspeed to the speed of sound.
MAG	Magnetic
MAG VAR	Magnetic Variation
MAHP	Missed Approach Hold Point
MAN IN	Manifold Pressure (inches Hg)
MAN SQ	Manual Squelch
MANSEQ	Manual Sequence
MAP	Missed Approach Point

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CWS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

Term/Acronym	Definition
MASQ	Master Avionics Squelch
MAX	Maximum
MAXSPD	Maximum Speed (overspeed)
MB	Marker Beacon
MCP	Maximum Continuous Power
MDA	Barometric Minimum Descent Altitude
MEPT	Manual Electric Pitch Trim
MET	Manual Electric Trim
METAR	Aviation Routine Weather Report
MFD	Multi Function Display
MGRS	Military Grid Reference System
MGT	Measured Gas Temperature
MHz	Megahertz
MIC	Microphone
MIN	Minimum
Minimum Safe Altitude (MSA)	Uses Grid MORAs to determine a safe altitude within ten miles of the aircraft present position.
MKR	Marker Beacon
MOA	Military Operations Area
MON	Monitor
MOV	Movement
MORA	Minimum Off-Route Altitude
MPEL	Maximum Permissible Exposure Level
MPM	Meters per Minute
MSA	see also Minimum Safe Altitude
MSAS	Multi-functional Satellite Augmentation System
MSG	Message
MSL	Mean Sea Level
MT, M	Meter
mV	Millivolt(s)
MVFR	Marginal Visual Flight Rules
N	North
NAV	Navigation
NAVAID	Navigation Aid
NDB	Non-Directional Beacon

Term/Acronym	Definition
NEXRAD	Next Generation Radar
NG	Gas Producer Rotation Speed
NM	Nautical Mile(s)
NoPT	No Procedure Turn Required (procedure shall not be executed without ATC clearance)
NOTAM	Notice To Airman
NP	Power Turbine Speed
NR	Rotor Speed
NRST	Nearest
O	Outer Marker
OAT	Outside Air Temperature
OBS	Omni Bearing Selector
OFST	Offset
OGE	Out of Ground Effect
OOOI	Out of the gate, Off the ground, On the ground, and In the gate
OXY	Oxygen
P ALT	Pressure Altitude
PA	Passenger Address, Proximity Advisory
PASS	Passenger(s)
PC	Personal Computer
PDC	Pre-Departure Clearance
PFD	Primary Flight Display
PG	Pilot's Guide
PI	Procedure Turn to Course Intercept Leg
PIREP	Pilot Report
PIT, PTCH	Pitch
POA	Plain Old ACARS
POH	Pilot's Operating Handbook
POHS	Pilot's Operating Handbook Supplement
POS, POSN	Position
PPH	Pounds per Hour
PPM	Parts per Million
P. POS	Present Position
PRES, PRESS	Pressure
PROC	Procedure(s), Procedure Turn

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CMS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

Term/Acronym	Definition
PROP	Propeller
PROX	Proximity
PSI	Pounds per Square Inch, Power Situation Indicator
PT	Procedure Turn
PTK	Parallel Track
PTT	Push-to-Talk
PWR	Power
Q	Engine Torque
QFE	Field Elevation Pressure
QNH	Sea Level Pressure
QTY	Quantity
R	Right, Right Runway
RA	Resolution Advisory, Radio Altimeter
RAD	Radial
RAD ALT	Radio Altimeter
RAIM	Receiver Autonomous Integrity Monitoring
RAM	Random Access Memory
RAT	Ram Air Temperature
RCVR	Receiver
REF	Reference
REM	Remaining (fuel remaining), Reminder
REQ	Required
RES	Reserve (fuel reserve entered by pilot)
REV	Reverse, Revision, Revise
RF	Radio Frequency, Constant Radius Turn to Fix Leg
RFM	Rotorcraft Flight Manual
RMI	Radio Magnetic Indicator
RMT	Remote
RNAV	Area Navigation
RNG	Range
RNP	Required Navigation Performance
RNWX, RWY	Runway
ROL	Roll
ROM	Read Only Memory
RPM	Revolutions Per Minute

Term/Acronym	Definition
RST FUEL	Reset Fuel
RSV	Reserve (fuel reserve entered by pilot)
RT	Right
RVRSNRY	Reversionary
RVSM	Reduced Vertical Separation Minimums
RX	Receive
S	South
SA	Selective Availability
SAR	Search and Rescue
SAT	Static Air Temperature
SBAS	Satellite-Based Augmentation System
SCIT	Storm Cell Identification and Tracking
SD	Secure Digital
SEC	Second(s)
SEL, SLCT	Select
SELCAL	Selective Calling
SENS	Sense
SFC	Surface
SIAP	Standard Instrument Approach Procedures
SID	Standard Instrument Departure
SIG/AIR	SIGMET/AIRMET
SIGMET	Significant Meteorological Information
SIM	Simulator
SLD	Supercooled Large Droplet
SLP/SKD	Slip/Skid
SMBL	Symbol
SMS	Short Message System
SNGL	Single
SPC	Space
SPD	Speed
SPI	Special Position Identification
SPKR	Speaker
SQ	Squelch
SRVC, SVC	Service
SSID	Wireless Service Set Identifier

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CMS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

Term/Acronym	Definition
STAB	Stabilization
STAL	Stall
STAR	Standard Terminal Arrival Route
STATS	Statistics
STBY	Standby
STD	Standard
STRMSCP	Stormscope
SUA	Special Use Airspace
SURF	Surface
SUSP	Suspend
SVT	Synthetic Vision Technology
SW	Software
SYNC	Synchronize
SYN TERR	Synthetic Terrain
SYN VIS	Synthetic Vision
SYS	System
T	TRUE
TA	Traffic Advisory
TACAN	Tactical Air Navigation System
TAF	Terminal Aerodrome Forecast
TAS	True Airspeed, Traffic Advisory System
TAT	Total Air Temperature
TAWS	Terrain Awareness and Warning System
TCA	Terminal Control Area
TCAS	Traffic Alert Collision Avoidance System
TEL	Telephone
TEMP	Temperature
TERM	Terminal
TF	Track Between Two Fixes Leg
TFR	Temporary Flight Restriction
TGT	Target
T HDG	True Heading
TIS	Traffic Information Service
TIS-B	Traffic Information Service-Broadcast
TIT	Turbine Inlet Temperature

Term/Acronym	Definition
TKE	see also Track Angle Error
TMA	Terminal Maneuvering Area
TMR/REF	Timer/Reference
TOC	Top of Climb
TOD	Top of Descent
TOGA, TO/GA	Take-Off, Go-Around
TOLD	Takeoff and Landing Data
TOPO	Topographic
TORA	Takeoff Run Available
TOT	Total
TPA	Traffic Pattern Altitude
Track	Direction of aircraft movement relative to a ground position; also 'Ground Track'.
Track Angle Error	The angle difference between the desired track and the current track.
TRK	see also Track
TRSA	Terminal Radar Service Area
TRUNC	Truncated
TTL	Total
TURB	Turbulence
TURN	Procedure Turn
TWIP	Terminal Weather Information for Pilots
TX	Transmit
UAT	Universal Access Transceiver
UHF	Ultra-High Frequency
UNAVAIL	Unavailable
US	United States
USR	User
UTC	Coordinated Universal Time
UTM/UPS	Universal Transverse Mercator/ Universal Polar Stereographic Grid
V	Volts
V, Vspeed	Velocity (airspeed)
V₁	Takeoff Decision Speed
V₂	Takeoff Safety Speed
V_A	Maneuvering Speed

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CMS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

Term/Acronym	Definition
V_{APP} , V_{AC}	Approach Climb Speed
V_{FE}	Maximum Flap Extended Speed
V_{LE}	Maximum Landing Gear Extended Speed
V_{LNDx}	Approach Speed (Flaps at x°)
V_{LO}	Maximum Landing Gear Operating Speed
V_{MC}	Minimum Control Speed
V_{MO} (M_{MO})	Maximum Operating Speed
V_{NE}	Never-Exceed Speed
V_R	Takeoff Rotate Speed
V_{REF}	Landing Approach Speed, Reference Landing Speed
V_{SB}	Maximum Speedbrake Speed
V_{SR}	Stall Speed
V_T	Takeoff Flap Retraction Speed
V_{TIRE}	Maximum Tire Speed
V_X	Best Angle of Climb Speed
V_Y	Best Rate of Climb Speed
V_{YSE}	Best Single-Engine Rate of Climb Speed
V_{DEV}	Vertical Deviation
V_A	Heading Vector to Altitude Leg
V_{AC}	Volts Alternating Current
V_{APP}	VOR Approach
V_{AR}	Variation
V_D	Heading Vector to DME Distance Leg
V_{DC}	Volts Direct Current
V_{DL}	VHF Datalink
V_{ERT}	Vertical
Vertical Figure of Merit	A measure of the uncertainty in the aircraft's vertical position.
Vertical Speed Required	The vertical speed necessary to descend/climb from a current position and altitude to a defined target position and altitude, based upon current groundspeed.
V_{FOM}	see also Vertical Figure of Merit
V_{FR}	Visual Flight Rules
V_{HF}	Very High Frequency

Term/Acronym	Definition
VI	Heading Vector to Intercept Leg
VLOC	VOR/Localizer Receiver
VM	Heading Vector to Manual Termination Leg
VMC	Visual Meteorological Conditions
VNAV, VNV	Vertical Navigation
VOL	Volume
VOR	VHF Omnidirectional Range
VORTAC	VHF Omnidirectional Range Station and Tactical Air Navigation
VPATH, VPTH	Vertical Path
VPL	Vertical Protection Level
VPROF	VNAV Profile, Vertical Profile
VR	Heading Vector to Radial Leg
VRP	Visual Reporting Point
VS	Vertical Speed
VSD	Vertical Situation Display
VSI	Vertical Speed Indicator
VSR, VS REQ	see also Vertical Speed Required
VTF	Vector to Final
W	Watt(s), West
WAAS	Wide Area Augmentation System
WARN	Warning
WATCH	Weather Attenuated Color Highlight
WGS-84	World Geodetic System - 1984
WI-FI, WIFI	Wireless Local Area Network based on IEEE 802.11
WOG	Weight on Gear
WOW	Weight on Wheels
WPT	Waypoint(s)
WT	Weight
WW	World Wide
WX	Weather
XFER, XFR	Transfer
XM LTNG	SiriusXM Lightning
XMSN	Transmission
XPDR	Transponder
XTALK	Cross-Talk

System Overview
 Flight Instruments
 Engine Indication System
 Audio Panel and CMS
 Flight Management
 Hazard Avoidance
 Automatic Flight Control System
 Additional Features
 Appendices
 Index

Term/Acronym	Definition
XTK	Cross-Track, Crosstrack Error
YD	Yaw Damper

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CNS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

FREQUENTLY ASKED QUESTIONS

If a particular aspect of system operational capability is not addressed by these commonly asked questions or in the index, contact Garmin (see the copyright page or back cover for contact information) or a Garmin-authorized dealer. Garmin is dedicated to supporting its products and customers.

WHAT IS SBAS?

The Satellite Based Augmentation System (SBAS) uses a system of ground stations to correct any GPS signal errors. These ground stations correct for errors caused by ionospheric disturbances, timing, and satellite orbit errors. It also provides vital integrity information regarding the health of each GPS satellite. The signal correction is then broadcast through geostationary satellites. This correction information can then be received by any SBAS-enabled GPS receiver.

SBAS is designed to provide the additional accuracy, availability, and integrity necessary to enable users to rely on GPS for all phases of flight.

There are several SBAS systems serving different parts of the world. The Wide Area Augmentation System (WAAS) is currently available in the United States, including Alaska and Hawaii. The European Geostationary Navigation Overlay Service (EGNOS) offers coverage of Europe, parts of the middle east and northern Africa. The Multi-functional Satellite Augmentation System (MSAS) covers mainly Japan and parts of northern Australia.

HOW DOES SBAS AFFECT APPROACH OPERATIONS?

Both LNAV/VNAV and LPV approaches use the accuracy of SBAS to include vertical (glide path) guidance capability. The additional accuracy and vertical guidance capability allows improved instrument approaches to an expanded number of airports throughout the U.S.

The implementation of LPV approaches further improves precision approach capabilities. LPV approaches are designed to make full use of the improved GPS signal from the SBAS. This approach combines the LNAV/VNAV vertical accuracy with lateral guidance similar to the typical Instrument Landing System (ILS). LPV approaches allow lower approach minimums.

WHAT IS RAIM AND HOW DOES IT AFFECT APPROACH OPERATIONS?

RAIM is an acronym for Receiver Autonomous Integrity Monitoring. RAIM is a GPS receiver function that performs the following functions:

- Monitors and verifies integrity and geometry of tracked GPS satellites
- Notifies the pilot when satellite conditions do not provide the necessary coverage to support a certain phase of flight
- Predicts satellite coverage of a destination area to determine whether the number of available satellites is sufficient to satisfy requirements



NOTE: *If RAIM is not predicted to be available for the final approach course, the approach does not become active, as indicated by the “RAIM not available from FAF to MAP” message and the LOI annunciation flagging on the HSI.*

For RAIM to work correctly, the GPS receiver must track at least five satellites. A minimum of six satellites is required to allow RAIM to eliminate a single corrupt satellite from the navigation solution.

RAIM ensures that satellite geometry allows for a navigation solution calculation within a specified protection limit (2.0 nm for oceanic and en route, 1.0 nm for terminal, and 0.3 nm for non-precision approaches). The system monitors RAIM and issues an alert message when RAIM is not available (see Appendix A). Without RAIM, GPS position accuracy cannot be monitored. If RAIM is not available when crossing the FAF, the pilot must fly the missed approach procedure.

WHY MIGHT THERE BE NO APPROACHES AVAILABLE FOR A FLIGHT PLAN?

Approaches are available for the final destination airport in a flight plan or as a direct-to (keep in mind some VOR/VORTAC identifiers are similar to airport identifiers). If a destination airport does not have a published approach, the system indicates “NONE” for the available procedures.

WHAT HAPPENS WHEN AN APPROACH IS SELECTED? CAN A FLIGHT PLAN WITH AN APPROACH, A DEPARTURE, OR AN ARRIVAL BE STORED?

When an approach, departure, or arrival is loaded into the active flight plan, a set of approach, departure, or arrival waypoints is inserted into the flight plan, along with a header line showing the title of the selected instrument procedure. The original enroute portion of the flight plan remains active, unless the instrument procedure is activated. This may be done either when the procedure is loaded or at a later time.

Flight plans can also be stored with an approach, a departure, or an arrival. Note the active flight plan is erased when the system is turned off. Also, the active flight plan is overwritten when another flight plan is activated. When storing flight plans with an approach, a departure, or an arrival, the system uses the waypoint information from the current database to define the waypoints. If the database is changed or updated, the system automatically updates the information, provided the procedure has not been modified. Should an approach, departure, or arrival procedure no longer be available, the flight plan becomes locked until the procedure is deleted from the flight plan.

CAN “SLANT GOLF” (“/G”) BE FILED USING THE SYSTEM?

“/G” may be filed for a flight plan. GPS approaches are not to be flown with an expired database. See the approved Airplane Flight Manual (AFM) as well as the Aeronautical Information Manual (AIM) for more information.

WHAT DOES THE OBS SOFTKEY DO?

Normal (OBS not activated)	OBS
<ul style="list-style-type: none"> • Automatic sequencing of waypoints • Manual course change on HSI not possible • Always navigates ‘TO’ the active waypoint 	<ul style="list-style-type: none"> • Manual sequencing - ‘holds’ on selected waypoint • Manually select course to waypoint from HSI • Indicates ‘TO’ or ‘FROM’ waypoint
<ul style="list-style-type: none"> • Must be in this mode for final approach course 	<ul style="list-style-type: none"> • Cannot be set for final approach course or published holding patterns

The OBS Softkey is used to select manual sequencing of waypoints. Activating OBS mode sets the current active-to waypoint as the primary navigation reference and prevents the system from sequencing to the next waypoint in a flight plan. When OBS mode is cancelled, automatic waypoint sequencing is continued, and the system automatically activates the next waypoint in the flight plan once the aircraft has crossed the present active waypoint.

WHY MIGHT THE SYSTEM NOT AUTOMATICALLY SEQUENCE TO THE NEXT WAYPOINT?

The system only sequences flight plan waypoints when automatic sequencing is enabled (i.e., no ‘OBS’ or ‘SUSP’ annunciation on the HSI). For automatic sequencing to occur, the aircraft must also cross the bisector of the turn being navigated. The bisector is a line passing through the waypoint common to two flight plan legs at an equal angle from each leg.

WHEN DOES TURN ANTICIPATION BEGIN?

The system smooths adjacent leg transitions based on a normal 15° bank angle (with the ability to roll up to 30°) and provides three pilot cues for turn anticipation:

- A waypoint alert (‘Next DTK ###° in # seconds’ or ‘Next HDG ###° in # seconds’) appears on the PFD 10 seconds before the turn point and flashes as it counts down to zero.
- A flashing turn advisory (‘Turn [right/left] to ###° in # seconds’) appears on the PFD 10 seconds before the turn and flashes as it counts down to zero. ‘Turn [right/left] to ###° now’ or ‘Next [DTK/HDG] to ###° now’ is displayed when the pilot is to begin the turn and the HSI (GPS mode) automatically sequences to the next DTK or HDG value.
- The To/From indicator on the HSI flips momentarily to indicate the midpoint of the turn has been crossed.

WHEN DOES THE CDI SCALE CHANGE?

Once a departure is activated, the system Course Deviation Indicator (CDI) full scale deflection is set to 0.3 nm. The CDI scale changes to 1.0 nm (terminal mode) then ramps up to 2.0 nm (enroute mode) at 30 nm from the departure airport. When 31 nm from the destination, the CDI scale smoothly transition from 2.0 nm back to 1.0 nm (terminal mode). At 2.0 nm before the FAF during an active approach, the CDI scale transitions down further based on the type of approach activated (LNAV, LNAV/VNAV, LPV). When a missed approach is activated, the CDI is set to 0.3 nm. See the Flight Instruments Section for more details on CDI scaling.

WHY DOES THE HSI NOT RESPOND LIKE A VOR WHEN OBS MODE IS ACTIVE?

Unlike a VOR, the CDI scale used on GPS equipment is based on the crosstrack distance to the desired course, not on the angular relationship to the destination. Therefore, the CDI deflection on the GPS is constant regardless of the distance to the destination and does not become less sensitive when further away from the destination.

HOW DO I ACTIVATE A MISSED APPROACH PROCEDURE?

To comply with TSO specifications, the system does not automatically sequence past the MAP. The first waypoint in the missed approach procedure becomes the active waypoint when the SUSP

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CWS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

Button is selected after crossing the MAP. All published missed approach procedures must be followed, as indicated on the published approach.

To execute the missed approach procedure prior to the MAP (not recommended), touch the PROC Button on the Home Screen or the Active Flight Plan Screen. Touch the **Activate Missed Approach** Button to activate the missed approach portion of the procedure.

AFTER A MISSED APPROACH, HOW CAN THE SAME APPROACH BE RE-SELECTED? HOW CAN A NEW APPROACH BE ACTIVATED?

















NOTE: Do not attempt to reactivate the current approach prior to crossing the missed approach point (MAP). If an attempt to do so is made, an alert message “Are you sure you want to discontinue the current approach?” appears. The system directs the pilot back to the transition waypoint and does not take into consideration any missed approach procedures, if the current approach is reactivated.

After flying the missed approach procedure, the pilot may reactivate the same approach for another attempt by touching the **PROC** Button on the Home Screen, followed by the **Activate Approach** Button. The system provides navigation along the desired course to the waypoint and rejoins the approach in sequence from that point.

To activate a new approach for the same airport, select the new procedure by touching the **PROC** Button, then touch the Approach Button to access the **Approach** Selection Screen. Then touch the **Approach** Button. The Touchscreen Controller displays a list of approaches as buttons. Scroll as needed and touch the desired approach button, then touch a transition button. The Touchscreen Controller returns to the Approach Selection Screen. To activate the selected approach, touch the **Load & Activate** Button.

To activate a new approach to a different airport, touch the **Direct To** Button to access the Direct To Screen. Then touch the waypoint point and enter the desired airport using the keypad or large and small right knobs. Touch the **Enter** Button or push the **Right Knob** to accept the selected airport, then follow the steps in the preceding paragraph to select an approach for the new airport.

MAP SYMBOLS

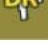ARTCC Frequency or FSS Frequency	
Map Pointer (when panning)	
Elevation Pointer (on Topography Scale when panning)	
Measuring Pointer	
Wind Vector	
Overzoom Indicator	
User Waypoint	
Vertical Navigation Along Track Waypoint	
Parallel Track Waypoint	
Unanchored Flight Path Waypoint	
Displayed when aircraft GPS location is valid, but heading is invalid.	
Top of Descent (TOD)	
Bottom of Descent (BOD)	
Navigating using Dead Reckoning	

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CNS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

BLANK PAGE

A

Abnormal GPS Conditions.....	104	Airway.....	189
Abnormal Operations for Garmin Connex Weather	374	Adding to Flight Plan.....	246, 247
Acquisition Squitter.....	152	Adding to Stored Flight Plan.....	248
Activating Data Link Weather Services.....	317	Collapsing.....	267
Establishing an account for SiriusXM services:..	318	Displaying and Removing.....	191
Verifying the SiriusXM Weather service activation:	318	Selecting Range.....	191
Activating Garmin Connex Weather.....	318	Along Track Offset.....	261
Active Frequency		Entering Offset Distance.....	262
COM.....	137	Altitude Alerting.....	87
NAV.....	132, 145	Altitude Constraint	
Additional TAWS-B Alerting.....	395	Chart.....	277
ADS-B.....	411	Deleting a Manual Entry.....	279
ADS-B Traffic		Deleting Database-Generated.....	279
Changing the altitude range:.....	419	Entering/Modifying.....	278
ADS-B with TAS/TCAS I.....	413	Invalid Causes.....	278
Air Data Failure.....	17	Modifying system calculated.....	280
Air Data, Attitude and Heading Reference System (ADAHRS)		Reverting Manual back to Original.....	279
Normal Operation.....	15	Altitude Intercept Arc.....	192
Troubleshooting.....	16	Annunciations.....	12
Airborne and Surface Applications.....	415	Power Up.....	10
Airport		Test Tone.....	15
Information Page.....	196	Approach.....	251, 291
Information Window.....	201	Activating a Loaded With Vectors to Final.....	297
Nearest.....	200	Activating a Previously Loaded.....	297
Nearest Airport Information on MFD.....	202	Loading Into Active FP Using PROC Key.....	295
Nearest Airport Information on PFD.....	201	Loading into Active from Nearest Airport Page	296
Nearest Surface/Runway Length Match.....	203	Loading into Stored FP.....	252
Select & Review by ID, name, or location.....	199	Loading/Activating w/MENU Key.....	297
Viewing Destination.....	200	Removing from Active FP.....	296
Viewing Runway Information.....	203	Service Levels.....	292
Airport Signs.....	93	Arrival.....	250, 289
Airspace.....	218	Loading into Active FP with PROC Key.....	291
Alerts/Messages.....	221	Loading into Stored FP.....	251
Changing altitude buffer distance.....	221	Removing from Active FP.....	291
Displaying/Removing Alt Labels.....	221	Attitude Indicator.....	60
Reviewing Information.....	180	Audio Alert Voice	
Selecting and Viewing Alert Information.....	222	Changing.....	49
Smart Airspace.....	222	Audio Panel.....	129
Turning On or Off Alert.....	221	Controls.....	132
Turning Smart Airspace On/Off.....	222	Fail-Safe Operation.....	168
Airspeed Indicator.....	61	Preflight.....	167
		Auto-designation.....	276
		Automatic Dependent Surveillance-Rebroadcast (ADS-R).....	412
		Automatic Squelch.....	137
		Auto-Tuning	
		COM.....	138, 139, 141
		NAV.....	146, 148
		Autozoom.....	177

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CMS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

B

- Backlighting..... 54
 - Adjusting Display..... 54
 - Adjusting Key Backlighting..... 54
- Blue-Select Mode..... 161
- Bluetooth..... 134, 165

C

- Changing the GPS Position display format..... 46
- Charts
 - Split Screen..... 265
- Check Runway..... 493, 494
- COM Frequency Box..... 130, 137
- COM Tuning Failure..... 168
- Comparator Annunciations..... 105
- Conflict Situational Awareness and Alerting..... 413
- Connex Data Request
 - Enabling/disabling automatic Connex Data Requests:..... 340
- Connex Data Requests
 - Cancelling a Connex Data Request in Progress:... 340
 - Manually Requesting Garmin Connex Weather information:..... 337
- Control Unit..... 135
- Course Deviation Indicator..... 75
- Crew Alerting System (CAS)
 - Advisory Annunciations..... 540
 - CAS Annunciations..... 536
 - CAS Message Prioritization..... 534
 - Caution Annunciations..... 538
 - Display Inhibits..... 536
 - Message Advisory Alerts..... 540
 - Warning Messages..... 536
- Crew Profile..... 40
 - Creating..... 41
 - Deleting..... 42
 - Exporting to SD Card..... 43
 - Import/Export Messages..... 41
 - Importing from SD Card..... 43
 - Renaming..... 42
 - Selecting an Active Profile..... 42
- Cyclone (SiriusXM)..... 366

D

- Data Link Lightning (SiriusXM, Garmin Connex) 352

- Databases
 - Information..... 10
 - Status..... 14
 - Updating from any MFD Page..... 569
 - Updating from the Aux - Databases Page..... 571
 - Updating Using an SD Card..... 566, 567
 - Updating Using Flight Stream 510..... 569
- Date/Time Settings..... 44
- Dead Reckoning Mode..... 313
- Defaults
 - Restoring System Setup..... 40
- Departure..... 287
 - Loading Into Active FP using PROC Key..... 289
 - Loading Into Stored FP..... 249
 - Removing from Active FP..... 289
- Destination Airport..... 194
- Direct-To
 - Cancelling..... 227
 - Manual Course Selection..... 226
 - Navigation..... 223
 - Reselecting Direct from Present Position..... 226
 - Using the Pointer..... 226
 - Vertical..... 227
- Direct-To Destination
 - Entering waypoint, facility, or city..... 225
 - Selecting Active Flight Plan Waypoint..... 225
 - Selecting Any Waypoint..... 226
 - Selecting Nearby Airport..... 226
 - Selecting Nearest, Recent, or User Waypoint... 225
 - Selecting Waypoint with Pointer..... 227
- Display Controller..... 5
- Display Units..... 46
 - Changing Unit Settings..... 47
- Displaying Additional Traffic Information..... 421
- Displaying Data Link Weather Products..... 324
- Displaying Motion Vectors..... 419
- Displaying/removing the active flight plan progress
 - 233
- DME Information Window..... 84
- DME Pairing..... 151

E

- Echo Tops (SiriusXM)..... 350
- Electronic Stability and Protection (ESP)..... 516
- Emergency Frequency..... 130, 168
- Entering Aircraft Load..... 306
- Entering the taxi fuel weight..... 307
- Entertainment..... 133
- Excessive Descent Rate Alert..... 395

Extended Squitter.....	152	Flight Plan, Active.....	258
F		Activating Leg.....	259
Field of View.....	193	Adding Waypoint to Active.....	243
FIS-B Weather Status.....	373	Approach Loading Using Nearest Pg.....	296
Five-Hundred Voice Alert.....	396	Approach Loading Using PROC Key.....	295
Flight ID.....	152	Approach, Removing.....	296
Flight Path Marker.....	94	Arrival Loading with PROC Key.....	291
Flight Plan		Arrival, Removing.....	291
Activating Pending.....	240	Changing Active FP Comment.....	261
Adding Airway.....	247	Changing View.....	265
Creation.....	230	Closest Point.....	268
Deleting All Pending.....	241	Closest Point in Active FP to a WPT.....	268
Deleting Pending.....	241	Collapsing/Expanding Airways in Active.....	268
Exporting to SD Card.....	237	Creating Active.....	233
Ignore Pending Transfer from Wireless.....	240	Creating/Adding User Waypoints to Active.....	243
Import/Export Messages.....	235	Deleting Active.....	259
Importing from an SD Card.....	236	Deleting Airway from Active.....	260
Leg Symbols.....	229	Deleting Procedure from Active.....	260
Previewing Pending Transfer from Wireless.....	239	Deleting Waypoint from Active.....	259
Transfers.....	238	Departure Loading.....	289
Views: Narrow and Wide.....	265	Departure, Removing.....	289
Flight Plan Progress.....	232	Exiting User-Defined Hold.....	273
		Inverting Active.....	259
		Missed Approach, Activating.....	299
		Procedure Loading.....	287
		Removing User-Defined Hold.....	273
		Split Screen Map Display.....	267
		Split Screen with Charts.....	267
		User-Defined Hold at Direct-to WPT.....	272
		User-Defined Hold at PP.....	271
		User-Defined Hold at WPT.....	271

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CDS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

G

Flight Plan, Stored..... 253

- Activating Stored on MFD..... 255
- Adding a Waypoint..... 242
- Adding Airway..... 248
- Adding Approach..... 252
- Adding Arrival..... 251
- Adding Departure..... 249
- Changing Stored FP Comment..... 257
- Copying Stored FP on MFD..... 255
- Creating Stored..... 234
- Deleting Airway from Stored..... 256
- Deleting Procedure from Stored..... 256
- Deleting Stored (All) FPs..... 258
- Deleting Stored FP..... 258
- Deleting Waypoint from Stored..... 256
- Inverting/Activating Stored on MFD..... 255
- Storing Active from Page or Window..... 254
- Storing Pending..... 240
- Viewing Stored FP Info..... 254

Forward Looking Terrain Avoidance..... 394

Freezing Level (SiriusXM)..... 362

Frequency Spacing..... 138, 143

Fuel Calculations..... 118

Fuel Range Ring..... 192

H

Generic Timer..... 85

Global Positioning System (GPS)

- Dead Reckoning Mode..... 313
- Failure..... 17
- Normal Operation..... 17
- Selecting a Receiver's Data..... 18
- Viewing Receiver Status Information..... 18

GPS CDI Scaling..... 78

GPS Position..... 46

H

High Airspeed Protection..... 519

Holding

- Creating User-Defined at Active FP WPT..... 271
- Creating User-Defined at Direct-To WPT..... 272
- Creating User-Defined at Present Position..... 271
- Editing User-Defined..... 272
- Exiting Active FP User-Defined Hold..... 273
- Removing Active FP User-Defined Hold..... 273
- Removing Off-Route User-Defined Hold..... 273
- User-Defined..... 268

Horizon Heading..... 95

Horizontal Situation Indicator..... 71

Horizontal Situation Indicator (HSI)

- Adjusting the Selected Heading..... 74
- HSI Double Green Arrow..... 145
- HSI Single Green Arrow..... 145
- HSI Single Magenta Arrow..... 145

I

Infrared Satellite (Garmin Connex)..... 355

Inhibiting FLTA Alerting..... 394

Intercom..... 133, 159

Intercom Modes..... 159

Intersection..... 203

- Selection..... 205

L

Landing Alerts..... 493

Line Replaceable Units (LRU)

- Failure..... 12
- List..... 1
- Status..... 14
- Viewing Information..... 14

Loading and activating a visual approach..... 300

Low Altitude Annunciation..... 87

M

Magnetic Field Variation Database Update..... 573

Magnetometer Failure..... 17

Manual Tuning

- COM..... 138
- NAV..... 145, 146

Map

- Airspace Symbols..... 187
- Airway Symbols..... 190
- Autozoom..... 177
- Aviation Symbols..... 185
- Declutter..... 188
- Land Symbols..... 185
- Orientation..... 173
- Range..... 176
- Ranges..... 169
- Symbol Setup..... 187

Marker Beacon..... 132, 149

Marker Beacon Annunciations..... 88

METARS and TAFS..... 357

- Displaying original METAR text information on the PFD Inset Map..... 360

MFD Navigation Data Bar..... 172

Minimum Descent Altitude/Decision Height Alerting 88

 Setting the Minimum Descent Altitude/Decision Height and bug..... 89

Missed Approach..... 298

 Activating in Active FP..... 299

Mode S Transponder..... 152

Morse Code Identifier..... 144

Multi Function Display (MFD)

 Backlighting..... 54

 Controls..... 4

 Page Groups..... 33

 Power Up..... 10

 Softkeys..... 29

N

NAV Frequency Box..... 132, 144, 145

NAV Radio Selection..... 145

Navigation

 Dead Reckoning Mode..... 313

Navigation Data Bar

 Changing a Field..... 172

Navigation Map

 Auto North Up..... 176

 Changing Orientation..... 176

 Configuring Automatic Zoom..... 178

 Decluttering..... 189

 Displaying Topo data on MFD..... 183

 Measuring Bearing/Distance..... 181

 Panning..... 180

 Setting Topographic Display..... 183

 Setting up Additional Group Items..... 193

 Setting up Land, Aviation or Airspace..... 188

 Topography..... 182

Nearest

 Airport..... 200

Negative Climb Rate After Takeoff Alert (NCR).... 395

NEXRAD (FIS-B)..... 344

 Displaying the FIS-B NEXRAD weather product on PFD maps:..... 346

NEXRAD (SiriusXM)..... 341

 Changing the NEXRAD coverage region:..... 342

 Enabling/disabling NEXRAD weather information on MFD navigation maps:..... 342

Non-Directional Beacon (NDB)..... 205

 Selection..... 207

Normal Operating Mode..... 11

O

Operation..... 405, 417

P

Page Groups

 Multi Function Display (MFD)..... 33

Page Menu

 Navigating Page Menu Window..... 33

Page Navigation

 Selecting Settings..... 49

Page Selection

 Using the FMS Knob..... 34

Parallel Track..... 262

 Activating..... 264

 Cancelling..... 265

Passenger Address..... 133

Pathways..... 95

PIREPS And AIREPS..... 369

Premature Descent Alerting..... 395

Primary Flight Display (PFD)

 Backlighting..... 54

 Controls..... 4

 Map..... 169

 Map Decluttering..... 189

 Power Up..... 10

 Setting Topographic Display..... 183

 Softkeys..... 24

Procedure Loading

 Available Procedures at Airport..... 286

 Into Active FP from Information Page..... 287

Procedures..... 285

 Pages..... 37

R

Receiver Autonomous Integrity Monitoring (RAIM)

 FDE Prediction Tool..... 20

 Prediction..... 20

Reflectivity..... 343

Relative Terrain Symbology..... 382

Reversionary Sensor Annunciations..... 106

Roll Engagement..... 517

Runway

 Selection..... 200

Runway Too Short..... 492, 493

RX Indicator..... 138

S

Satellite Constellation..... 19

Satellite Status..... 19

Scheduler..... 52

 Deleting a Message..... 53

 Entering a Message..... 53

System Overview
Flight Instruments
Engine Indication System
Audio Panel and CMS
Flight Management
Hazard Avoidance
Automatic Flight Control System
Additional Features
Appendices
Index

Secure Digital (SD) Cards..... 8	TAS/TCAS I Traffic
Inserting/Removing..... 9	Customizing traffic display..... 408
Settings, System..... 39	TAS/TCAS I Operating Mode..... 406
SIGMETs And AIRMETs..... 356	TAWS-B..... 381
Displaying SIGMETs and AIRMETs:..... 357	Taxiway Landing..... 493
Smart Airspace..... 222	Taxiway Takeoff..... 492
Softkeys	Telephone..... 133
Function..... 24	Temperature Compensation..... 301
Multi Function Display (MFD)..... 29	Temperature Compensation Altitude
Primary Flight Display (PFD)..... 24	Cancelling..... 303
Speaker..... 158	Manually Activating..... 302
Split Screen..... 265	Temperature Displays..... 85
Displaying Active FP Map..... 267	Terrain Displays
Enabling/Disabling..... 39	FLTA Alerting..... 394
Functionality..... 37	Vertical Situation Display..... 388
Viewing Charts and Active FP..... 267	Terrain Proximity..... 381
Split-PA Mode..... 158	Terrain-SVT..... 381
Standby Frequency	Terrain-SVT and TAWS-B Alerting Displays..... 390
COM..... 137	TFRs..... 371
NAV..... 132, 145	Three Dimensional (3D) Audio..... 163
Stormscope..... 377	Time/Date Settings..... 44
Stuck Microphone..... 168	Configuring System Time..... 45
Surface Analysis And City Forecast (SiriusXM)..... 360	Timers..... 50
SurfaceWatch..... 490	Resetting the Flight Timer..... 51
SVT (Synthetic Vision Technology)..... 90	Setting Flight Timer..... 51
SVT Features..... 93	Setting Generic..... 50
SVT Field of View..... 102	Setting the Departure Timer..... 51
SVT in Reversionary Mode..... 107	TKS Flight into Known Icing (FIKI) Anti-Ice System... 119
SVT Operation..... 91	Topography
Activating and deactivating Pathways..... 92	Display/Remove Scale..... 184
Enabling and disabling SVT..... 92	Range Setting..... 184
SVT Runways..... 99	Track Vector..... 191
SVT Terrain Alerting..... 100	Traffic Description..... 416
SVT Traffic..... 100	Traffic Information Service-Broadcast (TIS-B)..... 412
SVT Troubleshooting..... 106	Traffic Map Page..... 403
SVT Unusual Attitudes..... 108	Transponder Code Entry..... 155
SVT WireAware Power Line Obstacles..... 101	Transponder Data Box..... 131
System Setup	Transponder Mode Selection..... 152, 155
Restoring Defaults..... 40	Trip Planning..... 308
System Status..... 397, 409	Fuel Statistics..... 310
System Utilities..... 49	Other Statistics..... 310
	Trip Statistics..... 52, 309
T	Calculations via Manual Data Entry..... 311
TA Alerting Conditions..... 401	Resetting Readouts..... 52
Takeoff Alerts..... 492	Selecting Automatic or Manual Page Mode..... 311
TAS Theory of Operation..... 399	Selecting Flight Plan and Leg..... 311
TAS/TCAS I Surveillance Volume and Symbology..... 399	Selecting Flight Plan or Waypoint Mode..... 311
	Turbulence (SiriusXM)..... 368

Turn Rate Indicator.....	76	Vspeed Bugs	
TX Indicator.....	138	Enabling/disabling Individual Vspeed Reference Bugs.....	62
U		W	
Unit Settings.....	46	Waypoint.....	195
User Waypoint.....	211	Adding to Active FP.....	243
Changing Storage Duration Setting.....	216	Adding to Flight Plan.....	242
Creating from Information Page.....	213	Adding to Stored FP.....	242
Creating from Map Pages.....	214	Change Existing WPT to Present Position.....	216
Creating/Adding to Active FP.....	243	Editing Comment or Location.....	215
Deleting All.....	217	Fly-By/Over.....	244
Deleting Individual.....	217	Information Window.....	195
Editing.....	215	Measuring bearing/distance between.....	181
Renaming.....	216	Reviewing Information.....	180
Resetting Comments to Automate.....	216	Selecting for Waypoint Mode.....	311
Selection.....	213	Weather Data Link (XM) Page Softkeys.....	326
Using The Stormscope Page.....	377	Weather Data Link Page Softkeys	
Utilities.....	49	Setting up and customizing the Weather Data Link Page:.....	333
V		Weather Product Age.....	321
Vertical Deviation.....	66	Weather Product Map Overlay	
Vertical Navigation (VNV).....	274	Showing/removing the weather legend on the Navigation Map Page:.....	335
Activating Direct-To.....	275	Weather Product Map Overlays	
Altitude Constraints.....	276	Enabling/disabling the weather product icon and age display (PFD maps):.....	336
Enabling/Disabling Guidance.....	275	Setting up and customizing weather data for the navigation maps:.....	335
Entering Along-Track Offset for WPT.....	227	Weather Products Map Overlays.....	334
Modifying VS TGT and FPA.....	276	Weight and Balance.....	304
Procedure WPT Manual Designation.....	278	Definitions.....	305
Removing Altitude Constraint.....	228	Entering Fuel Reserves Weight.....	307
WPT Manual Designation.....	277	Entering initial usable fuel on board.....	307
Vertical Navigation Indications.....	69	Viewing the zoomed CG Graph.....	306
Vertical Situation Display (VSD).....	280	Warnings.....	306
Disabling.....	283	Wind Data.....	86
Enabling.....	283	Wind Vector.....	192
Modes.....	282	Z	
Width Swath.....	282, 283	Zero Pitch Line.....	101
Vertical Situation Display (VSD) Terrain.....	388		
Vertical Speed Indicator.....	66		
VFR Code.....	155		
VHF Omni-directional Range (VOR).....	207		
Selection.....	209		
Viewing the GPS Position in the References Window.....	46		
Visual Approach.....	299		
Visual Reporting Point (VRP).....	210		
Selection.....	211		
Voice Alerts.....	541		
VOR Selection.....	145		
VSD Display.....	388		

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CMS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

System Overview

Flight Instruments

Engine Indication System

Audio Panel and CNS

Flight Management

Hazard Avoidance

Automatic Flight Control System

Additional Features

Appendices

Index

BLANK PAGE

GARMIN.



Garmin International, Inc.
1200 East 151st Street
Olathe, Kansas 66062, U.S.A.

Garmin AT, Inc.
2345 Turner Road SE
Salem, OR 97302, U.S.A.

www.flygarmin.com

Garmin (Europe) Ltd.
Liberty House, Hounsdown Business Park
Southampton, Hampshire SO40 9LR U.K.

Garmin Corporation
No. 68, Zhangshu 2nd Road
Xizhi District, New Taipei City, Taiwan